 


163846 Assembly Instructions

Hardware Components

 
This bag contains small parts that present a choking hazard for children under 3 years of age. These parts are for adult assembly only and should be permanently affixed to the furniture. Any unused parts should be discarded properly.

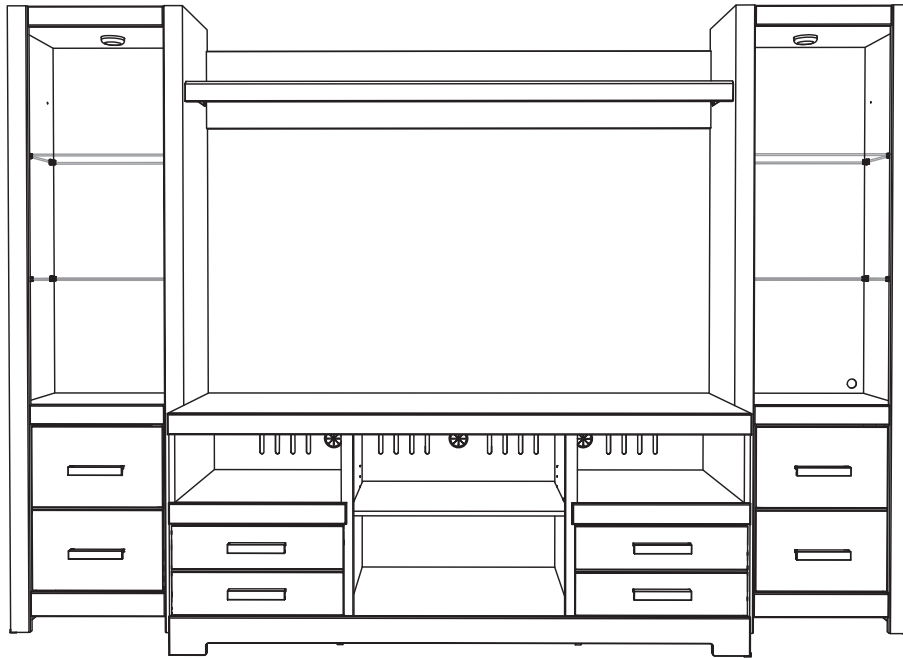

X2
8 x 5/8"
Pan Head




X4



X4
1/4-20 x 45mm




 X4

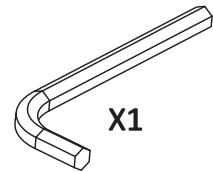


X1

 
Step 1

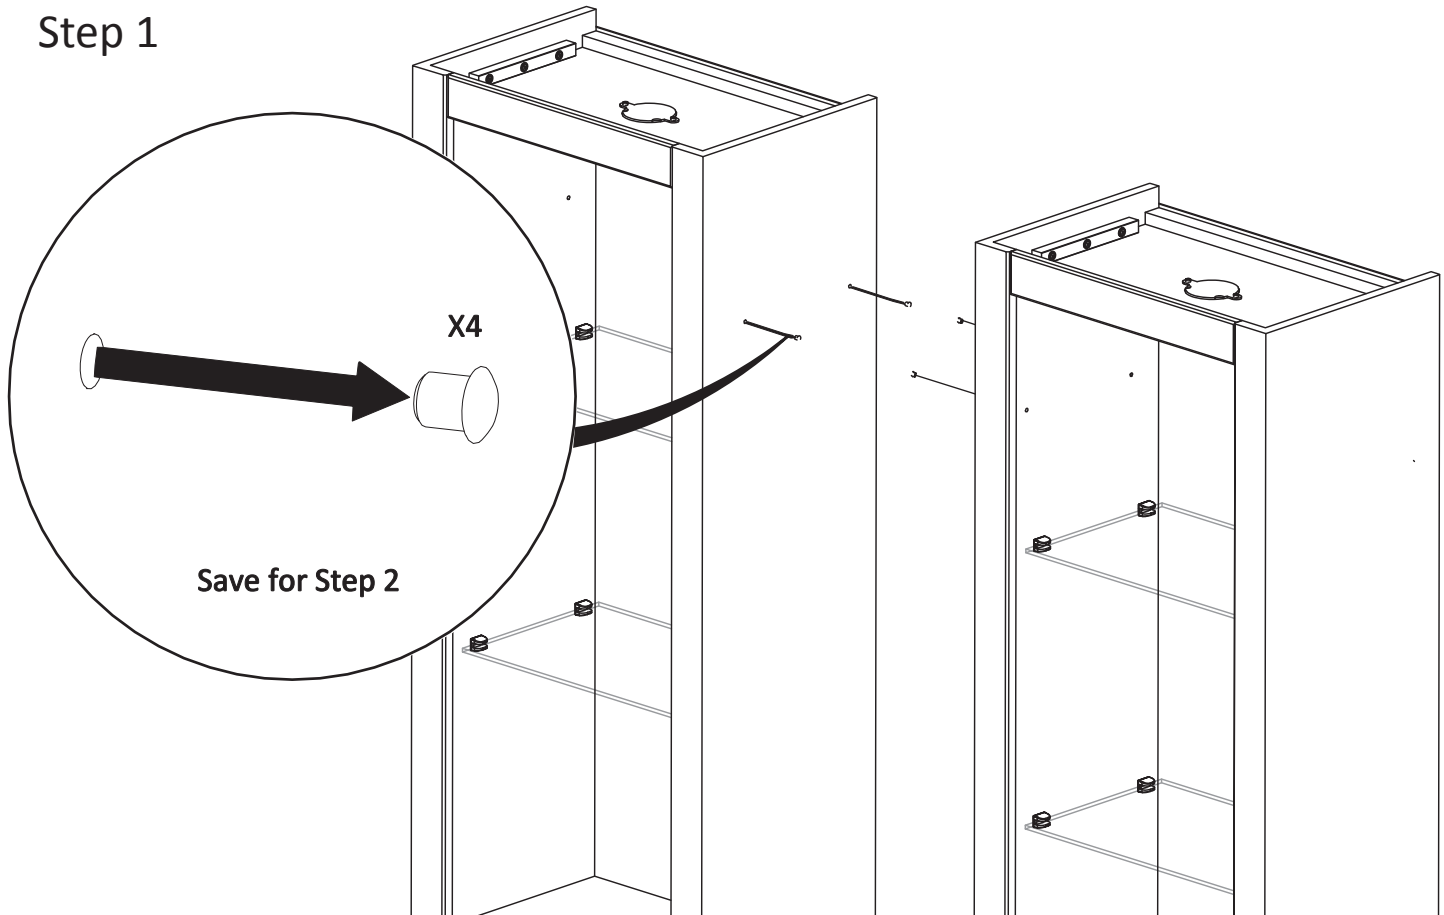

 
Step 2

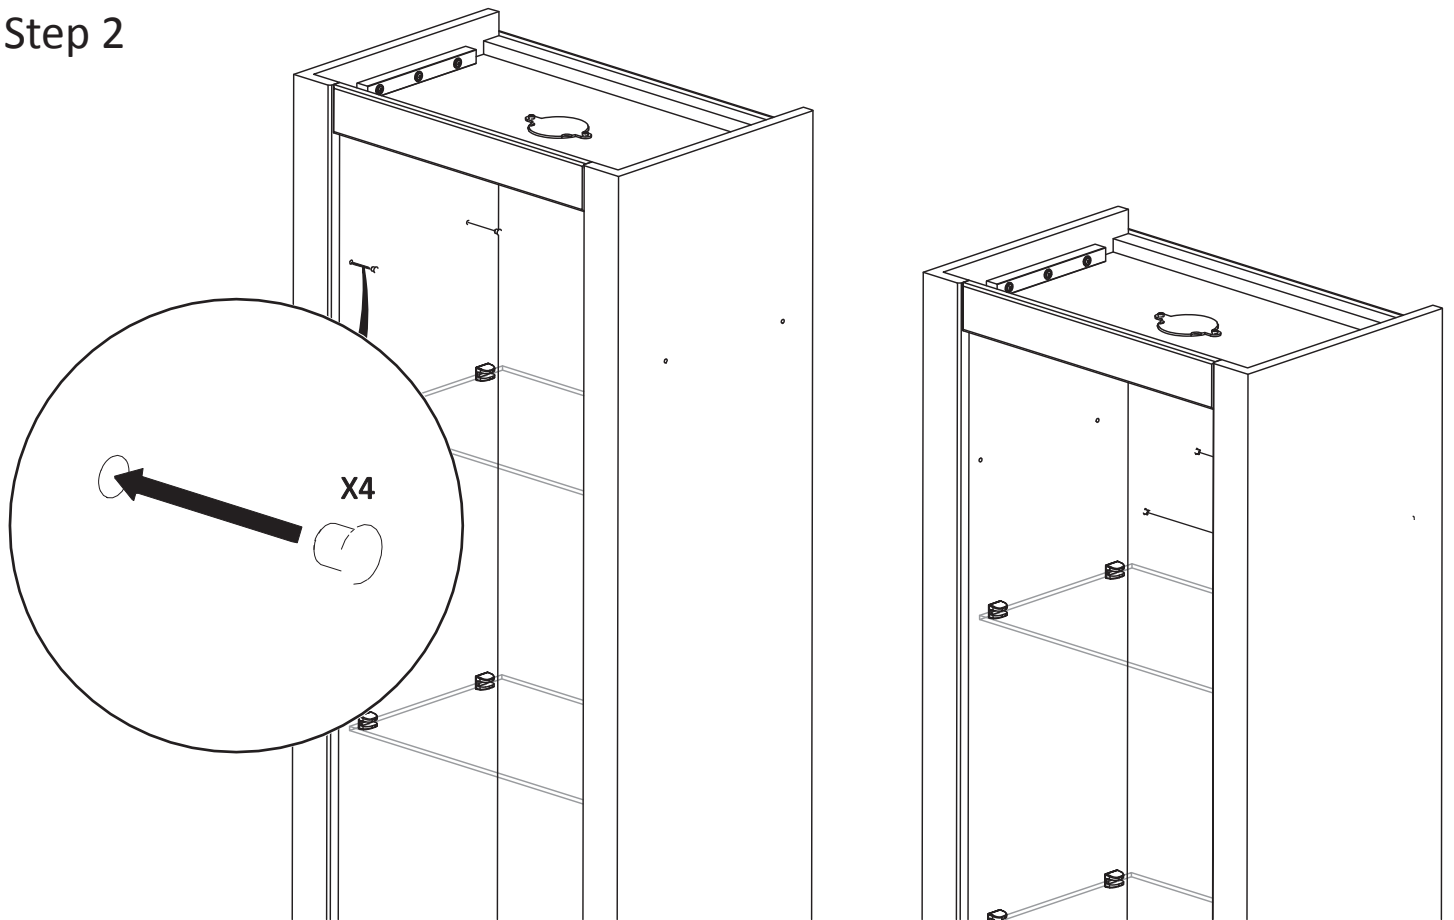

 
Step 3

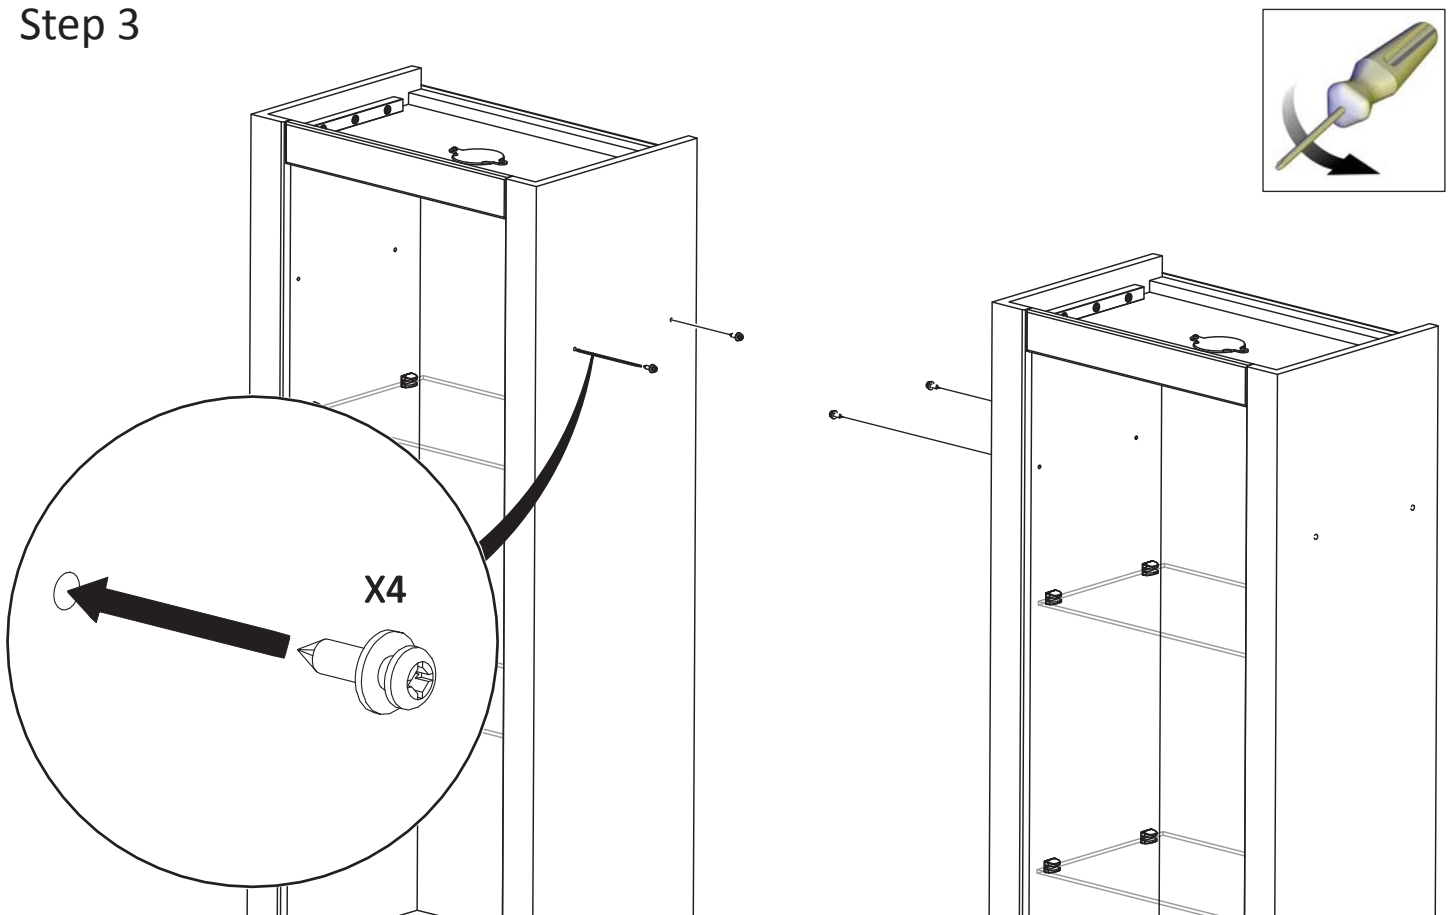

 
Step 4

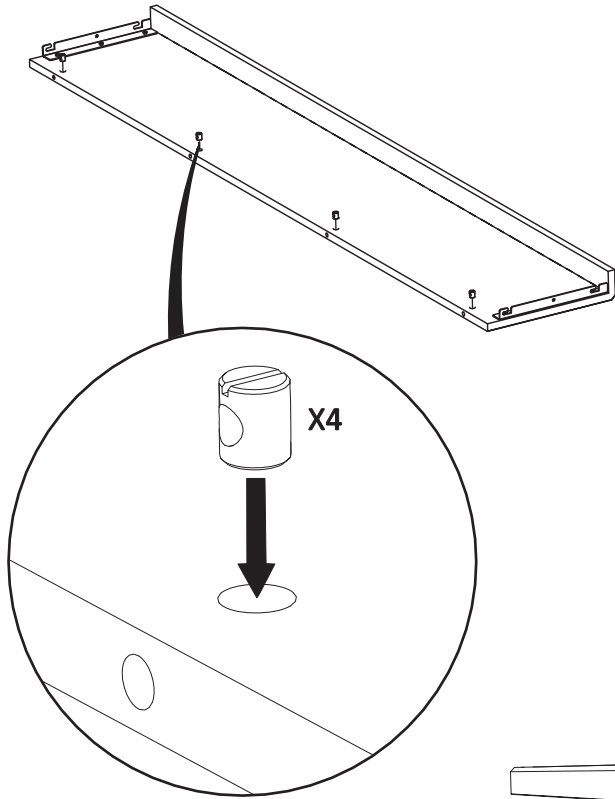

 
Step 5

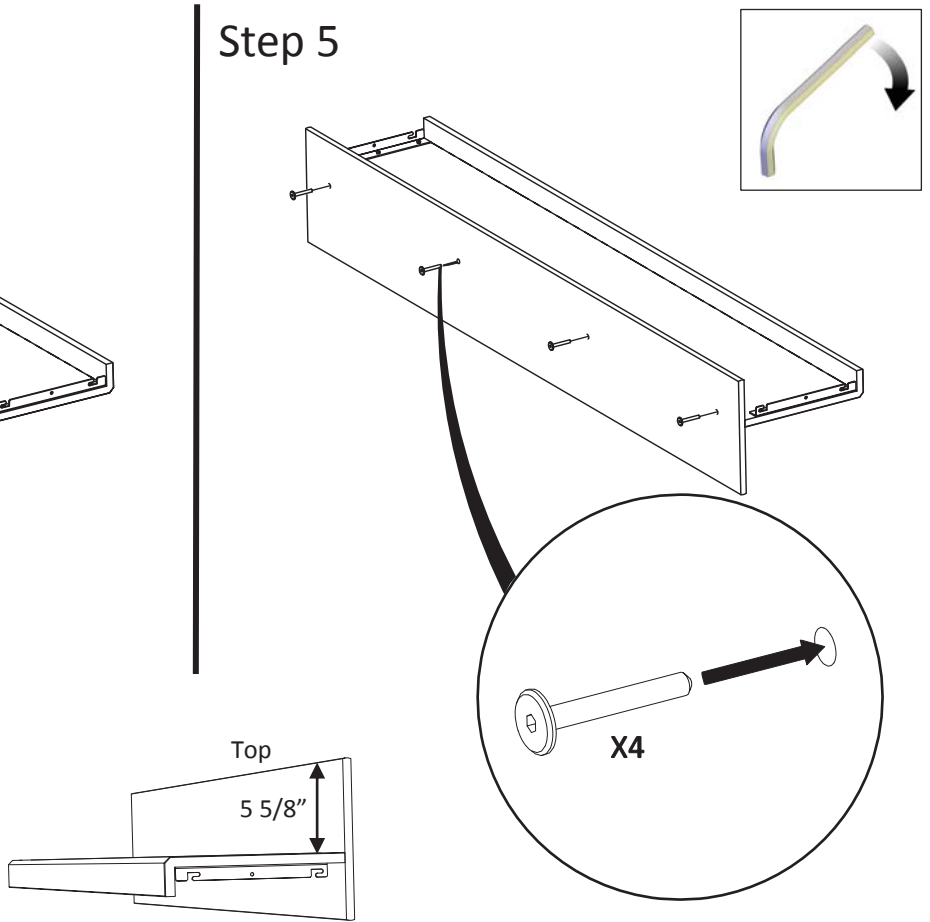

 
Step 6

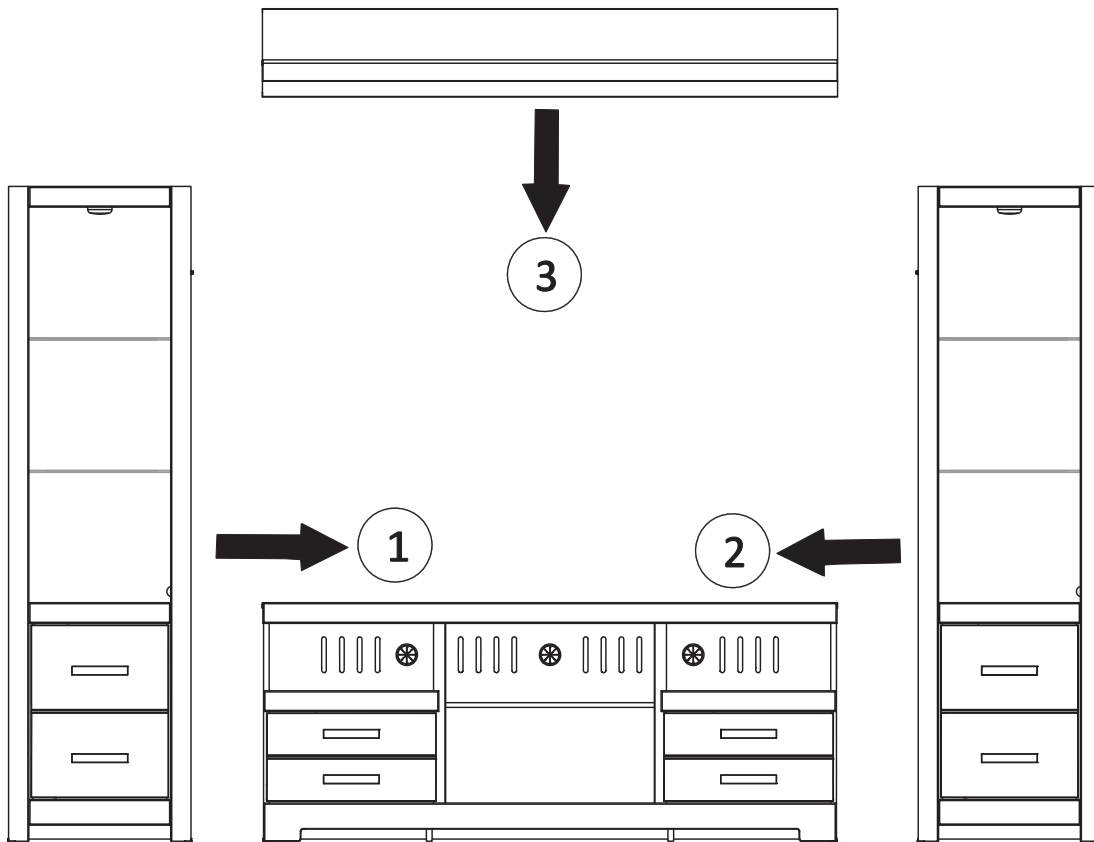

 Step 7

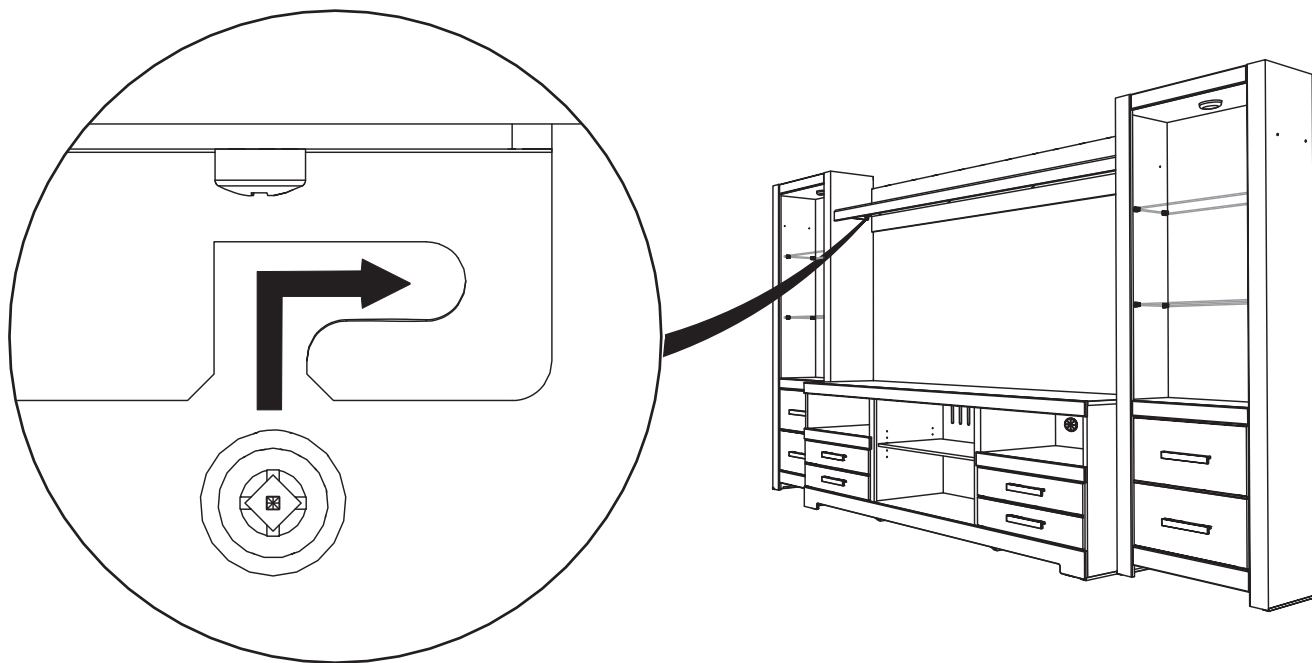


 Step 8

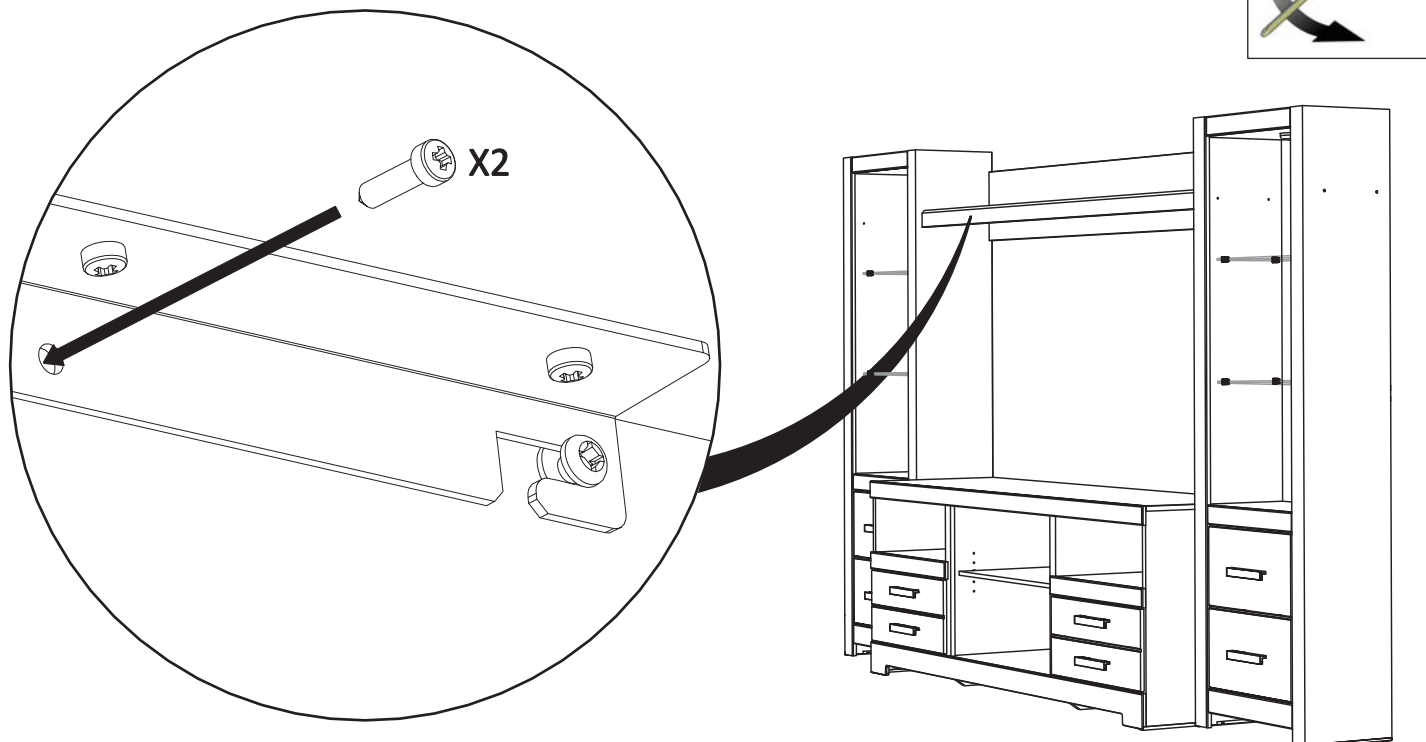

Assembly instructions for:
Fireplace

 Part # 134721 (06/13/23)


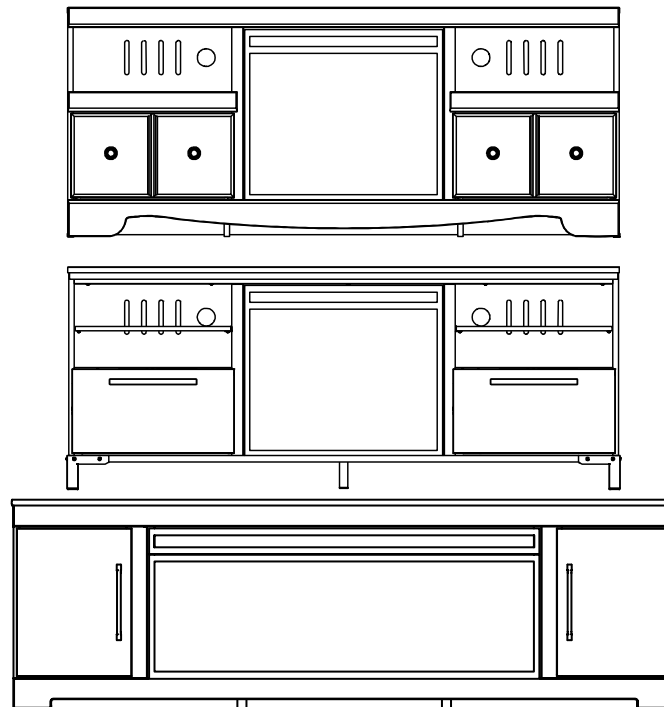


Appearance of your unit may vary from those depicted above




Life doesn't come with instructions, but this does

  
TOOLS

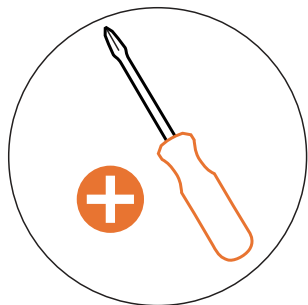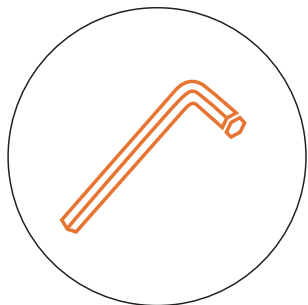


1

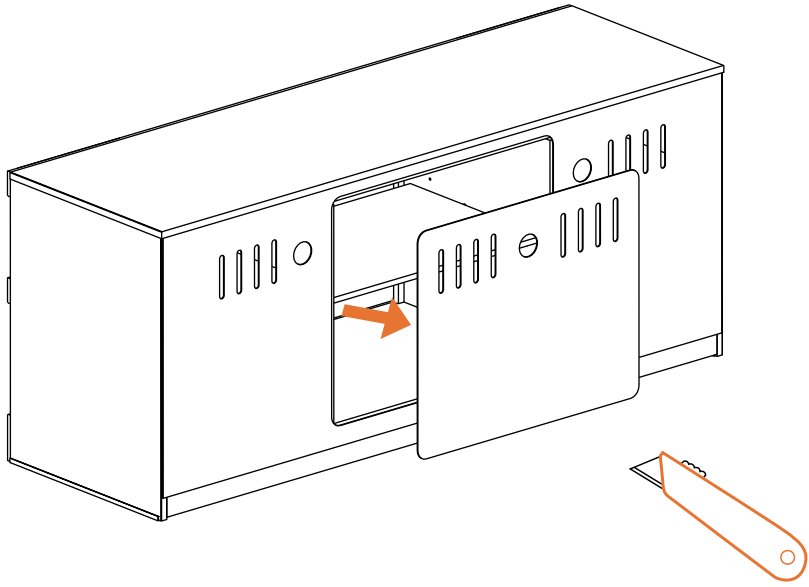 


2

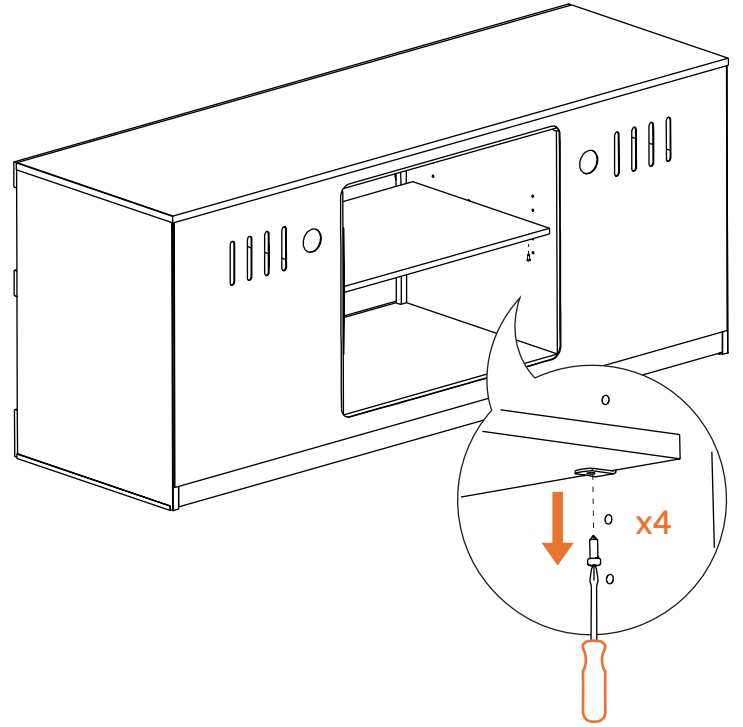 

3

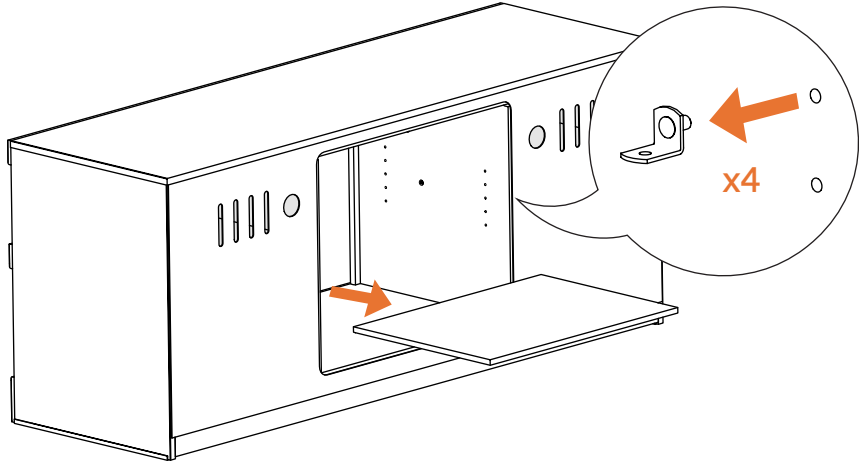 


4

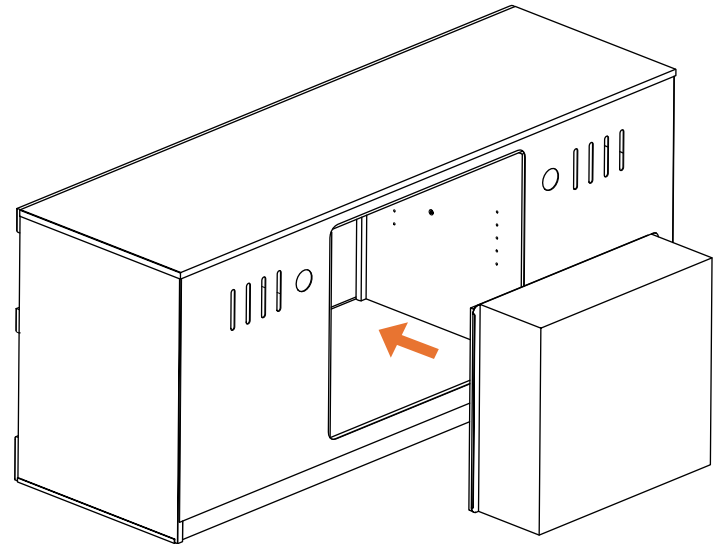 



W100 01,02 Installation

 5

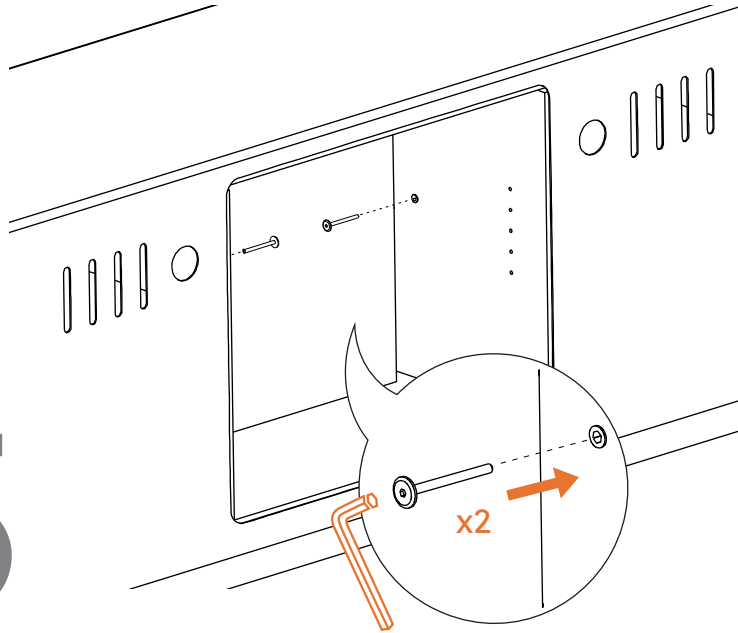

W100-101,12 Installation

 
 
6

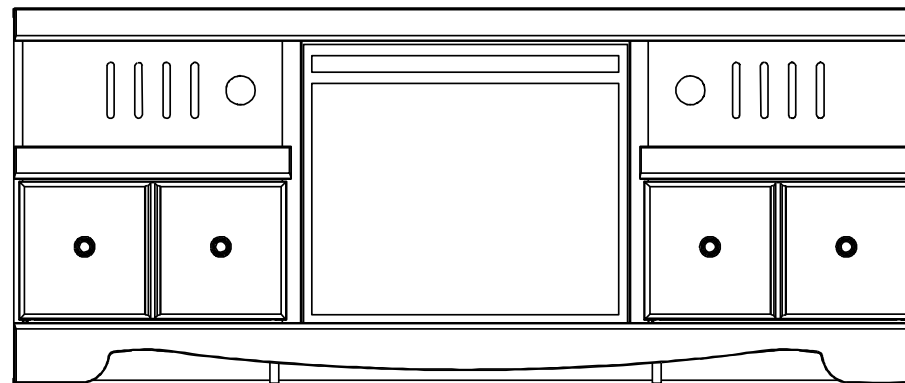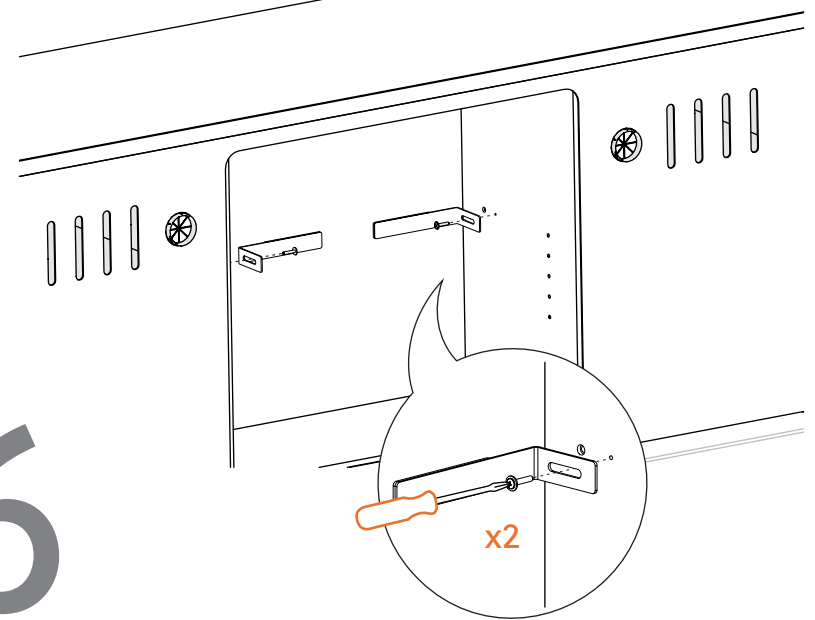



Assembly instructions for:

Reversible Door Instructions

  Part # 143373 (05/08/23)

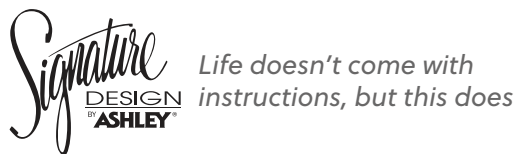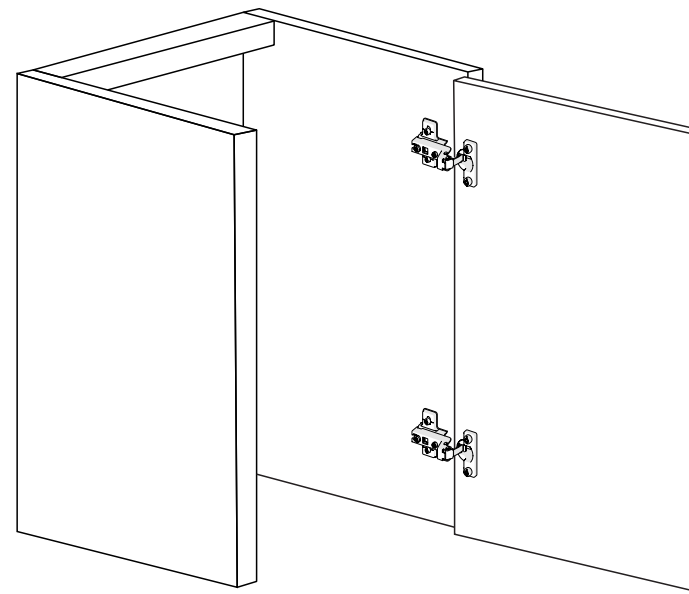

BUST OUT

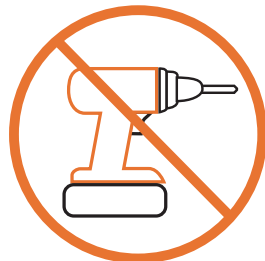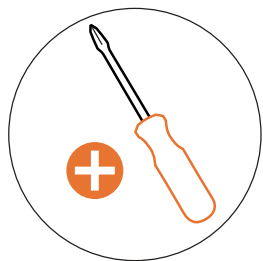  

REQUIRED TOOL

 
This bag contains small parts that present a choking hazard for children under 3 years of age. These parts are for adult assembly only and should be permanently affixed to the furniture. Any unused parts should be discarded properly.

Esta bolsa contiene piezas pequeñas que presentan un peligro de asfixia. para niños menores de 3 años. Estas piezas son para adultos. montaje solamente y debe fijarse permanentemente a la muebles. Las piezas no utilizadas deben desecharse correctamente.



Ce sac contient de petites pièces qui présentent un risque d'étouffement pour les enfants de moins de 3 ans. Ces pièces sont pour adultes montage uniquement et doit être fixé de façon permanente au meubles. Toutes les pièces inutilisées doivent être jetées correctement.

Deze tas bevat kleine onderdelen die verstikkingsgevaar opleveren voor kinderen onder de 3 jaar. Deze onderdelen zijn voor volwassen montage alleen en moet permanent worden bevestigd aan de meubilair. Alle ongebruikte onderdelen moeten op de juiste manier worden weggegooid.

Left Door Swing to Right Door Swing

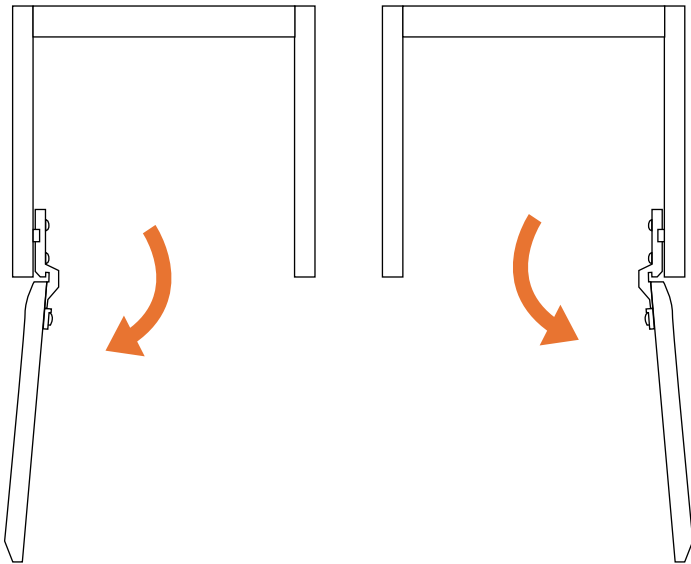

1

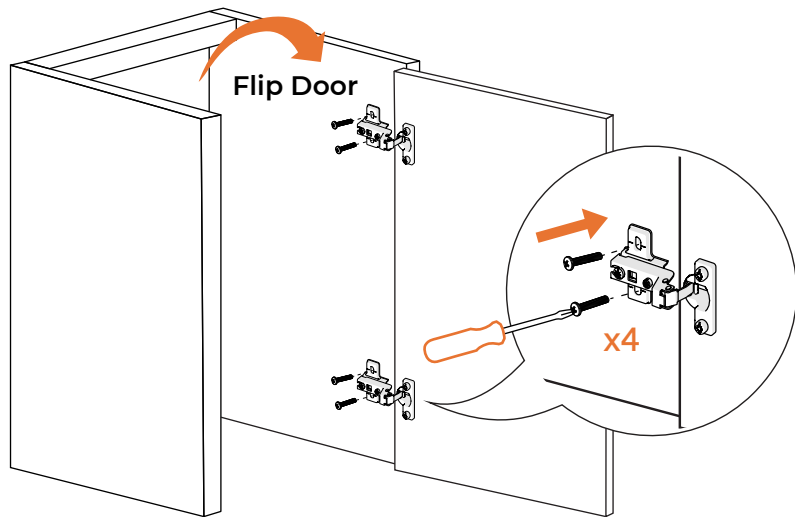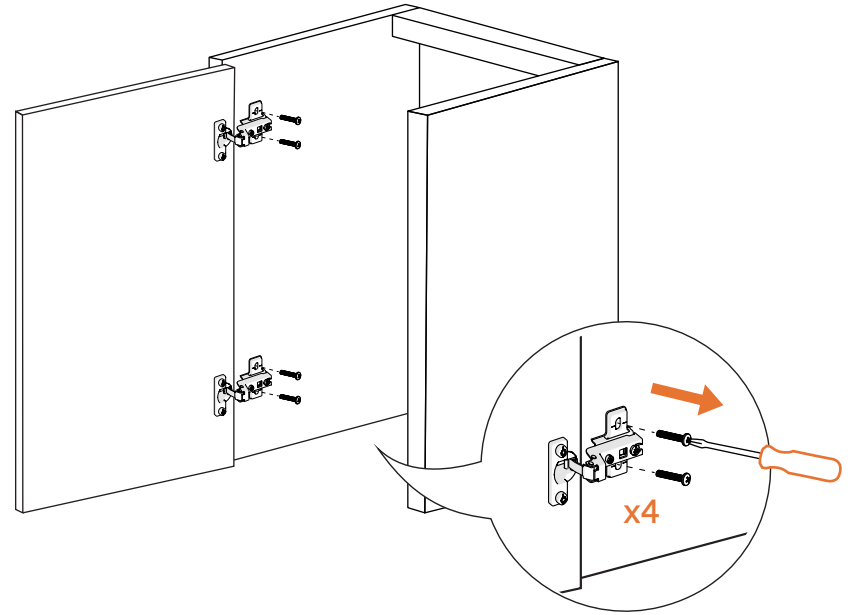  

2

