

# ASSEMBLY INSTRUCTIONS

**WARNING!** This unit must be assembled in the order shown. Failure to do so may result in damage to the parts or impede function of the unit.

 
## General Instructions

- Read all Assembly Instructions prior to assembling the product
  - Make sure you have all parts before beginning assembly
- To avoid damage, assemble the product on a non-abrasive surface.

**STEP 1:** To install “easy-off chair back”, slide inside back receivers (1) onto the steel mechanism posts (2) in the base of the furniture (Figure A).

**STEP 2:** Press both sides seat back from the top downward firmly into place. The inside back automatically locks into place.


**STEP 3:** To remove the backs, use a screwdriver pulling outward on the black tab in the metal sleeve (Figure B) on both sides of the inside back receivers (1) and lift the back off the base of the furniture.

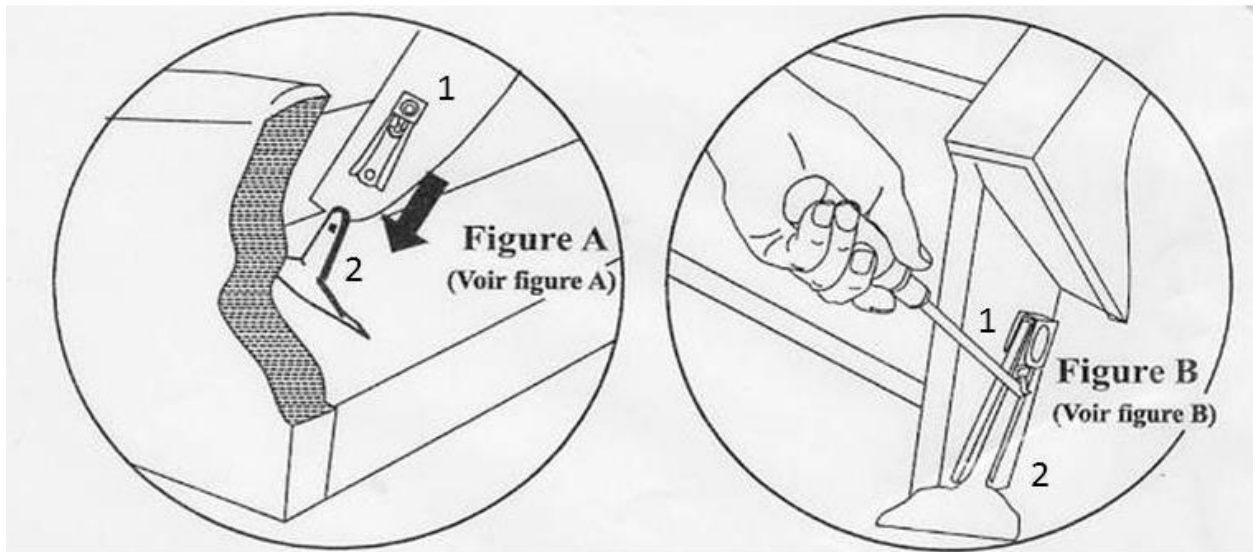

**STEP 4:** Pull down velcro seat back flap and align properly to wrap over the bottom of the base frame and attach/secure. Note: If the seat back is not properly seated on the posts, the velcro back flap will not attach easily.

# 1 Motor: Power Reclining Button

 Press one side of button to open power reclining mechanism other side to close

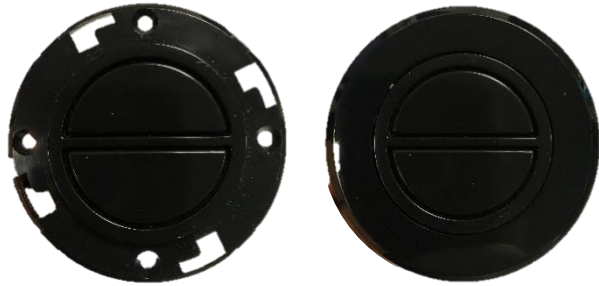

Transformer: Plugs into wall outlet

Reclining Motor



Extension Cable

Single Button Control  
(PICTURE MAY NOT REPRESENT LATEST BUTTON)

# How to Connect the Cables

2 Pin Connector



5 Pin Connector

 


8 Pin Connector



# 2 Motor: Power Reclining Button

Press one side of button to open power reclining mechanism other side to close  
(THIS REQUIRES 2 SINGLE BUTTON CONTROLS AND A Y – CABLE)

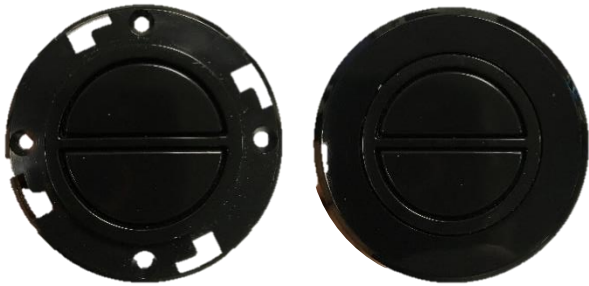

Single Button Control  
(PICTURE MAY NOT REPRESENT LATEST BUTTON)

Reclining Motor

Extension Cable

Reclining Motor



Y-Cable for 2 Motor Configuration

Transformer: Plugs into wall outlet

Single Button Control

(PICTURE MAY NOT REPRESENT LATEST BUTTON)

# How to Connect the Cables

2 Pin Connector



5 Pin Connector



8 Pin Connector

 


# 1 Motor: Power Reclining Button w/USB

Press one side of button to open power reclining mechanism other side to close

When the button is pushed the Blue light will come on

USB is for charging only, Max 2000 mA/5V

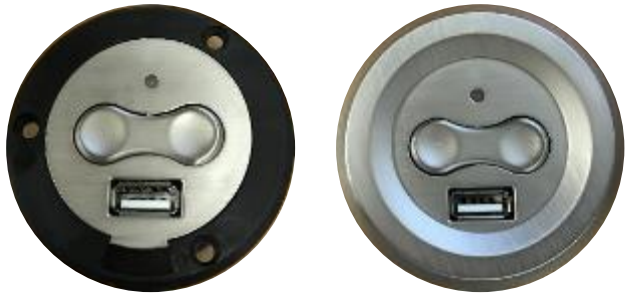

Transformer: Plugs into wall outlet

Reclining Motor



Extension Cable

Single Button Control

# How to Connect the Cables

2 Pin Connector



5 Pin Connector



8 Pin Connector



 
# 2 Motor: Power Reclining Button w/USB

Press one side of button to open power reclining mechanism other side to close

When the button is pushed the Blue light will come on

USB is for charging only, Max 2000 mA/5V

(THIS REQUIRES 2 SINGLE BUTTON CONTROLS AND A Y – CABLE)

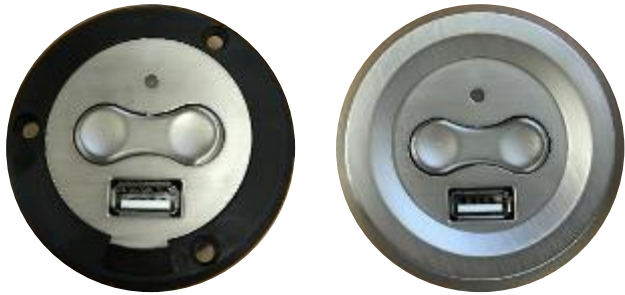

Single Button Control

Reclining Motor

Extension Cable

Reclining Motor

Y-Cable for 2 Motor Configuration

Transformer: Plugs into wall outlet

Single Button Control



# How to Connect the Cables

2 Pin Connector



5 Pin Connector



8 Pin Connector



# 2 Motor: Power Reclining, Head Tilt w/USB

Button with no dimple : One side will tilt Headrest out the other will close

Button with dimple : Smooth side will open the Ottoman

Dimple side will return all to home position

When the button is pushed the Blue light will come on

USB is for charging only – Max 2000mA/5V



2 Button Controller w/USB

Reclining Motor

Head Tilt Motor



Transformer: Plugs into wall outlet

Extension Cable

5 Pin Plug for Reclining Motor

5 Pin w/Red Tape for Head Tilt

# How to Connect the Cables

2 Pin Connector



5 Pin Connector



8 Pin Connector



# 3 Motor:

## Power Reclining, Head Tilt, Lumbar w/USB

Top Button : Opens and Closes Head Tilt

 
Middle Button : Opens and Closes Lumbar

Bottom Button: Smooth side will open the Ottoman

Dimple side will return all to home position

When the button is pushed the Blue light will come on

USB is for charging only – Max 2000mA/5V

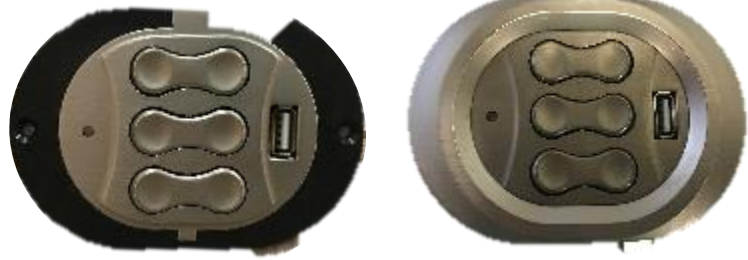

Head Tilt Motor

Lumbar Motor

Reclining Motor

3 Button Controller cable:

- 1 – 8 Pin Connector
  - To Control
- 2 – 2 Pin Connector :
  - 1 w/Yellow Tap for Head Tilt
  - 1 with out for Lumbar)
- 1 – 5 Pin Connector
  - To Reclining Motor

3 Button Controller w/USB

Extension Cable

Transformer: Plugs into wall outlet

# How to Connect the Cables

2 Pin Connector



5 Pin Connector

 


8 Pin Connector




# Replaceable Parts


101

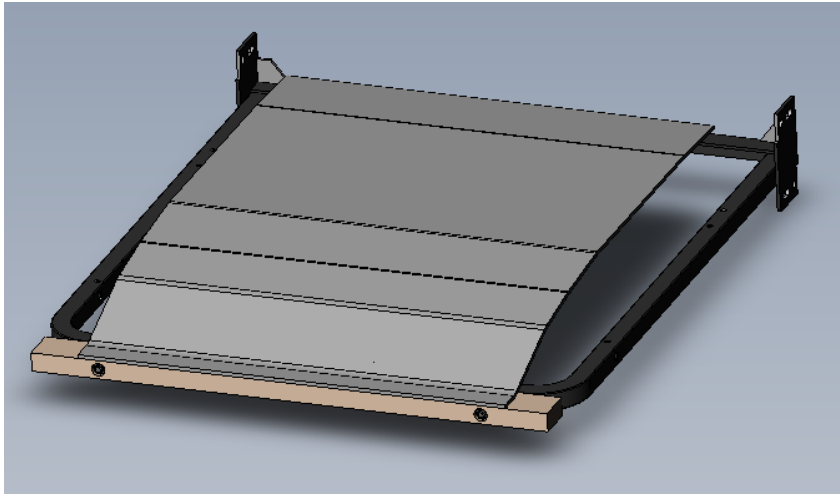

105

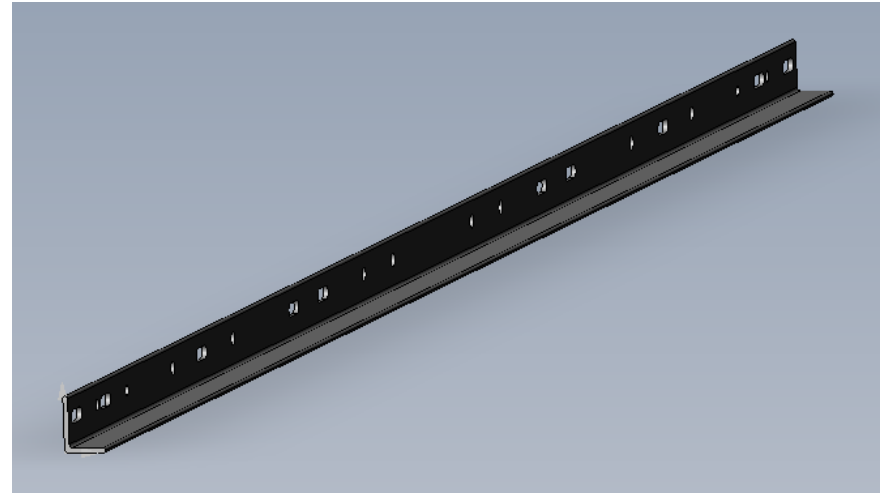 


134

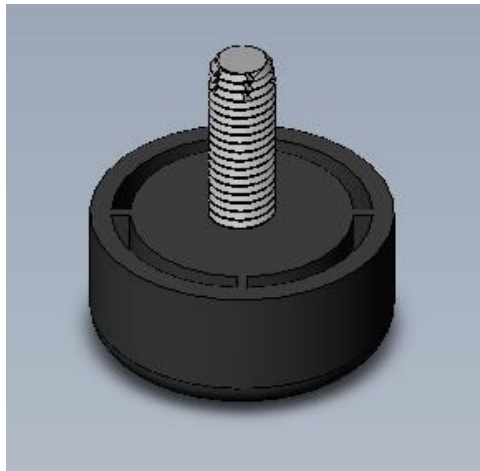 


# Replaceable Parts

 145

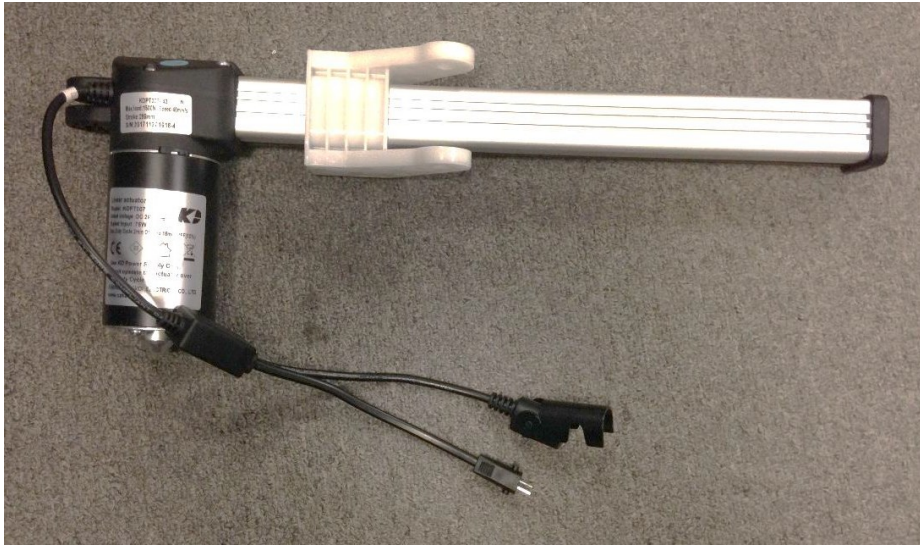


406

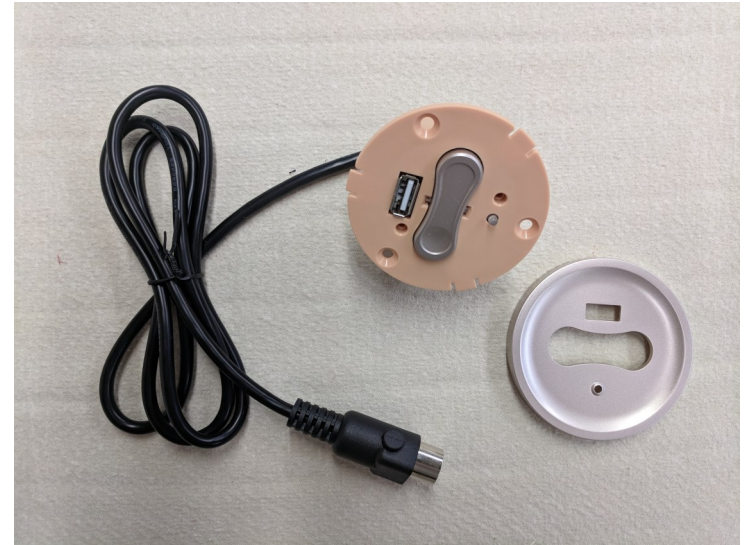 


157



# Replaceable Parts

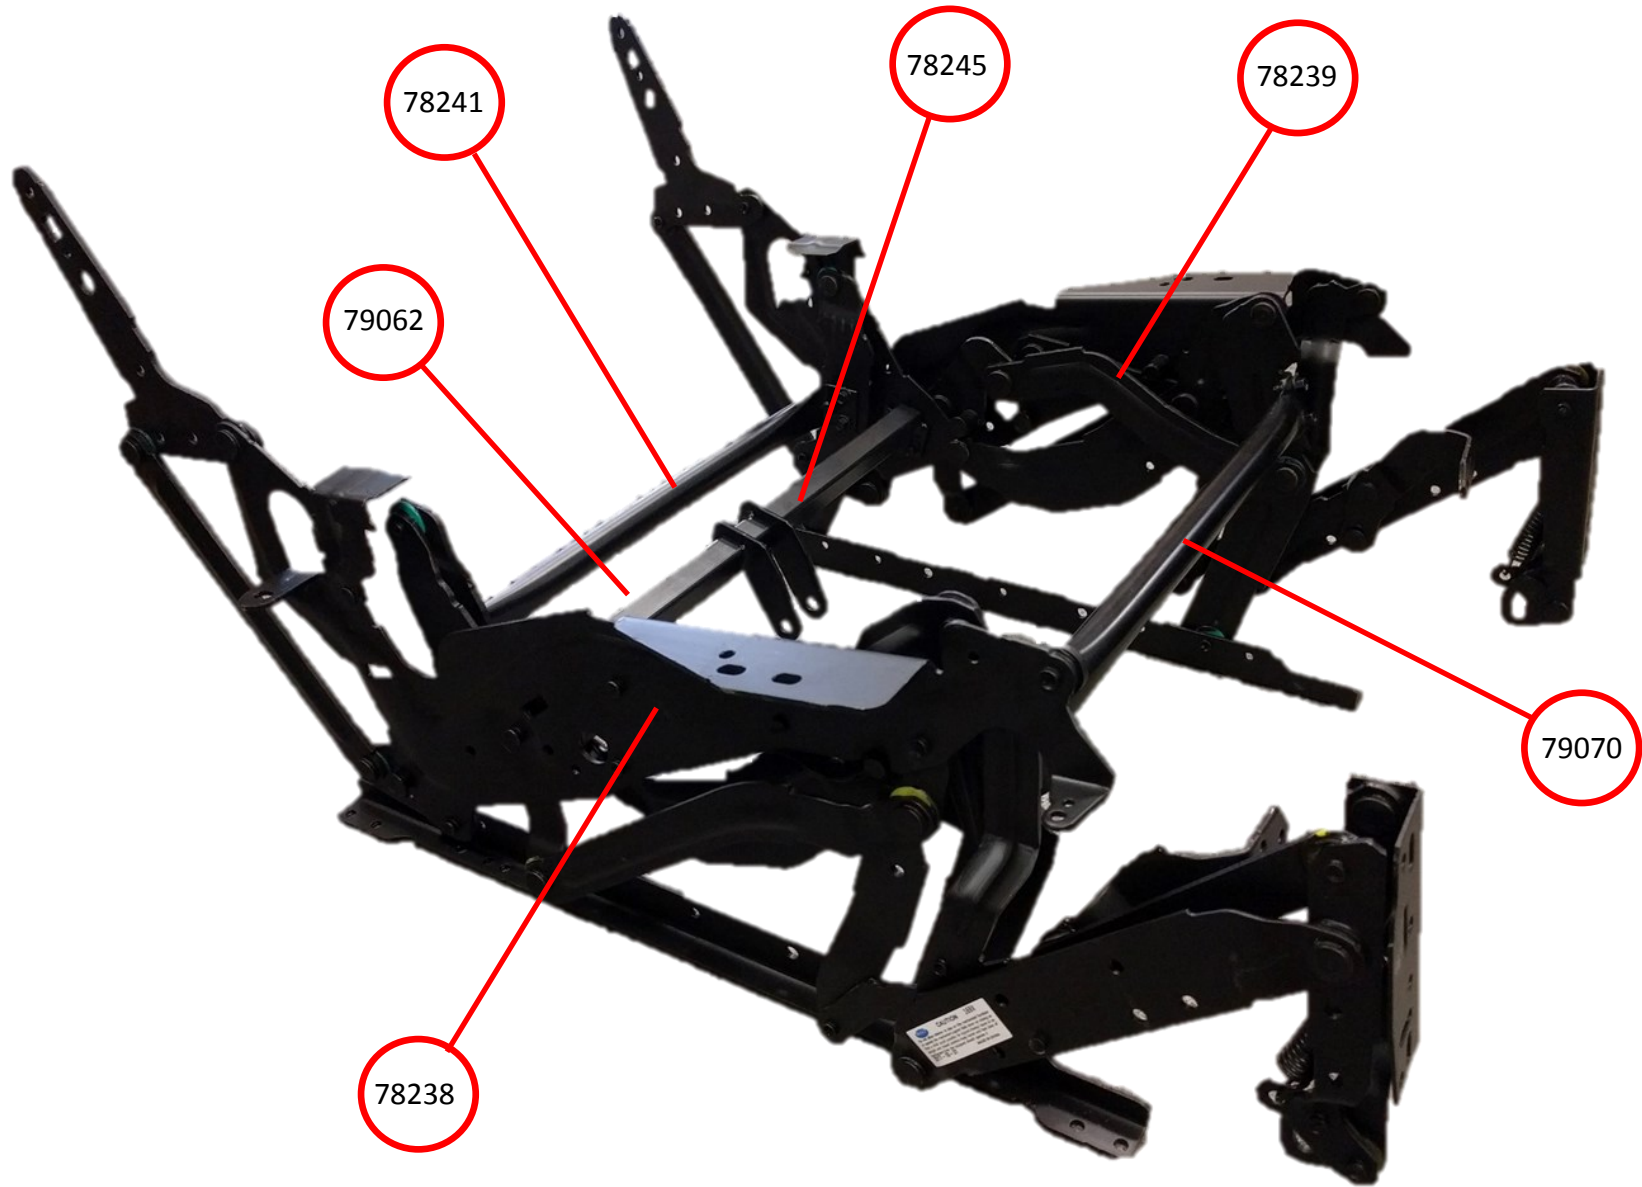 

# 399-04-05-88

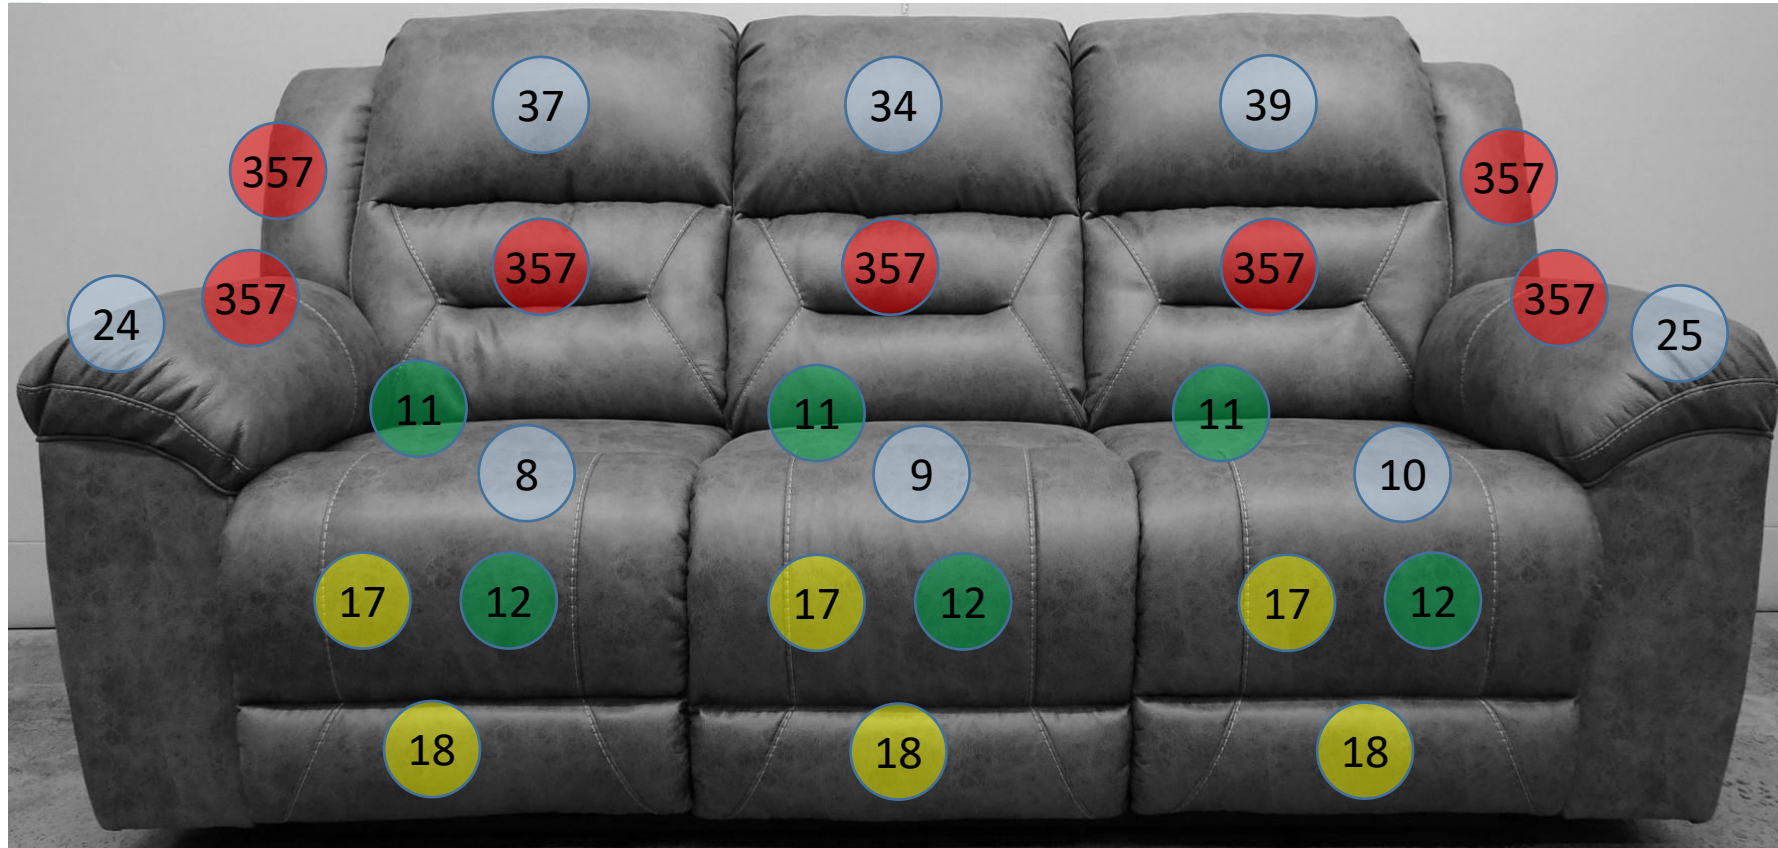 

Call Out	Description
● (Red)	Blown Fiber
● (Yellow)	Cushion Chaise Pad - top Pad
● (Green)	Cushion Foam
● (Yellow)	KD Component
● (Blue)	Cover

For more RPs' information, please see the following page.



 
216




217



425

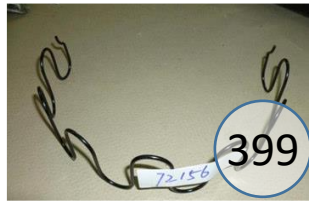

399

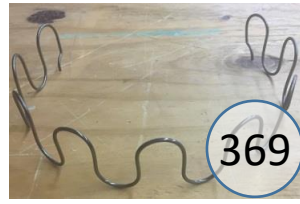 

369



396



108



365



 
444



149



426

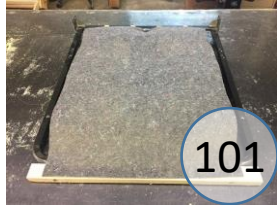

101




105



134

# 399-04-05-87

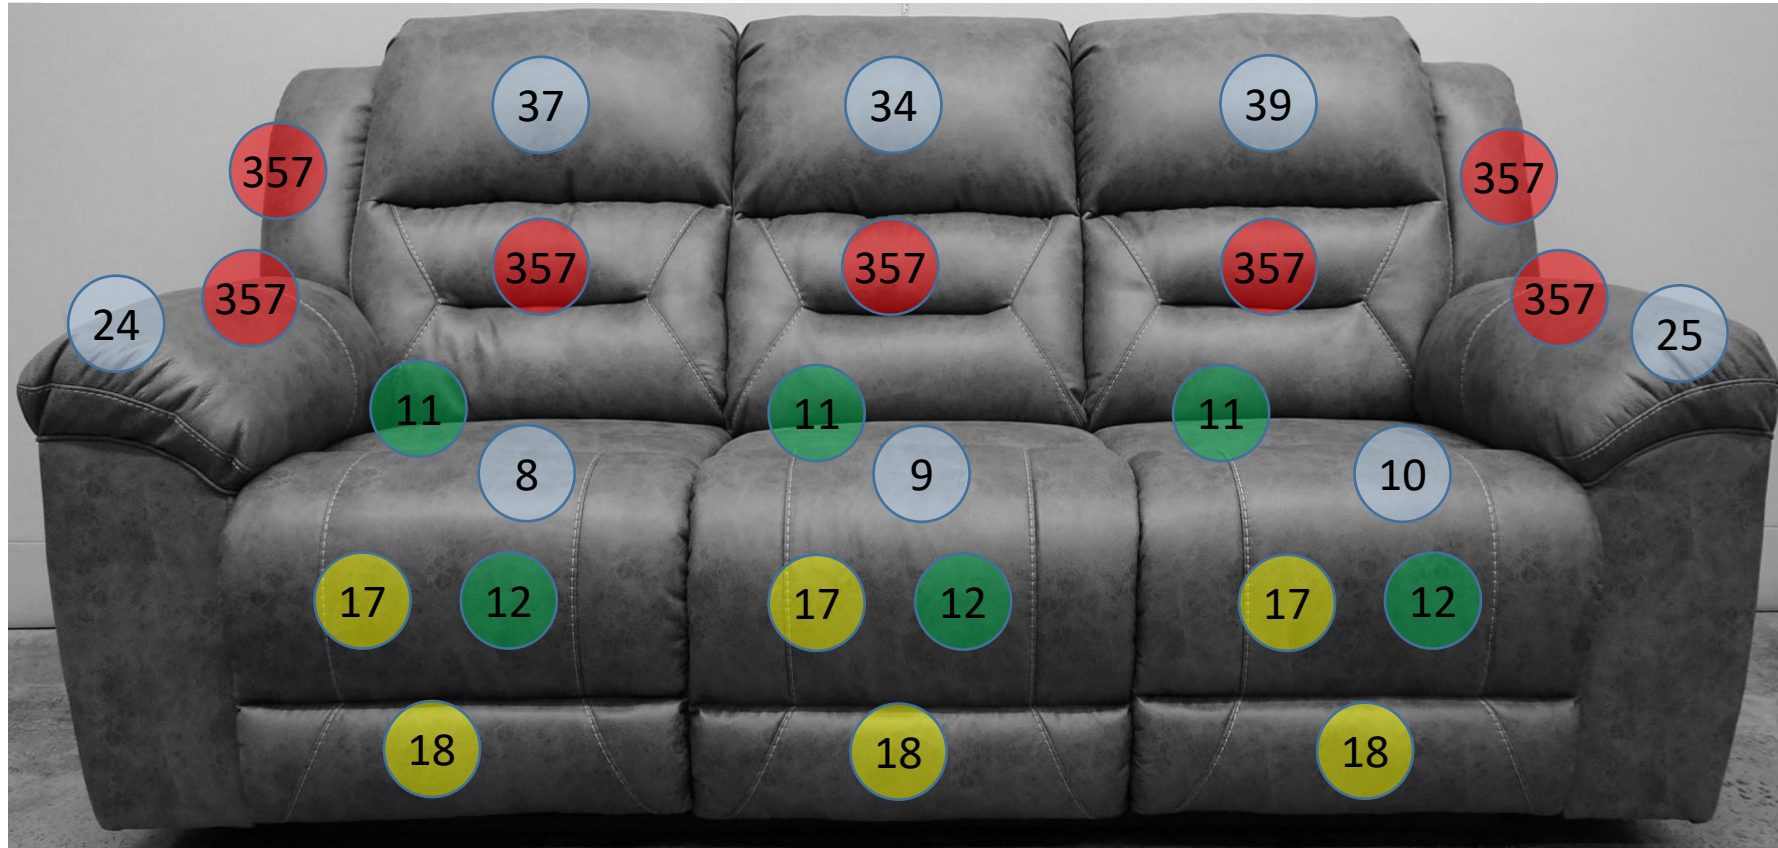 

Call Out	Description
● (Red)	Blown Fiber
● (Yellow)	Cushion Chaise Pad - top Pad
● (Green)	Cushion Foam
● (Yellow)	KD Component
● (Blue)	Cover

For more RPs' information, please see the following page.



 
216




217



425

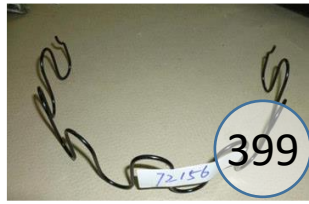

399

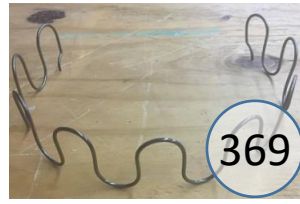 

369



419



108



365



 
444



149



426

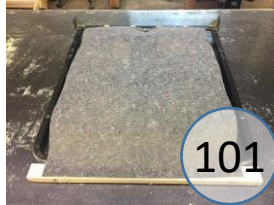

101



 
102



157



145

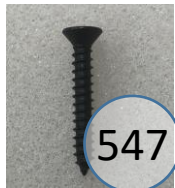

547



105



134



147




440



520

# 399-04-05-96

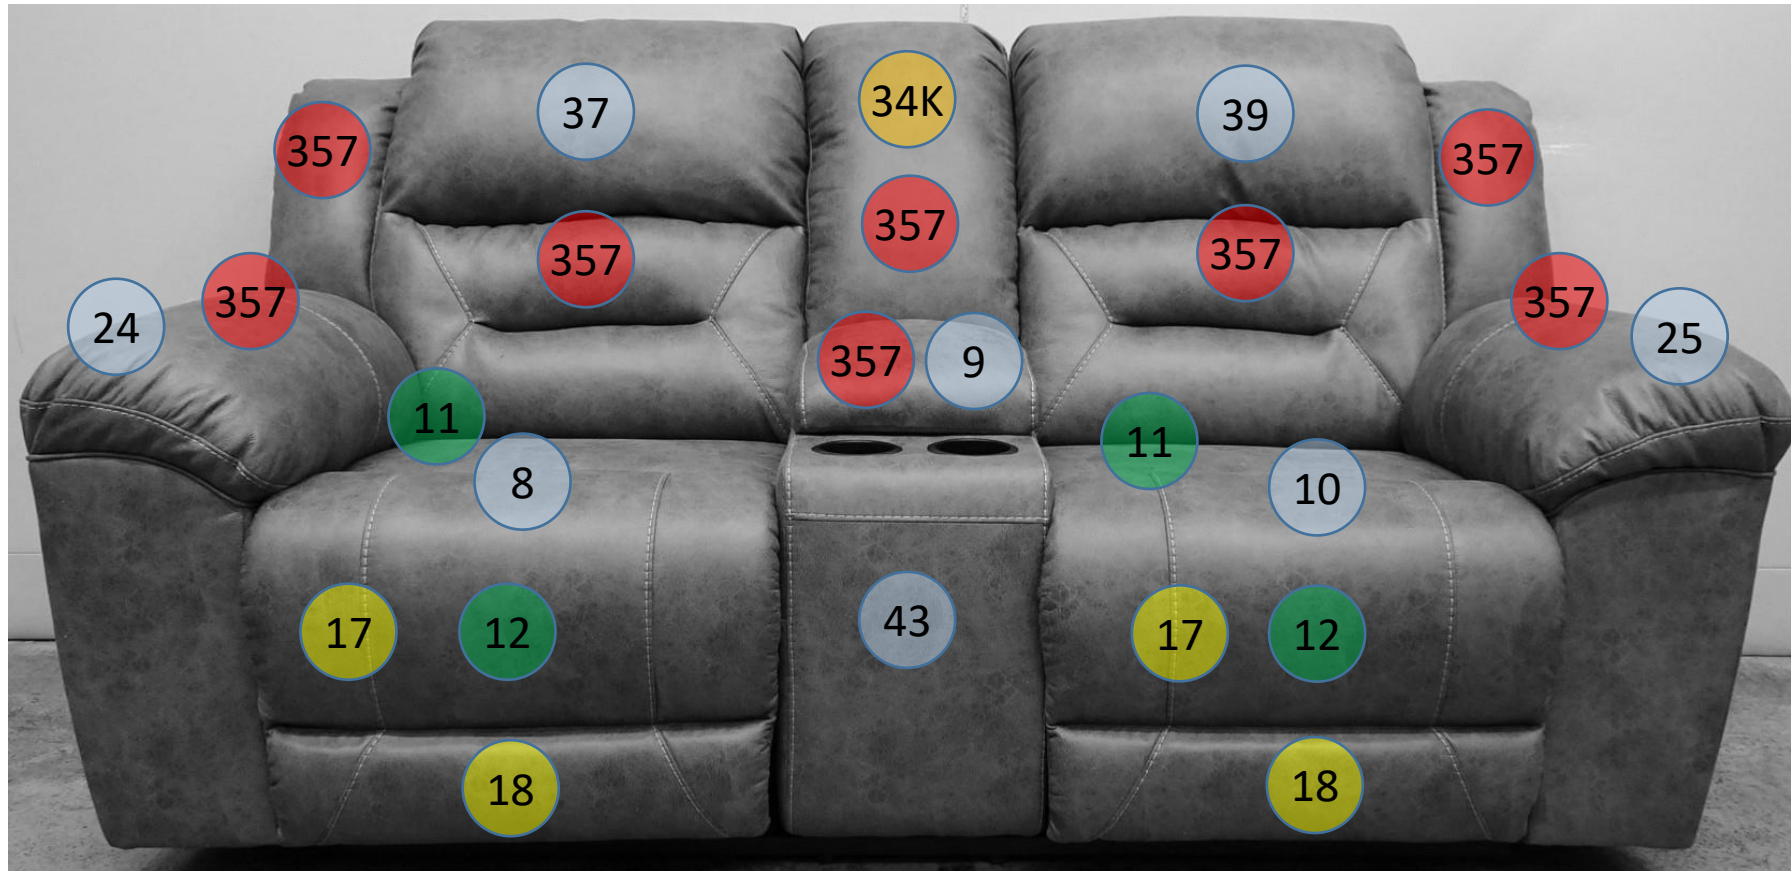 

Call Out	Description
● (Red)	Blown Fiber
● (Yellow)	Cushion Chaise Pad - top Pad
● (Green)	Cushion Foam
● (Yellow)	KD Component
● (Blue)	Cover

For more RPs' information, please see the following page.



216



 
217



425



71

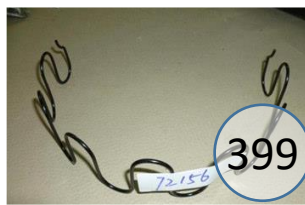

399



419



108



454



 
444




149



426

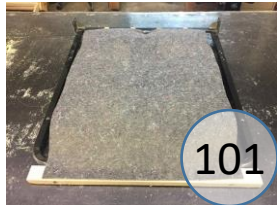

101

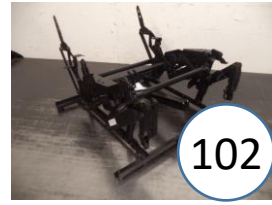 

102



157



 
145



147



547

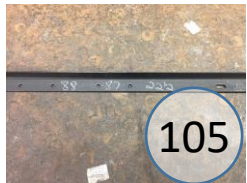

105



134



541



440




520



72

# 399-04-05-98

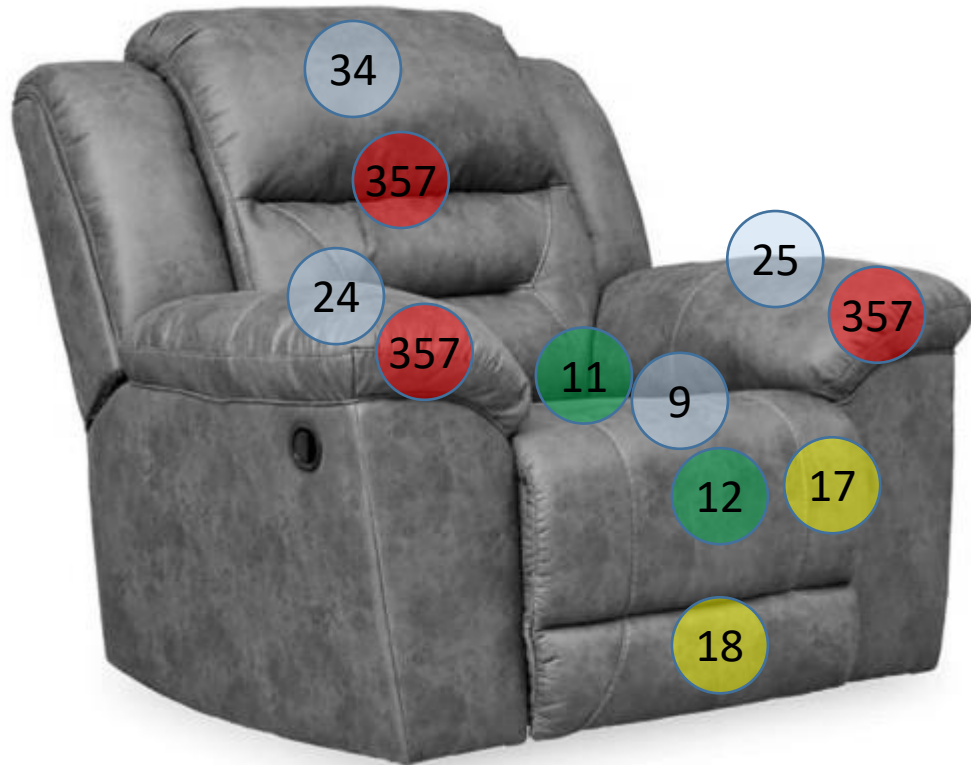 

Call Out	Description
●	Blown Fiber
●	Cushion Chaise Pad - top Pad
●	Cushion Foam
●	KD Component
●	Cover

*Signature*  
DESIGN  
BY **ASHLEY**®



399



 
425



149




426

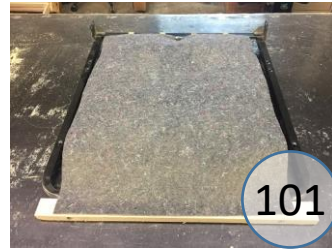

101



 420

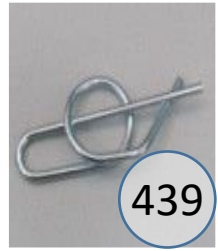

439



110



148



 
145



147



615

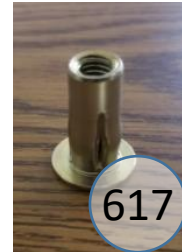

617



619



630



645