 


# Assembly Instructions

## CM3559T

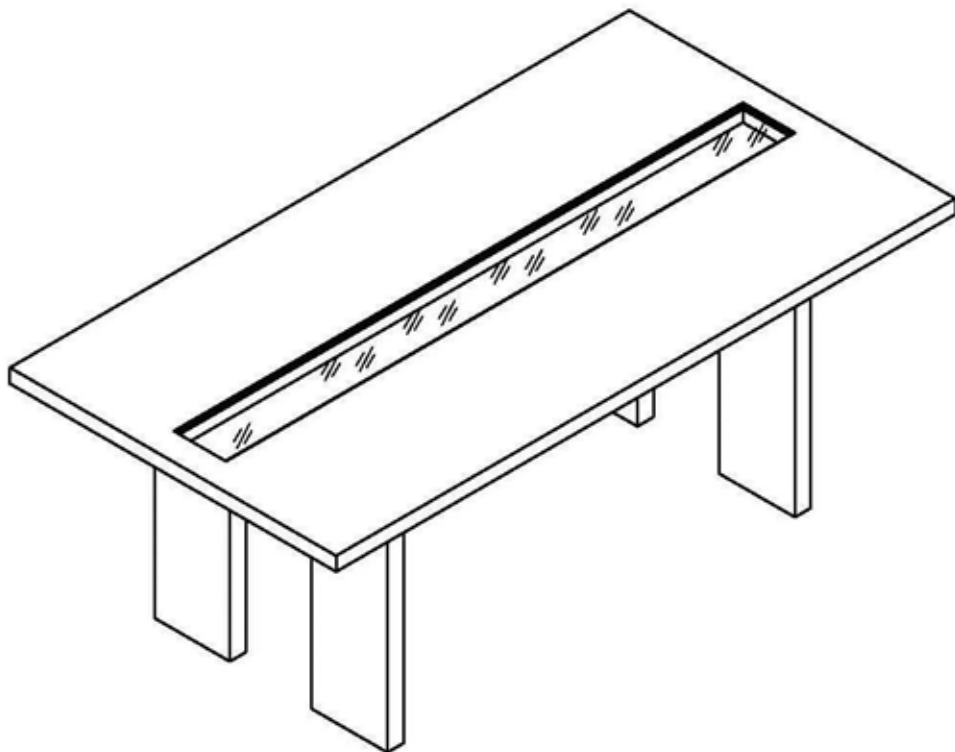

### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

### Tools Required for Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED

# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

## BASIC ASSEMBLY TECHNIQUES

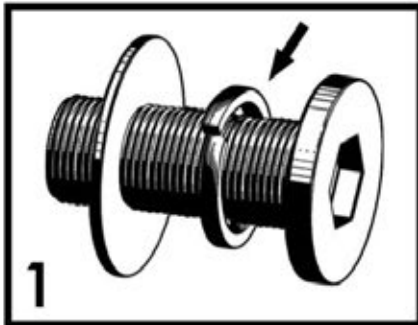


1 When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




2 Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 
3 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

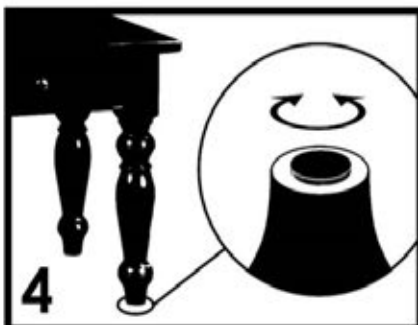

 4 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

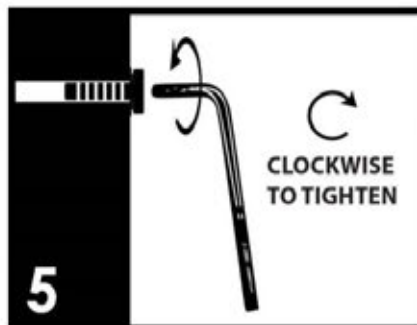

 5 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

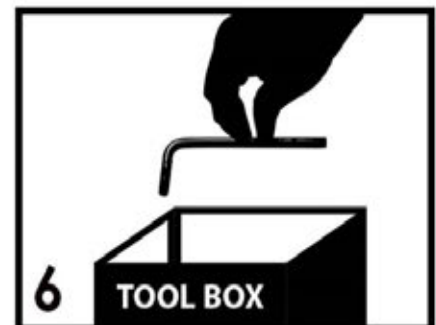

6 Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

MD


### Parts List


 
#1 x 1 pc  
Table Top

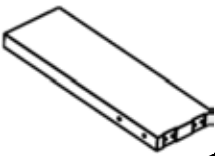

#2 x 4 pcs  
Leg

 

#3 x 2 pcs  
Connecting Frame



#4 x 1 pc  
Table Glass

### Hardware List



#A x 1 pc  
Allen Wrench



#B x 16 pcs  
Bolt 5/16"x7/8"

### Hardware List (Continued)



#C x 16 pcs  
Flat-Head Bolt 5/16"x7/8"



#D x 8 pcs  
Bolt 5/16"x1-1/4"



#E x 24 pcs  
Lock Washer 5/16"



#F x 16 pcs  
Flat Washer 3/4"



#G x 8 pcs  
Flat Washer 5/8"



#H x 8 pcs  
Metal Plate



#I x 8 pcs  
Plastic Cap

 


Due to the size and weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product and to avoid any potential injury and/or damage, especially with the fragile nature of the glass.

# Step 1


Align the metal plate (#H) onto the two pre-drilled holes of the leg (#2). Secure that plate with the leg by using the Allen wrench (#A) to tighten the two flat-head bolt (#C).

Repeat the process for the other side and for the remaining 3 legs.

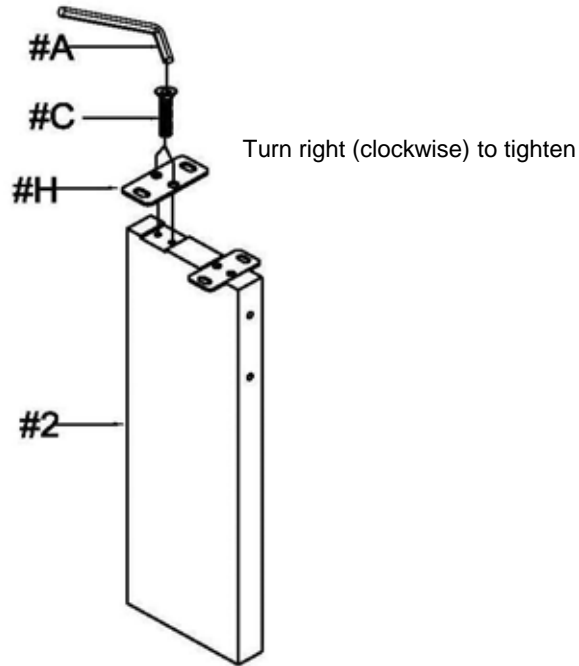


- I. With the help of another person, carefully place the table top (#1) facing down on a protective surface. Take the assembled leg (#2) and align the metal plates (#H) with the 4 pre-drilled holes on the back of the table top (#1)
- II. Prepare a bolt assembly by inserting FIRST the spring washer (#E) onto the bolt (#B) and then the flat washer (#F) onto the SAME bolt (#B), in that order.
- III. Insert the bolt assembly through the hole of the metal plate (#H) and secure that bolt using the Allen wrench (#A) to lock it in with the table top. Repeat the process for the remaining 3 holes of the metal plates.
- IV. Repeat the process for the other assembled leg as pictured.

# Step 2

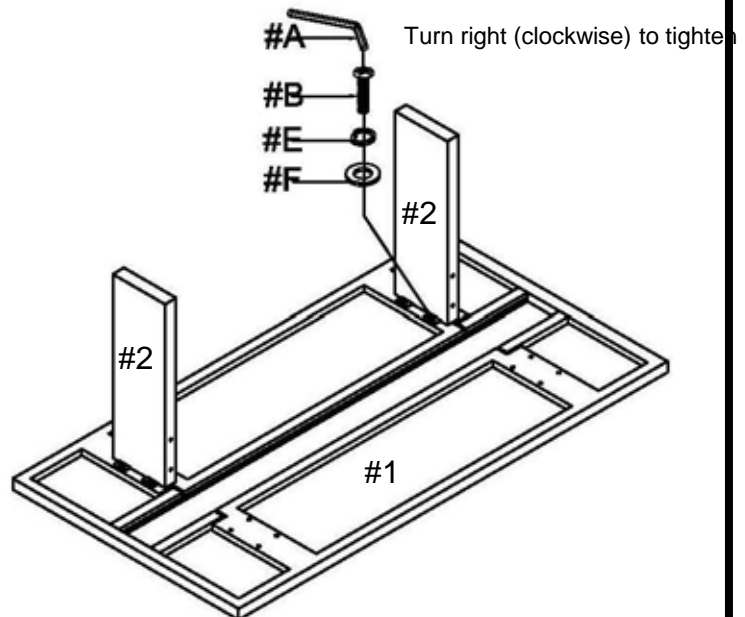 


- I. Align the connecting frame (#3) onto the two pre-drilled holes of the leg (#2).
- II. Prepare a bolt assembly by inserting FIRST the spring washer (#E) onto the bolt (#D) and then the flat washer (#G) onto the SAME bolt (#D), in that order.
- III. Insert the bolt assembly through the hole of the connecting frame (#3) and secure that bolt using the Allen wrench (#A) to lock it in with the leg.
- IV. Use the plastic cap (# I) to cover the hole. Repeat the process for the other hole of the connecting frame.
- V. Repeat the process for the other connecting frame as pictured.

### Step 3

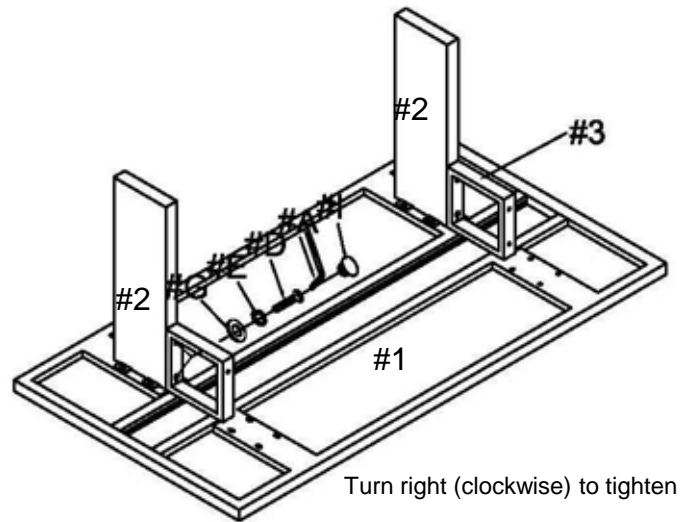 



### Step 4

 For the other half of the table, repeat Step 2 and Step 3 again. Make sure you use the correct hardware with the proper parts.

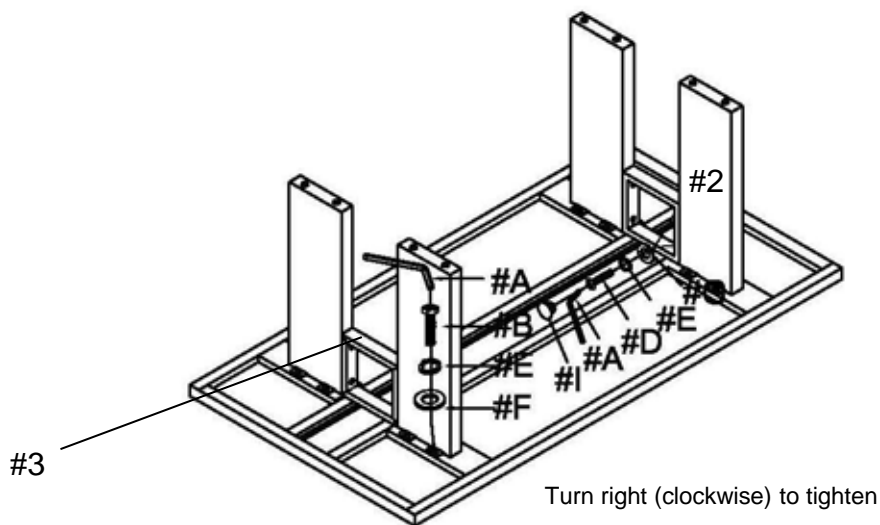


## Step 5

  With the help of another person, carefully turn the table upright. Due to the fragile nature of the glass, take caution when inserting the table glass (#4) onto the table top (#1).

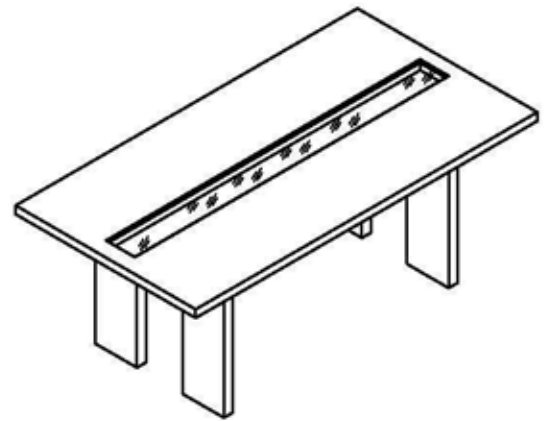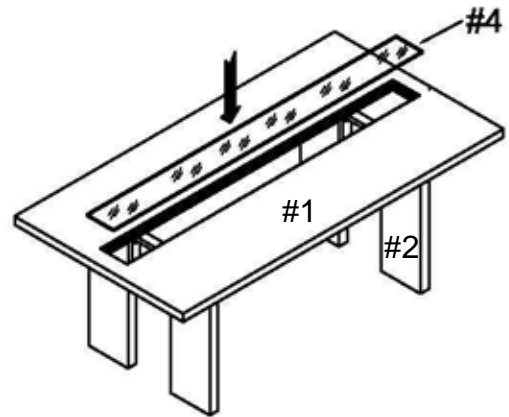

## Step 6

 To install the batteries (not included), remove the screw that holds the battery cover by using a Phillips screwdriver. Install new AA-size 1.5-volt alkaline batteries with correct polarity (+,-) following the illustration inside the battery cover. Close the battery cover and tighten back the screw.

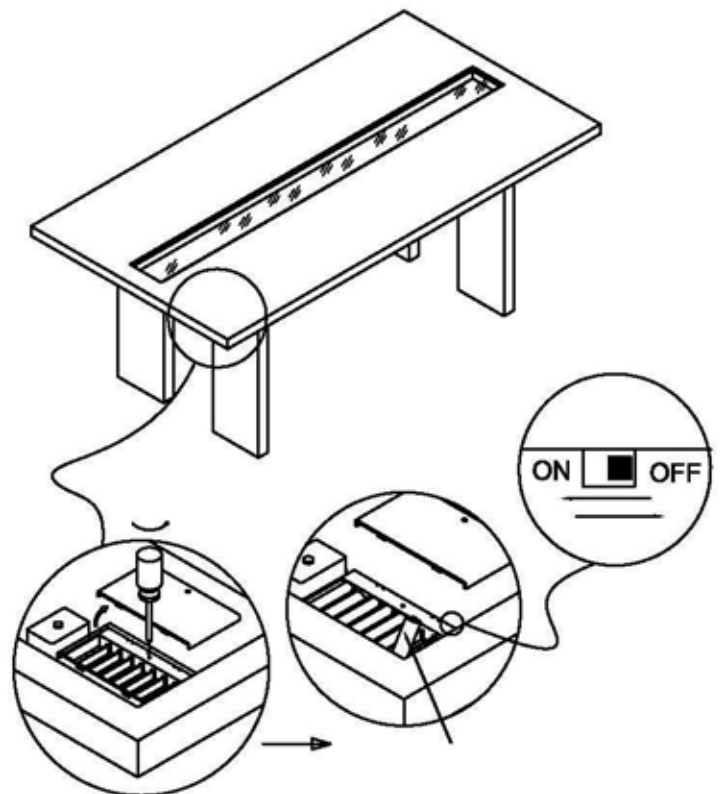

### Caution:

- Use only batteries of the same type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not try to recharge non-rechargeable batteries.
- Remove exhausted or corroded batteries.
- Remove batteries to extend their life and to prevent corrosion if the light is not be used for at least 2 weeks.