

MODEL#

CM4567-S

Questions?

GIVE US A CALL: 1-888-980-5122 MON – FRI 8:30AM – 5:30PM (PT)

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)



2 - People Recommended

ASSEMBLY RATING



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com







n foagroup



Monday to Friday 8:30AM- 5:30PM (PT)



E-MAIL cs.ec@foagroup.com



FurnitureOfAmerica



	Are you missing anything? Double-check all parts, hardware and	Check out our Quick Tips! We recommend reviewing the pre-assembly
	accessories listed are all acccounted for.	 handouts. Even experts need a refresher now and then!
	Should we send any replacements?	Prep Time!
	Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

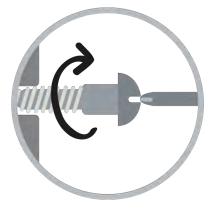

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

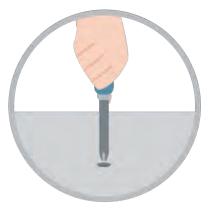

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.









cam bolt

cam lock


screwdriver

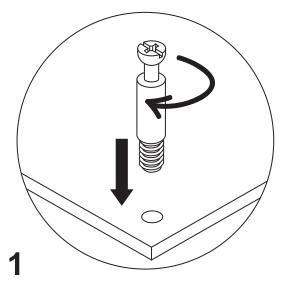


Screw the cam bolt into panel.

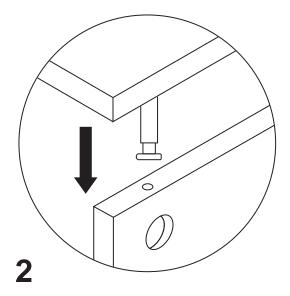

Insert the cam bolt into the bolt hole of joint panel.

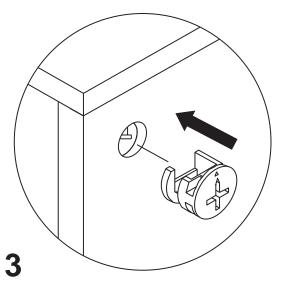

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

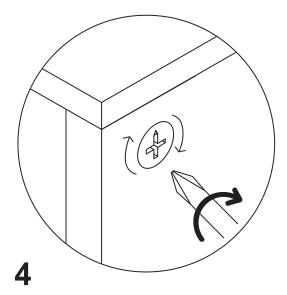


Turn the cam lock clockwise gently until it will not turn any more.


SOFA TABLE

CM4567-S




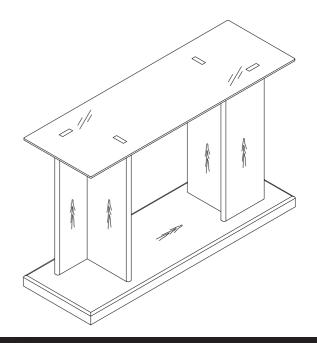


PARTS

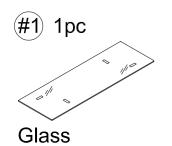



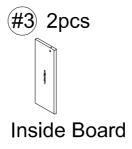

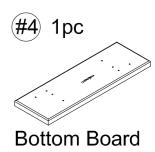

HARDWARE



#B 8pcs









Cam Lock Ø14.5x11

Bolt 1/4" x 1-3/8"

Washer Ø16xØ7x1.0





#E 4pcs



#G 6pcs



M6x34 Connection Bolt




Adjustable Foot

Ø20 Sealing Sticker

1


Exploded View

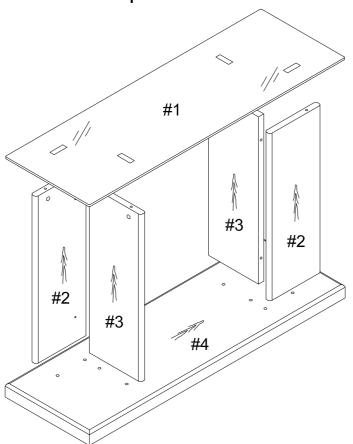


2


Part #2 x 2pcs
Part #3 x 2pcs
Hardware #E x 4pcs

Secure cam bolts (#E) onto board (#2), then align board (#3) onto the cam bolts (#E) on board (#2).

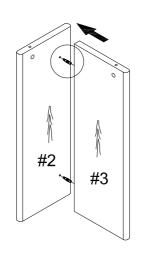


x2

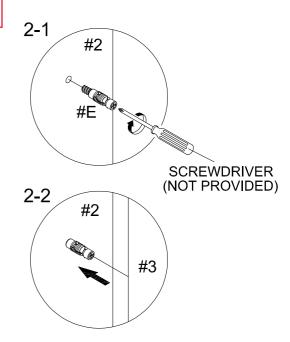


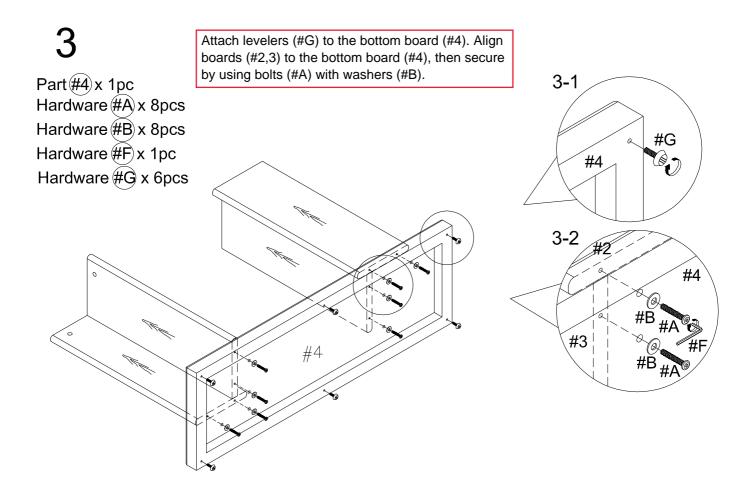

4


Part#1 x 1pc Hardware #C x 4pcs

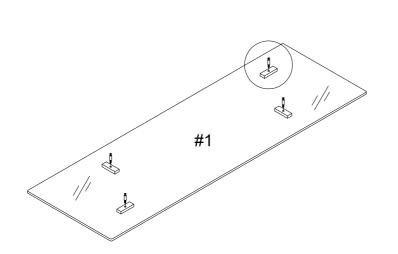

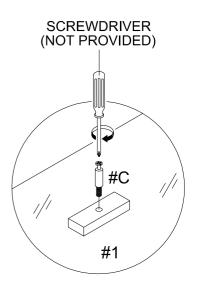


Secure cam bolts (#C) onto the glass top (#1).


5

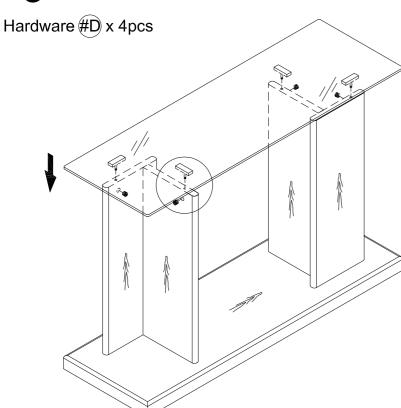

Align cam bolts attached to the glass top (#1), to the boards (#2,3), then secure by using cam locks (#D). Please refer to page 5 on how to properly secure cam locks (#D) onto cam bolts (#C).

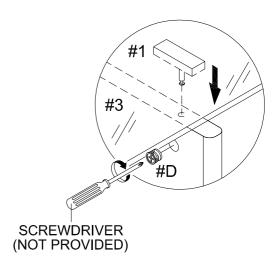

6

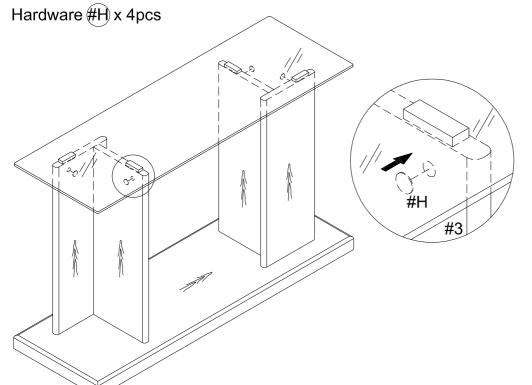

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.