

MODEL#

CM4568S

Questions?

GIVE US A CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PT)

TOOLS REQUIRED



Phillips Screwdriver

(Not Included)



Socket Wrench

(Included)




2 - People Recommended

ASSEMBLY RATING



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

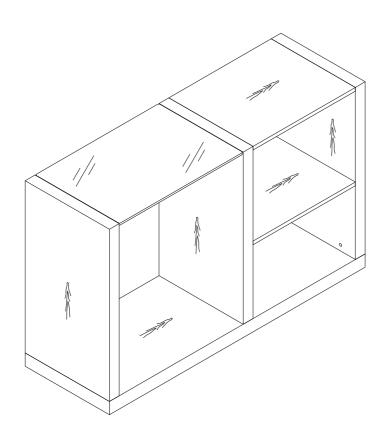

VERSION # 21-07-29





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com







n foagroup



Monday to Friday 8:30AM- 5:30PM (PT)



E-MAIL cs.ec@foagroup.com



FurnitureOfAmerica



Dou	e you missing anything? uble-check all parts, hardware and essories listed are all acccounted for.	Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Are	ould we send any replacements? there any irregularities or flaws in the ts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

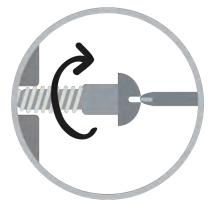

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

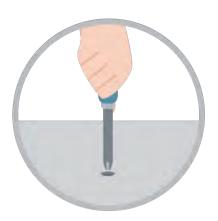

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




com look




cam bolt ca

cam lock


screwdriver

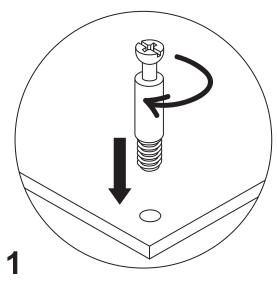


Screw the cam bolt into panel.

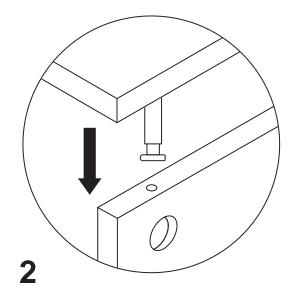

Insert the cam bolt into the bolt hole of joint panel.

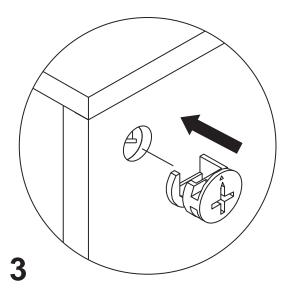

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

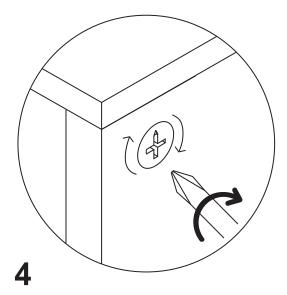


Turn the cam lock clockwise gently until it will not turn any more.

SOFA TABLE

CM4568S



- · Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

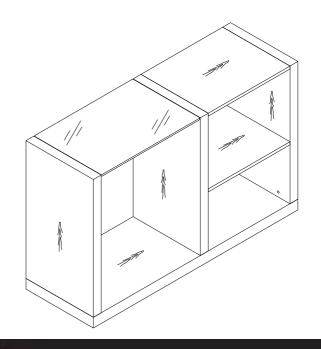

PARTS





#2) 1pc



#3 1pc



(#4) 1pc



Glass

Left upright board Middle upright board Right upright board

#5) 1pc



Bottom board

#6) 1pc



Up board

1pc



Middle borad

1pc



Back borad

(#9) 2pcs




Connection

SOFA TABLE

CM4568S



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

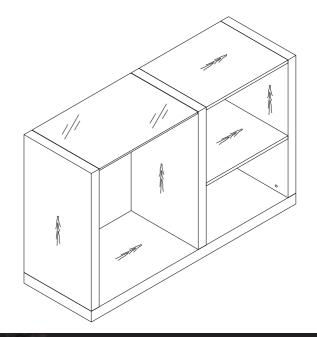

HARDWARE



#B 4pcs

#C 6pcs

#D 6pcs

0

Nut M6

Rod 1/4" x 2-1/8"

Rod 1/4" x 3-1/8"

Washer Ø16xØ7x1.0

#E 6pcs

(#F) 14pcs

#G 4pcs

#H) 4pcs

Hammer Nut Set Screw Ø6x30

E**n**mo-

Screw M5 x 15 Sucker

#I)6pcs

(#J) 1pc

#K) 8pcs

(#L) 8pcs

Socket Wrench M6

Ø20 Sealing sticker

Cam Bolt M6x40

#M 8pcs

Adjustable Foot

#N) 4pcs

#O 4pcs





Cam Lock Ø14.5x11


Cam Bolt M6x24

9


Cam Lock Ø12x10.5

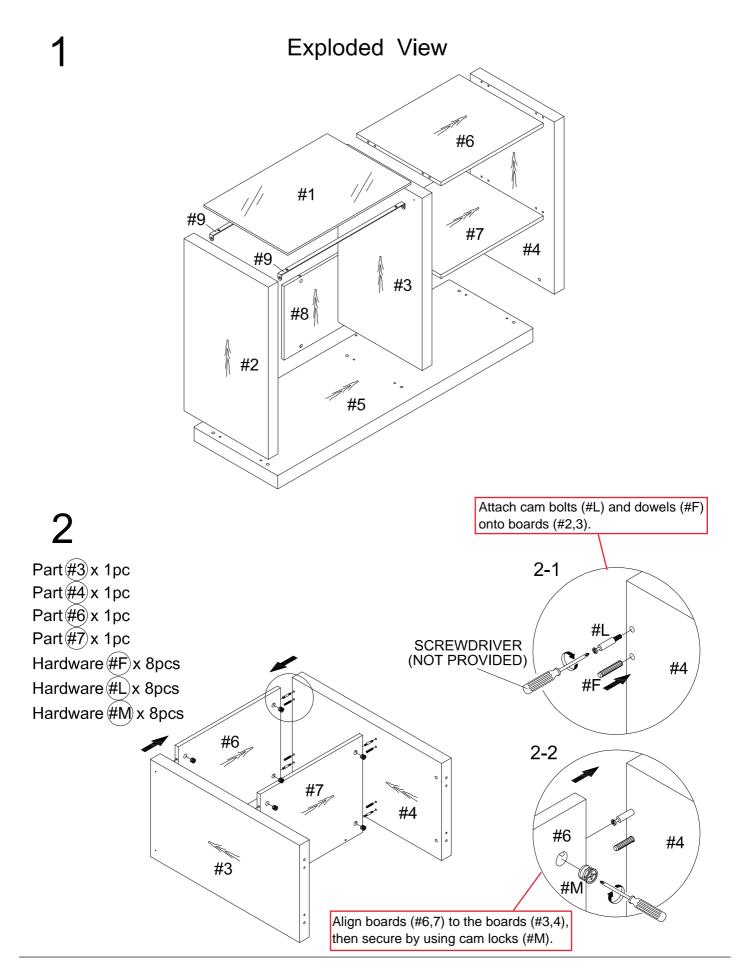

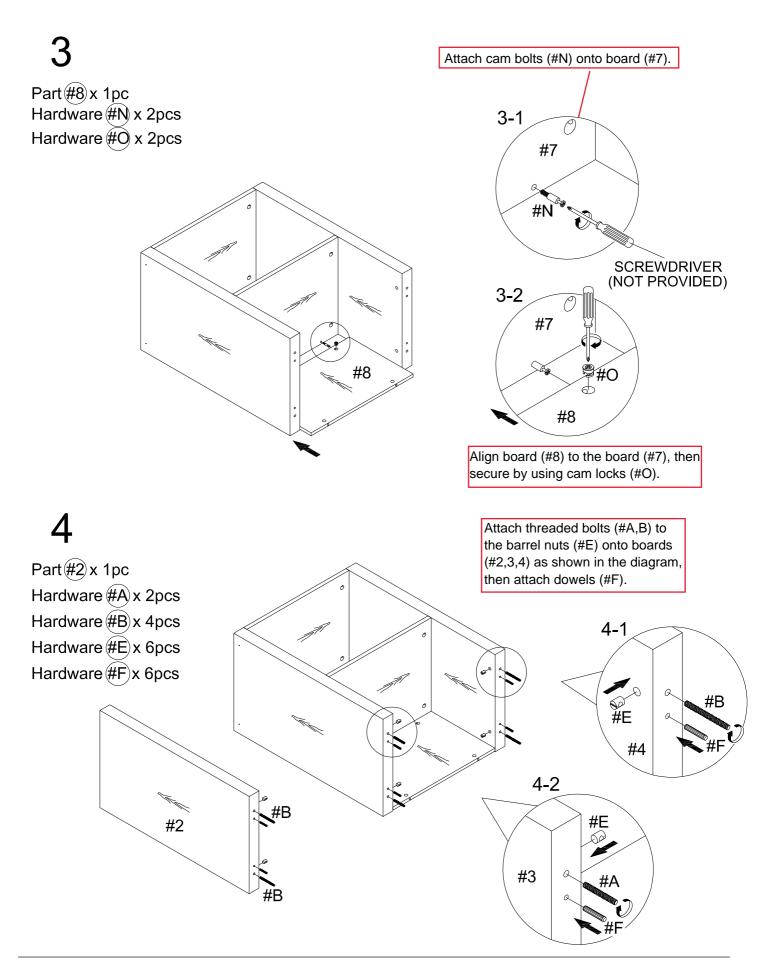


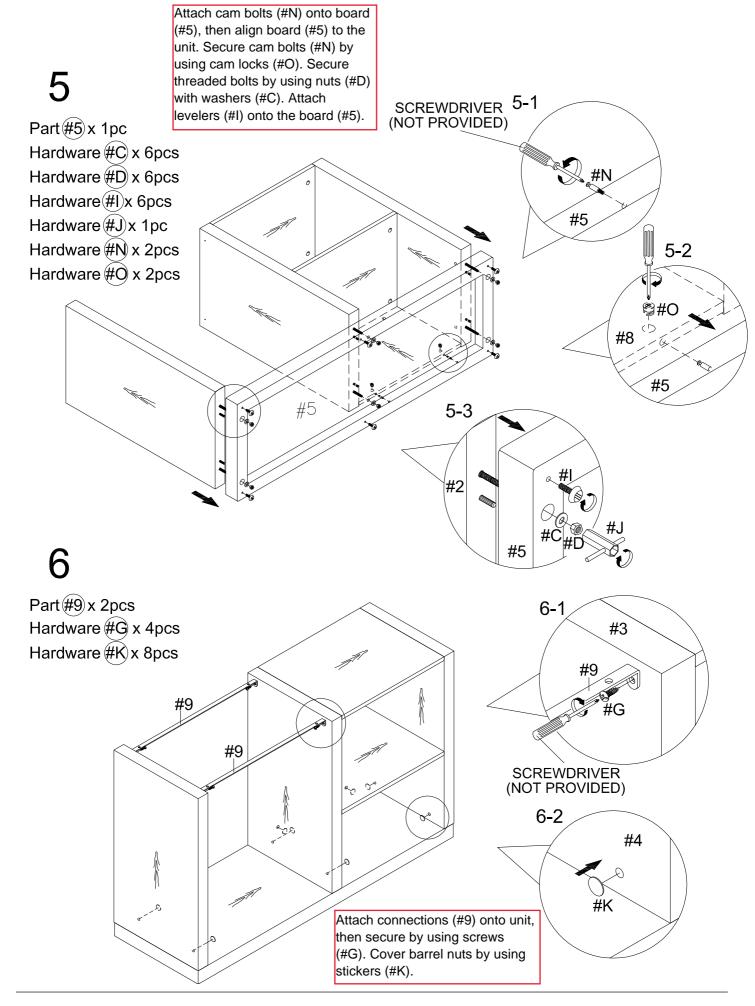


7

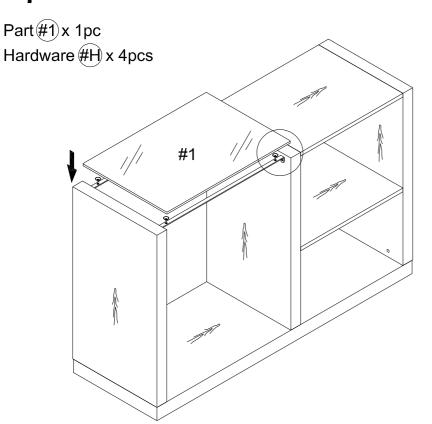

Attach suckers (#H) onto connections (#9), then place glass (#1) onto the top.

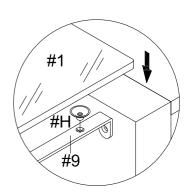

8

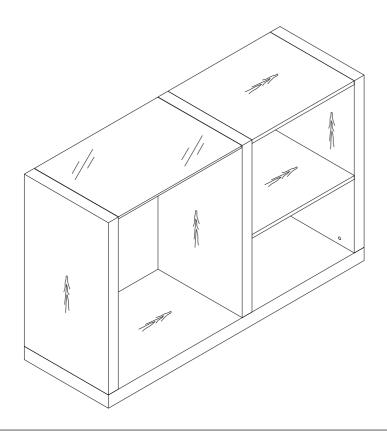

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.