

ASSEMBLY INSTRUCTION

 
 
 
Page: 1 of 2

MODEL : LANDO


DESCRIPTION : LANDO-BLACK-QB-HB W/LED/LANDO-BLACK-QB-FB W/SLATS/
LANDO-BLACK-QB/KB-SR
: LANDO-BLACK-KB-HB W/LED/LANDO-BLACK-KB-FB W/SLATS/
LANDO-BLACK-QB/KB-SR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST#

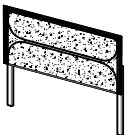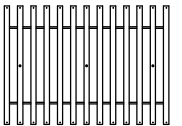NO	NAME	PART	QTY
A	Headboard		1pc
B	Footboard		1pc
C	Side Rail		2pcs
D	Roll Slat		13pcs
E	Slat Support Leg		3pcs
F	Center Vertical Slat		1pc
G	Acrylic Bun Foot		2pcs

 HARDWARE LIST#


NO	NAME	PART	QTY
1	Allen key 4mm		1pc
2	JCBC M6 x 60mm		3pcs
3	M6 Spring washer		3pcs
4	M6 Flat washer		3pcs
5	Screw 32mm		26pcs
6	Adjustable Leveller		3pcs

 HARDWARE LOCATED IN FOOTBOARD BOX

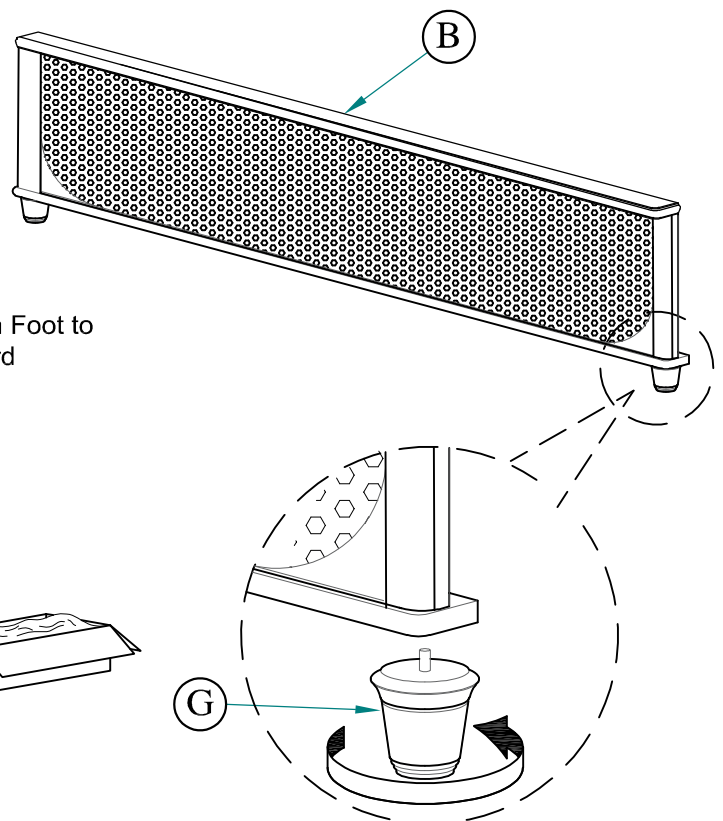


Step 1:

 Secure the (G) Acrylic Bun Foot to the bottom of (B) Footboard as a diagram shown.

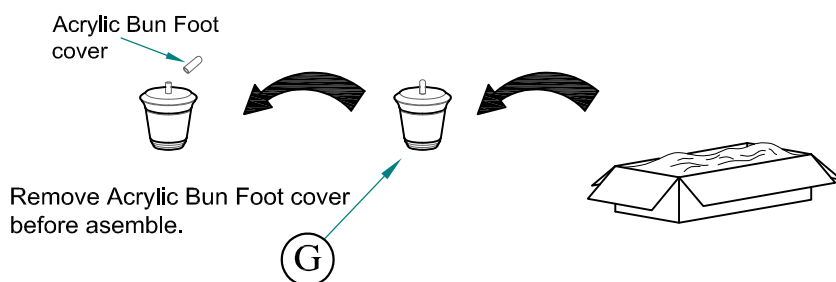


Step 2 :

 
Attach the (C) Side Rail to the
(A) Headboard & (B) Footboard.

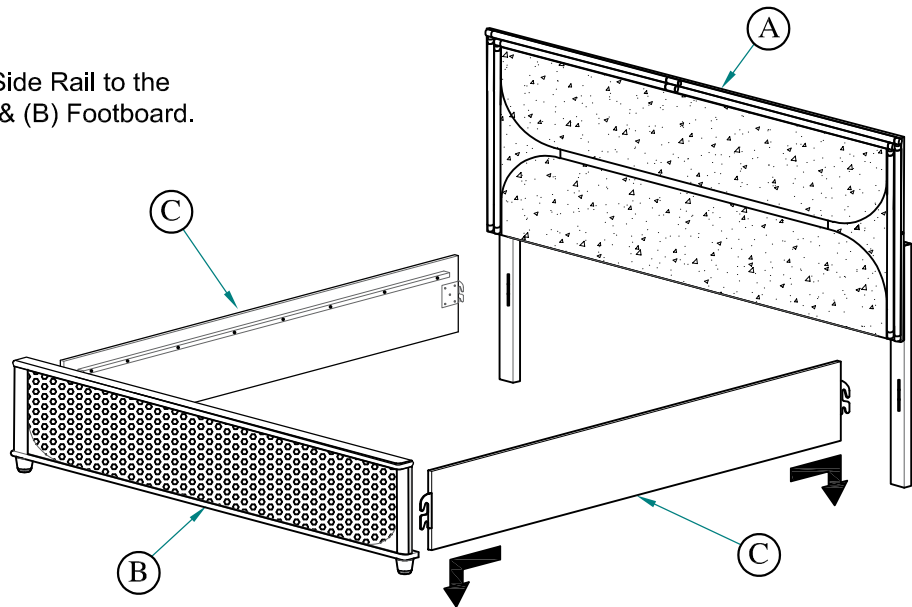**Step 3 :**

 Secure the (D) Roll Slat using the
(5) Screw 32mm provided.

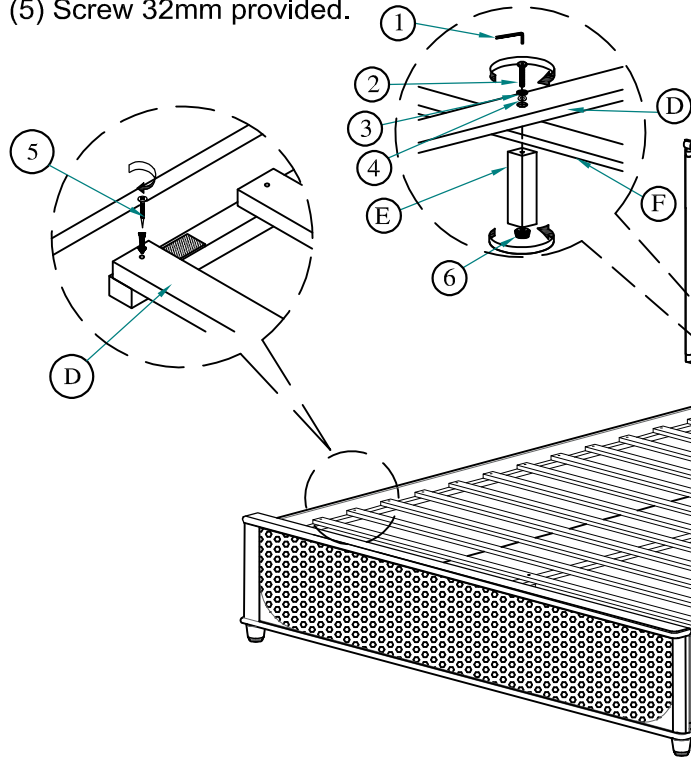**Step 4 :**

 Attach (E) Slat Support Leg & (F) Center Vertical Slat
to the bottom of (D) Roll Slat using (2) JCBC M6 x 60mm &
(3) M6 Spring Washer & (4) M6 Flat washer .
Attach the (6) Adjustable leveller and adjust it
to level the bed with the floor.

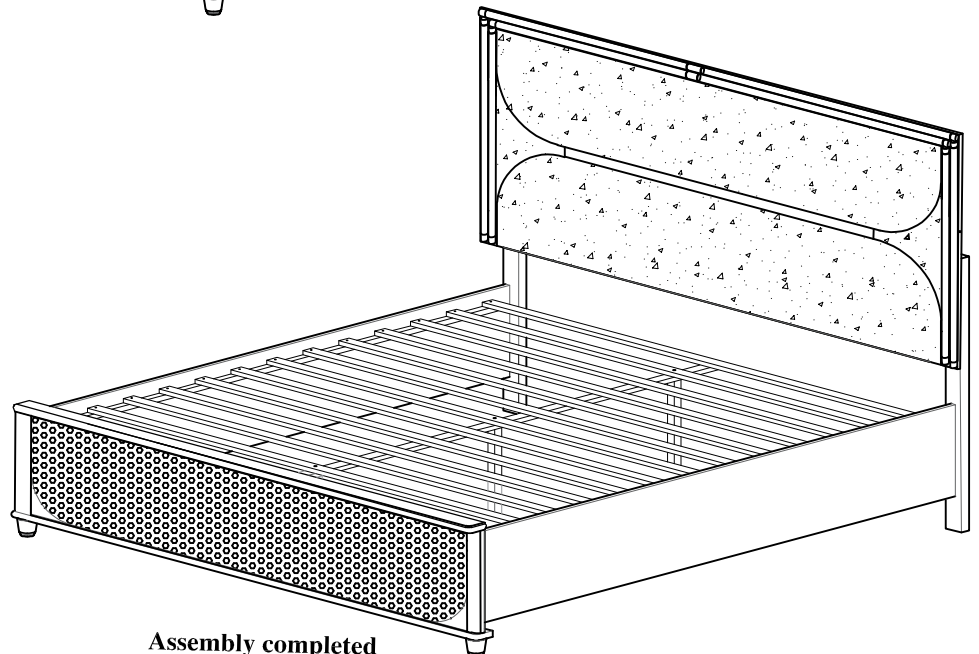

Assembly completed

ASSEMBLY INSTRUCTION

 
 
Page: 1 of 1

MODEL : LANDO

DESCRIPTION : LANDO-BLACK-QB-HB W/LED
: LANDO-BLACK-KB-HB W/LED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LIST#

NO	NAME	PART	QTY
A	Headboard		1pc
B	Headboard Post - (L/R)		2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key		1pc
2	JCBC M6 x 35mm		6pcs
3	M6 Spring washer		6pcs
4	M6 Flat washer		6pcs
5	AC/DC Adapter		1pc
6	LED Remote Control		1pc
HARDWARE LOCATED IN HEADBOARD BOX			

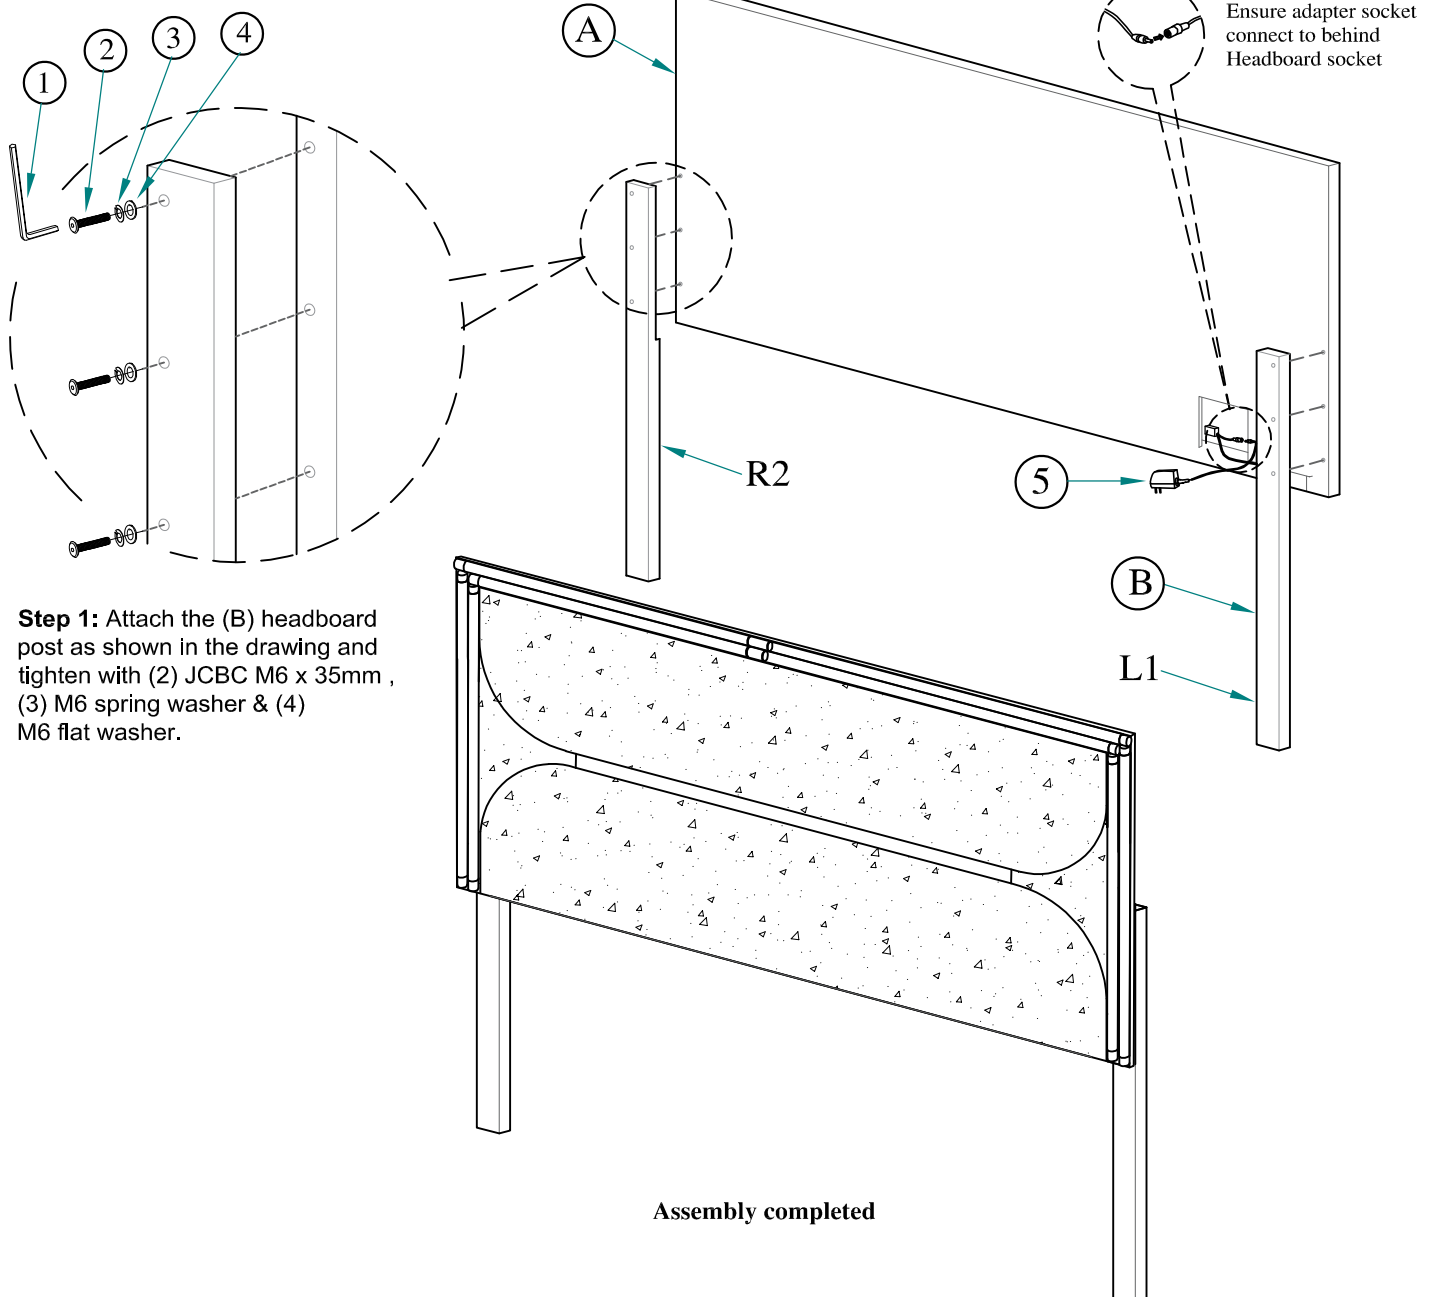 

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling bed and keep these instructions for future reference.

INSTRUCTIONS FOR LED LIGHTING FUNCTIONALITY

STEP 1



Insert the DC Plug end of the Power Source Cable into the RGB controller (show above) found mounted on the back of the furniture.

STEP 2



Insert Power Source Hub (wall plug) into electrical outlet.

 
STEP 3

Use the LED Remote Control to operate lighting functions.

To operate Remote Control, pull plastic tab from battery compartment to activate remote (see below at base of remote).

Button operations shown below on the Remote Control provide a selection of functions that can be chosen at your preference.

LED Remote Control

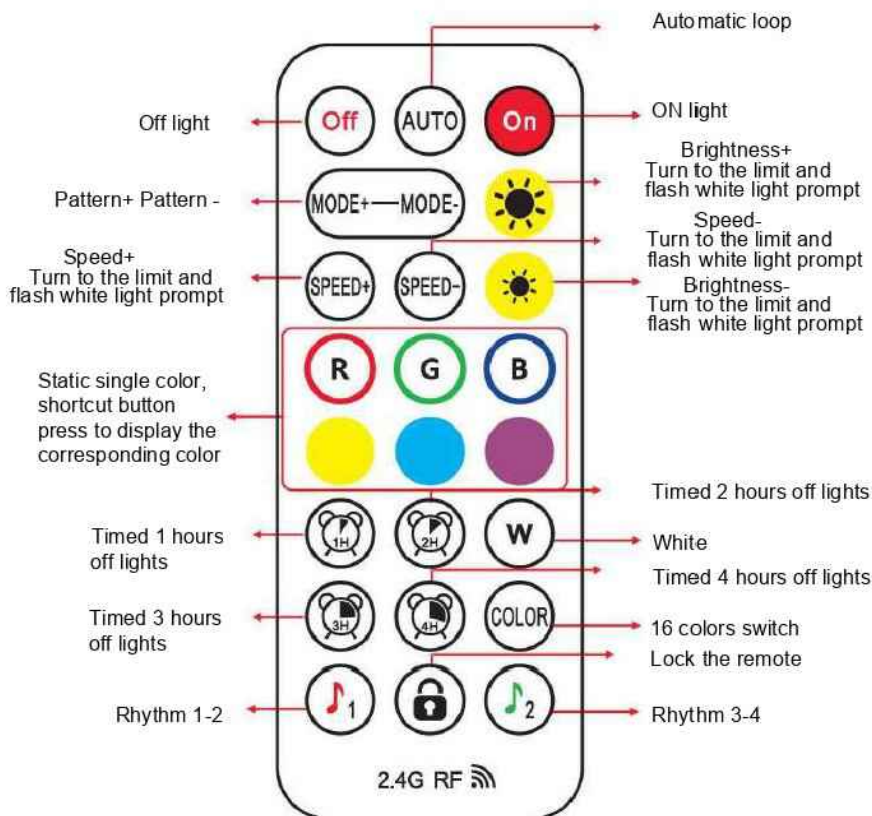

*Pull plastic tab to activate remote



Scan QR code to download program to control LED bed lights with your bluetooth enabled device.



 
LED lighting (Blue)

For Customer Service, call
Vantage: 1-844-244-3810

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling bed and keep these instructions for future reference.

HOW TO REPLACE A NEW COIN BATTERY

STEP 4 The battery is supplied with the remote control. For replacement battery, please follow the sequence below to replace the battery.

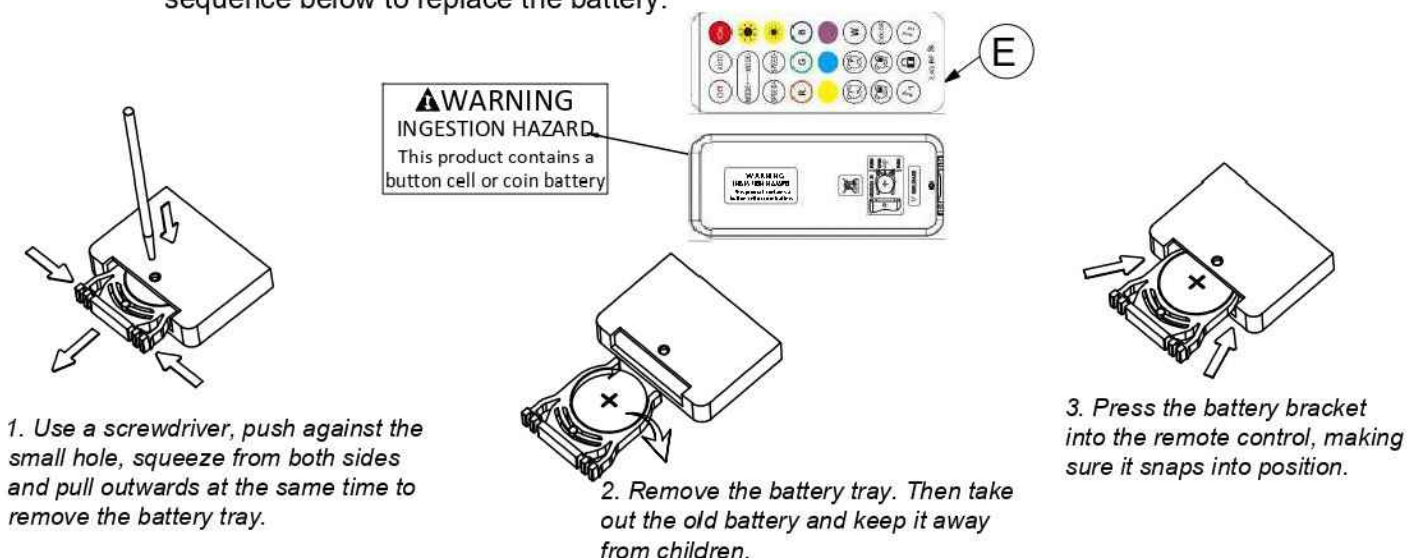

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Battery type: 1 CR2025, 3V

Notice

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: 1 CR2025, 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

ASSEMBLY INSTRUCTION

 
Page: 1 of 2

MODEL : LANDO

DESCRIPTION : LANDO-BLACK-DR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LIST#

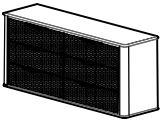NO	DRAWING	DESCRIPTION	QTY
A		Dresser	1pc
B		Acrylic Bun Foot	2pcs
C		Metal Leg	2pcs
D		Center Leg	1pc


HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 4mm		1pc
2	JCBC M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs

Acrylic Bun Foot
cover

Remove Acrylic Bun Foot
cover before assemble.

 Remove Acrylic Bun Foot
carton located in the drawer
of the casegood. Remove
and unwrap each foot.

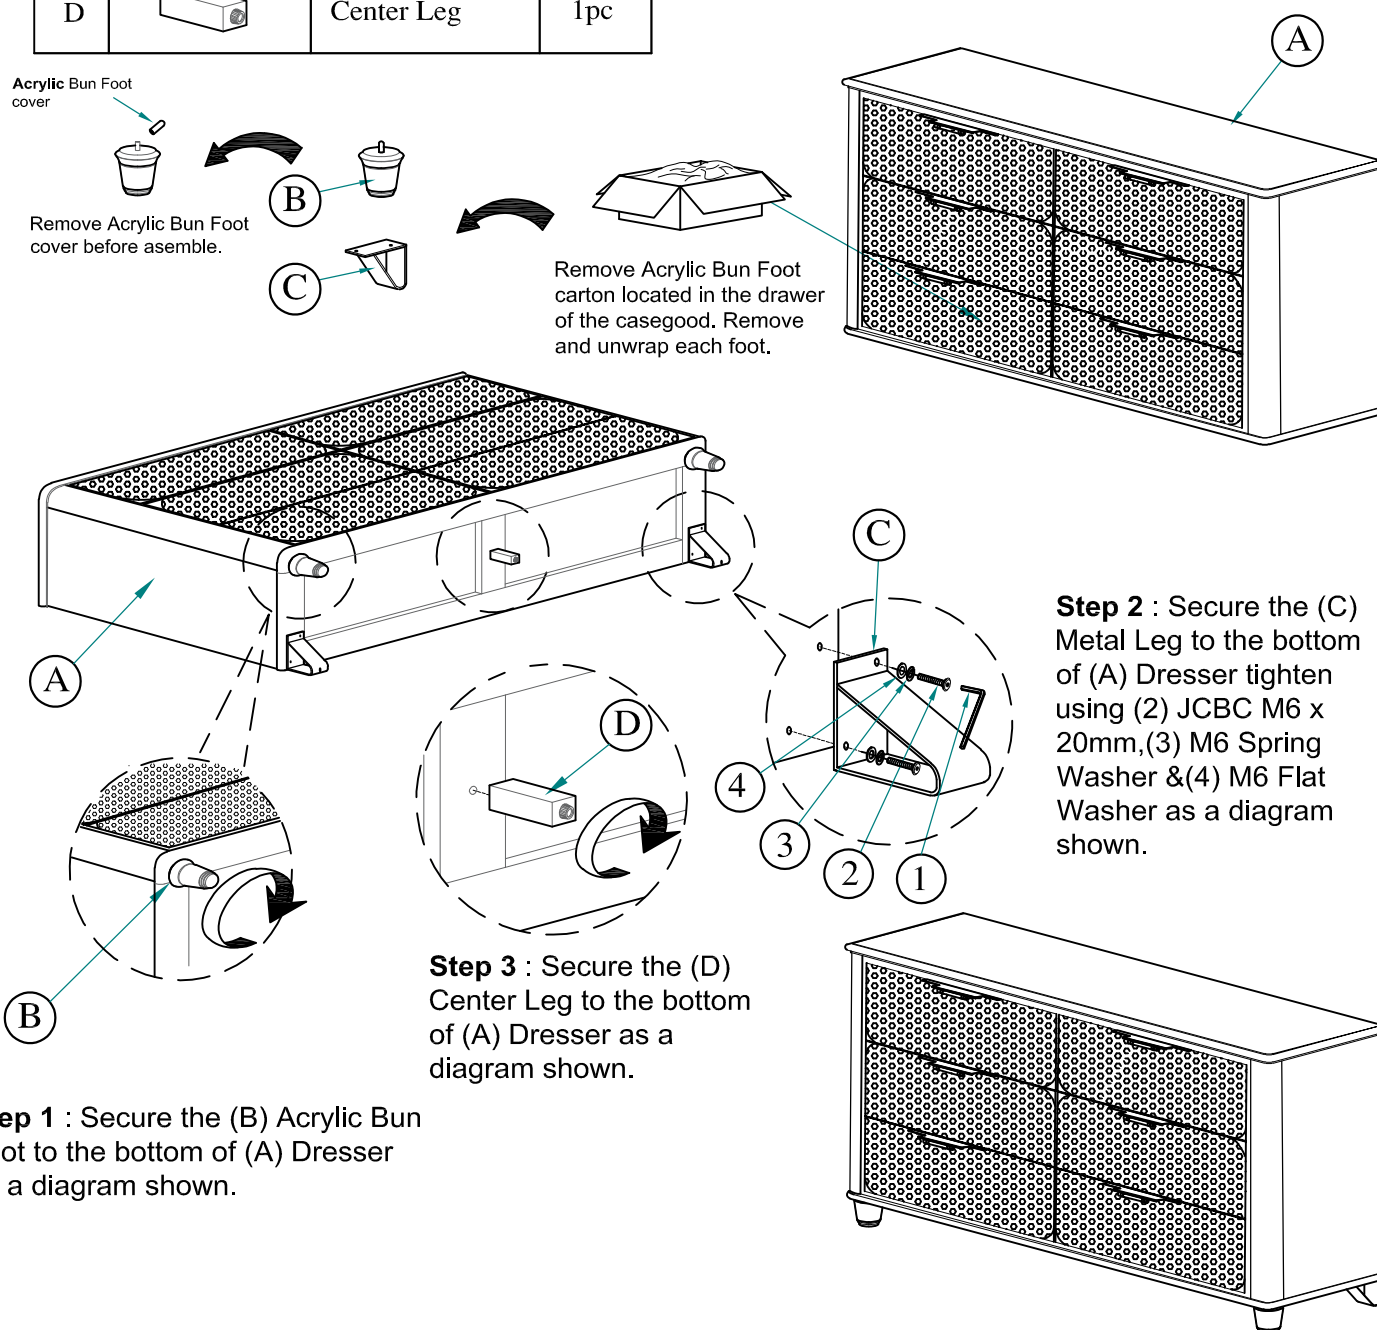

Step 1 : Secure the (B) Acrylic Bun Foot to the bottom of (A) Dresser as a diagram shown.



Step 3 : Secure the (D) Center Leg to the bottom of (A) Dresser as a diagram shown.

Step 2 : Secure the (C) Metal Leg to the bottom of (A) Dresser tighten using (2) JCBC M6 x 20mm, (3) M6 Spring Washer & (4) M6 Flat Washer as a diagram shown.

Assembly completed

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

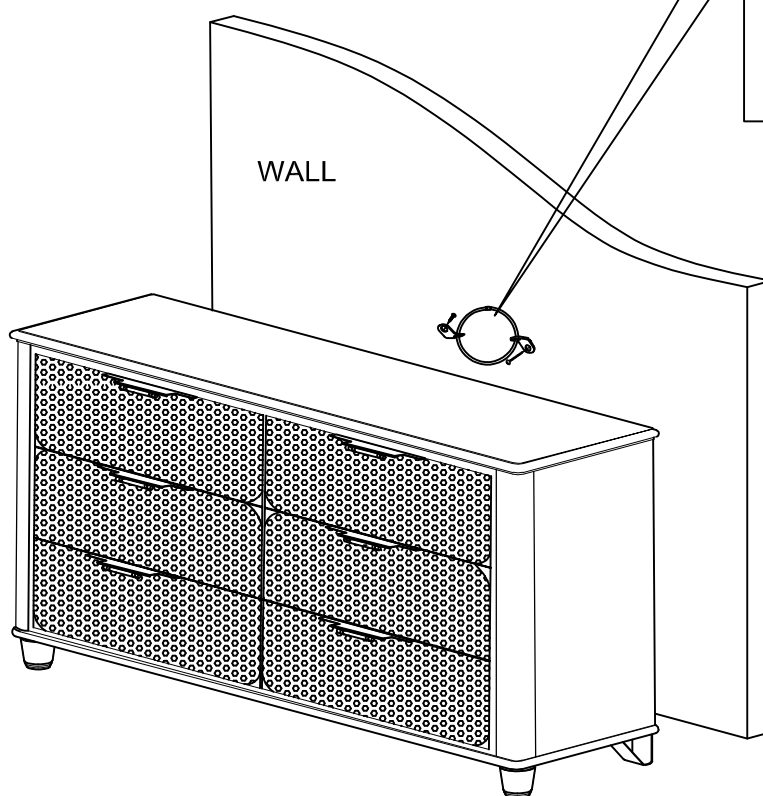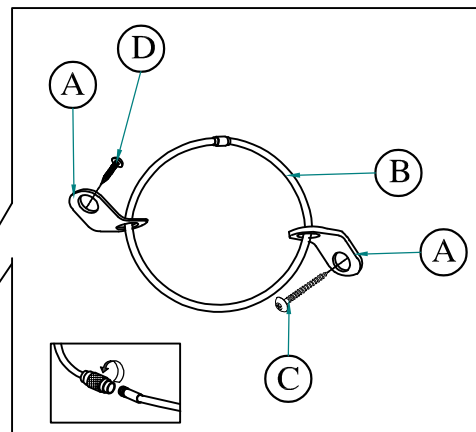  

Assembly completed

ASSEMBLY INSTRUCTION

 
Page: 1 of 1

MODEL : LANDO

DESCRIPTION : LANDO-BLACK-DR/LANDO-BLACK-MR W/LED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LIST#

NO	NAME	PART	QTY
A	Dresser		1pc
B	Mirror		1pc
C	Mirror Support		2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key 4mm		1pc
2	JCBC M6 x 35mm		8pcs
3	M6 Spring washer		8pcs
4	1/4" Flat washer		8pcs
5	AC/DC Adapter		1pc
6	LED Remote Control		1pc
HARDWARE LOCATED IN MIRROR BOX			

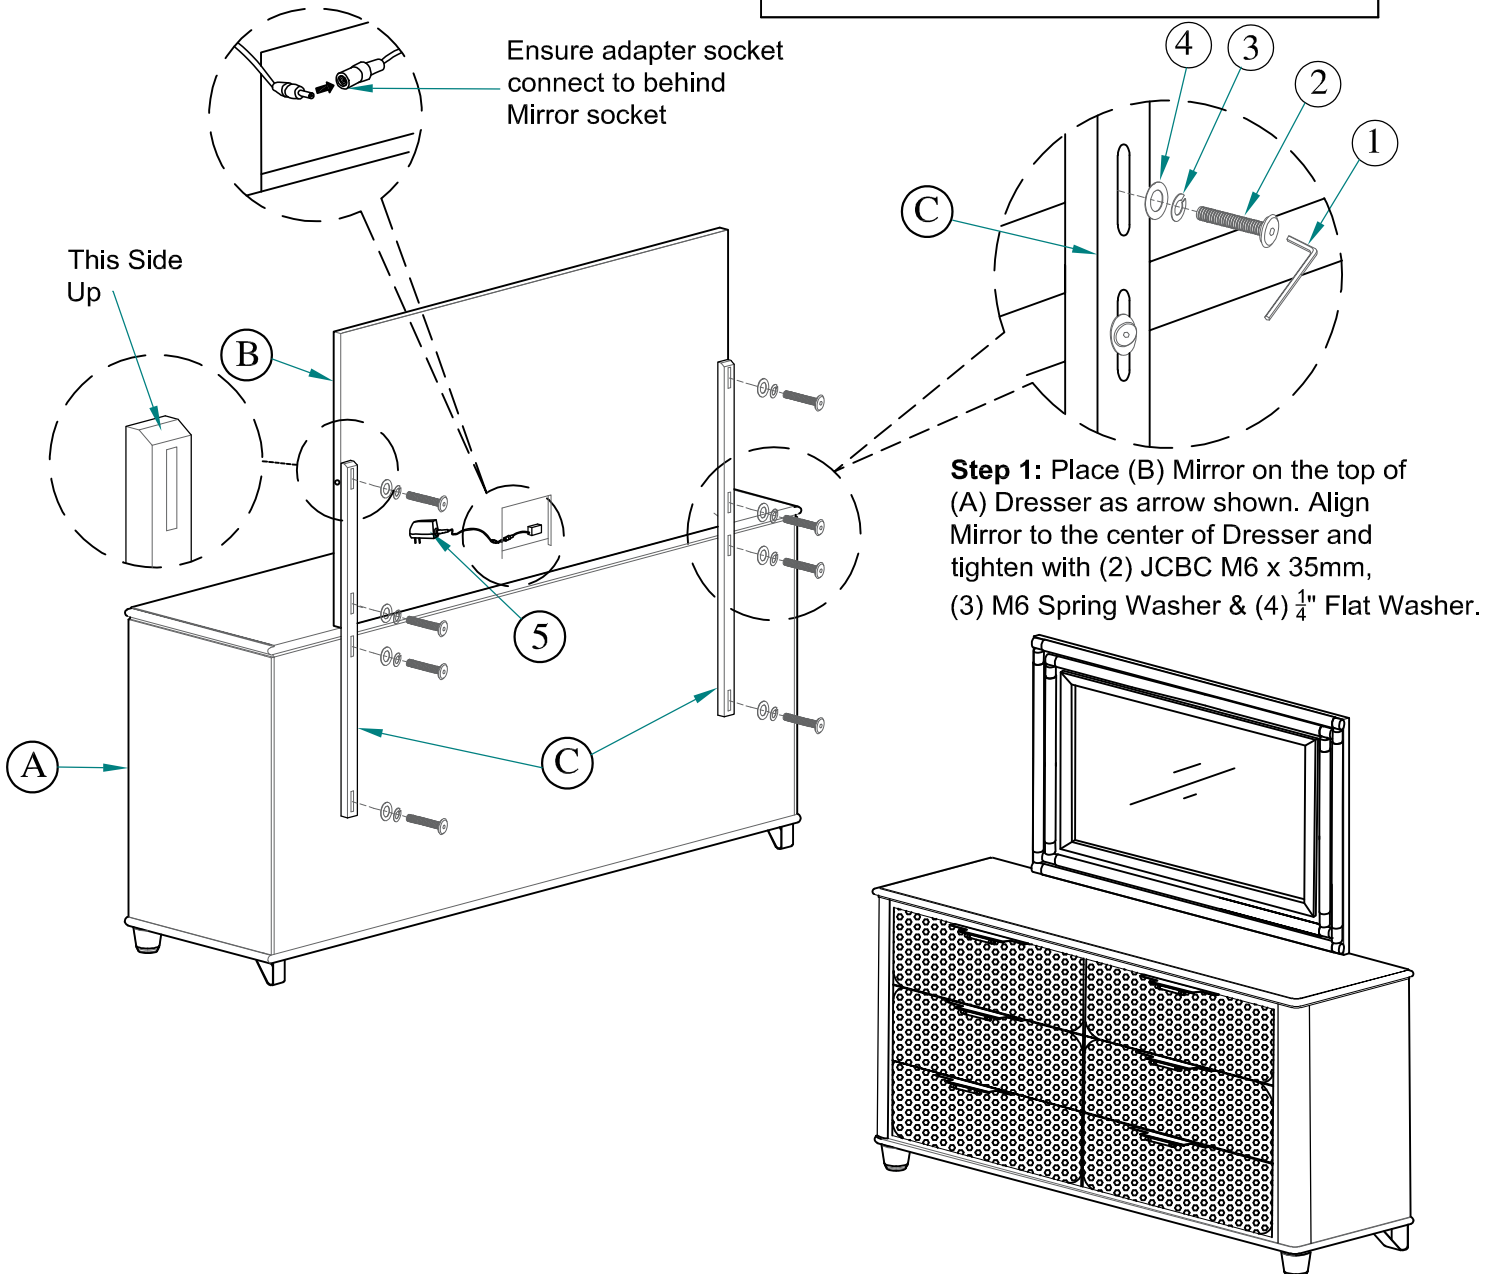 

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling bed and keep these instructions for future reference.

INSTRUCTIONS FOR LED LIGHTING FUNCTIONALITY

STEP 1



Insert the DC Plug end of the Power Source Cable into the RGB controller (show above) found mounted on the back of the furniture.

STEP 2



Insert Power Source Hub (wall plug) into electrical outlet.

 
STEP 3

Use the LED Remote Control to operate lighting functions.

To operate Remote Control, pull plastic tab from battery compartment to activate remote (see below at base of remote).

Button operations shown below on the Remote Control provide a selection of functions that can be chosen at your preference.

LED Remote Control

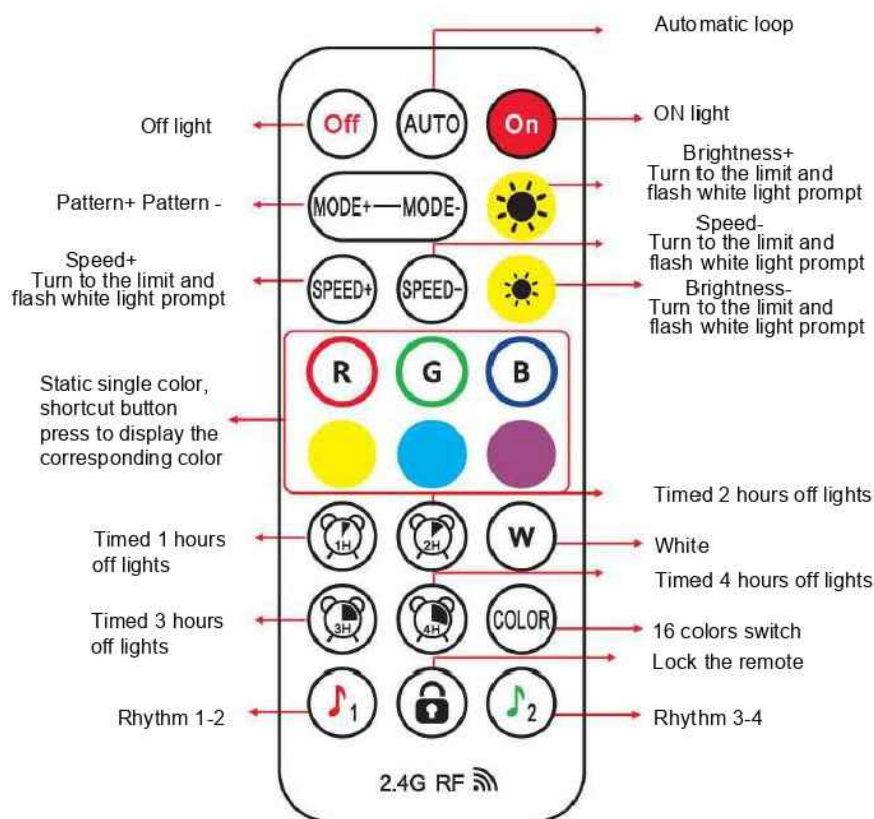

*Pull plastic tab to activate remote



Scan QR code to download program to control LED bed lights with your bluetooth enabled device.



 
LED lighting (Blue)

For Customer Service, call
Vantage: 1-844-244-3810

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling bed and keep these instructions for future reference.

HOW TO REPLACE A NEW COIN BATTERY

STEP 4 The battery is supplied with the remote control. For replacement battery, please follow the sequence below to replace the battery.

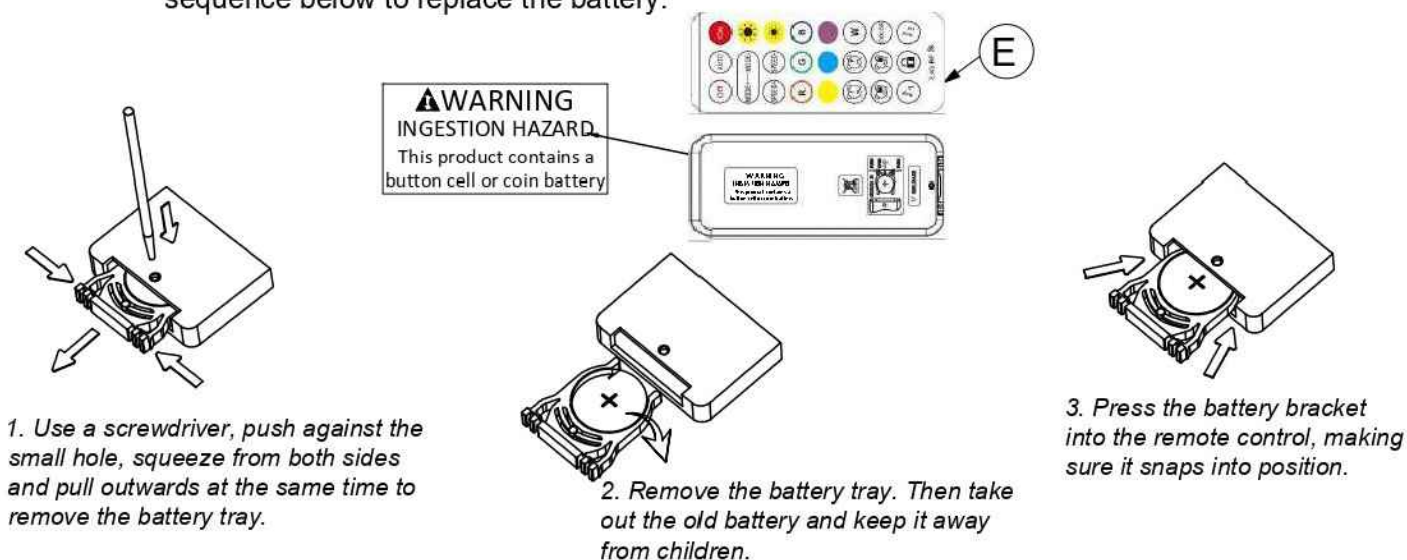

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Battery type: 1 CR2025, 3V

Notice

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: 1 CR2025, 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

ASSEMBLY INSTRUCTION

 
MODEL : LANDO

DESCRIPTION : LANDO-BLACK-NS W/SPKR & WC

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Bluetooth Connection: Enable Bluetooth on your device and pair with [GFUSA] from the list of available devices.

PART LIST#

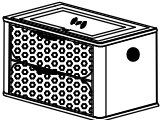NO	DRAWING	DESCRIPTION	QTY
A		NightStand	1pc
B		Acrylic Bun Foot	2pcs
C		Metal Leg	2pcs


HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 4mm		1pc
2	JCBC M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs
5	AC/DC Adapter		1pc

Acrylic Bun Foot cover


Remove Acrylic Bun Foot cover before assemble.

 Remove Acrylic Bun Foot carton located in the drawer of the casegood. Remove and unwrap each foot.


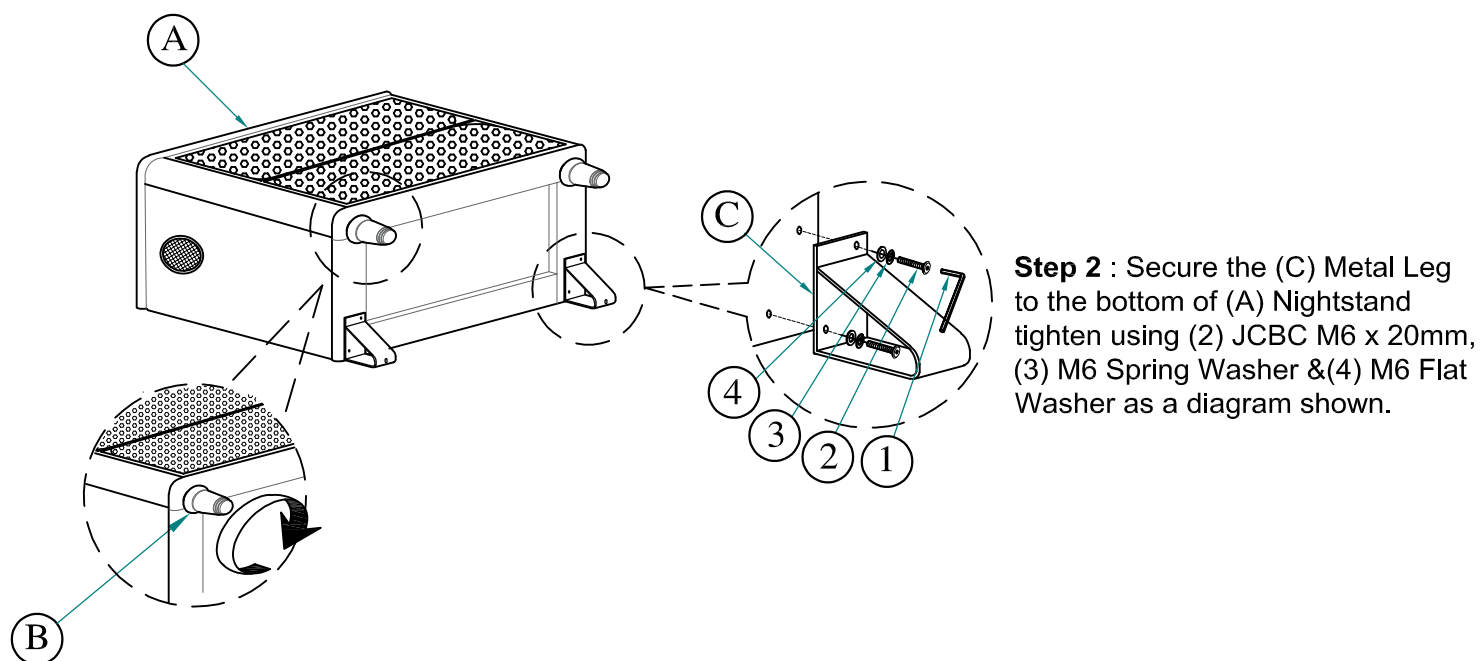


Step 1: Secure the (B) Acrylic Bun Foot to the bottom of (A) Nightstand as a diagram shown.

 Step 2 : Secure the (C) Metal Leg to the bottom of (A) Nightstand tighten using (2) JCBC M6 x 20mm, (3) M6 Spring Washer &(4) M6 Flat Washer as a diagram shown.

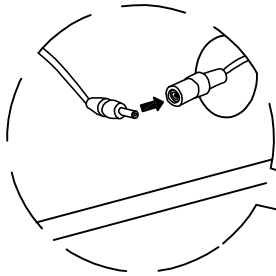

  
Step 3 : Connect the AC/DC Adapter (5) to the wire on the back of NightStand (A).

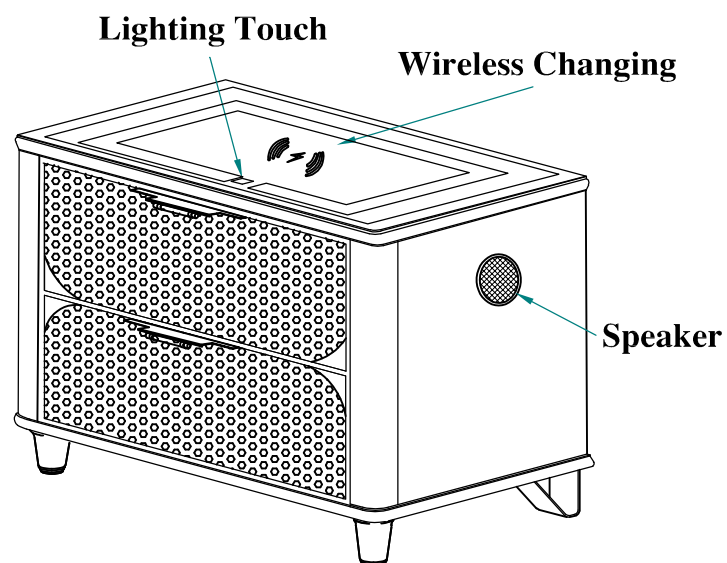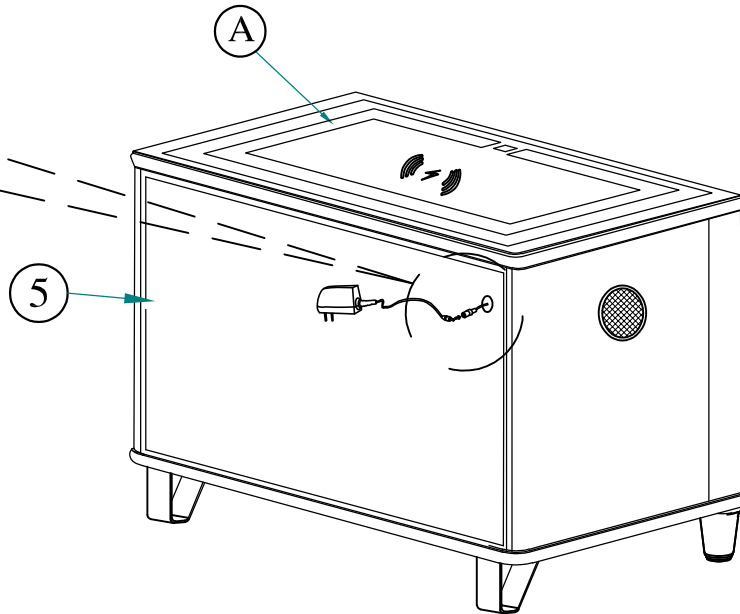

Assembly completed

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

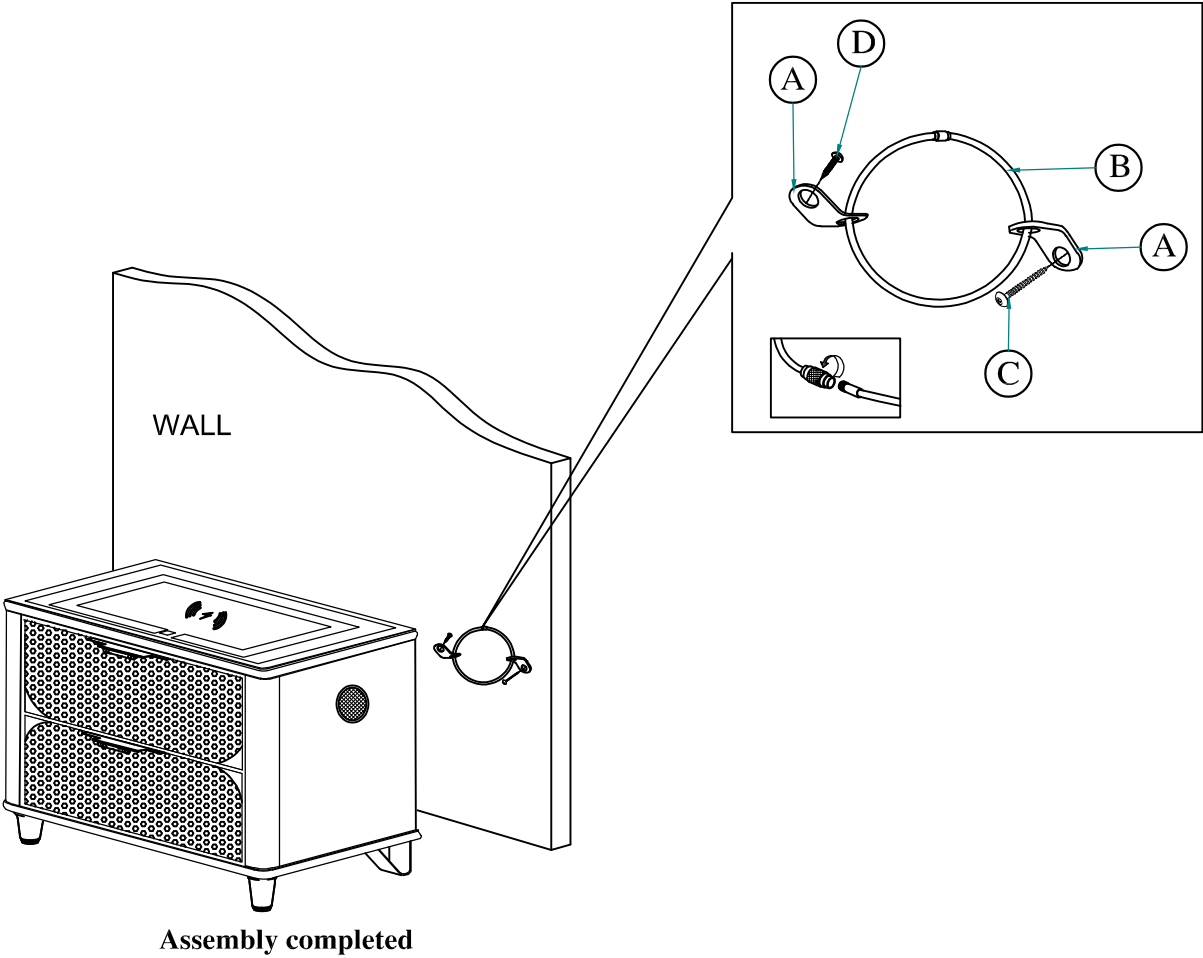 


ASSEMBLY INSTRUCTION

MODEL : LANDO

DESCRIPTION : LANDO-BLACK-CH


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

 PART LIST#

NO	DRAWING	DESCRIPTION	QTY
A		Chest	1pc
B		Acrylic Bun Foot	2pcs
C		Metal Leg	2pcs


HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 4mm		1pc
2	JCBC M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs

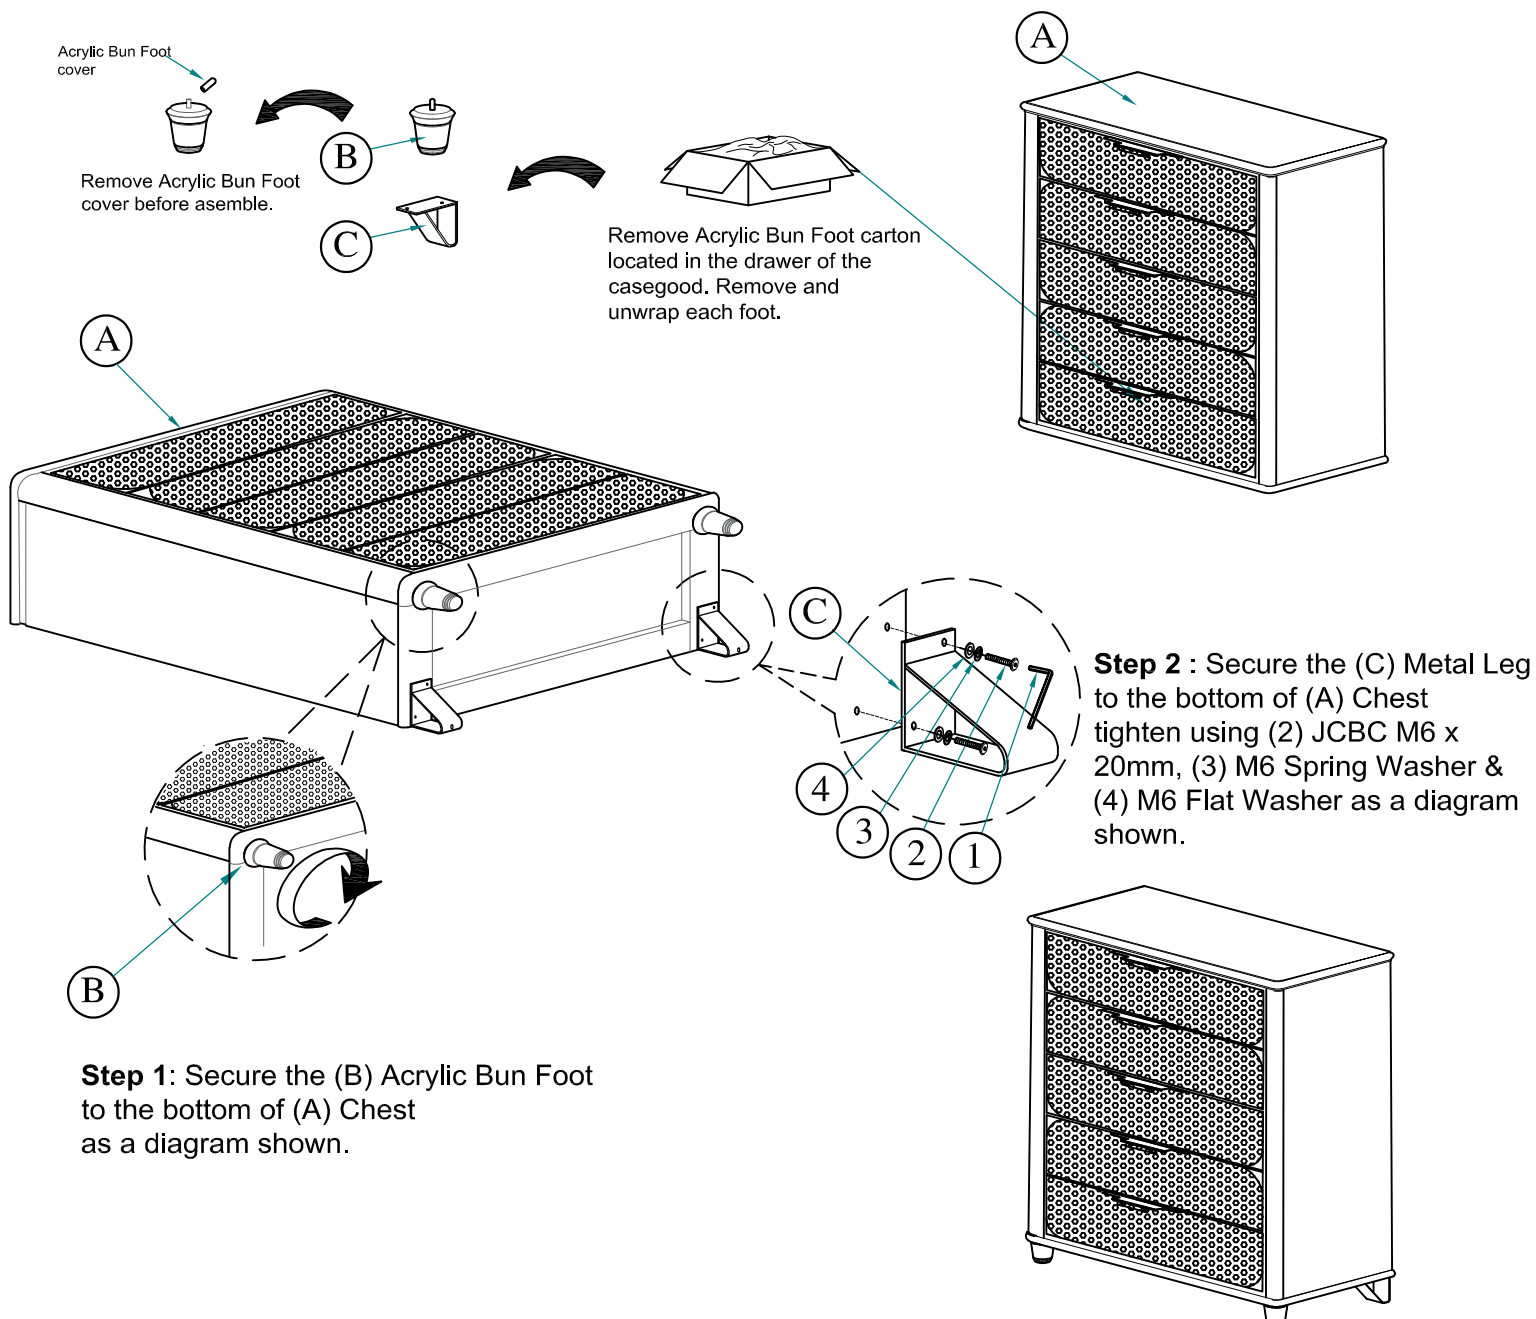 

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

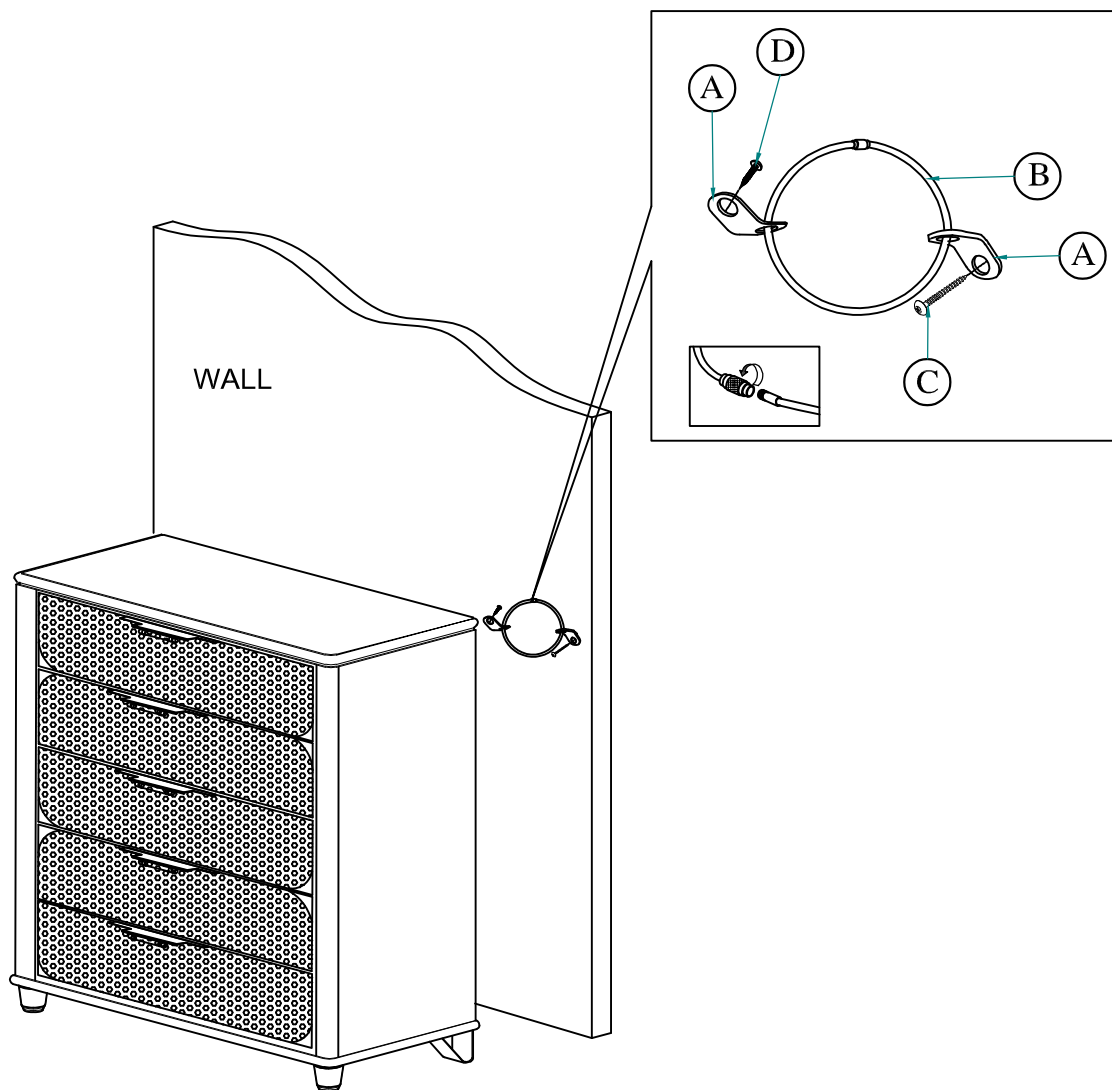 

Assembly completed