

# ASSEMBLY INSTRUCTION

DESCRIPTION: POWER RECLINING SOFA WITH ARMREST  
CUPHOLDER, DDT WITH WATCH CHARGER, IMMERSE  
SPEAKER WITH SUBWOOFER AND MULTI-COLOR LED

MODEL: U8881-PRS-IMMERSE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

**Bluetooth Connection: Enable Bluetooth on your device and pair with [ GFUSA ] from the list of available devices.**

## PARTS LIST:


| NO. | DESCRIPTION     | SKETCH                                                                            | Q'TY |
|-----|-----------------|-----------------------------------------------------------------------------------|------|
| A   | Seat Body       |  | 1 PC |
| B   | Left Backrest   |  | 1 PC |
| C   | Middle Backrest |  | 1 PC |
| D   | Right Backrest  |  | 1 PC |

## PARTS LIST:

| NO. | DESCRIPTION  | SKETCH                                                                              | Q'TY |
|-----|--------------|-------------------------------------------------------------------------------------|------|
| E   | Left wing    |  | 1 PC |
| F   | Right wing   |  | 1 PC |
| G   | Power source |  | 1 PC |
| H   | Power source |  | 1 PC |


### Step 1:

Attach Backrest (B/C/D) to the Seat (A).

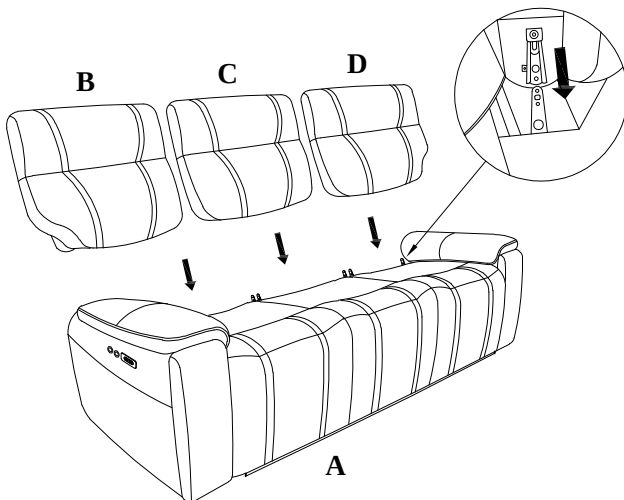


### Step 2:

Attach the Left/Right Wings (E/F) to the Left/Right side of the Backrest (B/D).

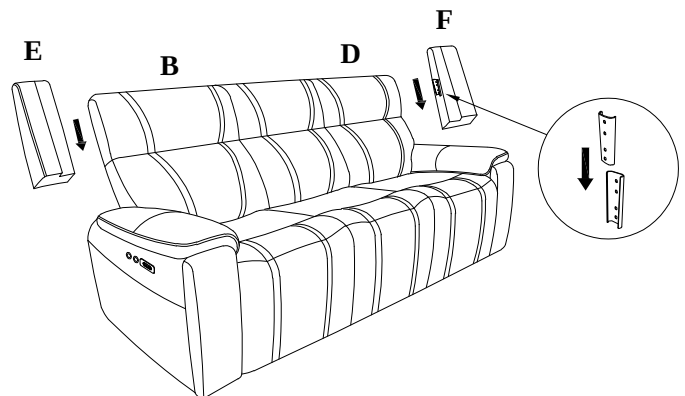

### Step 3:

Connect the power wire under the Armrest frame to the Power source (G).

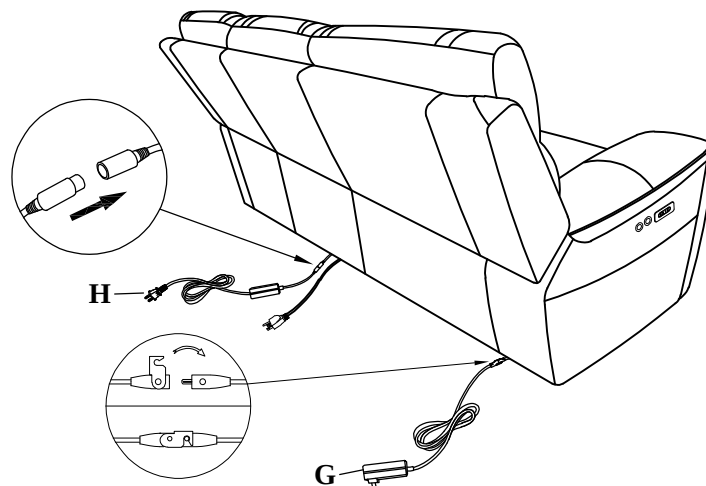


# ASSEMBLY INSTRUCTION

DESCRIPTION: POWER RECLINING SOFA WITH ARMREST  
CUPHOLDER, DDT WITH WATCH CHARGER, IMMERSE  
SPEAKER WITH SUBWOOFER AND MULTI-COLOR LED

MODEL: U8881-PRS-IMMERSE

## Step 4 :

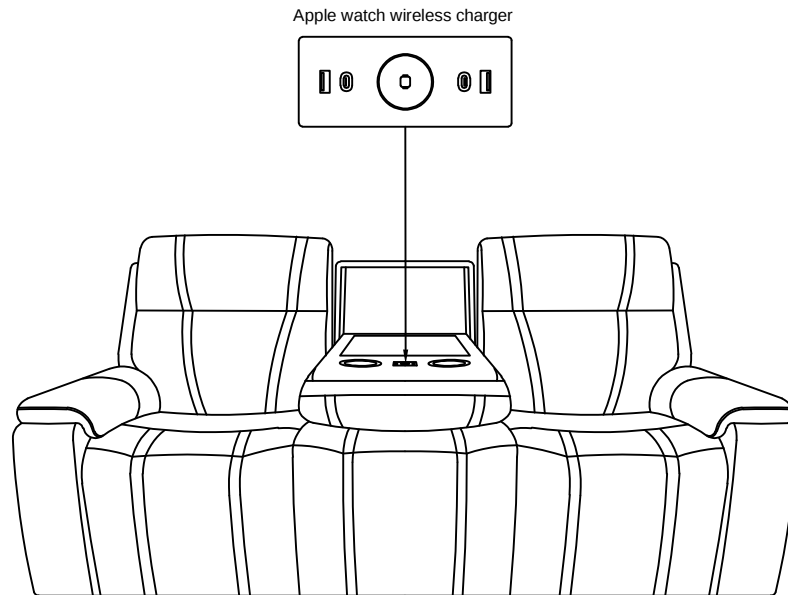

## Step 5 :

Open the Footrest by pressing the power button on/off.

