

ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB

DESCRIPTION : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

Bluetooth Connection:

 
Enable Bluetooth on your device and pair with [BT SPEAKER] from the list of available devices.

PART LIST:

No.	Description	Diagram	Quantity
A	Headboard		1
B	Headboard Top		1
C	Headboard Leg Support		2
D	Headboard Wing (L&R)		2
E	Footboard Storage		1
F	Side Rail		2
G	Slats With 4 Holes		5
H	Leg Support		10


STEP 1:

Remove the Cover at the Bottom of Footboard Storage (E).

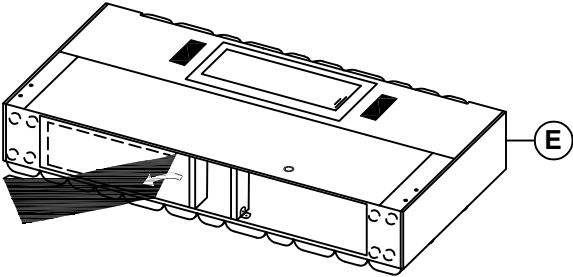

STEP 2:

 Use scissors to cut the strap off.

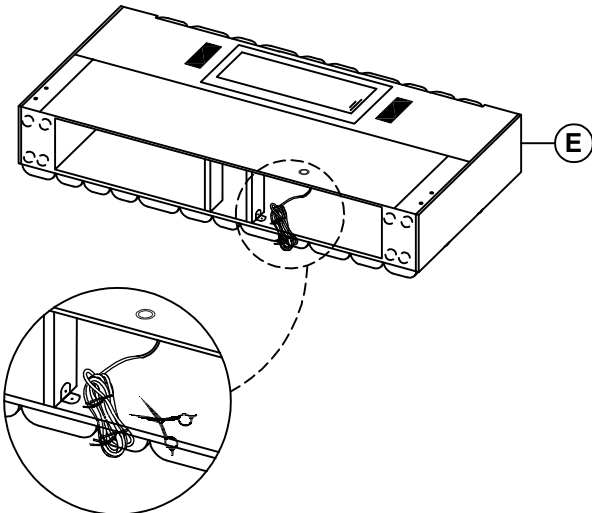


HARDWARE LIST:

No.	Description	Diagram	Quantity
I	Allen Key With Ball (M4)		1
J	Connection Bolt (M6 x 30mm) W/Spring Washer & Washer Medium		4
K	Connection Bolt (M6 x 40mm) W/Spring Washer & Washer Medium		16
L	Connection Bolt (M6 x 60mm) W/Spring Washer & Washer Medium		6
M	JCBC Bolt (M6 x 40mm)		10
N	CSK Screw (M4 x 32mm)		18
O	Adjuster		10
P	Bed Leg		8
Q	Adapter Plug for LED Light		1
R	TV Mount Bracket		1
S	TV Stand Remote		1
T	Fireplace Remote **Battery Not Provided		1

STEP 3:

 Pull out the Wire to the Required Length.

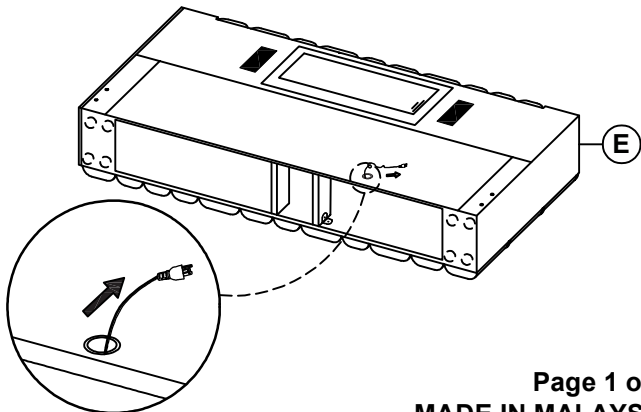

ASSEMBLY INSTRUCTION

 
MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB

DESCRIPTION : KING BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

STEP 4:


Put Back the Cover at the Bottom of the Footboard Storage (E).

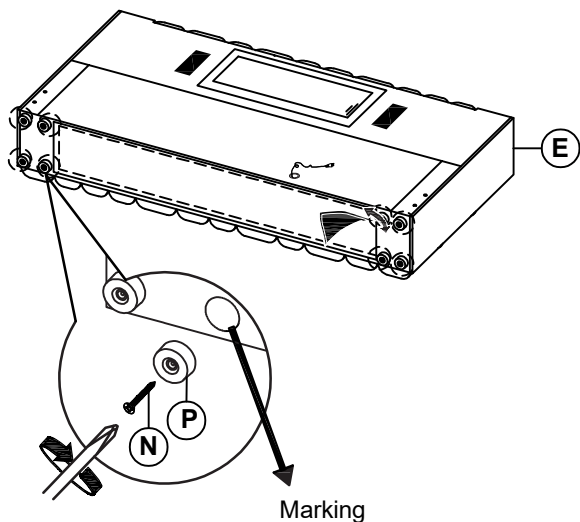

 STEP 5:

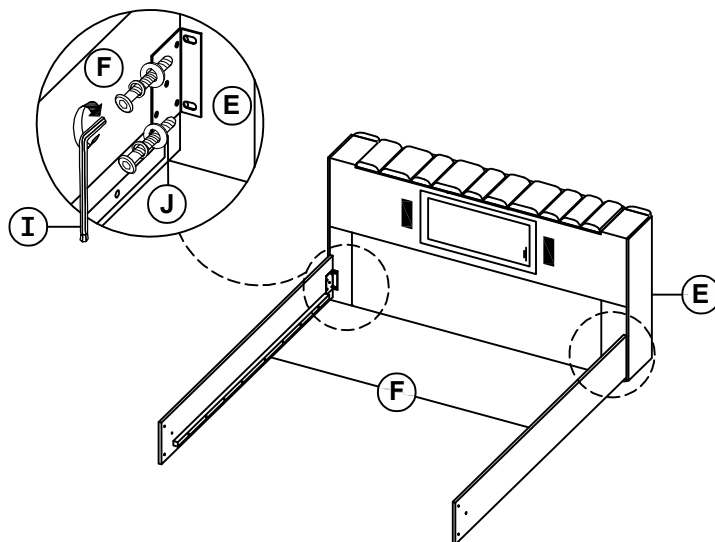


 STEP 6:

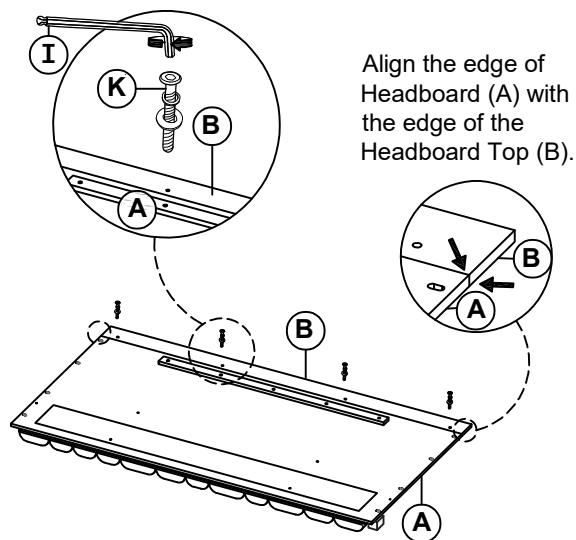


STEP 7:

 Hand Tight All the Bolts (K).

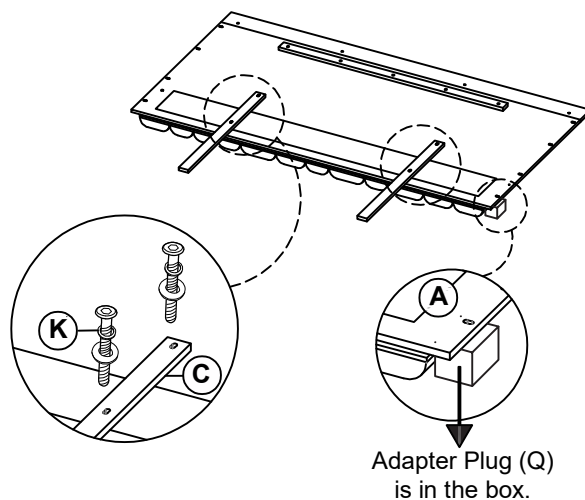

STEP 8:

 Hand Tight All the Bolts (K).

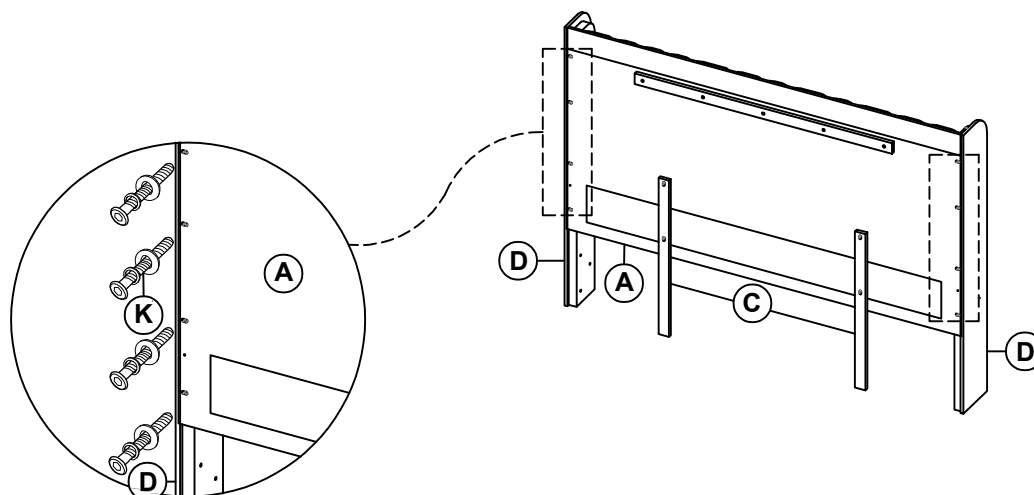


ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB


DESCRIPTION : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.


 
STEP 9:

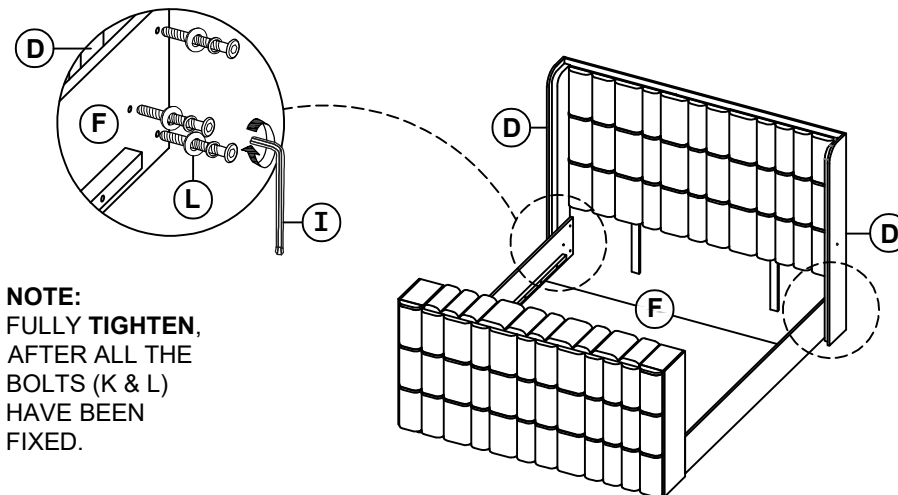

 STEP 10:

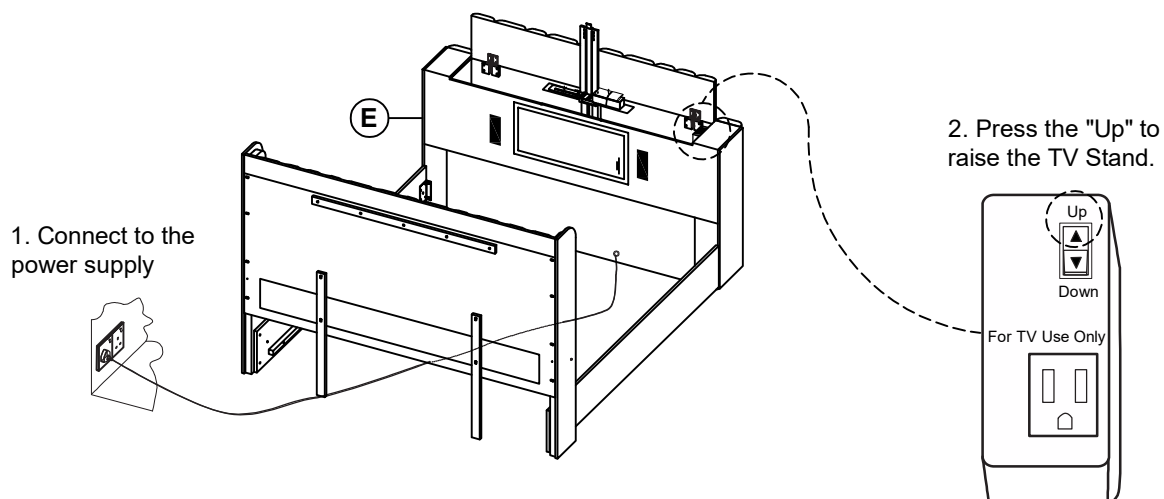

  STEP 11:

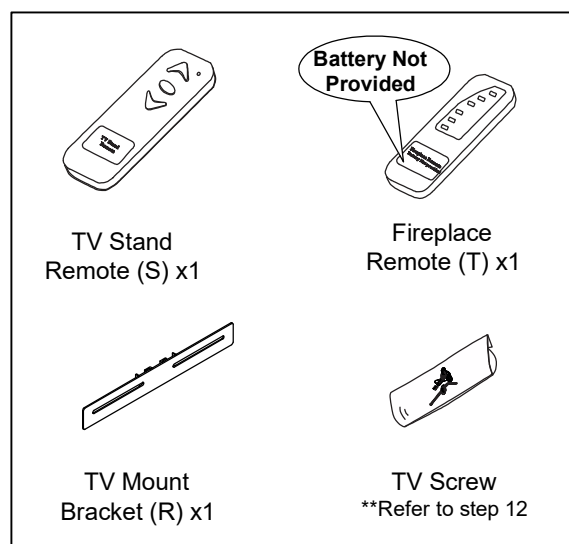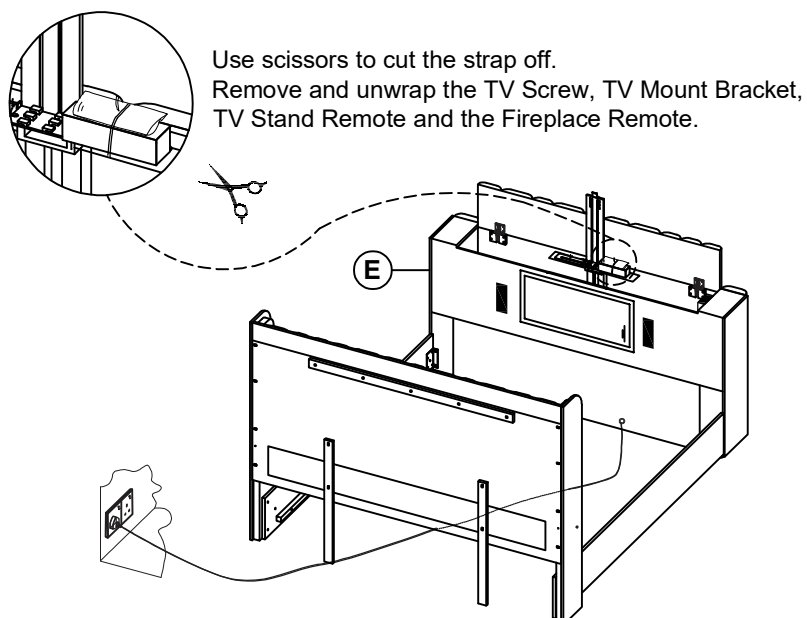

ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB


DESCRIPTION : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.


STEP 12:

**IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE
CHOOSE A SUITABLE SET OF HARDWARE**

a) x1	Short Allen Key (M5)		or	a) x1	Short Allen Key (M4)	
b) x2	JCBB Bolt (M8 x 20mm)			b) x2	JCBC Bolt (M6 x 20mm)	
c) x2	Spring Washer (M8)					
d) x2	Flat Washer Medium (M8 x 22 x 1.0)					

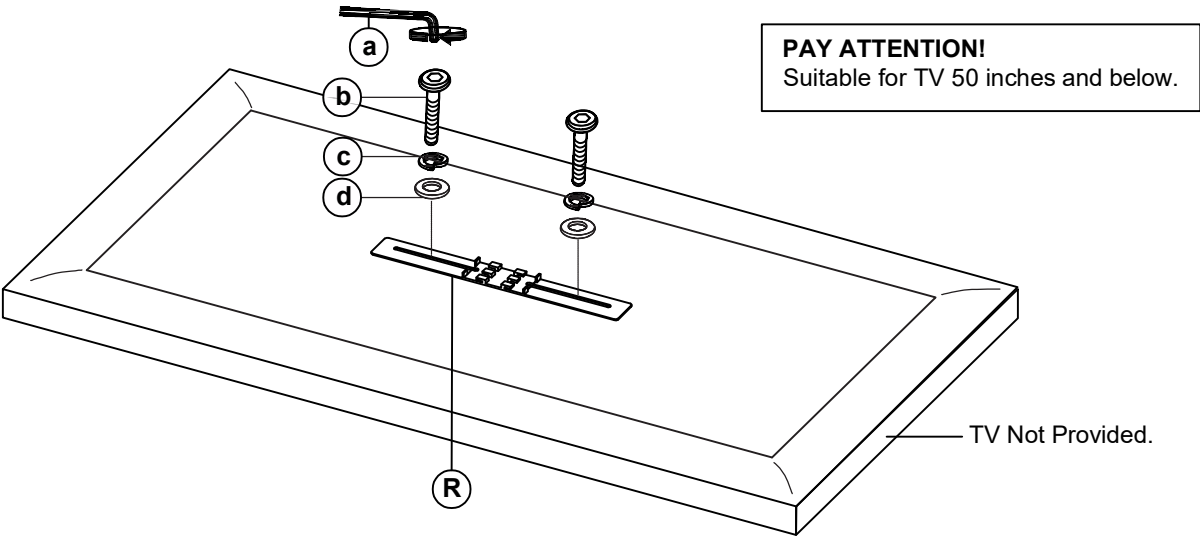 

 STEP 13:

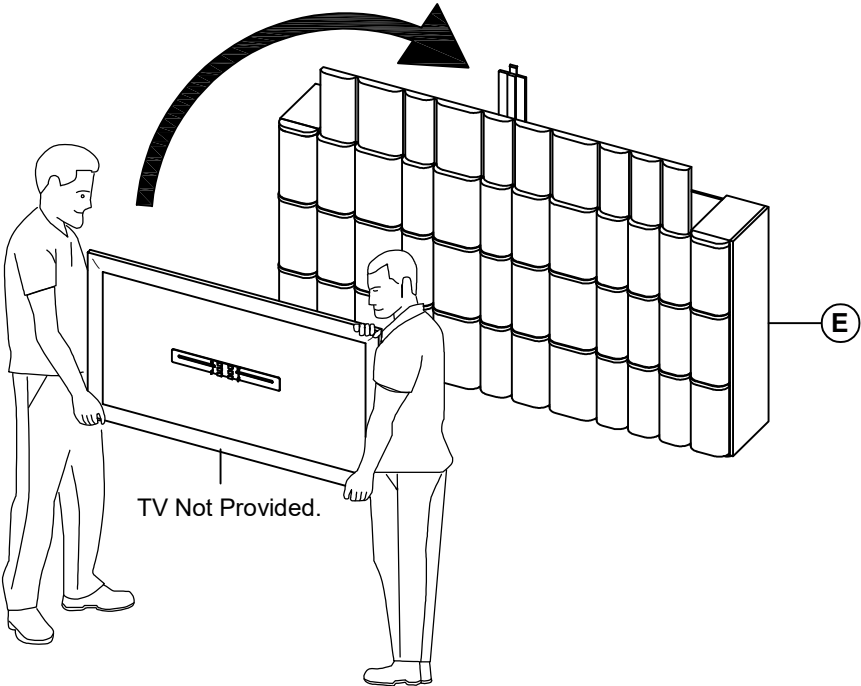


ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB


DESCRIPTION : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

 
STEP 14:

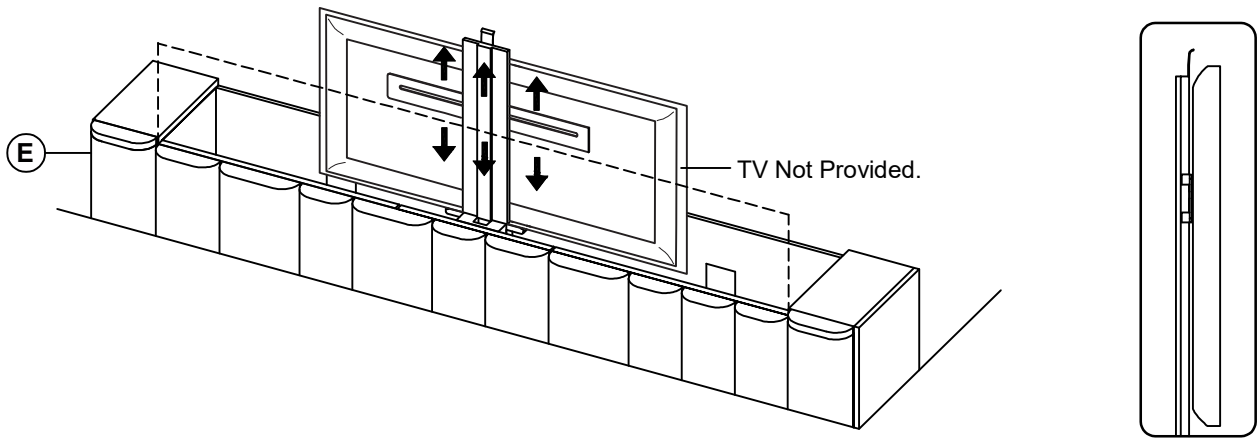

 
STEP 15:

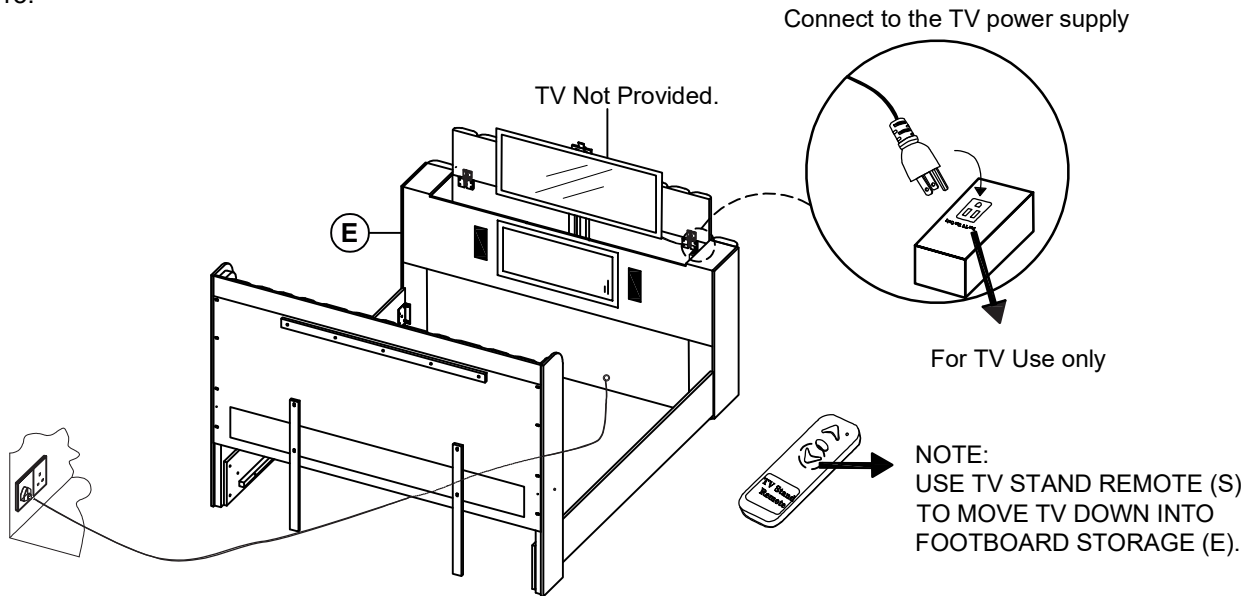

 STEP 16:

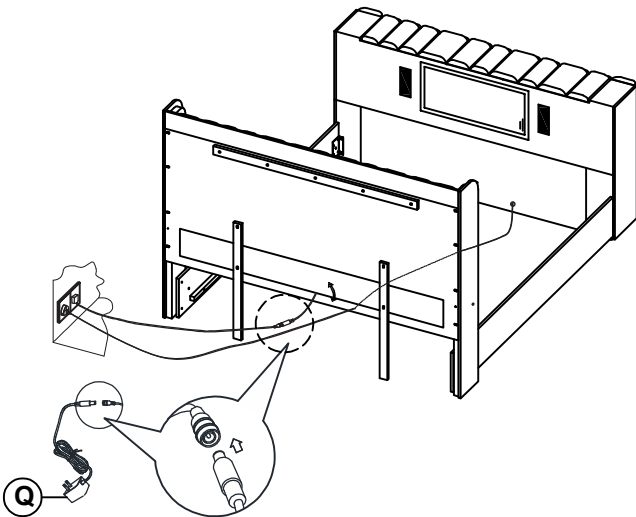

 STEP 17:

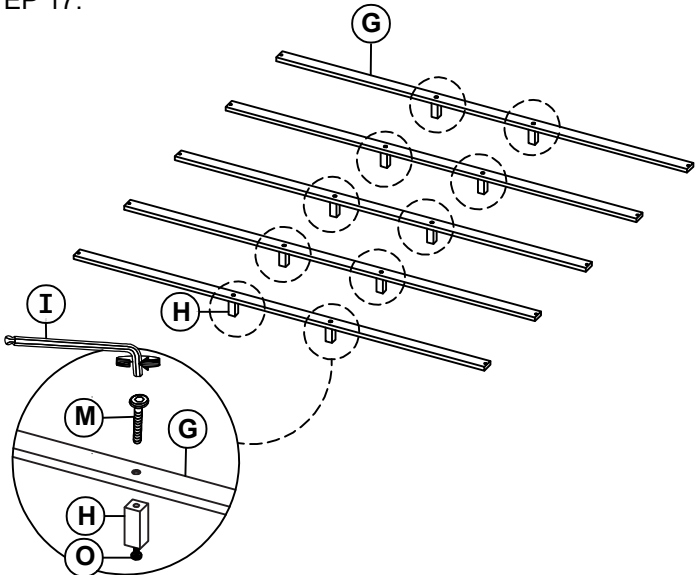


ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB


DESCRIPTION : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

 
STEP 18:

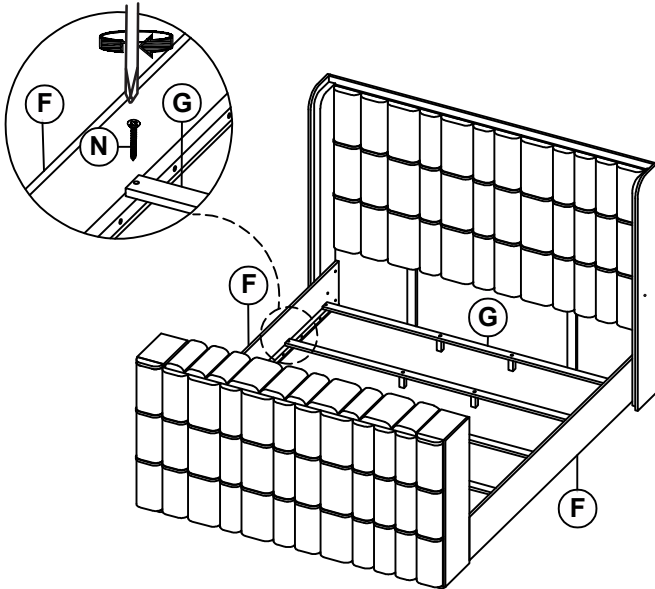

 STEP 19:

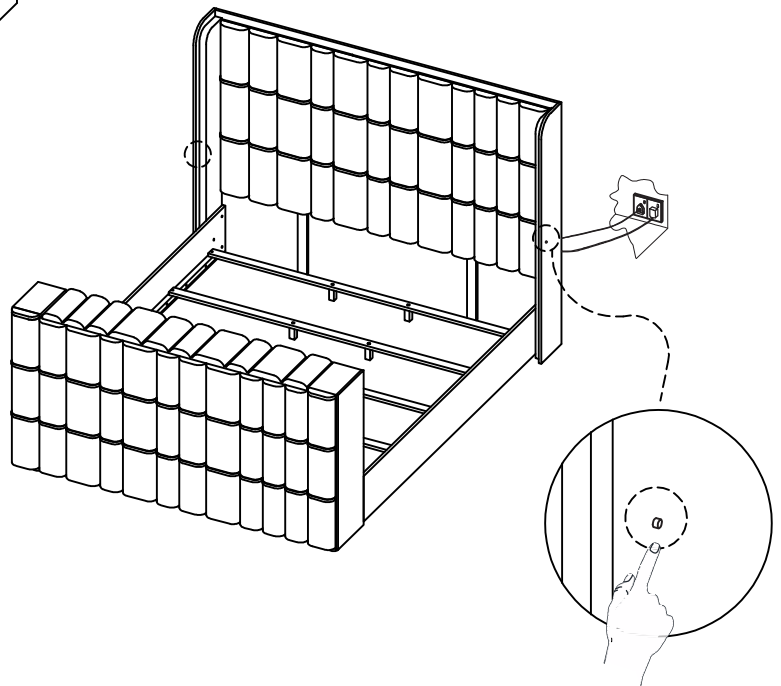

 STEP 20:
COMPLETE

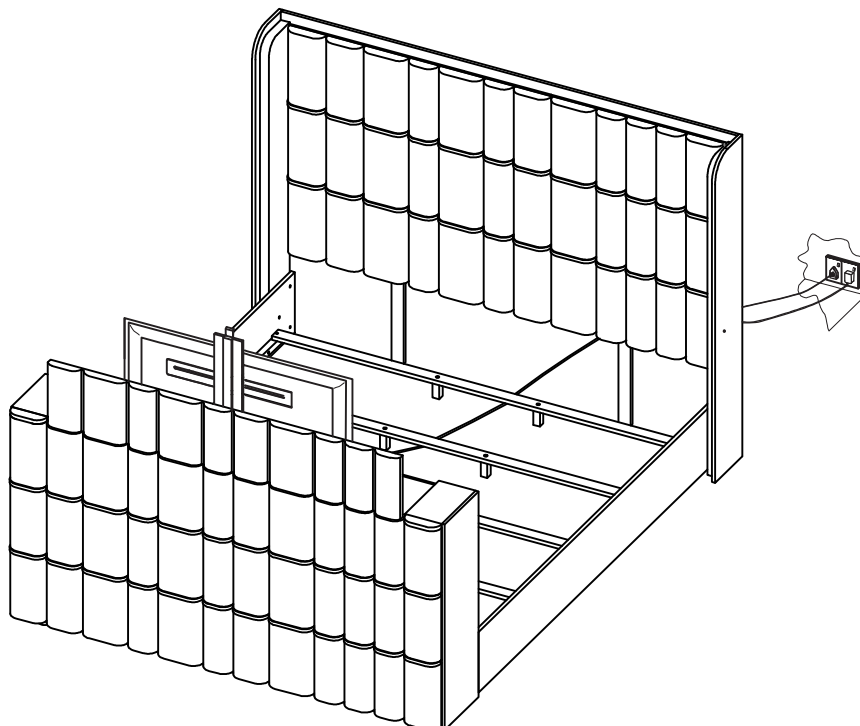

NOTE:
TOUCH THE SENSOR TO
SWITCH ON THE LIGHT AND
ADJUST THE LEVEL OF
BRIGHTNESS.

TV LIFT RESTART GUIDE

MODEL : ISABELLA-GREY KB
ISABELLA-WHITE/BLACK KB

DESCRIPTION : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

ATTENTION

Triggering the Child Safety Mode:

If the TV lift runs continuously for 6 minutes, the system will activate the “Child Safety Mode”, preventing further operation.

Recovery Steps:

 
Unplug the power and wait for 60 seconds.

Reconnect the power, then RESET THE REMOTE CONTROL, follow the reset instructions.


The TV stand will resume normal operation.

Reset TV Lift Remote Control

Step 1: Turn off all power to the bed for 60 seconds.

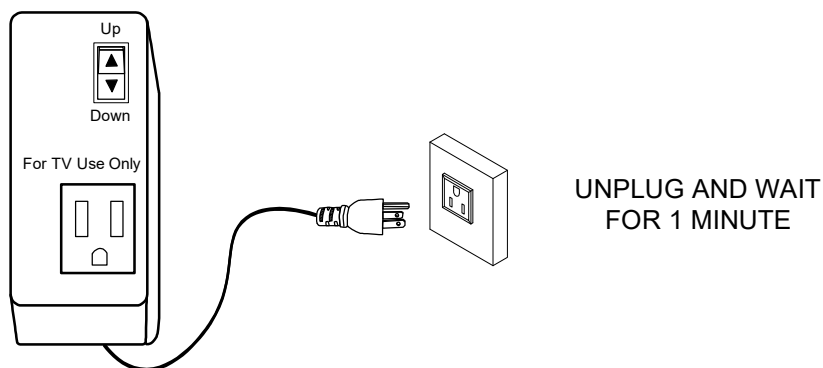

 Step 2: Press either up or down on TV lift remote control and keep the button pressed.

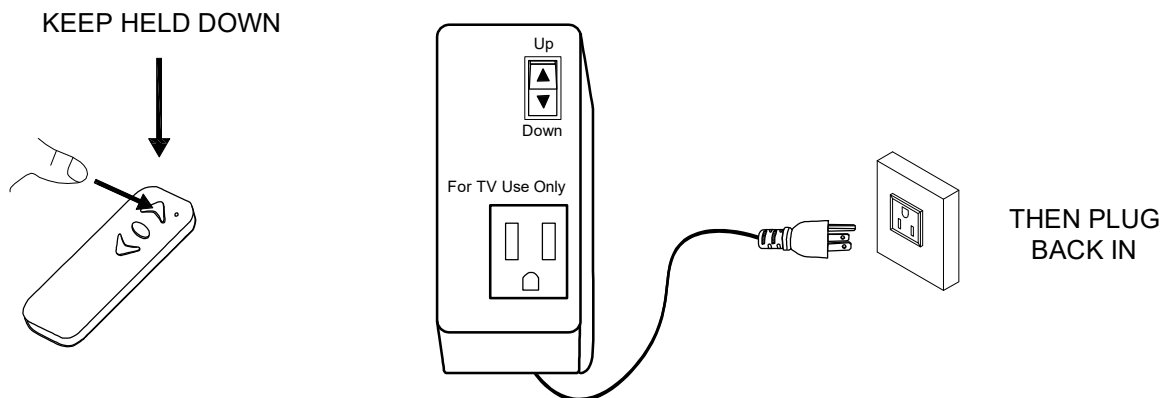

Step 3: Turn power back on. Lift shall move then release button.
Continue to operate normally.

ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY QB
ISABELLA-WHITE/BLACK QB

DESCRIPTION : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

Bluetooth Connection:


Enable Bluetooth on your device and pair with [BT SPEAKER] from the list of available devices.

PART LIST:

No.	Description	Diagram	Quantity
A	Headboard		1
B	Headboard Top		1
C	Headboard Leg Support		2
D	Headboard Wing (L&R)		2
E	Footboard Storage		1
F	Side Rail		2
G	Slats With 3 Holes		5
H	Leg Support		5


STEP 1:

 Remove the Cover at the Bottom of Footboard Storage (E).

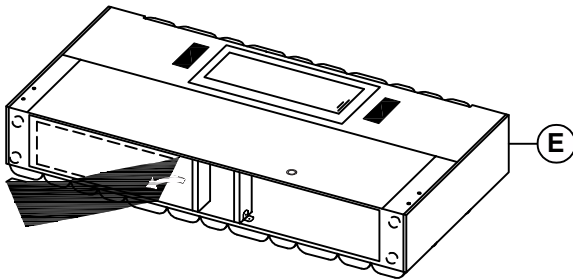

STEP 2:

 Use scissors to cut the strap off.

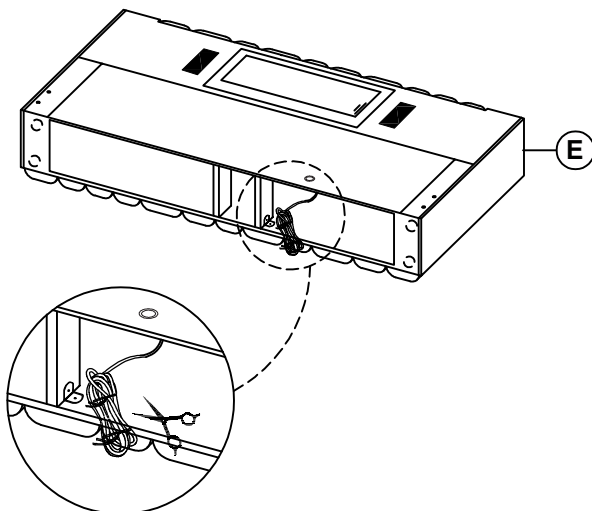


HARDWARE LIST:

No.	Description	Diagram	Quantity
I	Allen Key With Ball (M4)		1
J	Connection Bolt (M6 x 30mm) W/Spring Washer & Washer Medium		4
K	Connection Bolt (M6 x 40mm) W/Spring Washer & Washer Medium		16
L	Connection Bolt (M6 x 60mm) W/Spring Washer & Washer Medium		6
M	JCBC Bolt (M6 x 40mm)		5
N	CSK Screw (M4 x 32mm)		14
O	Adjuster		5
P	Bed Leg		4
Q	Adapter Plug for LED Light		1
R	TV Mount Bracket		1
S	TV Stand Remote		1
T	Fireplace Remote **Battery Not Provided		1

STEP 3:

 Pull out the Wire to the Required Length.

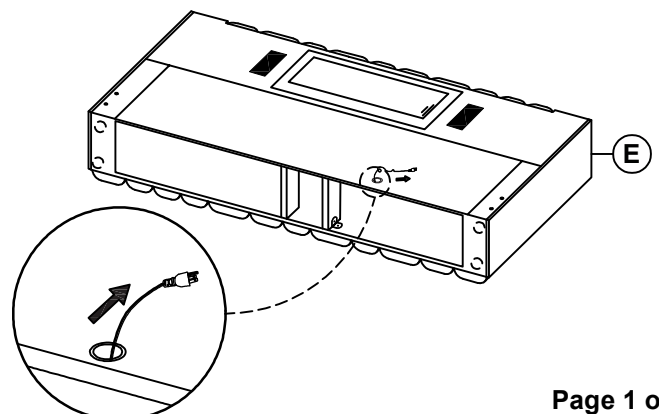

ASSEMBLY INSTRUCTION

 
MODEL : ISABELLA-GREY QB
ISABELLA-WHITE/BLACK QB

DESCRIPTION : QUEEN BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

STEP 4:


Put Back the Cover at the Bottom of the Footboard Storage (E).

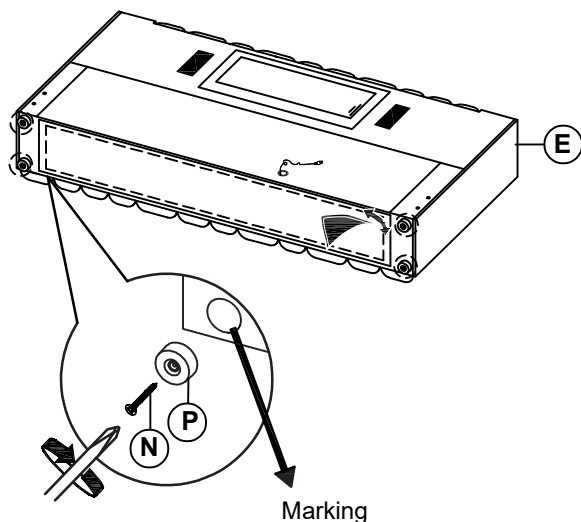

 STEP 5:

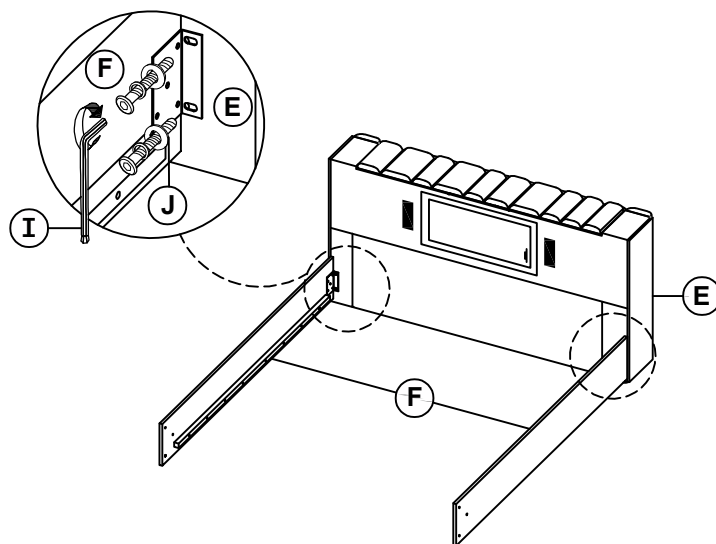


 STEP 6:

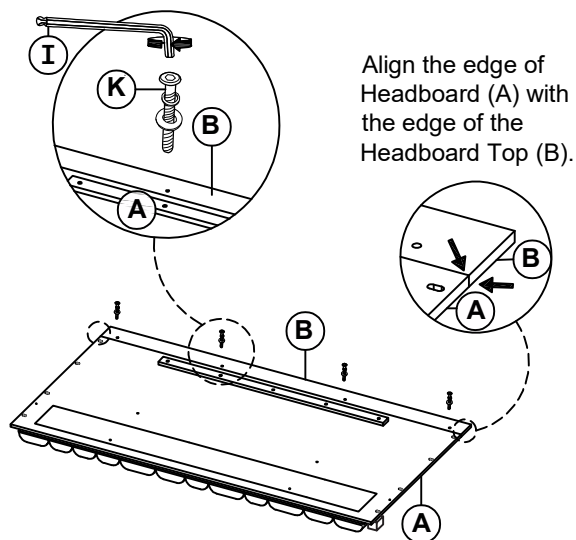


STEP 7:

 Hand Tight All the Bolts (K).

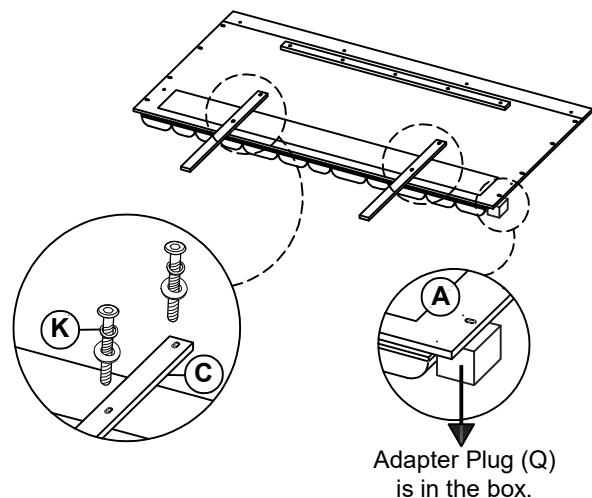

STEP 8:

 Hand Tight All the Bolts (K).

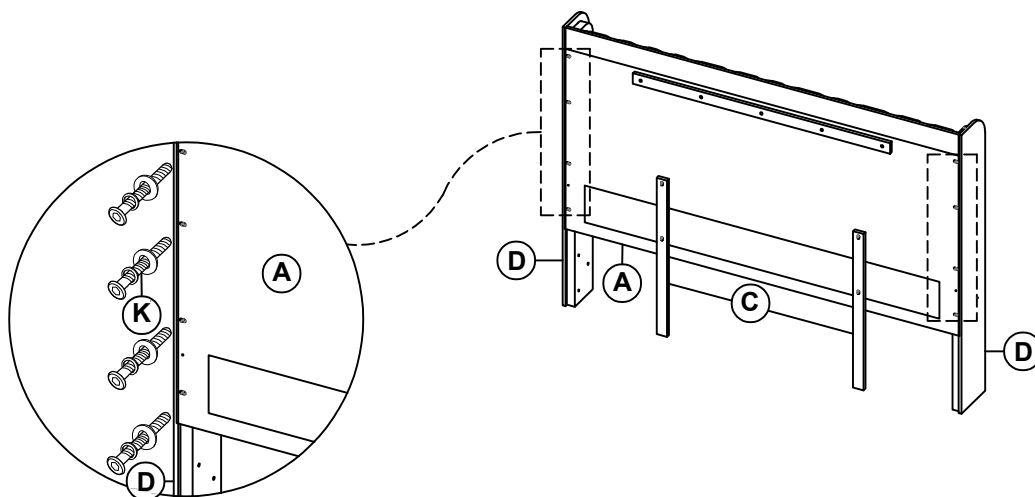


ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY QB
ISABELLA-WHITE/BLACK QB


DESCRIPTION : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.


 
STEP 9:

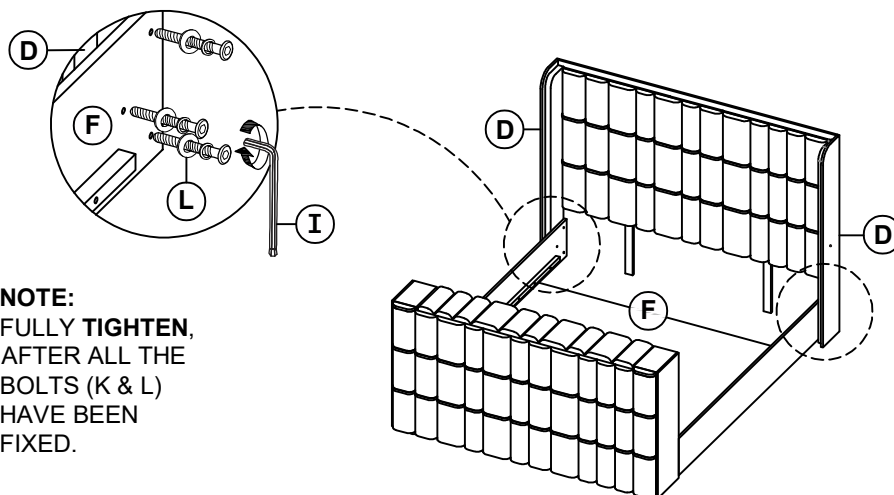

 STEP 10:

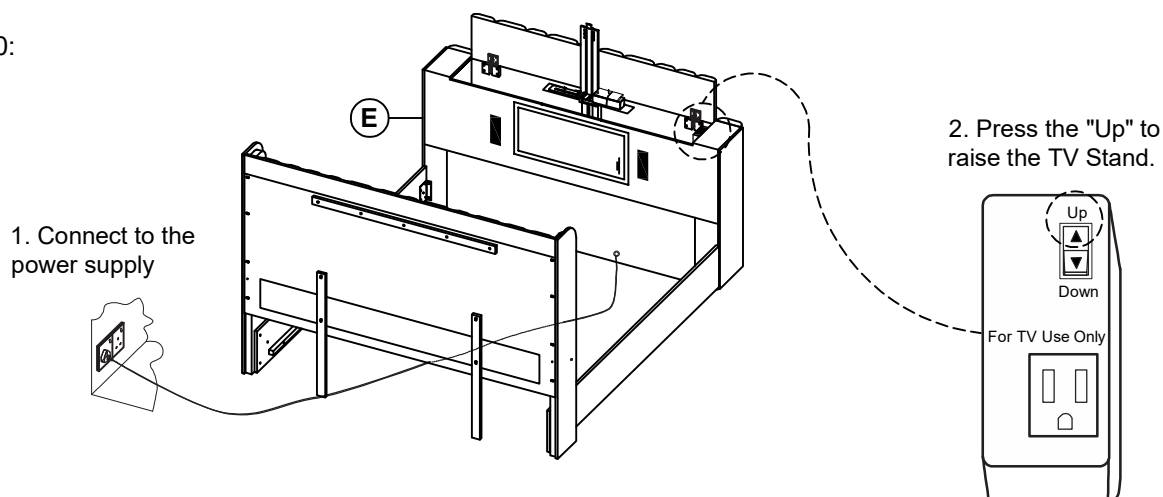

  STEP 11:

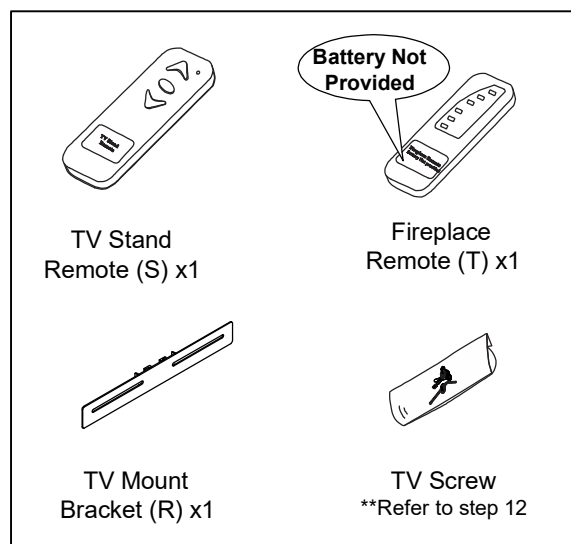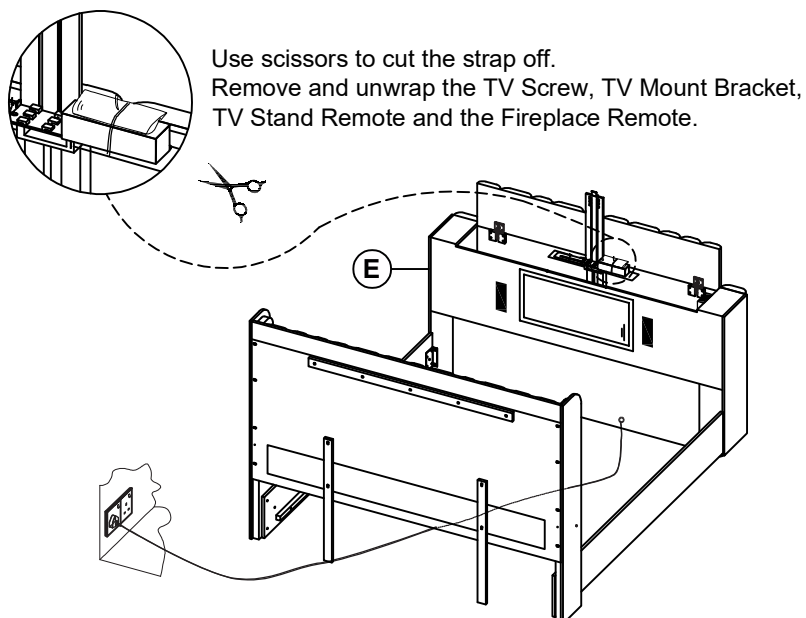

ASSEMBLY INSTRUCTION


MODEL	: ISABELLA-GREY QB	DESCRIPTION	: QUEEN BED
	ISABELLA-WHITE/BLACK QB		

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.


STEP 12:

IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE
CHOOSE A SUITABLE SET OF HARDWARE

a) x1	Short Allen Key (M5)		or	a) x1	Short Allen Key (M4)	
b) x2	JCBB Bolt (M8 x 20mm)			b) x2	JCBC Bolt (M6 x 20mm)	
c) x2	Spring Washer (M8)					
d) x2	Flat Washer Medium (M8 x 22 x 1.0)					

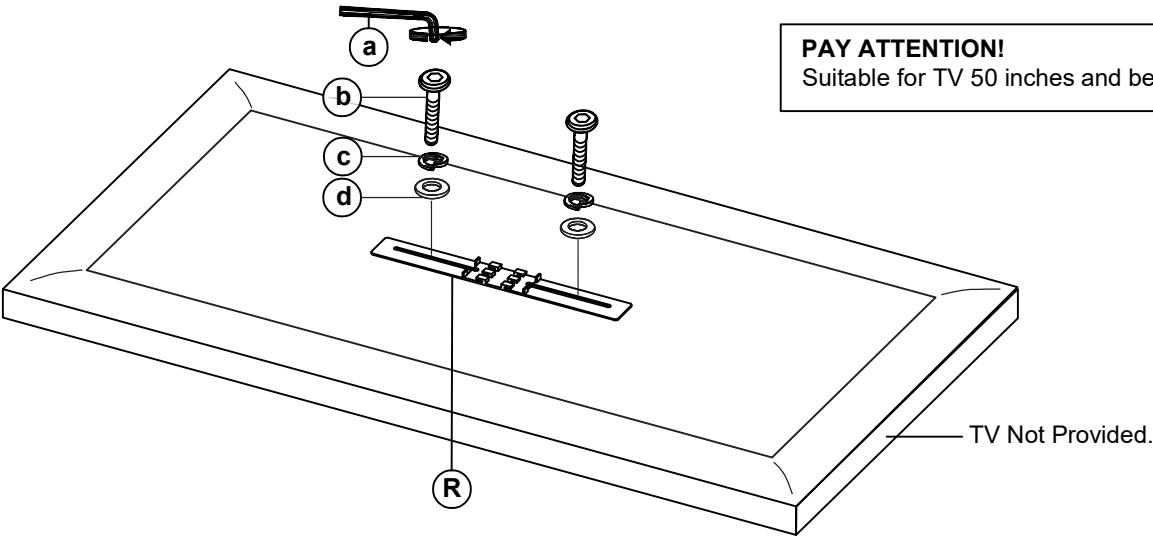 

 STEP 13:

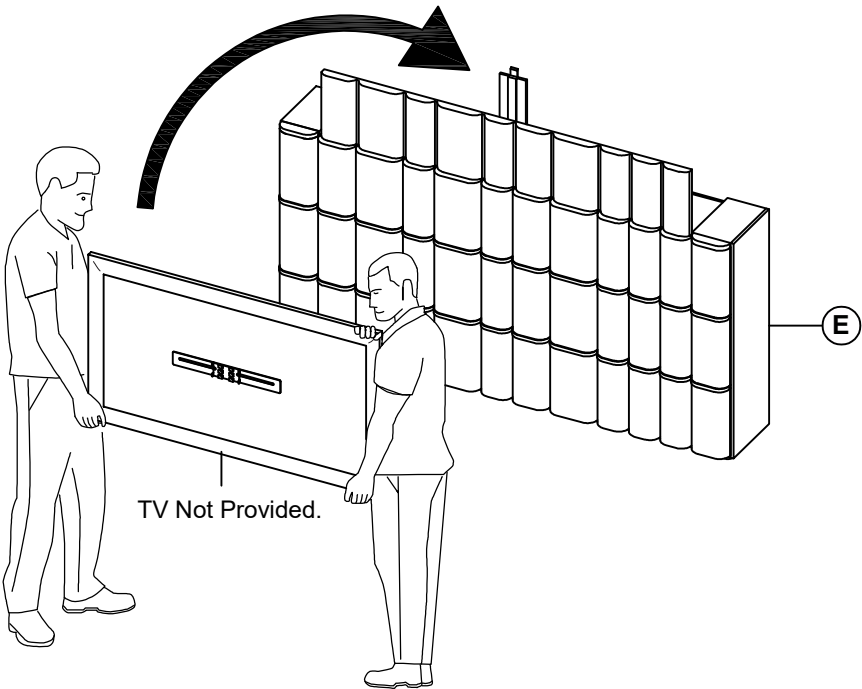


ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY QB
ISABELLA-WHITE/BLACK QB


DESCRIPTION : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

 
STEP 14:

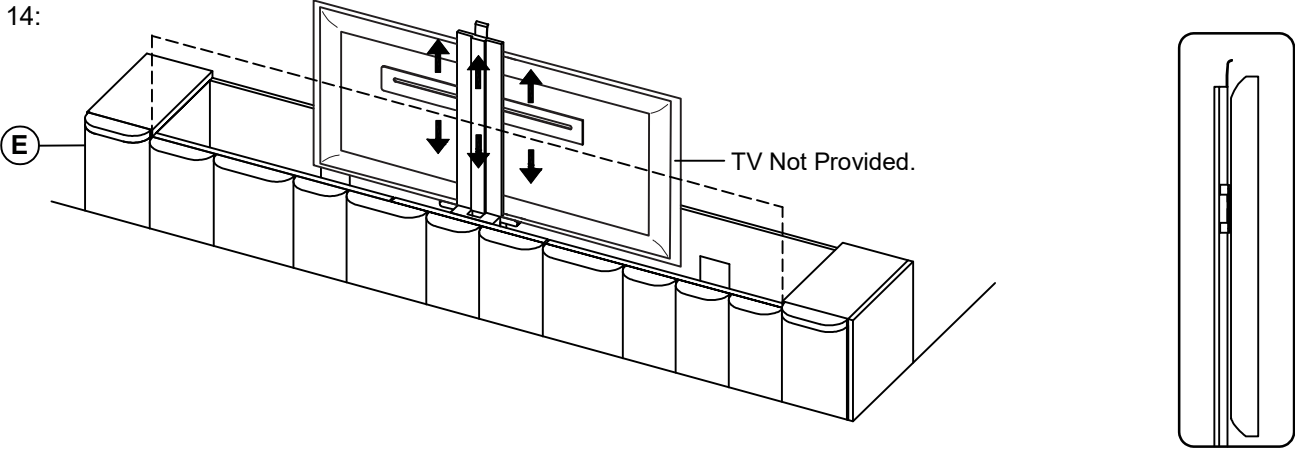

 
STEP 15:

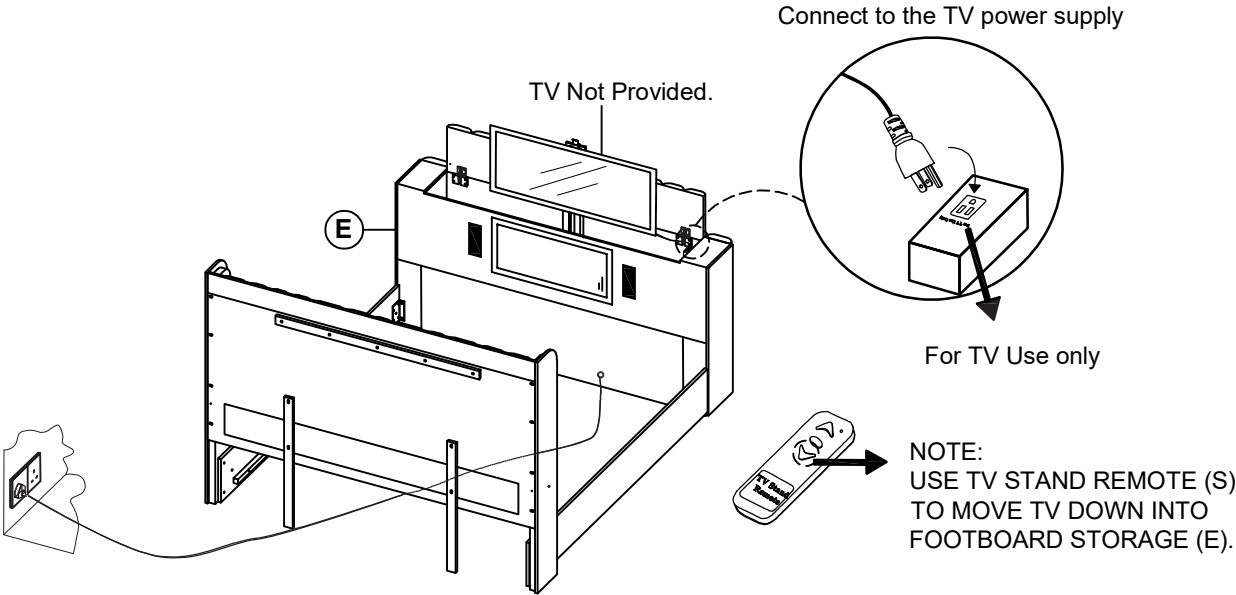

 STEP 16:

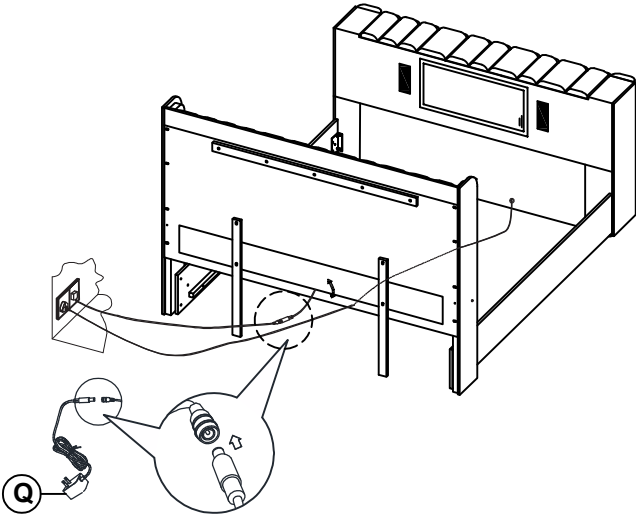

 STEP 17:

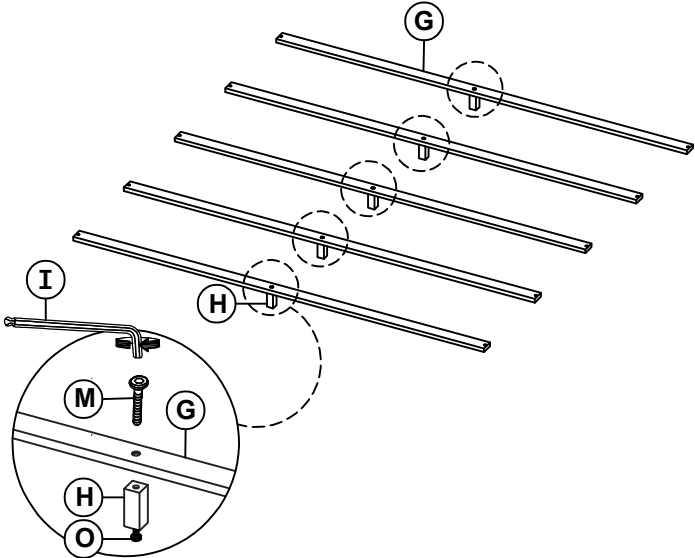


ASSEMBLY INSTRUCTION

MODEL : ISABELLA-GREY QB
ISABELLA-WHITE/BLACK QB


DESCRIPTION : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

 
STEP 18:

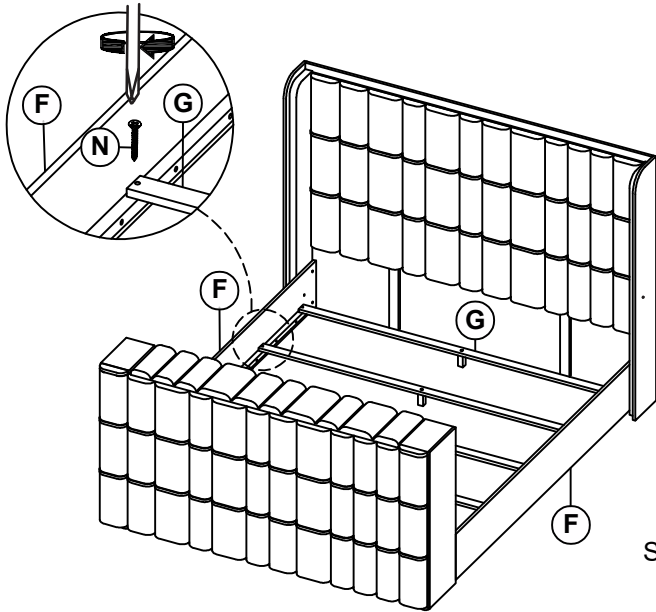

 STEP 19:

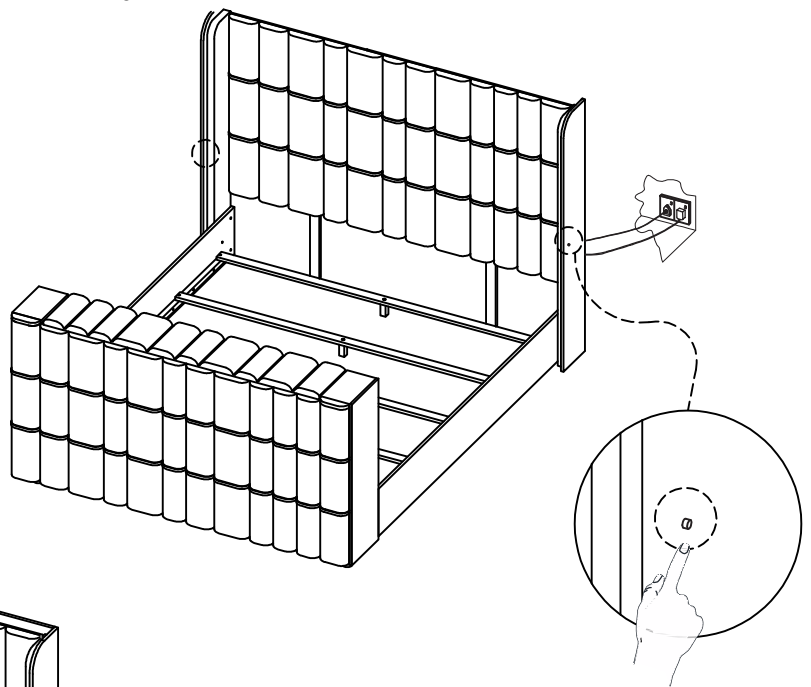

 STEP 20:
COMPLETE

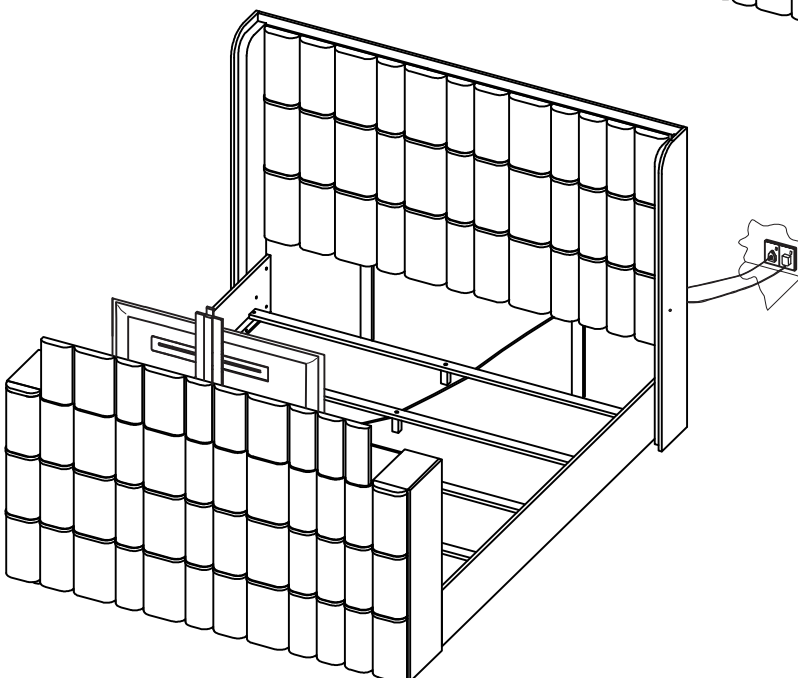

NOTE:
TOUCH THE SENSOR TO
SWITCH ON THE LIGHT AND
ADJUST THE LEVEL OF
BRIGHTNESS.

TV LIFT RESTART GUIDE

MODEL : ISABELLA-GREY QB
ISABELLA-WHITE/BLACK QB

DESCRIPTION : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment.

ATTENTION

Triggering the Child Safety Mode:

If the TV lift runs continuously for 6 minutes, the system will activate the “Child Safety Mode”, preventing further operation.

Recovery Steps:

 
Unplug the power and wait for 60 seconds.

Reconnect the power, then RESET THE REMOTE CONTROL, follow the reset instructions.


The TV stand will resume normal operation.

Reset TV Lift Remote Control

Step 1: Turn off all power to the bed for 60 seconds.

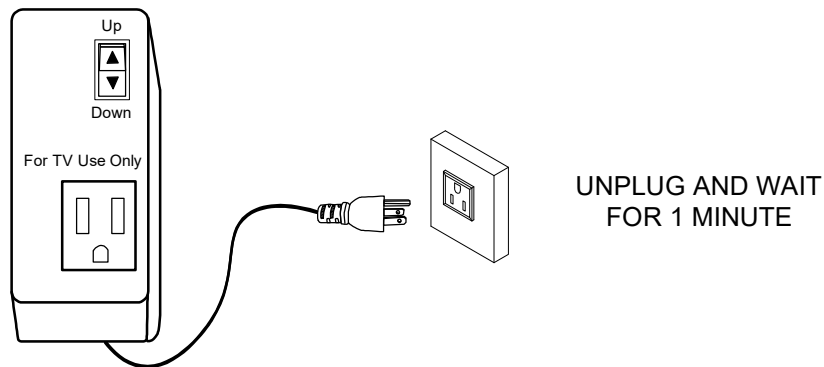

 Step 2: Press either up or down on TV lift remote control and keep the button pressed.

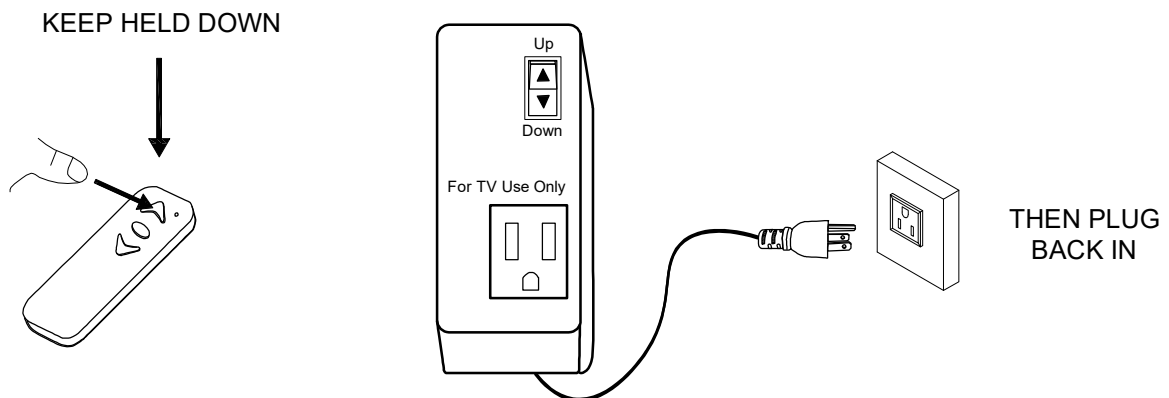

Step 3: Turn power back on. Lift shall move then release button.
Continue to operate normally.