
 
 











# Assembly Instruction


SOFA  
ITEM#: 9318CBN-3 SOFA

PART LIST				HARDWARE LIST			
A	SOFA FRAME		1 PC	1	ALLEN KEY		5 x 75 mm 1 PC
B	SEAT CUSHION		2 PCS	2	BOLT		5/16 x 4" 8 PCS
C	MIDDLE SEAT CUSHION		1 PC				
D	BACK CUSHION		2 PCS				
E	MIDDLE BACK CUSHION		1 PC				
F	WOODEN LEG		4 PCS				
G	PILLOW		4 PCS				


STEP 1

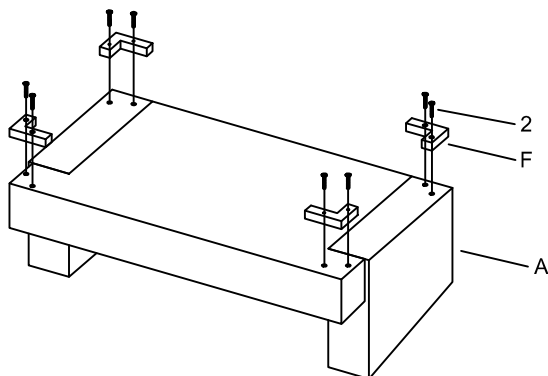

STEP 2

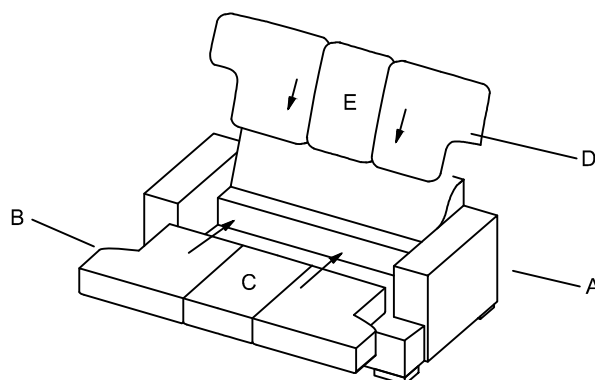

STEP 3

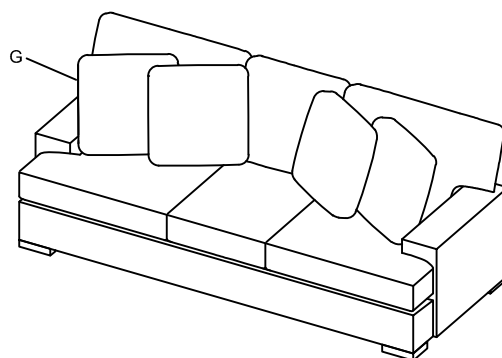

Care instruction for textured plush microfiber Furniture:

In order to maintain the original appearance of your textured plush microfiber furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.  
Sunlight and or exposure to heating and air conditioning outlets will fade/damage textured plush microfiber.
- Vacuum or wipe with a soft cloth to remove dust.

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

