HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION


ITEM: 6015-75160-80 Bar Cabinet
6015-75160-89 Bar Cabinet

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Anti - Tip Kit		1PC	1		Glass Shelf	1PC

Tipping Restraint


Anti-tip kit is included for use. We recommend installing for safety reason.

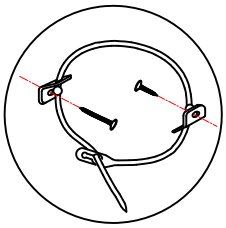


STEP 1

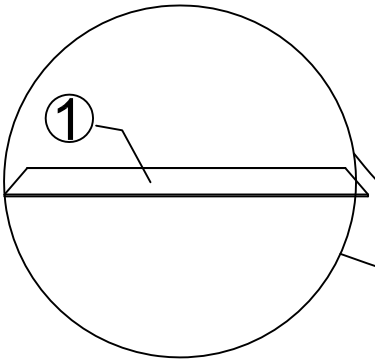


The glass shelf is packed in inner box to avoid damage during transit. Take out glass shelf from box and place it in wood shelf frame.

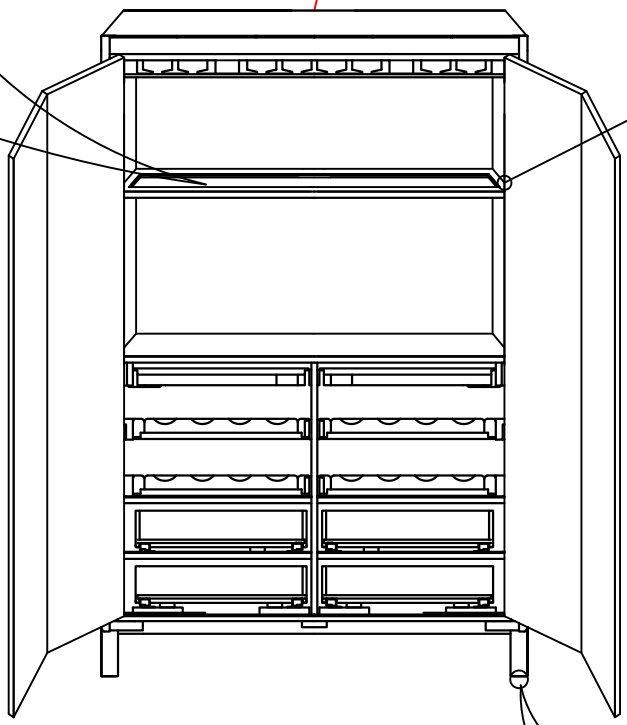

STEP 2

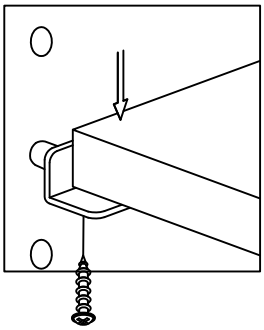

To adjust the shelf height, take out shelf pins then place shelf pins in the desired level.

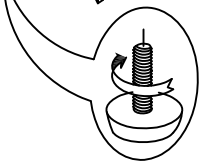

STEP 3

Adjust Leveler if needed to level cabinet on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75203B-02 Rattan Round Dining Table Base
6015-75203B-80 Rattan Round Dining Table Base
6015-75203B-89 Rattan Round Dining Table Base
6015-75203T-02 48in Round Dining Table Top
6015-75203T-80 48in Round Dining Table Top
6015-75203T-89 48in Round Dining Table Top
6015-75213T-02 60in Round Dining Table Top
6015-75213T-80 60in Round Dining Table Top
6015-75213T-89 60in Round Dining Table Top

Thank you for purchasing this quality product.Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Flat Washer	Ø5/16"	4PCS
B		Lock Washer	Ø5/16"	4PCS
C		Bolt	Ø5/16"	4PCS
D		Allen Wrench	73*29*5mm	1PC


PARTS LIST

NO.	DRAWING	DESCRIPTION	Q'TY
1		Top	1PC
2		Base	1PC

STEP 1

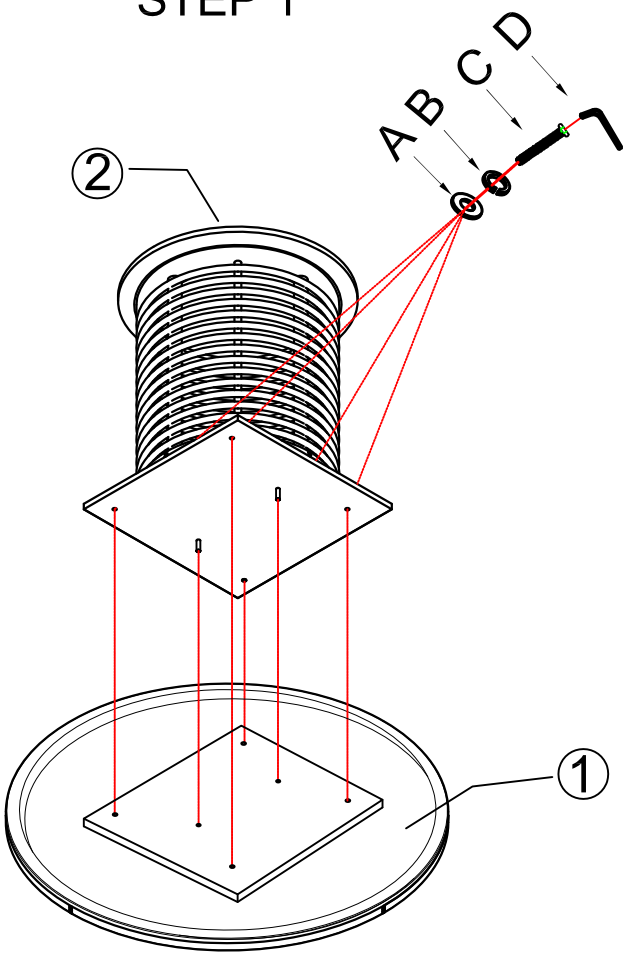

STEP 2

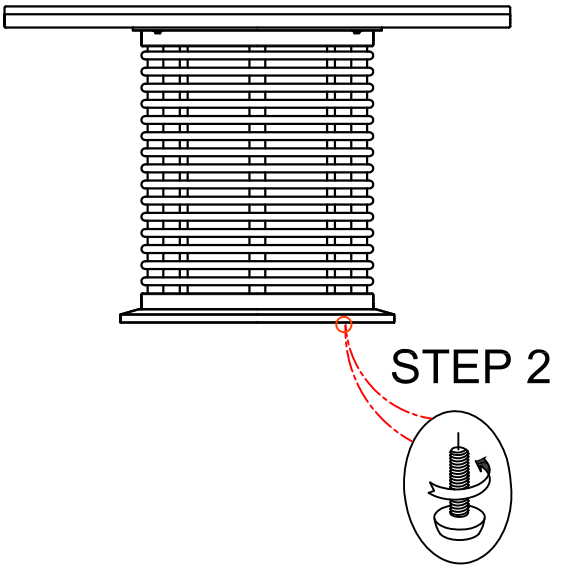

Adjust Leveler if needed to level table on uneven floor.

HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75207-02 Rectangle Dining Table w/1-18in leaf
6015-75207-80 Rectangle Dining Table w/1-18in leaf
6015-75207-89 Rectangle Dining Table w/1-18in leaf


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Flat Washer	Ø5/16"	8PCS
B		Lock Washer	Ø5/16"	8PCS
C		Bolt	Ø5/16"	8PCS
D		Allen Wrench	73*29*5mm	1PC

PARTS LIST

NO.	DRAWING	DESCRIPTION	Q'TY
1		Leg	4PCS
2		Top	1PC
3		Leaf	1PC

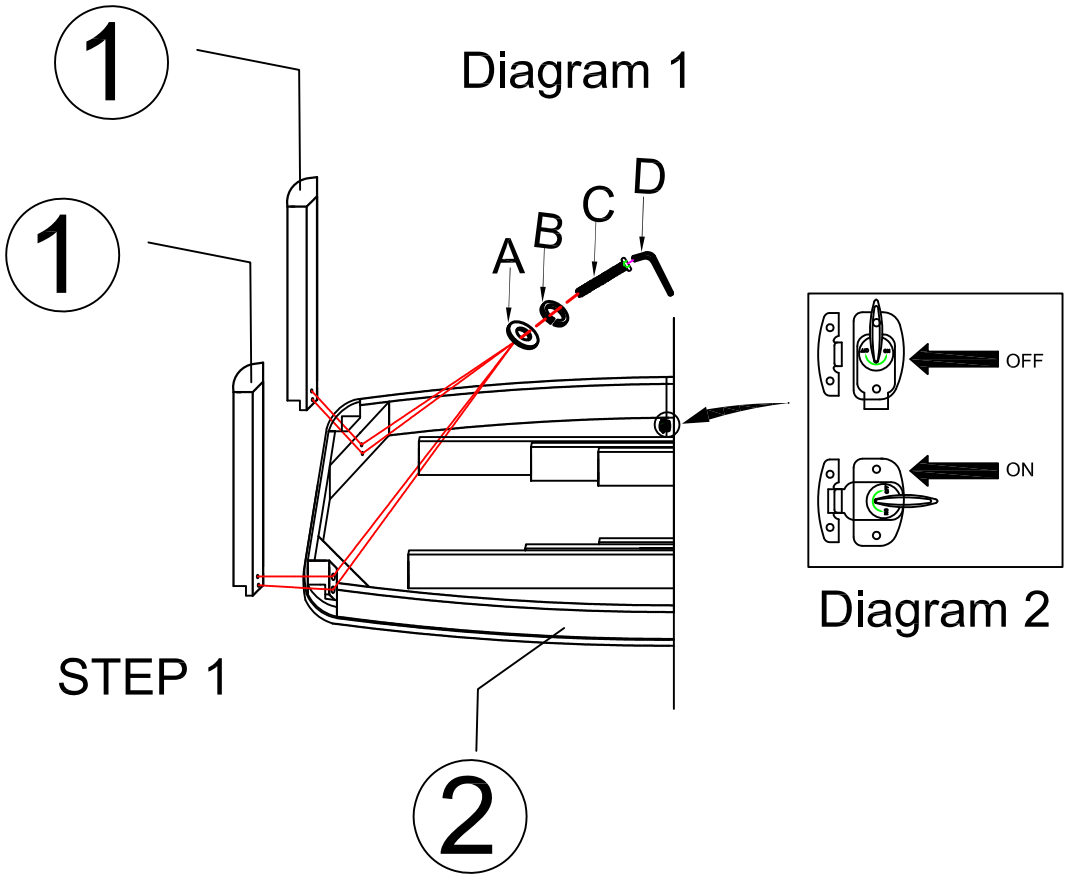

STEP 1:
Attach Legs (1) to Top (2) by using Flat Washers (A), Lock Washers (B) and Bolts (C), tighten with Allen Wrench (D).


HOOKER® FURNITURE


ASSEMBLY INSTRUCTION

ITEM: 6015-75207-02 Rectangle Dining Table w/1-18in leaf
6015-75207-80 Rectangle Dining Table w/1-18in leaf
6015-75207-89 Rectangle Dining Table w/1-18in leaf

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

Diagram 3

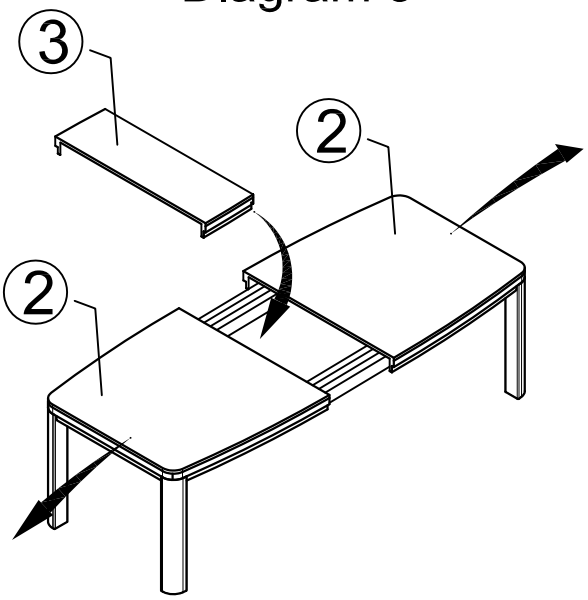

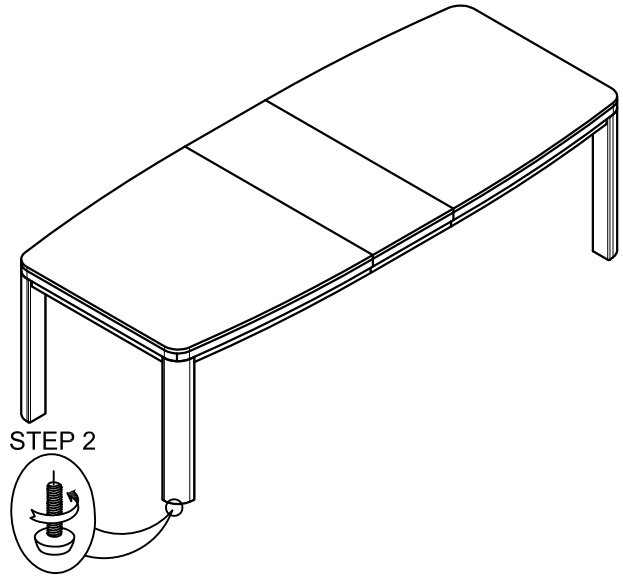

Adjust Leveler if needed to level table on uneven floor.

Instruction for table leaves:

1. There are latches at the bottom of table top, turn off the latches as shown in Diagram 2 above.

2. Pull out table top as the arrow direction shown in Diagram 3.

3. Place table leaf between and push table tops together.

4. Turn on latches. (See Diagram 2)

5. Take opposite actions to remove table leaves.

HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75217-80 Rectangle Dining Table w/2-18in leaves
6015-75217-89 Rectangle Dining Table w/2-18in leaves

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Allen Wrench	73*29*5mm	1PC
B		Bolt	ϕ5/16"*35mm	24PCS
C		Lock Washer	Ø5/16"	30PCS
D		Flat Washer	Ø5/16"	30PCS
E		Nut	Ø5/16"	6PCS
F		Open Wrench	14mm	1PC
G		Threaded Rod	Ø5/16*100mm	6PCS

PART LIST

NO.	DRAWING	DESCRIPTION	Q'TY
①		Stretcher	2PCS
②		Leg	6PCS
③		Mounting Bridge	2PCS
④		Top	1PC
⑤		Leaf	2PCS

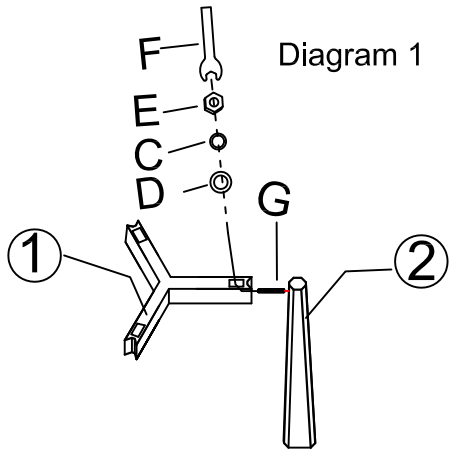


Diagram 1

Step 1: Attach legs (2) to stretcher (1).

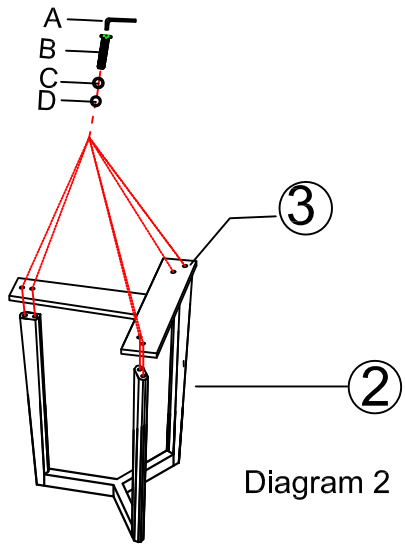


Diagram 2

Step 2: Attach mounting bridge (3) on legs (2).

HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75217-80 Rectangle Dining Table w/2-18in leaves
6015-75217-89 Rectangle Dining Table w/2-18in leaves

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

Step 3: Assemble base to top (4).

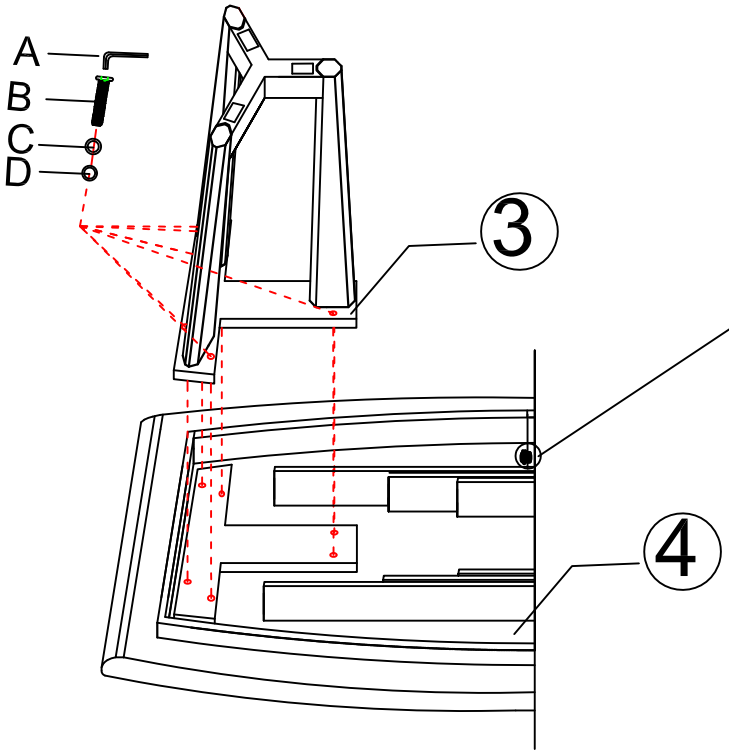
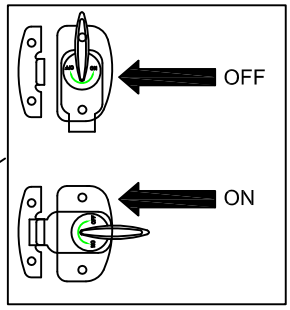


Diagram 3




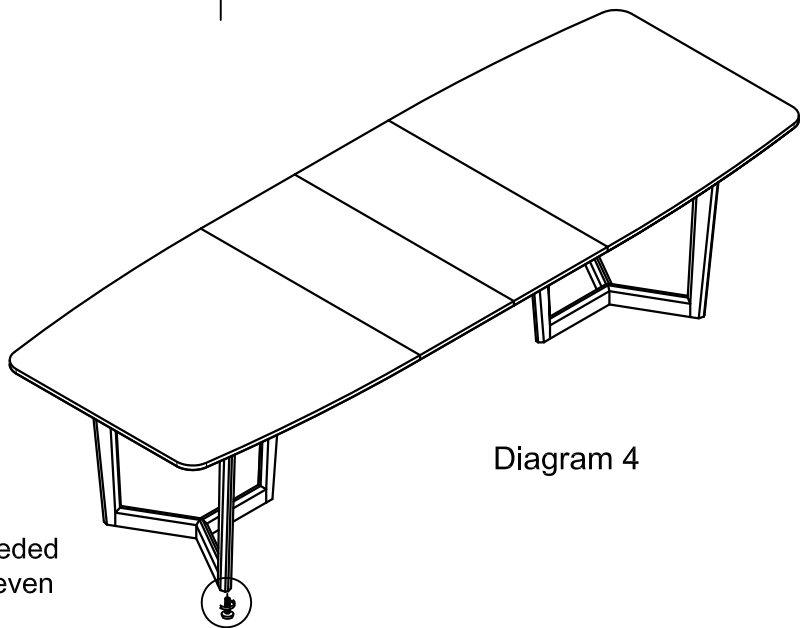


Diagram 4

Ajdust Leveler if needed to level table on uneven floor

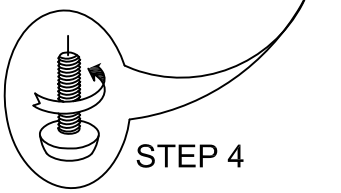

STEP 4

HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75217-80 Rectangle Dining Table w/2-18in leaves
6015-75217-89 Rectangle Dining Table w/2-18in leaves

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

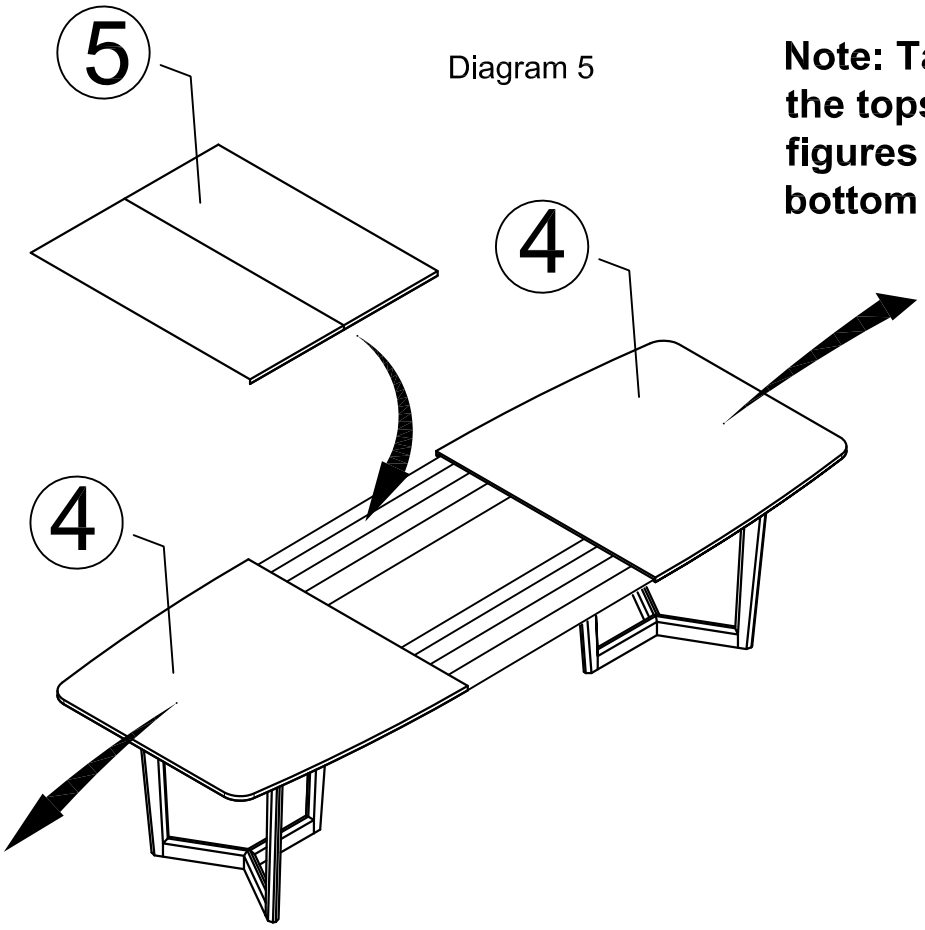


Diagram 5

Note: Table leaves between the tops are follow the figures in sequence on bottom of table.

Instruction for table leaves:

1. There are latches at the bottom of table top, turn off the latches as shown in Diagram 3 above.

2. Pull out table top as the arrow direction shown in Diagram 5.

3. Place table leaves (5) between table tops and push table tops together.

4. Turn on latches. (See Diagram 3)

5. Take opposite steps to remove table leaves.


HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION


ITEM: 6015-75411-02 Carved Back Side Chair-2 per ctn/price ea
6015-75411-80 Carved Back Side Chair-2 per ctn/price ea
6015-75411-89 Carved Back Side Chair-2 per ctn/price ea

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Flat Washer	Ø5/16"	9PCS
B		Lock Washer	Ø5/16"	9PCS
C		Bolt	Ø5/16"*60mm	5PCS
D		Allen Wrench	73*29*5mm	1PC
E		Bolt	Ø5/16"*80mm	4PCS

PARTS LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Seat	1PC
2		Back Frame	1PC
3		Left Front Leg	1PC
4		Right Front Leg	1PC

Note: distinguish left and right front legs by following the numbers on legs and corners blocks during assembly.

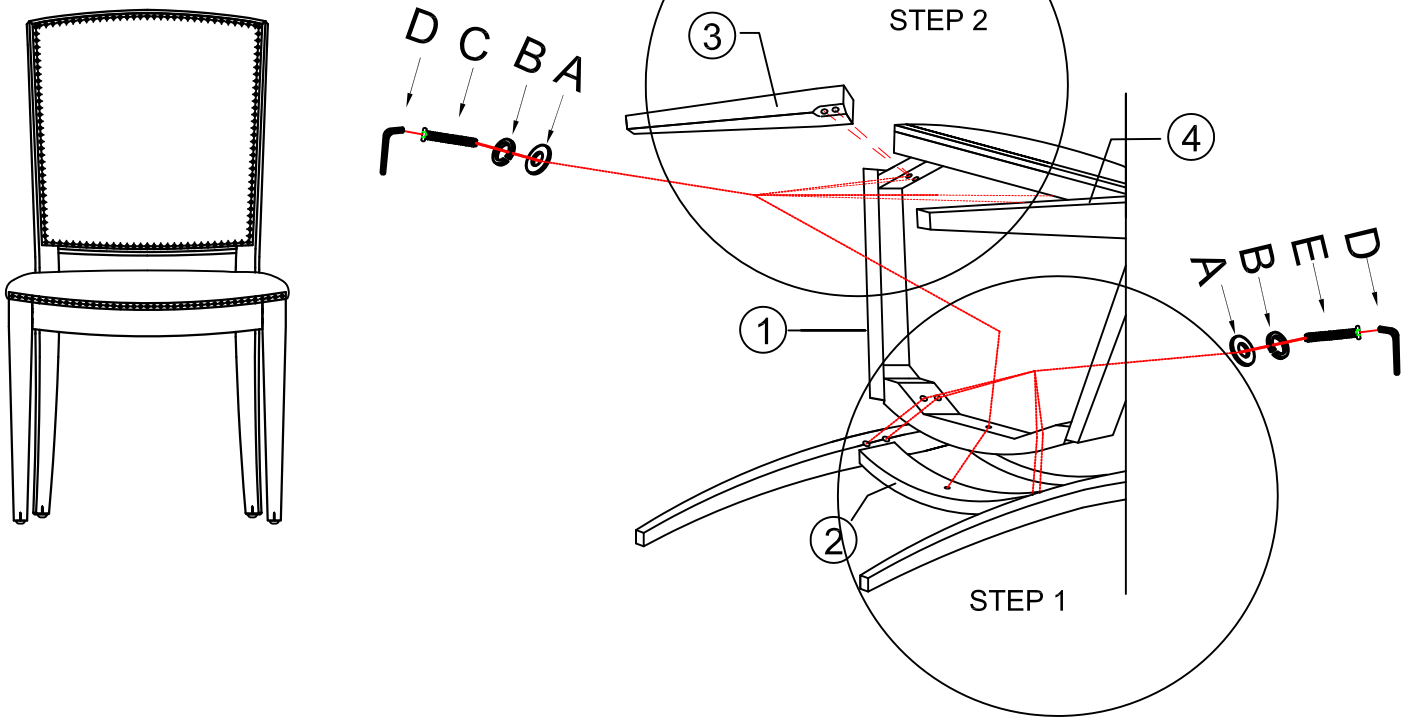


HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75411-02 Carved Back Side Chair-2 per ctn/price ea
6015-75411-80 Carved Back Side Chair-2 per ctn/price ea
6015-75411-89 Carved Back Side Chair-2 per ctn/price ea

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

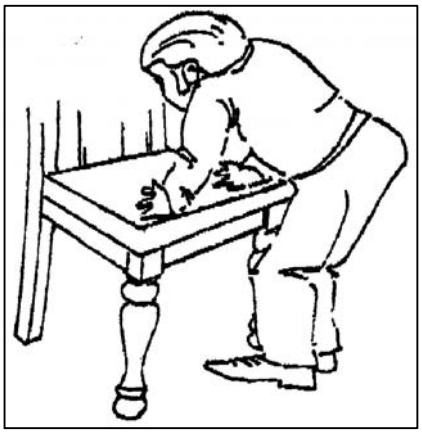

PLEASE READ THESE INSTRUCTIONS PRIOR TO ASSEMBLING THE CHAIRS
CHAIR LEVELING INSTRUCTION SUPPLEMENT

Chair leveling procedures:

To make the assembly process easy and efficient, please read the entire instruction sheet prior to assembling of the chair. Make sure all hardware listed is included. To properly assemble the chair, none of the bolts should be fully tightened until all components are attached to the chair. This will allow an opportunity to level the chair and prevent any unnecessary “rocking”.

1. Place the loosely assembled chair on a hard flat surface.
2. Apply gentle downward pressure on the seat. This step eliminates rocking and ensures the chair to be level.
3. Once the chair is level, tighten all bolts and nuts.

Note:

Most floors have slight irregularities that can affect chair leveling. If your chair is uneven when placed in its desired location, perform the following steps:

1. Loosen front legs to finger tight.

2. Extend both front legs upward to their fullest length.

3. Gently push downward on the front edge of the seat until all four legs rest on the floor.

4. Re-tighten all bolts and nuts.

HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75900-02 Buffet
6015-75900-80 Buffet
6015-75900-89 Buffet


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

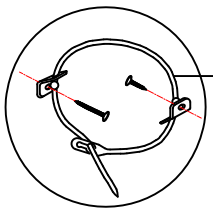

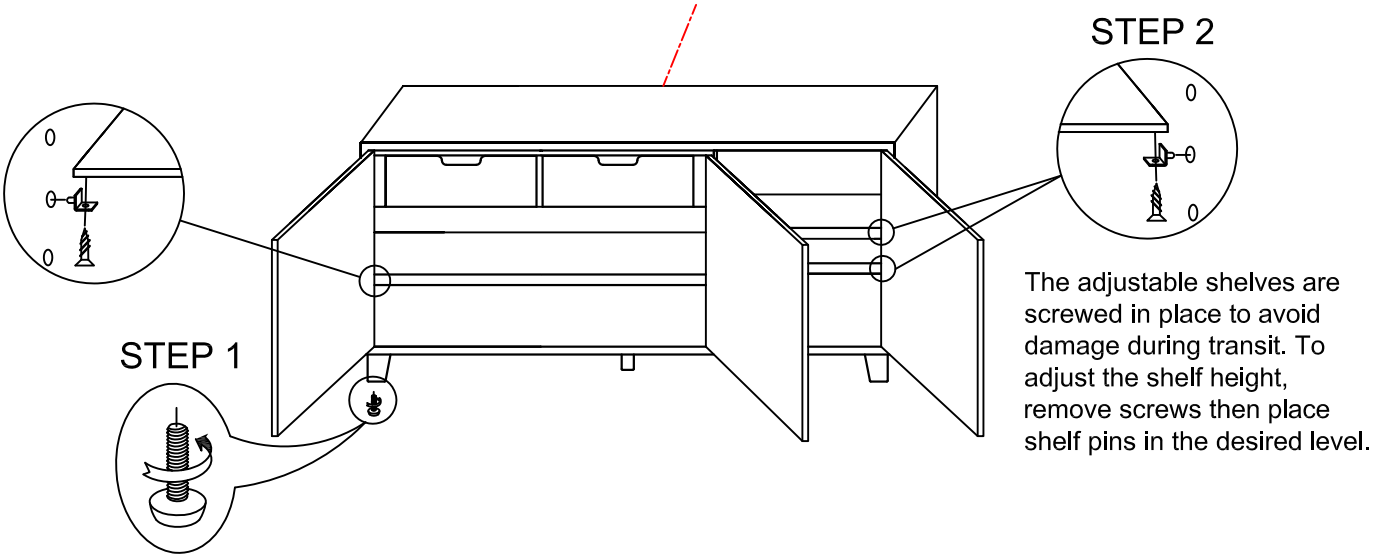

The adjustable shelves are screwed in place to avoid damage during transit. To adjust the shelf height, remove screws then place shelf pins in the desired level.

Adjust Leveler if needed to level buffet on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75906-02 Display Cabinet
6015-75906-80 Display Cabinet
6015-75906-89 Display Cabinet


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

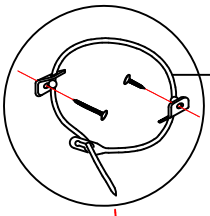

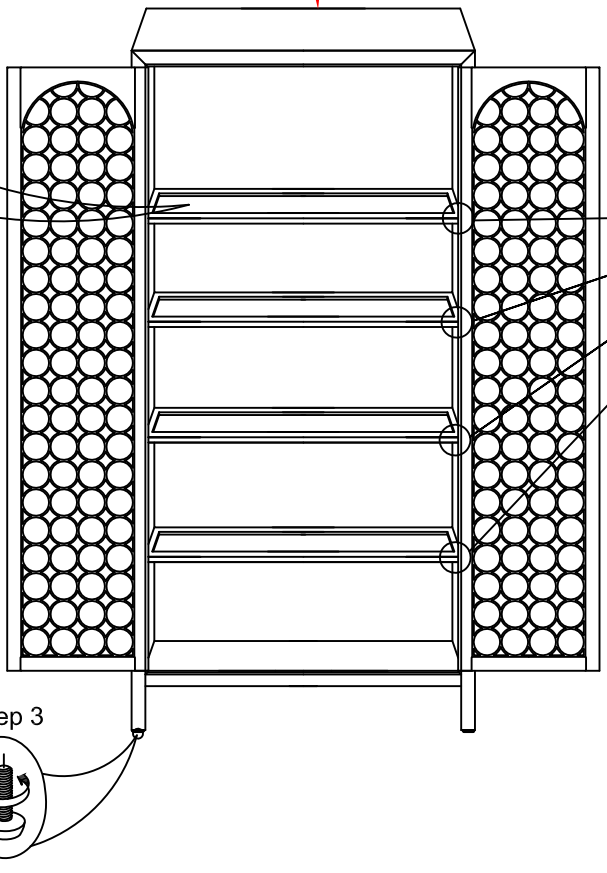


Step 1




The adjustable glass shelves are packed in inner box to avoid damage during transit. Take out glass shelves from box and place them on wood shelf frames.

Step 2

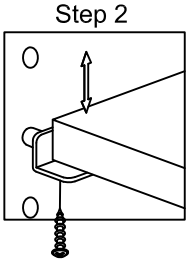

To adjust the shelf height, take out shelf pins then place shelf pins in the desired level.

Step 3



Adjust Leveler if needed to level case on uneven floor.


Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75906-02 Display Cabinet
6015-75906-80 Display Cabinet
6015-75906-89 Display Cabinet

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

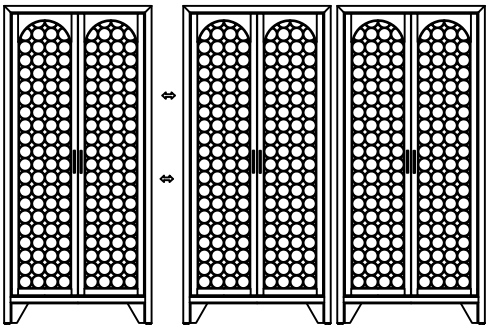

A —— male connector (of the power switch)
B —— female connector (of the power switch)
C —— male connector (of the puck light)
D —— female connector (of the puck light)
E —— male connector (of the power wire)
F —— female connector (of the power wire)

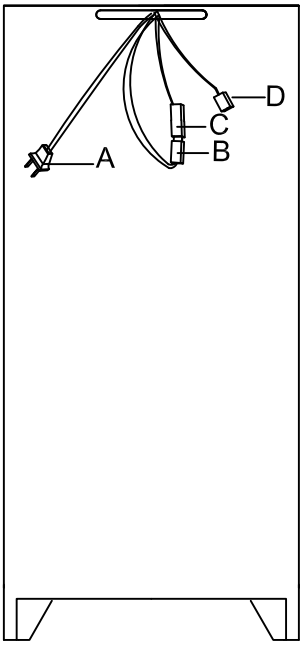


Diagram 1

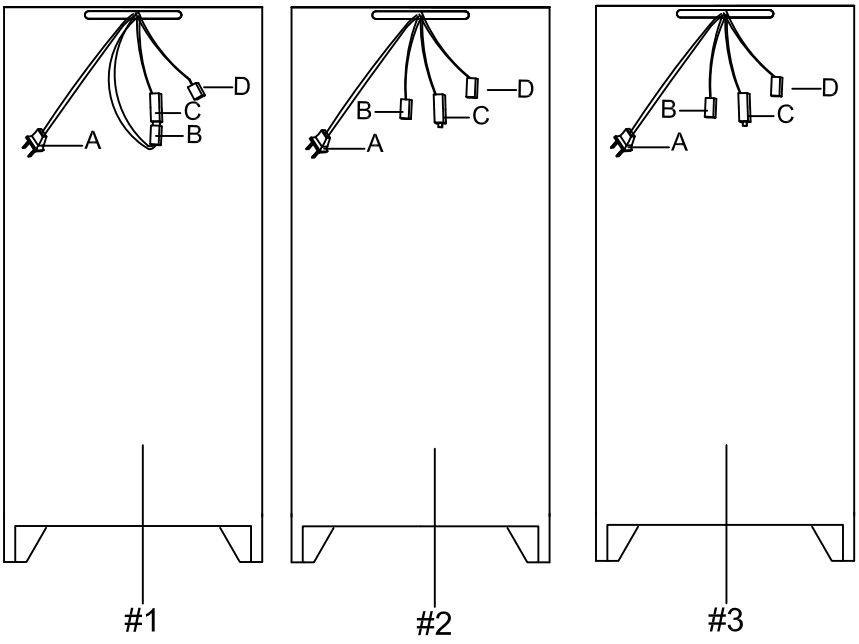


Diagram 2

Assembly Steps

1. When each piece of cabinet is used alone, attach male connector of the power switch (A) to a wall plug. (See Diagram 1)

2. Touch dimmer is at the inside of right post.

3. If you want to bunch two or more cabinets together, place them all side by side in a desired location.

4. Leave male connector of the puck light (C) and female connector of power switch (B) for the first cabinet (#1) as it is. Keep male connector of the puck light (C) and female connector of power switch (B) off for the rest cabinets (#2, #3, and so on). (See Diagram 2)

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

HOOKER®
FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 6015-75906-02 Display Cabinet
6015-75906-80 Display Cabinet
6015-75906-89 Display Cabinet

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

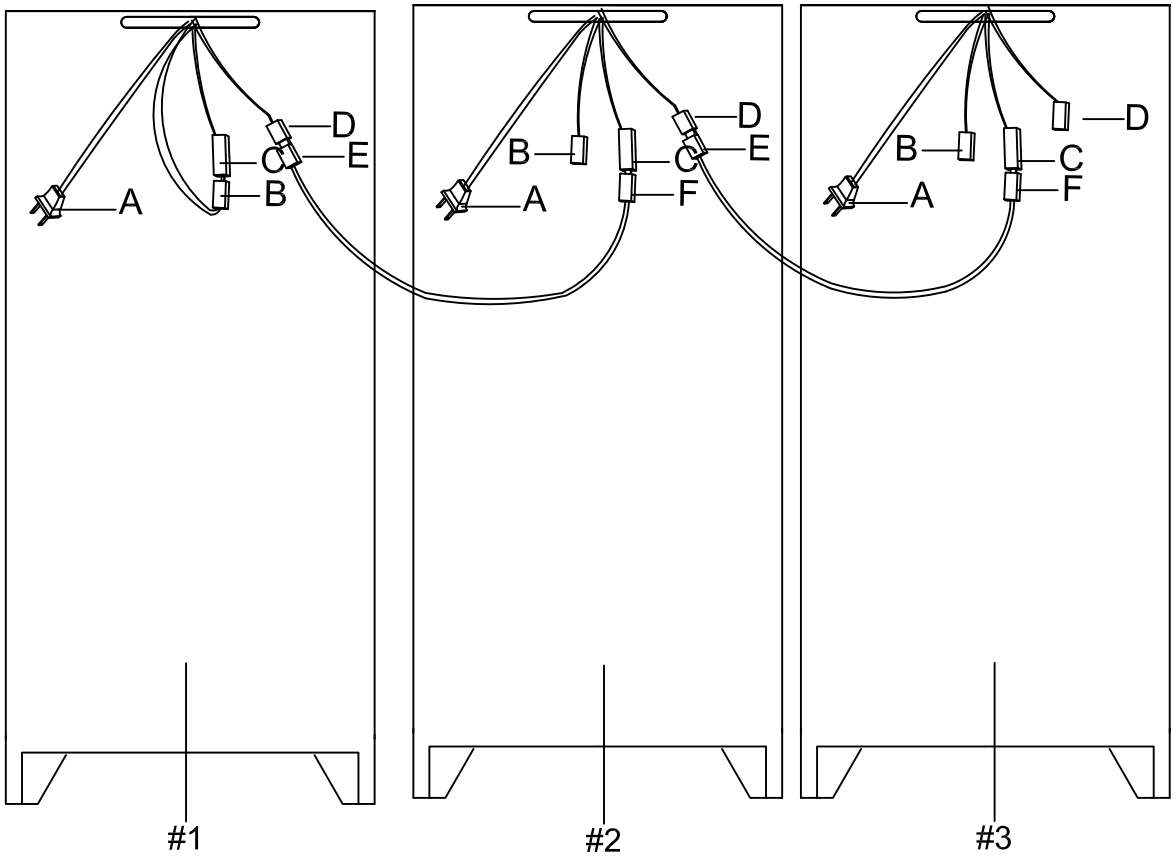


Diagram 3

Assembly Steps

5. Connect female connector of the puck light (D) (#1 cabinet) with male connector of power wire (E), then have female connector of power wire (F) connected to male connector of the puck light (C) (the #2 cabinet). (See Diagram 3)

6. Repeat step 5 for the 3rd cabinet and the rest of ones when more than two are bunched together till each one is connected.

7. Plug in male connector of power switch (A) (#1 cabinet).

8. Touch the dimmer of the #1 cabinet, all puck lights connecting together will be on at the same time.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.