


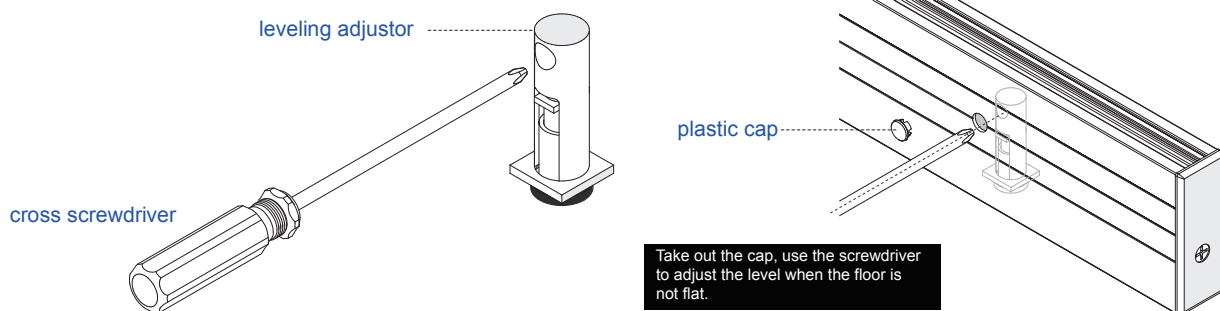
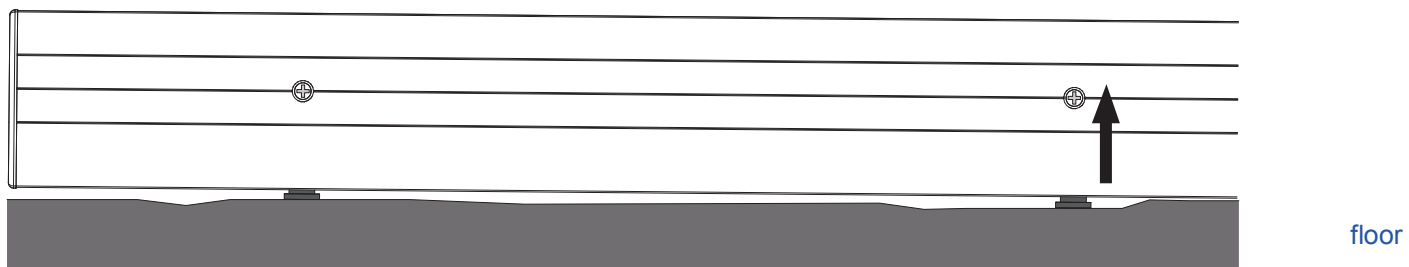
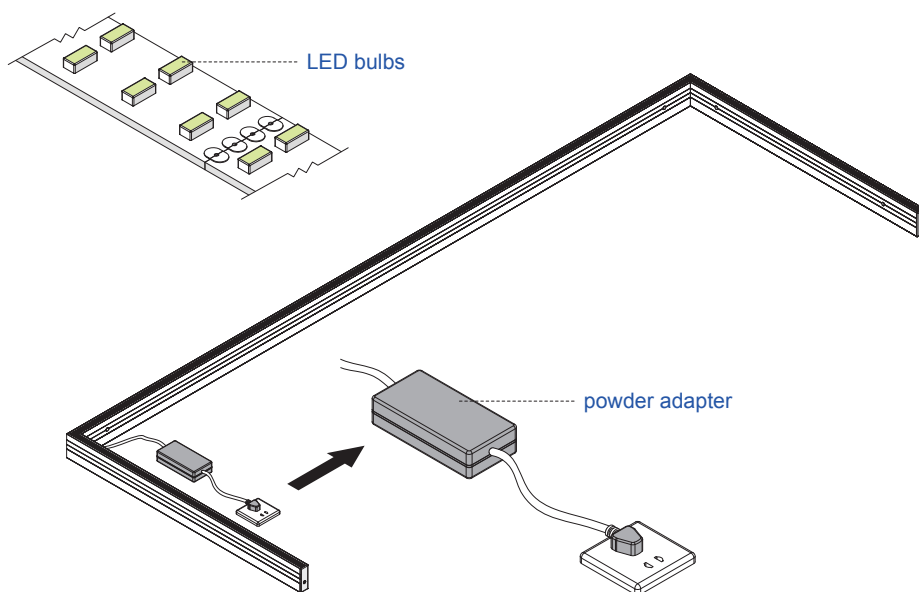



1 Adjust the base level according the floor.



2 Test the powder outlet and LED lights system.


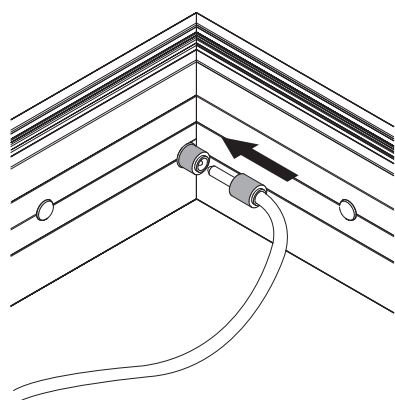


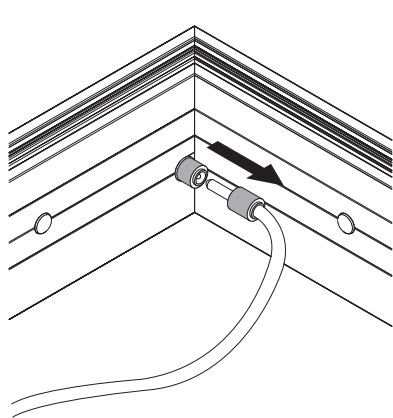

 Unplug the power when assemble the glass panels. The painted surface of glass panel should forward inside.

non-painted surface

corner feature of glass

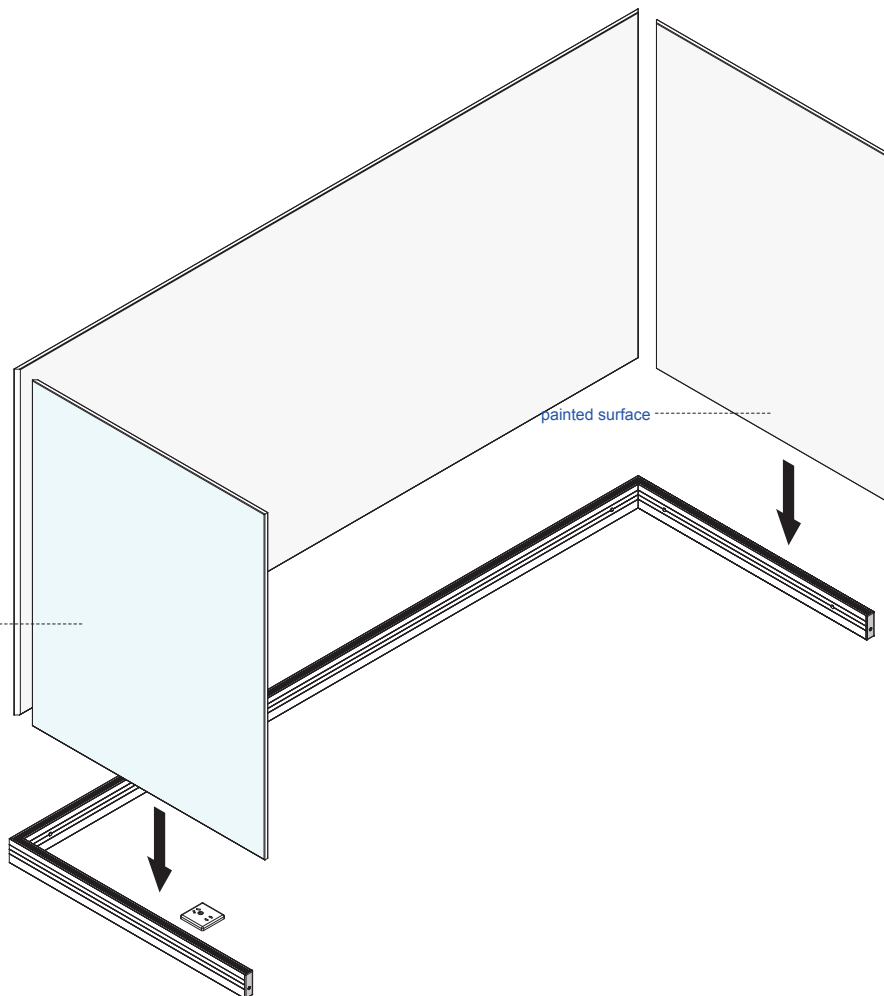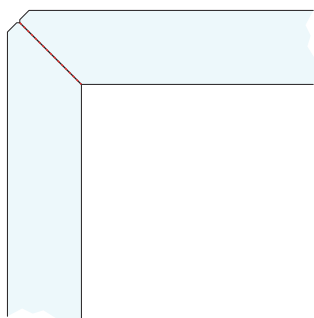

12mm painted tempered glass


T3 top plastic strip


glass groove

L shape bracket


leveling adjuster


LED lights

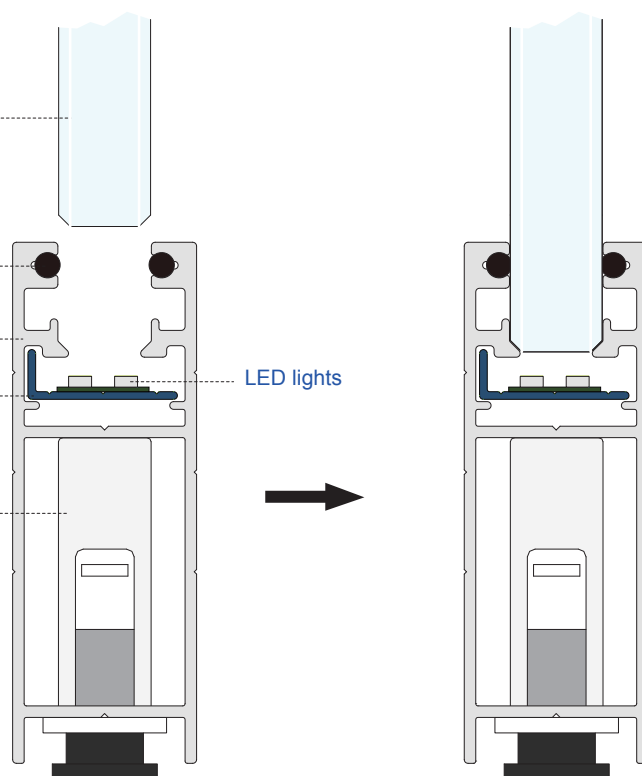

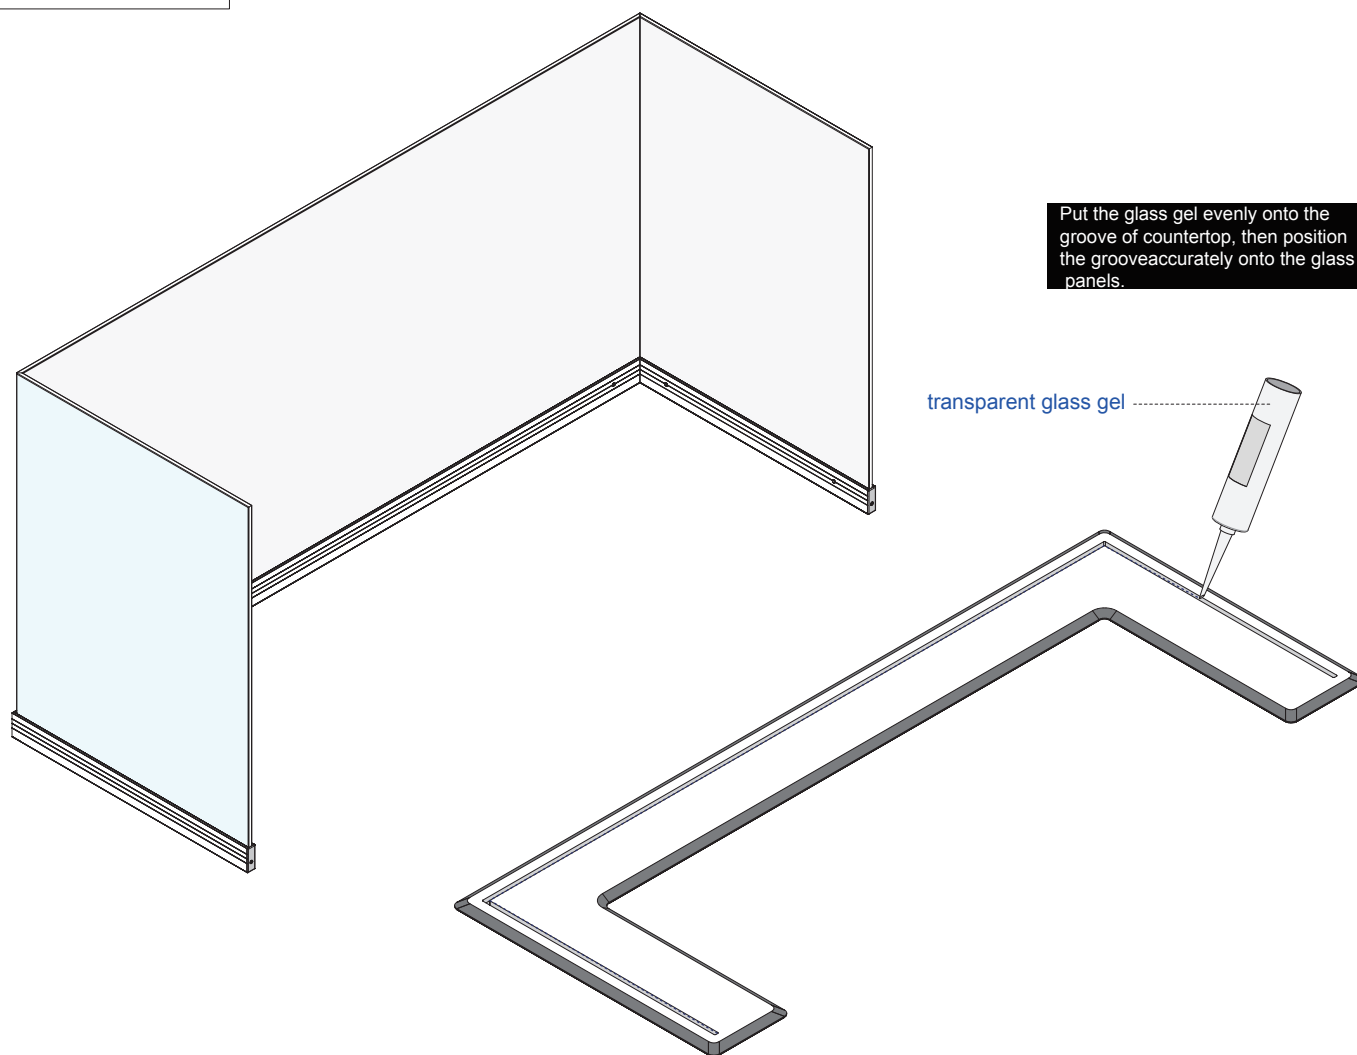

Countertop requests 2 hours for the gel concreting after finished assembling.

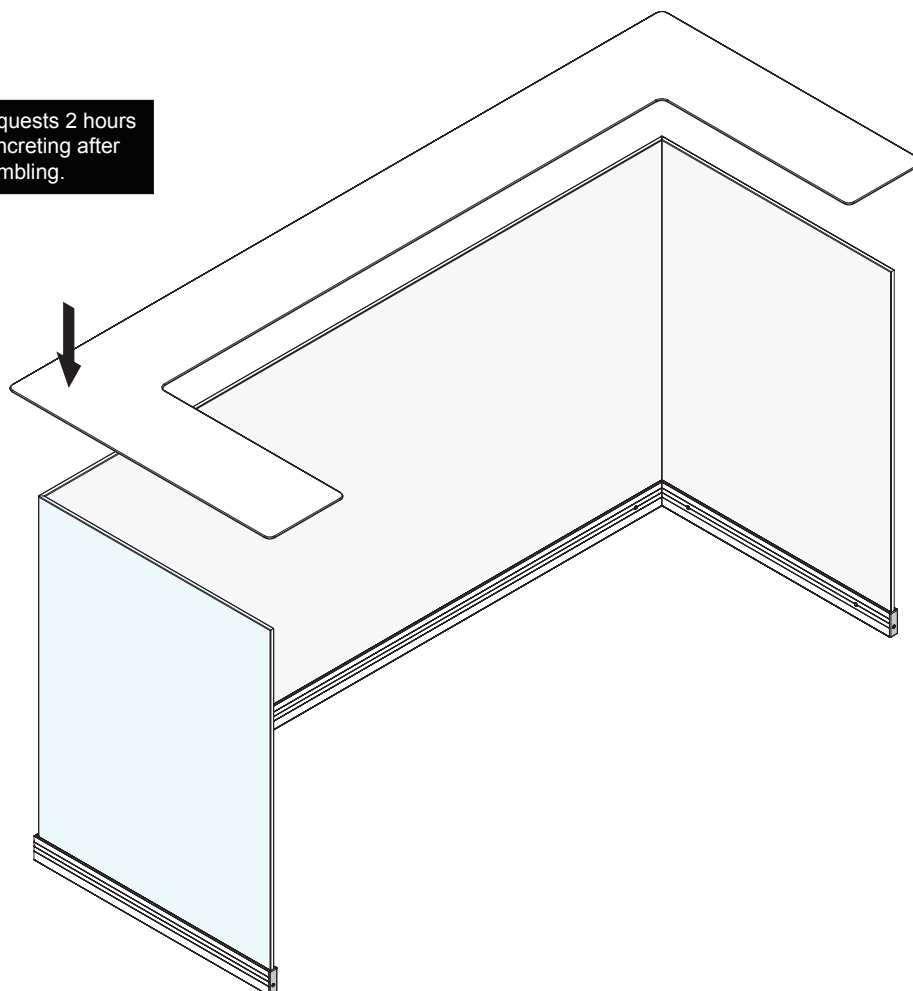

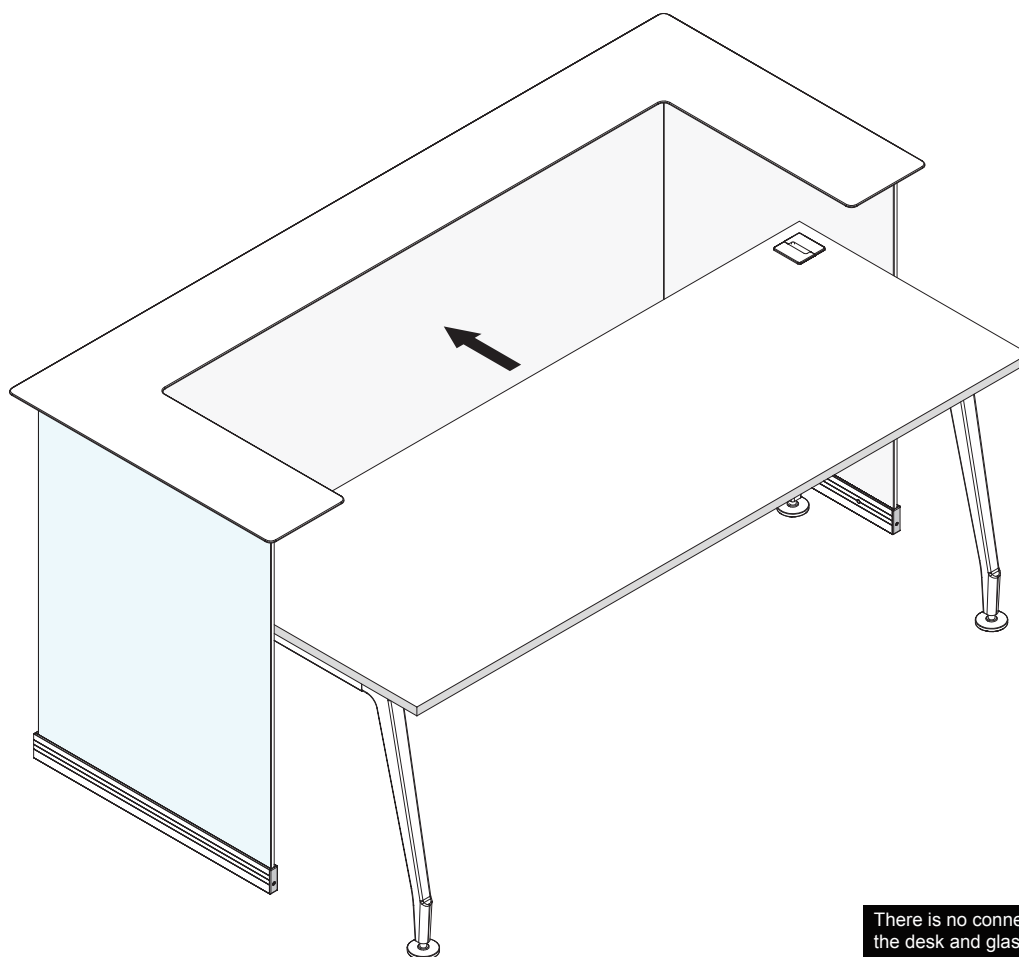

There is no connection between the desk and glass section. They stand individually.

