


Item Code - EV03-70-203
Assembly Instructions

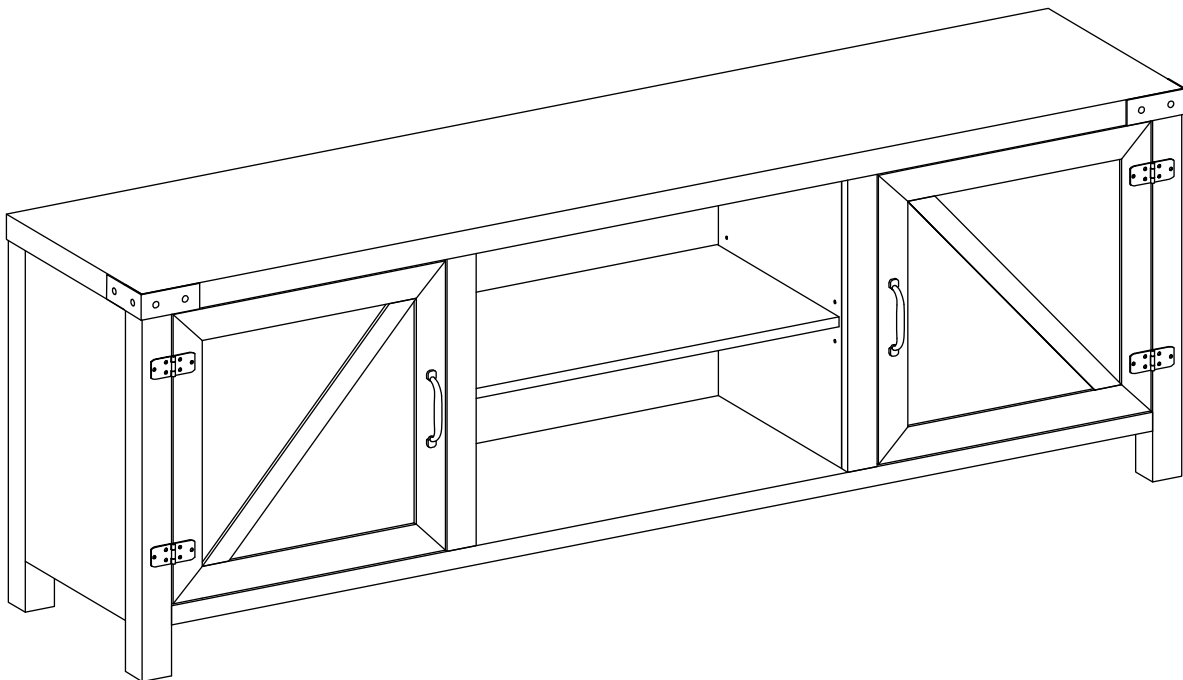



ATTENTION: Is your product damaged or missing assembly instructions?

DO NOT RETURN!!!PLEASE READ THE FOLLOWING!!!

For Replacement / Missing Parts: www.modarte.com/parts

For Assembly Instructions and Assembly Videos: <https://modarte.com/assembly/>

All other enquiries, please send email to: operations@modarte.com or 973-264-1228

IF YOU ARE MISSING PARTS, OR PARTS ARRIVED DAMAGED:

For fastest service, please contact us and we will mail you replacements parts the next business day. To request replacement parts, please fill out a parts request form on our website at www.modarte.com/parts, or email us at operations@modarte.com. DO NOT RETURN TO THE RETAILER.

CUSTOMER CARE


For any other customer service enquiries, please feel free to reach out to us:

operations@modarte.com or 973-264-1228


Thank You!

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
Approximate time : 30 Minutes
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

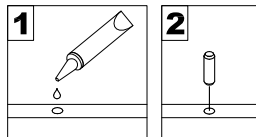


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

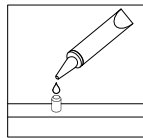

- VI. A Phillips head screwdriver is required for the assembly of this product .




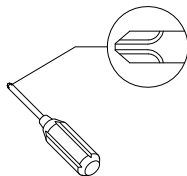


- VII. Power tools should not be used to assemble this product .

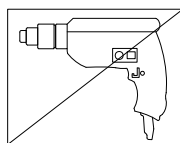


- IX. Surface should be uniform during assembly process.
- X. While door assembly ,ensure gap on all Four sides are equal.
- XI. Mallet can be used to drive in dowel.

Hardware List


A		Ø8x30mm	Wooden dowel	36 pcs
B		Ø6x35mm	Minifix Twister	24 pcs
C		Ø15x13mm	Minifix Roster	24 pcs
D		Ø15mm	Minifix Cap	24 pcs
E		Ø6x50mm	Bolt	6 pcs
F		Ø8x5x16mm	Shelf support pin	12 pcs
G		Ø5x16 mm	Pan Head Screw	8 pcs
H			Magnetic Catcher with Removal Plate	2 pcs
I		Ø3x16 mm	Screw	24 pcs
J			Hinge	4 pcs
K			Handle	2 pcs
L		5x25mm	Handle Bolt	4 pcs
M		8x13mm	Minifix Socket	24 pcs
N		5x10mm	PVC Socket	32 pcs
O			Glue tube	1 pc
P		Ø3x16 mm	Magnetic Catcher Screw	08 pcs

Note: **PVC SLEEVE ,MINIFIX SOCKET AND PART(G) ALREADY FIXED.
IN SOME CASES MINIFIX ROSTER ARE ALREADY FIXED.**



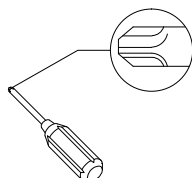


Philips head screwdriver required for assembly
(not included)

Parts List

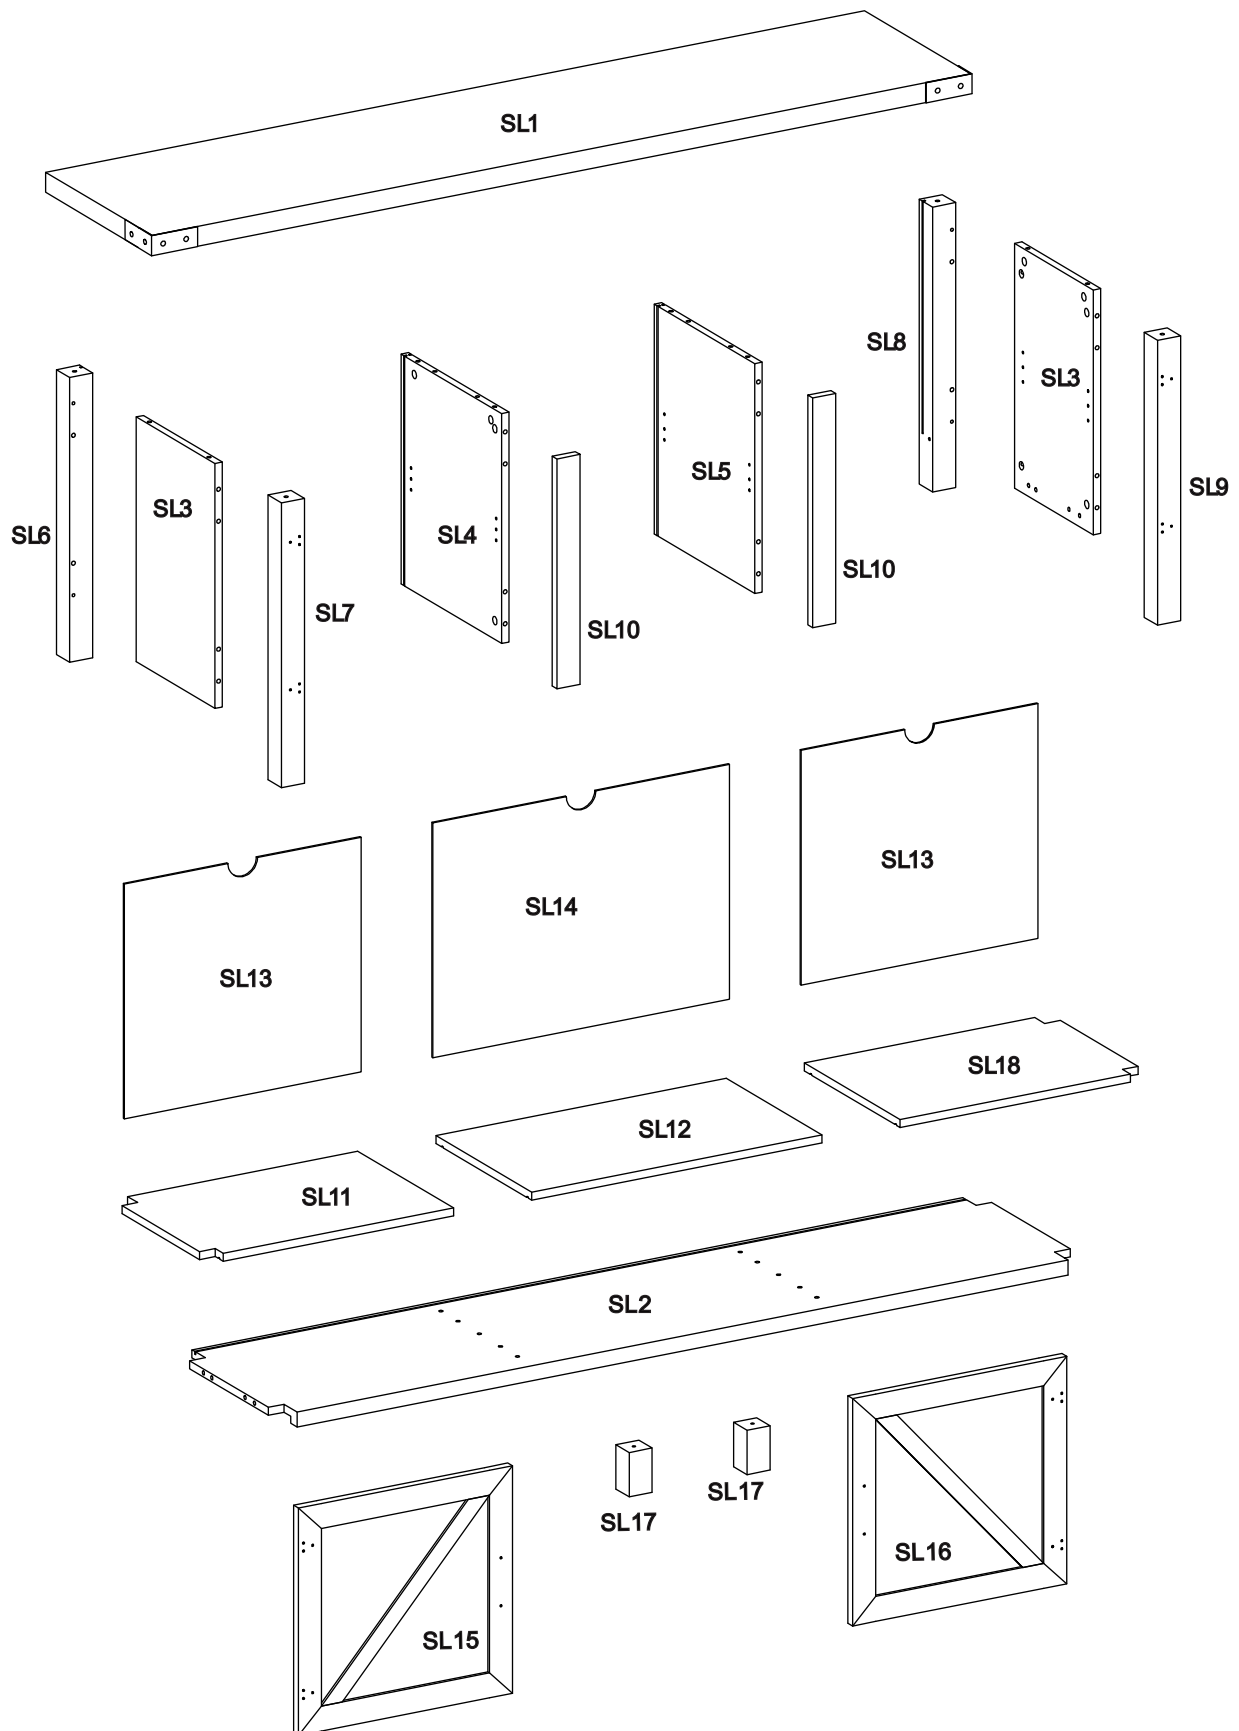


Step 1

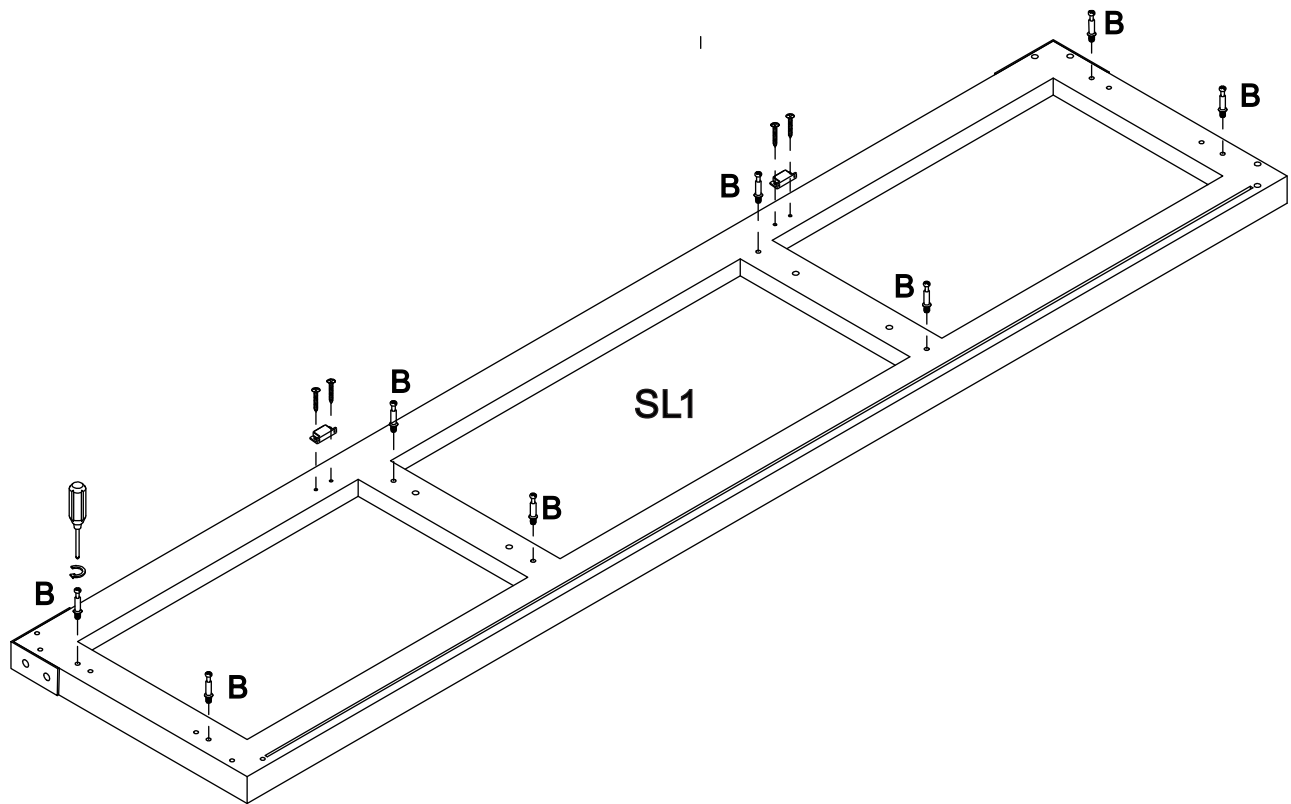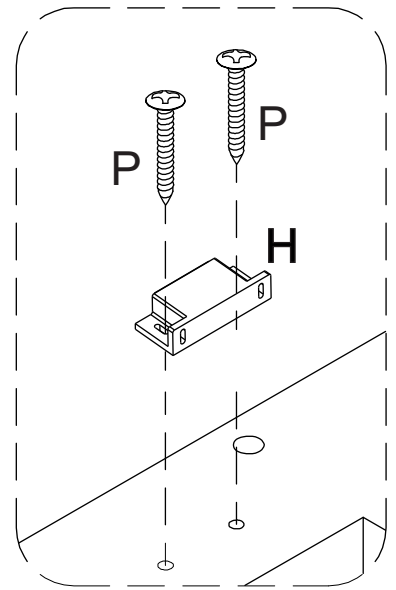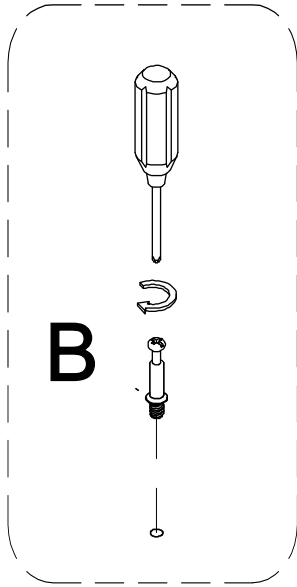


Secure the Magnetic Catcher (H) with Screw (P) and Minifix Twister (B) to the Top Panel (SL 1).
Remove Magnetic Catcher Plate (H) for further use.

Step 2

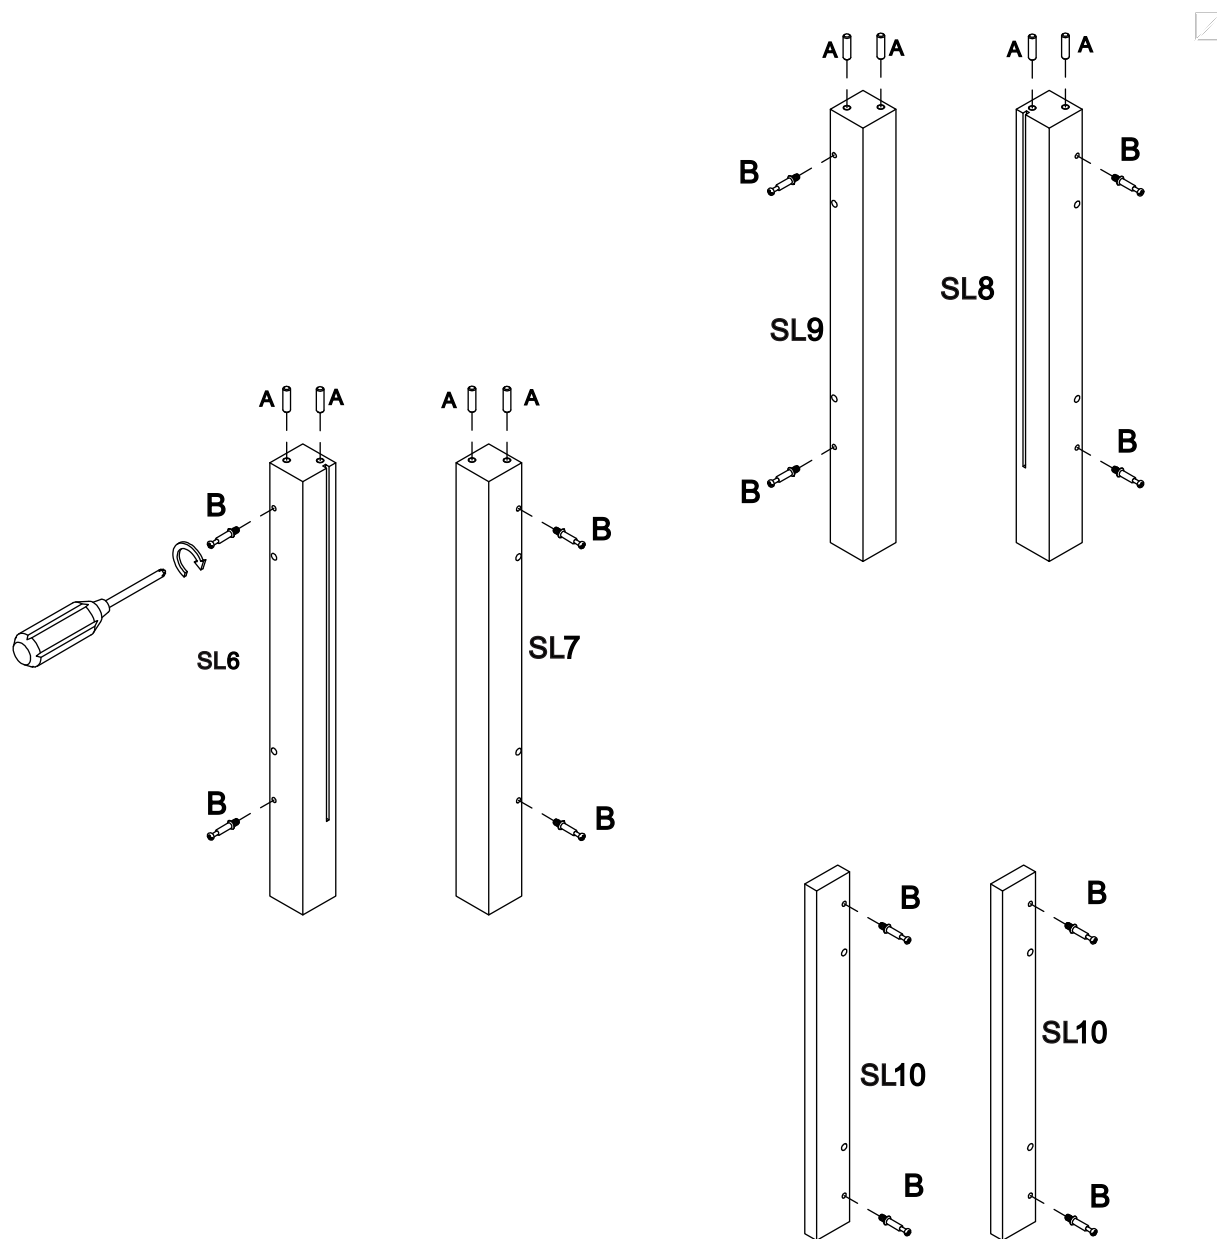


Secure Minifix Twister (B) with screwdriver into part (SL6,SL7,SL8,SL9),
Insert wooden dowel (A) into part (SL6,SL7,SL8,SL9).
Dowels(A) fix only in blind holes.

Step 3

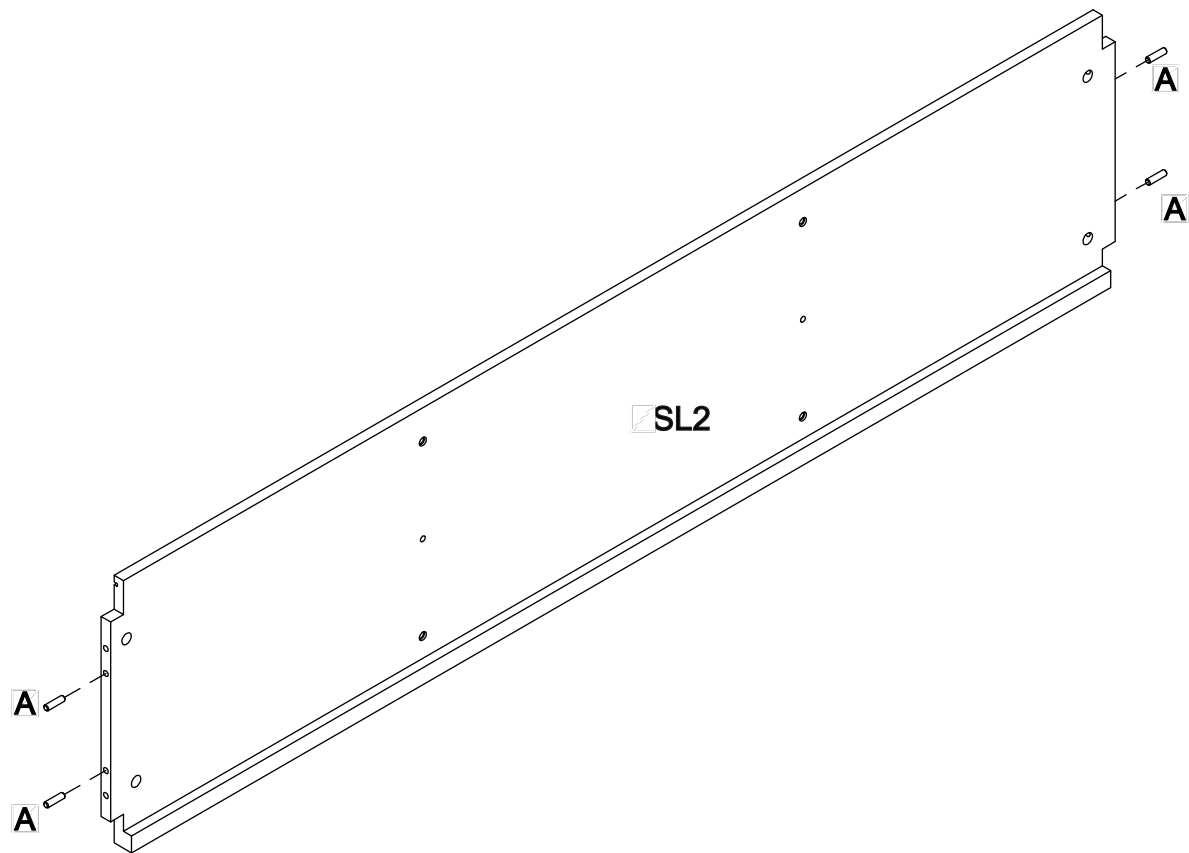



Insert wooden Dowel(A) into part (SL2).
Dowels(A) fix only in blind holes.

Step 4

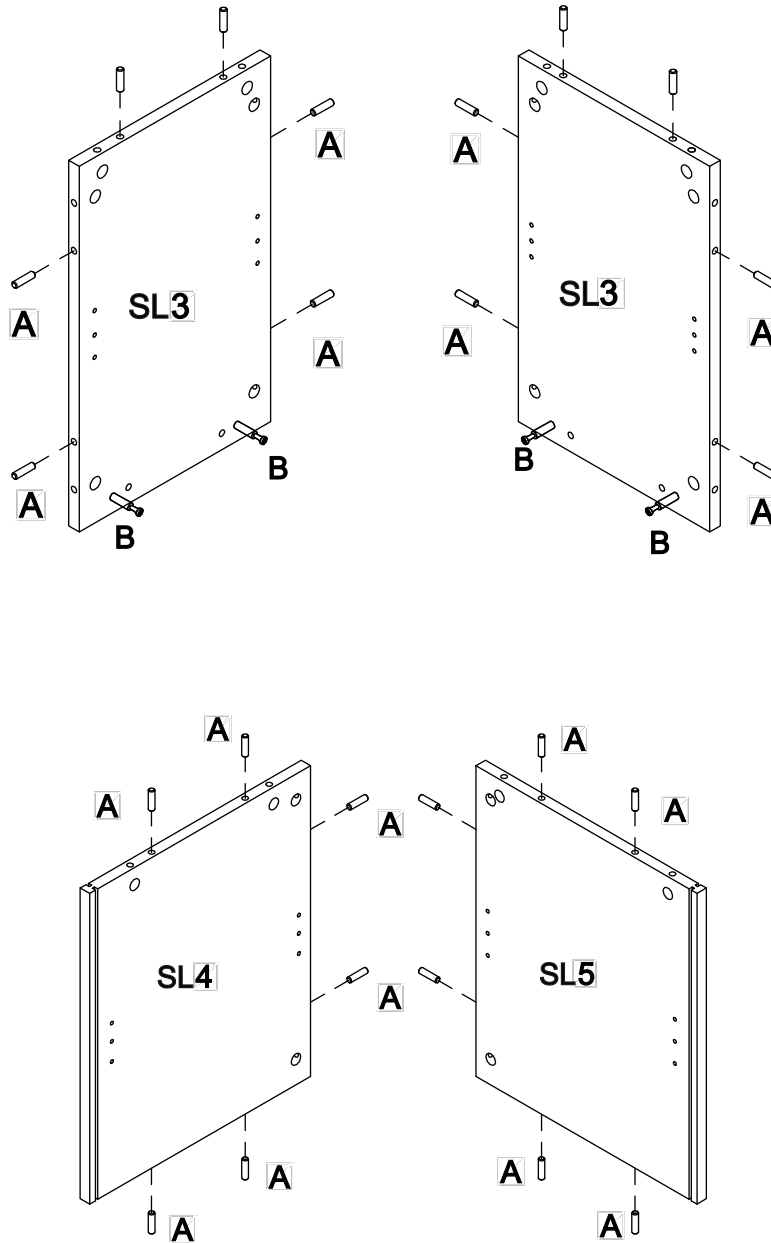




Insert Wooden dowel (A) into (SL3,SL4,SL5) and Minifix twisters into part (SL3)
Dowels(A) fix only in blind holes.

Step 5

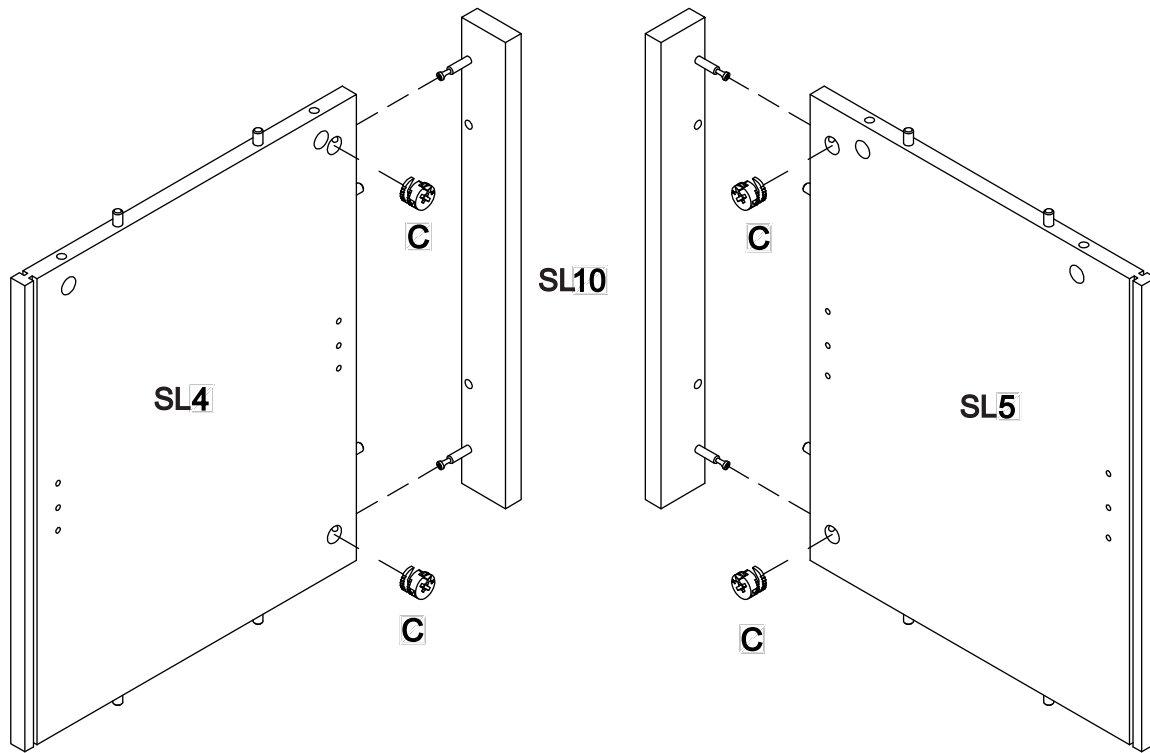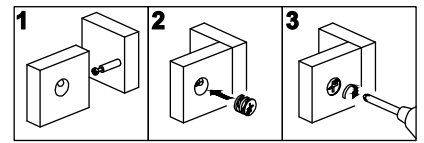


Attach parts (SL4,SL5,SL10) with Minifix Roster(C)

Step 6

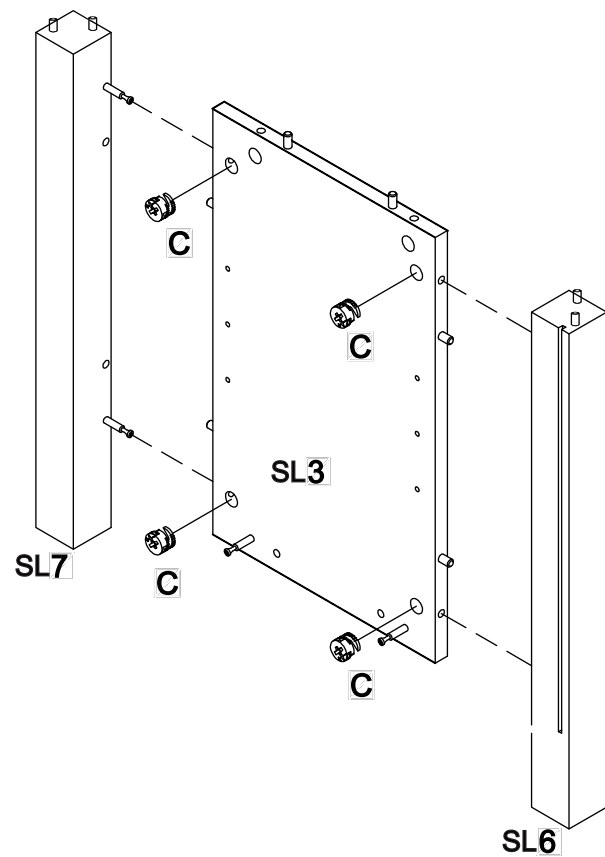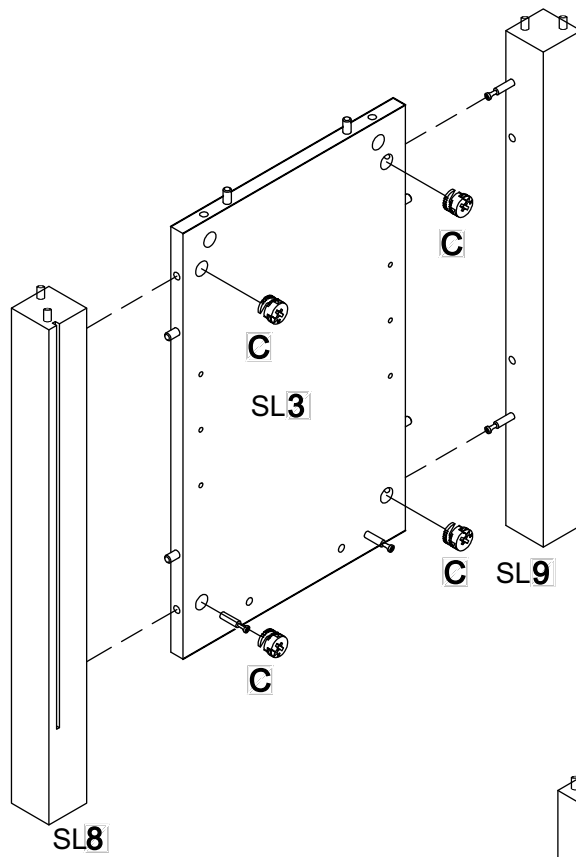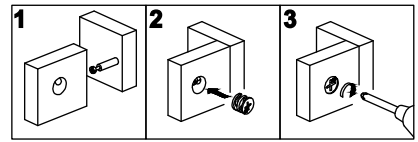



Attach part (SL3) to part (SL6,SL8,SL9) with Minifix Roster

Step 7

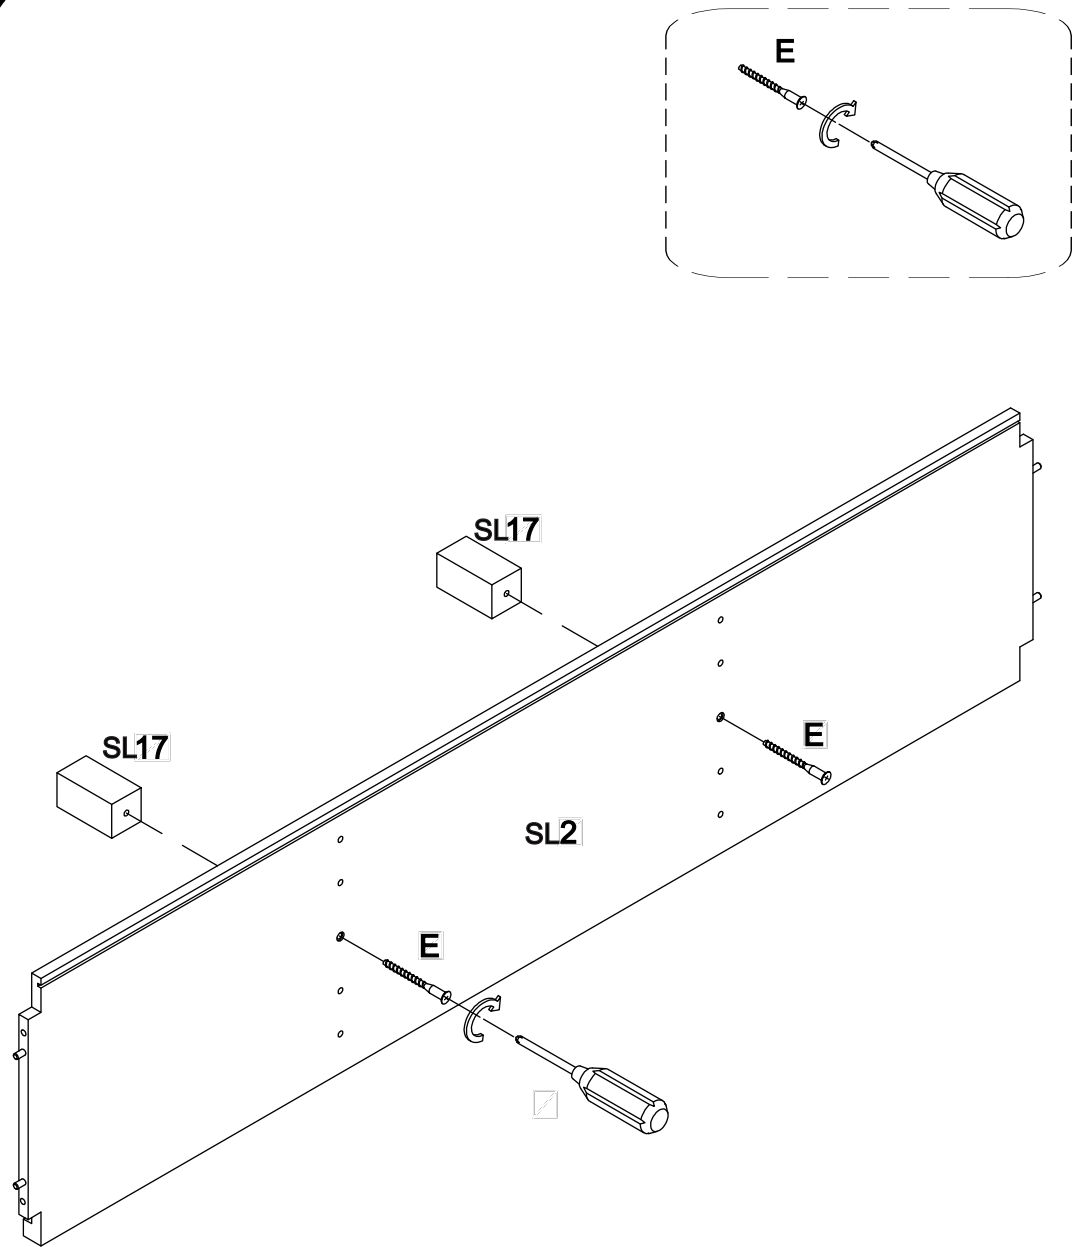



Attach part (SL17) to part (SL2) using bolt(E) with Screw driver.

Step 8

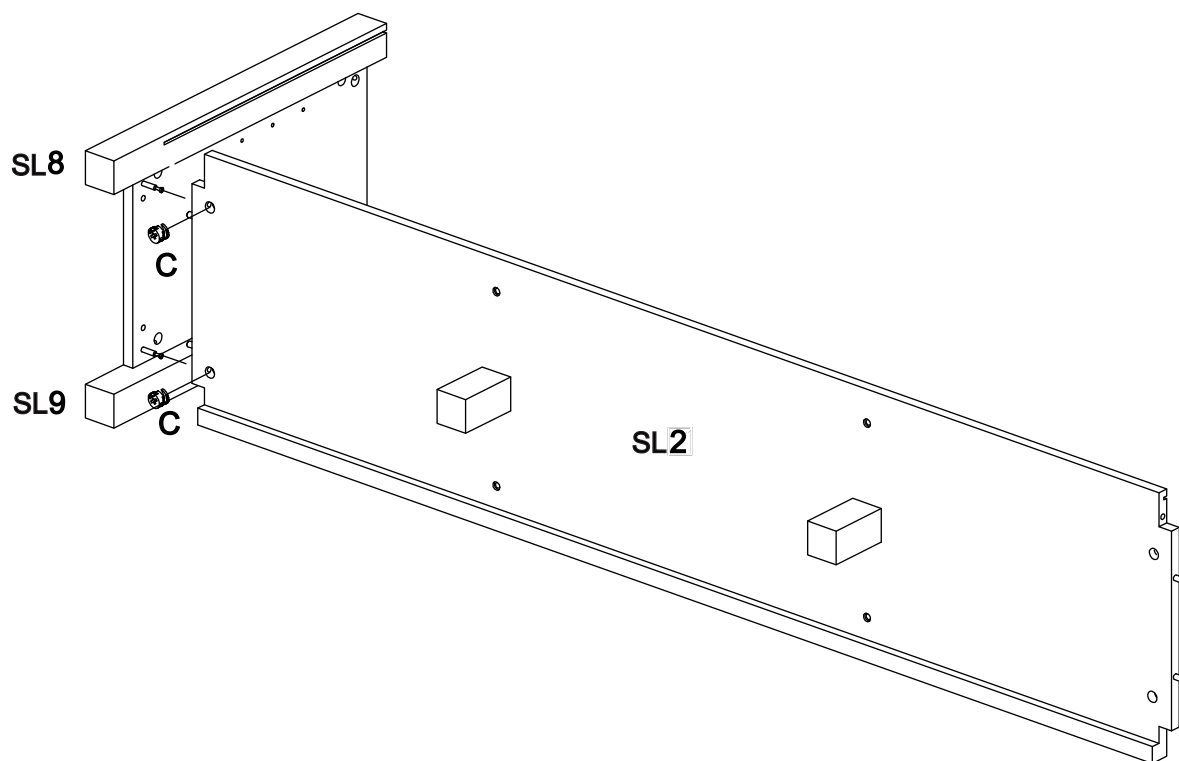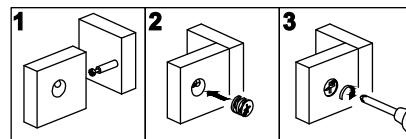



Attach part (SL8,SL9) to part (SL 2), then insert and secure Minifix Roster (C) to part (SL 2) to lock it.

Step 9

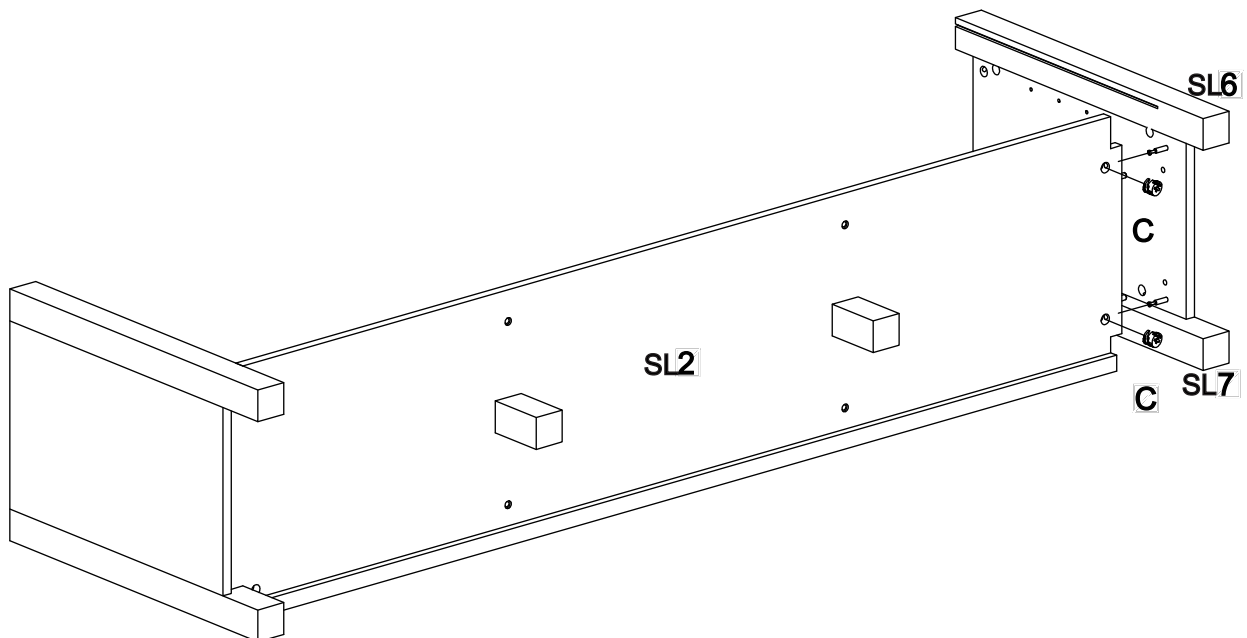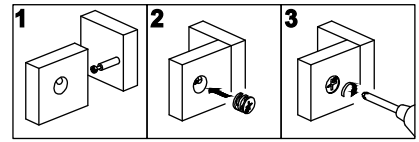


Attach part (SL6,SL7) to part (SL 2), then insert and secure Minifix Roster (C) to part (SL 2) to lock it.

Step 10

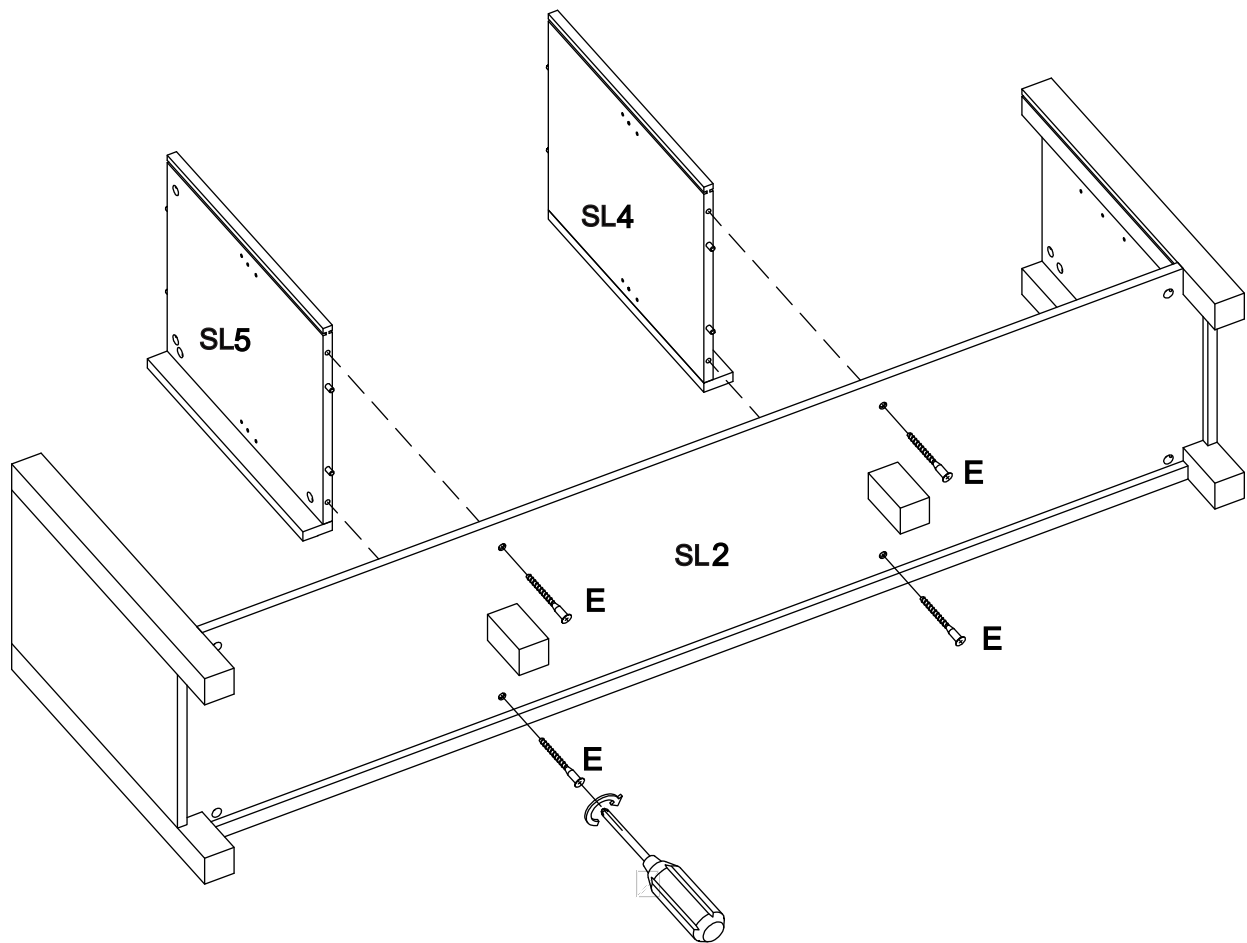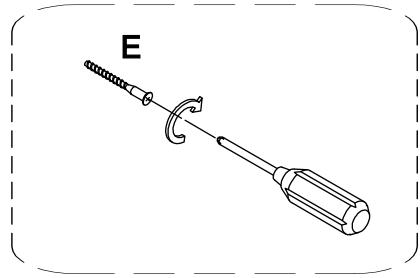



Attach part (SL 2) to parts(SL 4,SL 5) using bolt (E) with Screw driver.

Step 11

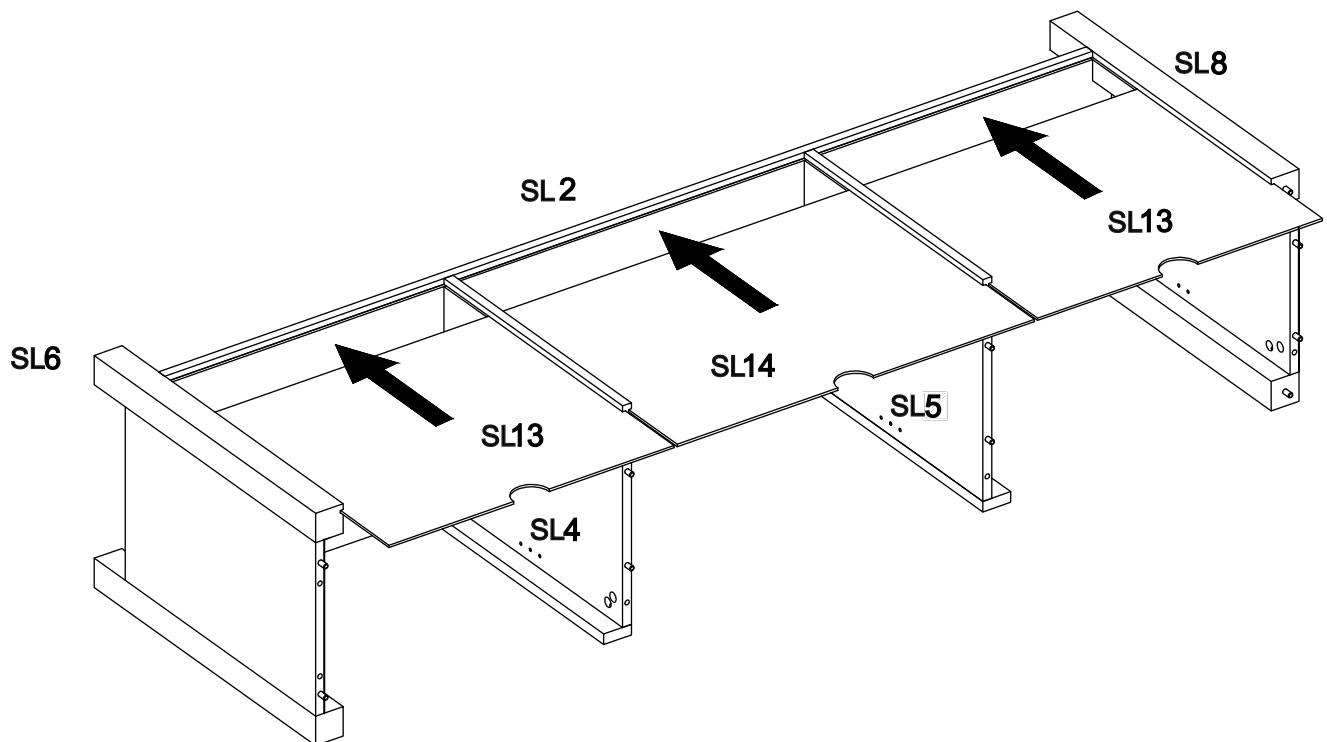



Slide the back panel all the way into the groove

Step 12

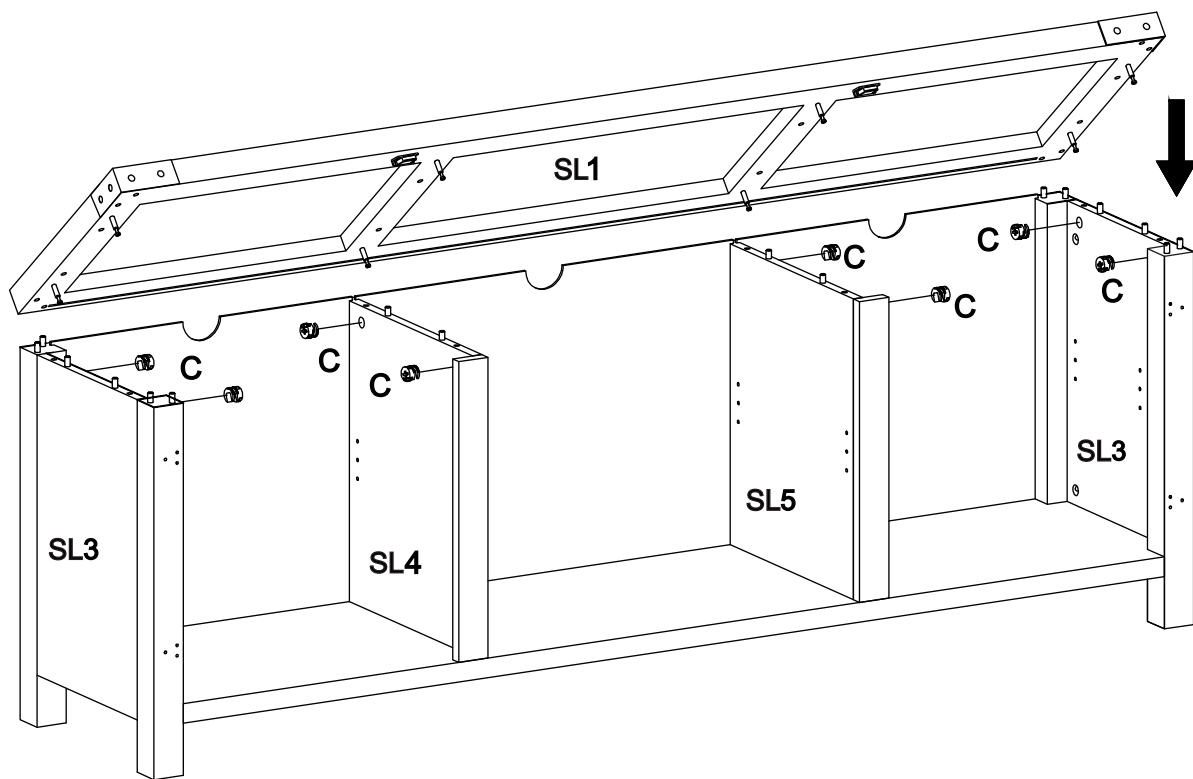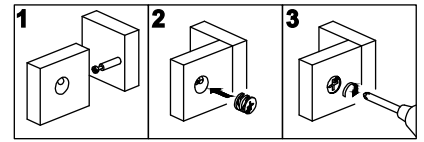



Insert part (SL 1) into part (SL3,SL4,SL5), then insert and secure Minifix Roster (C) to part (SL3,SL4,SL5).

Step 13

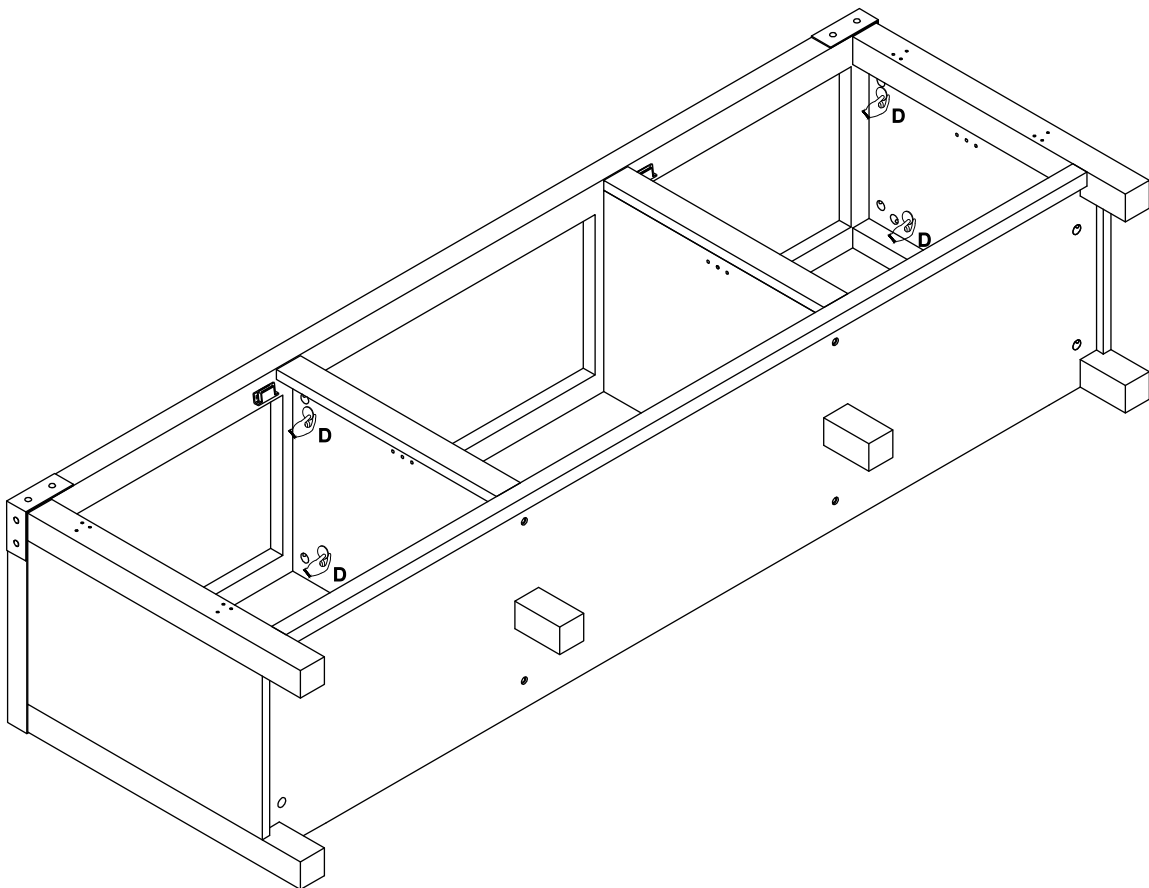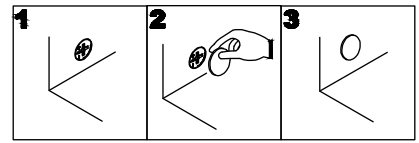


Place Minifix Cap (D) over holes as per diagram.

Step 14

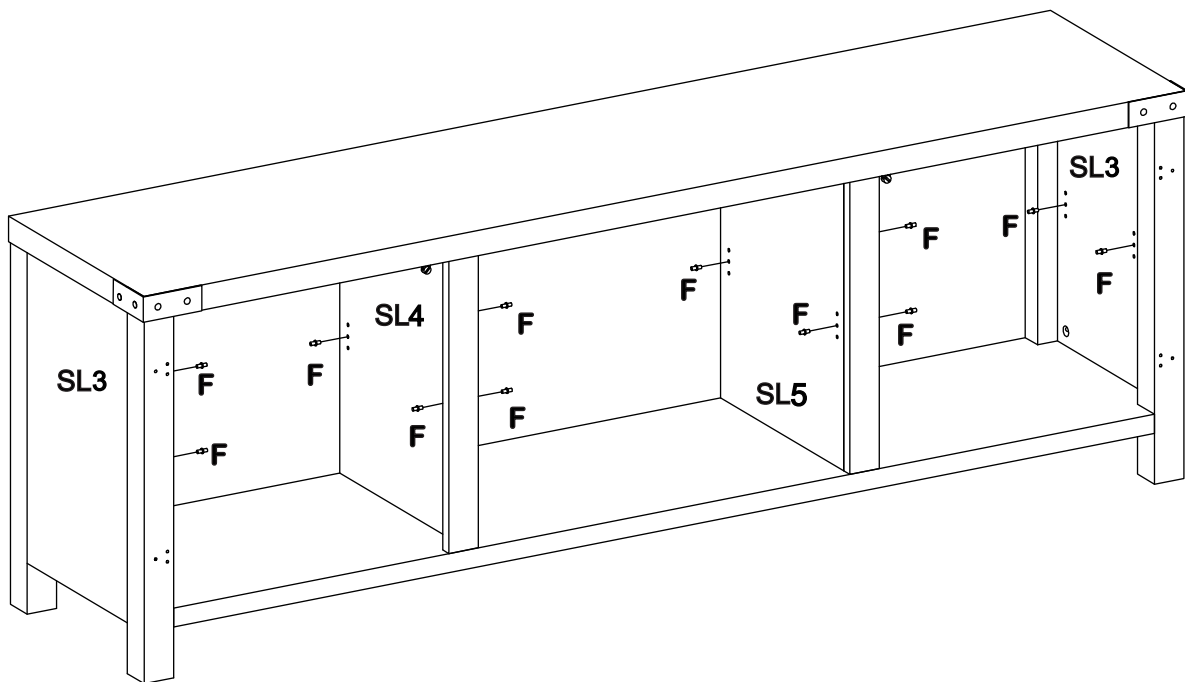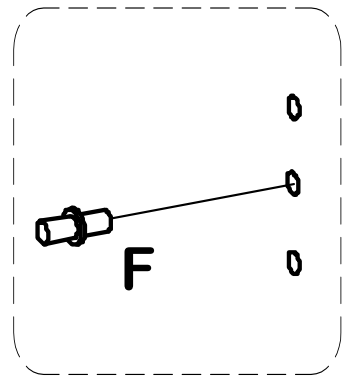


Insert shelf support pin (F) into parts (SL3,SL4,SL5)

Step 15

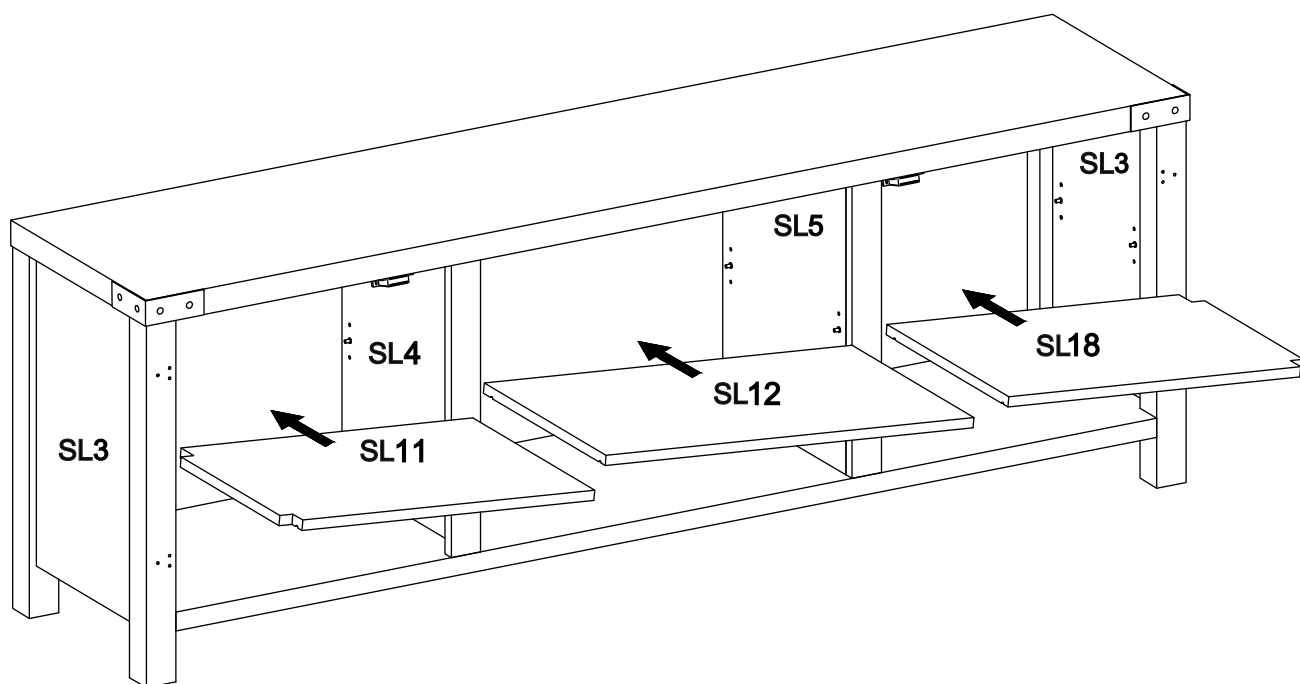

Then place shelf (SL11,SL12,SL18) on top of support pin(F).

Step 16

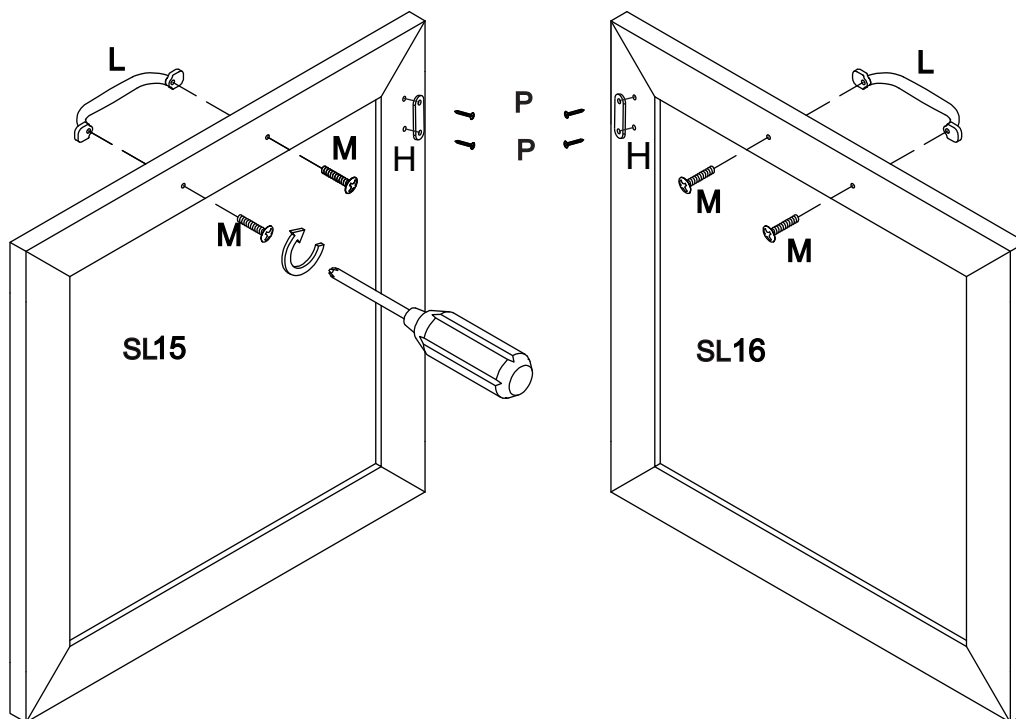


Attach handles (L) to part (SL15,SL16) using handle bolt (M) And Magnetic catcher plate(H) using screw (J) with the help of Screwdriver.

Detail Steps



- 1.Insert screw in one of the hole meant for door handle and turn 1-2 thread only.
- 2.Insert screw in another hole in door, match the hole in handle and turn 1-2 threads in handle.
- 3.Once both the screw catch the threads in handle tighten both the screws equally to draw both the ends of handle in simultaneously.

Step 17

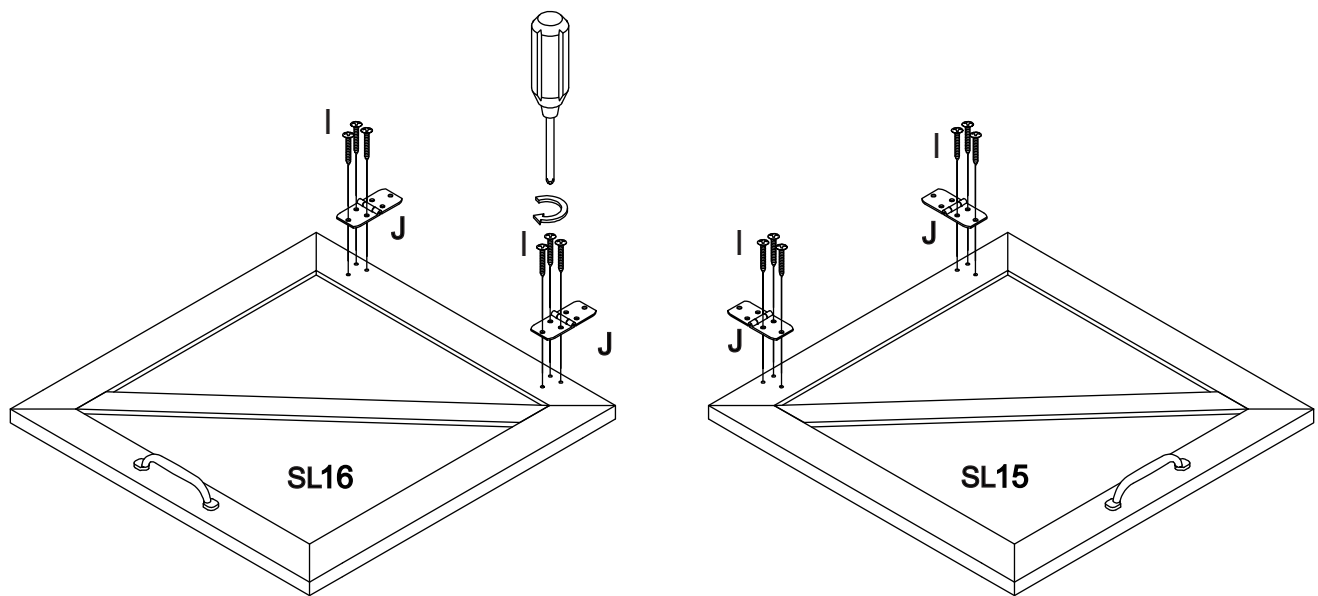



Attach door hinges (J) to parts (SL15,SL16) using screw (I) with Screwdriver.

Step 18

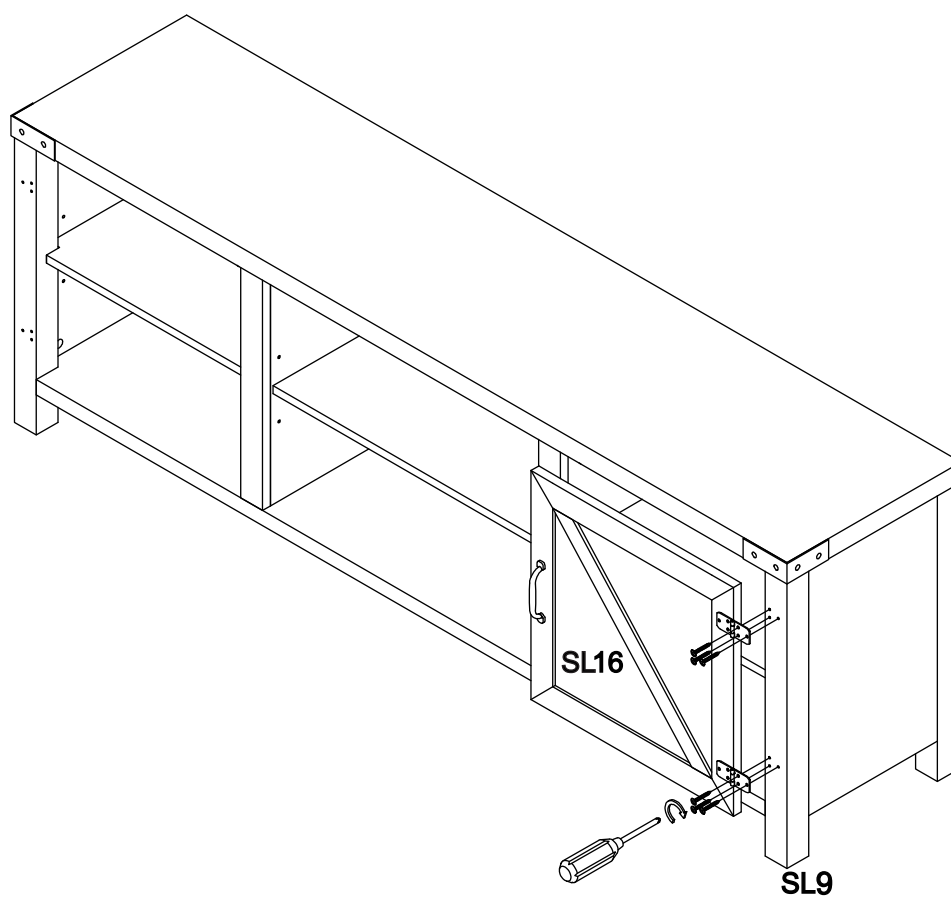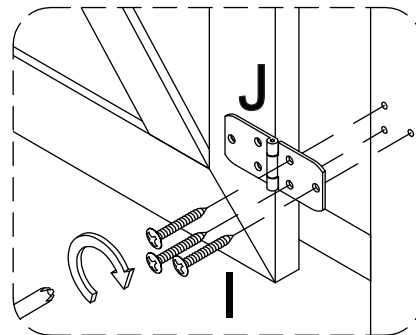


Using screw (I) with screw driver secure the hinge and door and secure it door (SL16).

Step 19

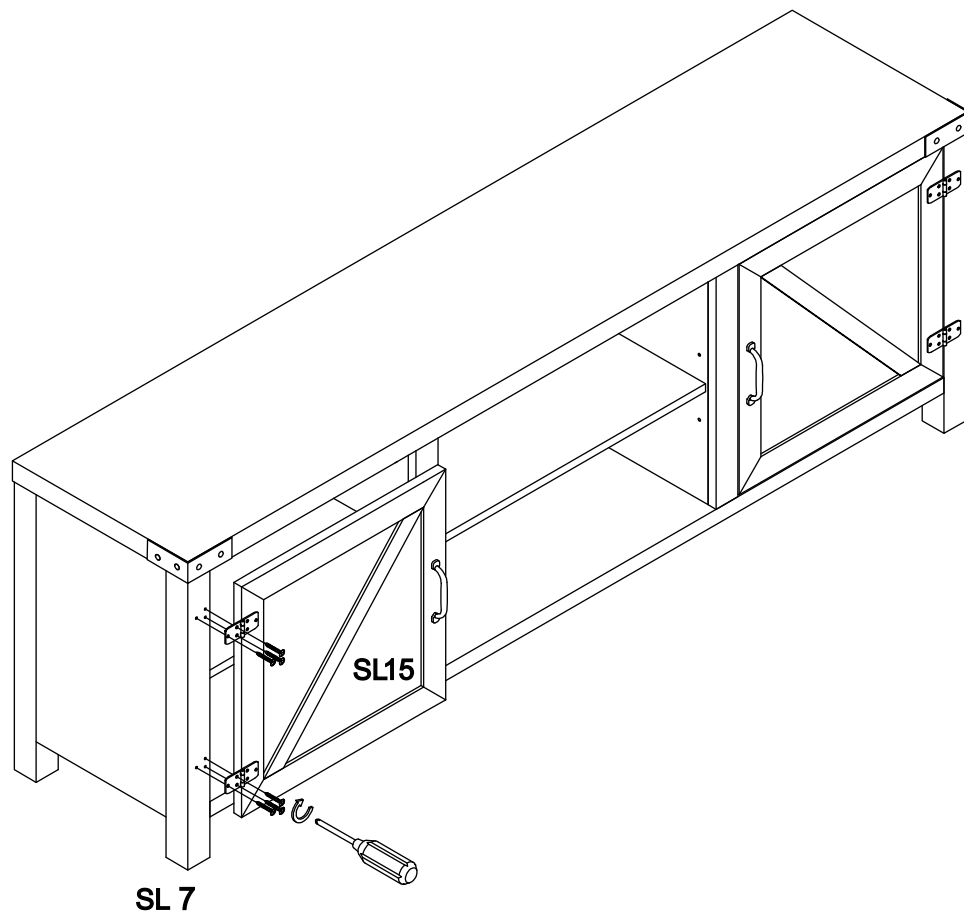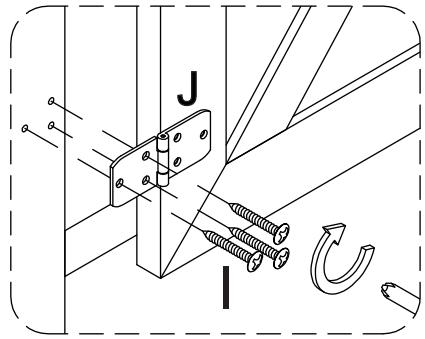

Using screw (I) with screw driver secure the hinge and door and secure it door (SL15).

Step 20

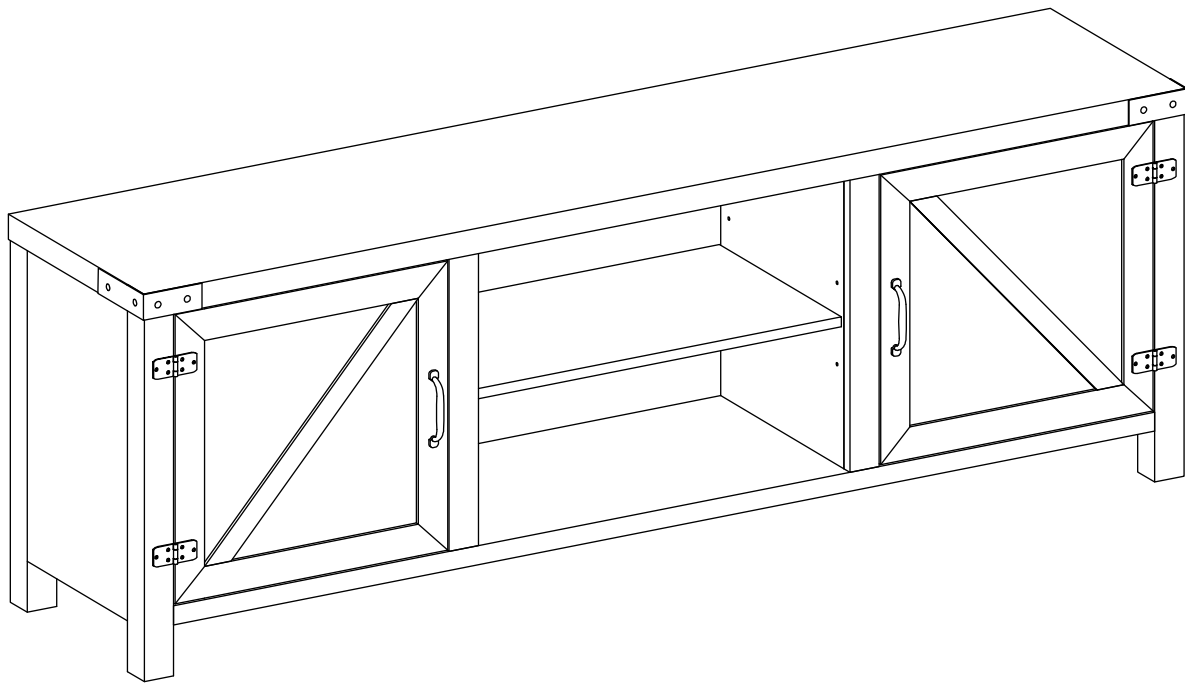

Final Assembly