




THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING TRANSIT.

## STEP 1

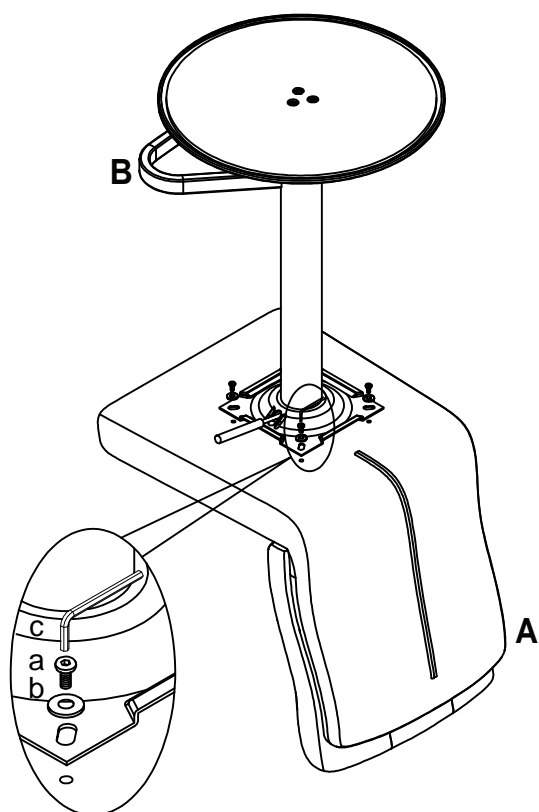


## PART LIST

NO	DESC	SIZE (MM)	SKETCH	QTY
A	UPHOLSTERY	555 X440 X440		1 PC
B	BASE	450 X450 X740		1 PC

## HARDWARE LIST


NO	DESC	SIZE (MM)	SKETCH	QTY
a	SCREW	M6X16		4PCS
b	SPRING WASHER	$\phi 16 \times \phi 6.1 \times 1.6$		4PCS
c	WRENCH	M4		1 PC

## STEP 2

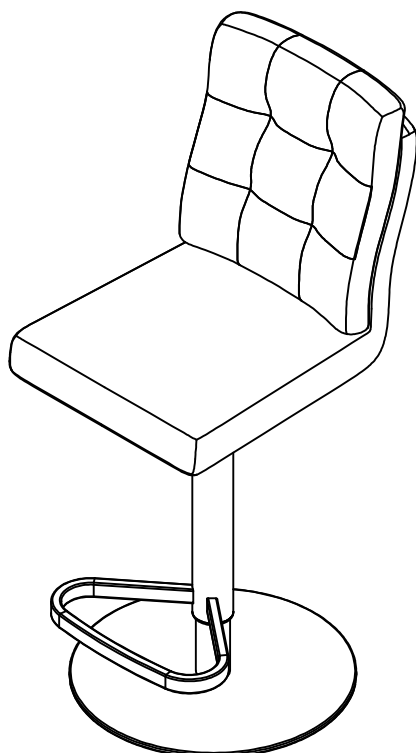



**STEP 3**

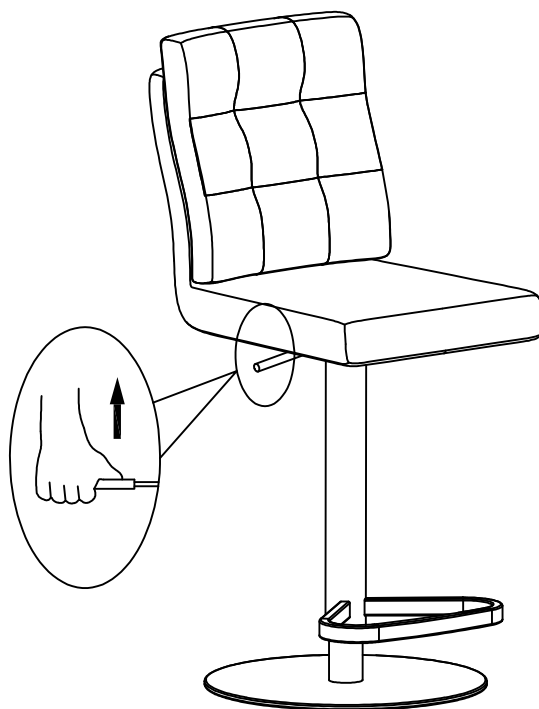

**FINISHED**

