


ASSEMBLY INSTRUCTION ITEM NO.:7288-CCH-BLK


THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE.

THE CARTON DURING TRANSIT.

STEP 1

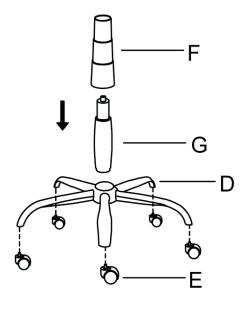

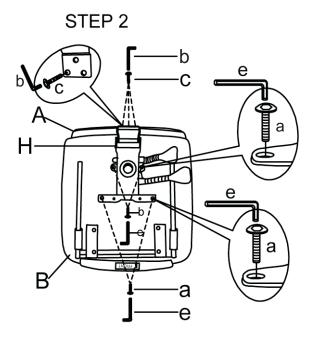

PART LIST

NO	DESC	SIZE (MM)	SKETCH	QTY
A	BACK	790X530 X120		1 PC
В	SEAT	560X530 X125		1 SET
	ARMREST	370X215 X115		
С	ARMREST	460X295 X75		1 SET
D	STARBASE	R350X100		1 PC
E	CASTORS	80X60 X55		5 PCS
F	GASLIFT COVER	R30XL100		1 PC
G	GASLIFT	R25XL260		1 PC
н	SWIVEL TRAY	350X285 X115		1 PC

HARDWARE LIST

NO	DESC	SIZE (MM)	SKETCH	QTY
а	SCREW	M6X20	<u> </u>	4 PCS
b	SPANNER	M8		1 PCS
С	SCREW	M8X25	<u>()</u>	3 PCS
d	SCREW	M8X45	<u> </u>	4 PCS
е	SPANNER	M6		1 PC
f	SCREW COVER	R9X8	()	4 PCS

MADE IN CHINA

 $\overline{1/2}$



ASSEMBLY INSTRUCTION ITEM NO.: 7288-CCH-BLK

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE. THE CARTON DURING TRANSIT. STEP 3 STEP 4 STEP 6 STEP 5

MADE IN CHINA