



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

STEP 1

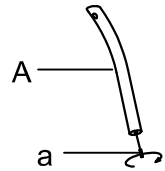


Screw bolt "a" into the pipe,
But not too tight

STEP 2

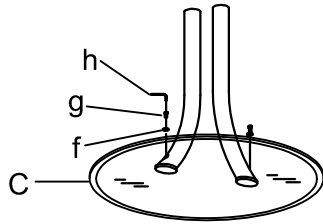


Use allen wrench "h" assembly screw "g",
Then tighten all the screws.

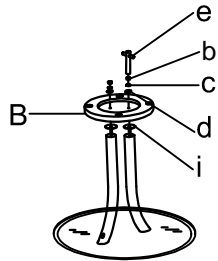


STEP 2

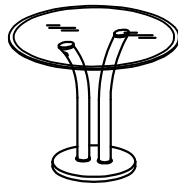










FINISHED



PARTS LIST :

NO	DESCRIPTION	SKETCH	QTY
A	pipe		2PCS
B	base		1PC
C	top glass		1PC

HARDWARE LIST :

NO	DESCRIPTION	SKETCH	QTY
a	BOLT	 M10*50	2PCS
b	WASHER	 $\phi 10 \times 1.6$	2PCS
c	WASHER	 M10	2PCS
d	NUT	 M10	2PCS
e	WRENCH	 M10	1PC
f	WASHER	 M8	2PCS
g	SCREW	 $\phi 2$	2PCS
h	ALLEN WRENCH	 5mm	1PC
i	METAL COVER	 $\phi 10$	2PCS