


## THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE

THE CARTON DURING TRANSIT.

## STEP 1

Place the seat on a soft cloth, then screwed the seat on the acrylic frame

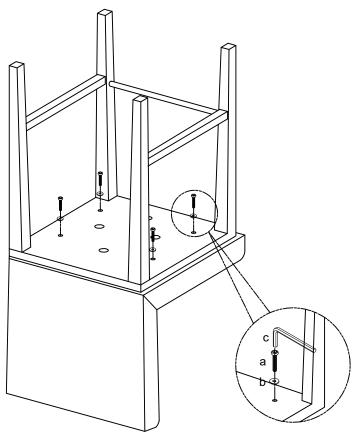



NO	DESC	SIZE (MM)	SKETCH	QTY
A	Seat	D430xH680mm		1 PC
В	Acrylic frame	480x420x610		1 PC

## HARDWARE LIST

NO	DESC	SIZE (MM)	SKETCH	QTY
а	Bolt	6x31.7mm		4PCS
b	Flat Washer	6x13mm		4PCS
с	Allen Key	4mm		1PC

FINISHED

