




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

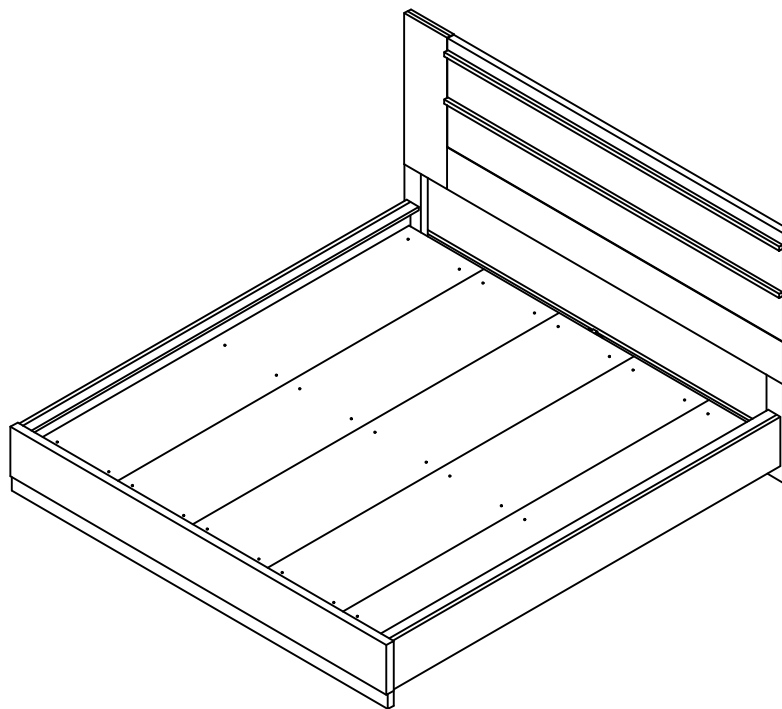

Fine Furniture for every stage of life

224281KW(B1-B3) **California King Bed**

ITEM: 224281KW(B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

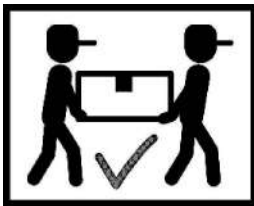


ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1(BOX 1)

- A HEADBOARD PANEL
- B LEFT HEADBOARD LEG
- C RIGHT HEADBOARD LEG
- D HEADBOARD BOTTOM RAIL

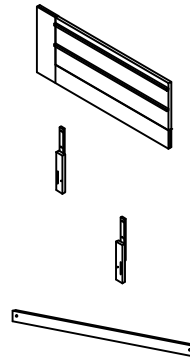

1PC


1PC

1PC

1PC

B2(BOX 2)

- E FOOTBOARD
- F ROLL SLAT (10PCS)

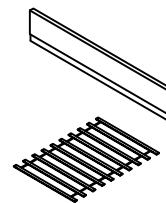


1PC

1SET

B3(BOX 3)

- G BED RAIL
- H CENTER RAIL
- I CENTER RAIL SUPPORT WITH LEVELER
- J CONCEAL PANEL
- K RAIL TOP

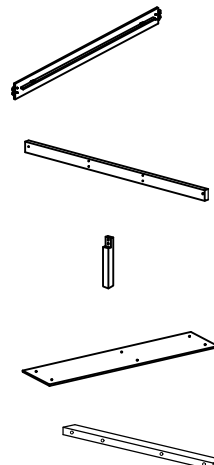

2PCS

1PC

2PCS

5PCS

2PCS

ITEM: 224281KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HB 224281KW(B1)
FROM BOX 1
HEADBOARD COMPLETE

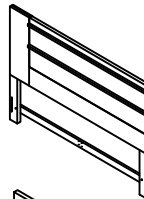

1PC

E 224281KW(B2)
FROM BOX 2
FOOTBOARD



1PC

HARDWARE IDENTIFICATION

Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 224281KW(B3)

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT WITH WASHER (M6 x 50mm - BLK)		16PCS
3	PAN HEAD SCREW (M4 x 12mm - BLK)		30PCS
4	SHORT FLAT HEAD SCREW (M4 x 20mm - BLK)		8PCS
5	LONG FLAT HEAD SCREW (#8 x 1 1/8" - BLK)		20PCS
6	HEX NUT (M6 - RBW)		2PCS
7	U BRACKET (26 x 63 x 70mm - RBW)		2PCS
8	WRENCH (2 x 24.5 x 85mm - RBW)		1PC
9	WOOD DOWEL (M8 x 30mm)		8PCS
10	LONG BOLT WITH WASHER (M6 x 60mm - BLK)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224281KW(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 1

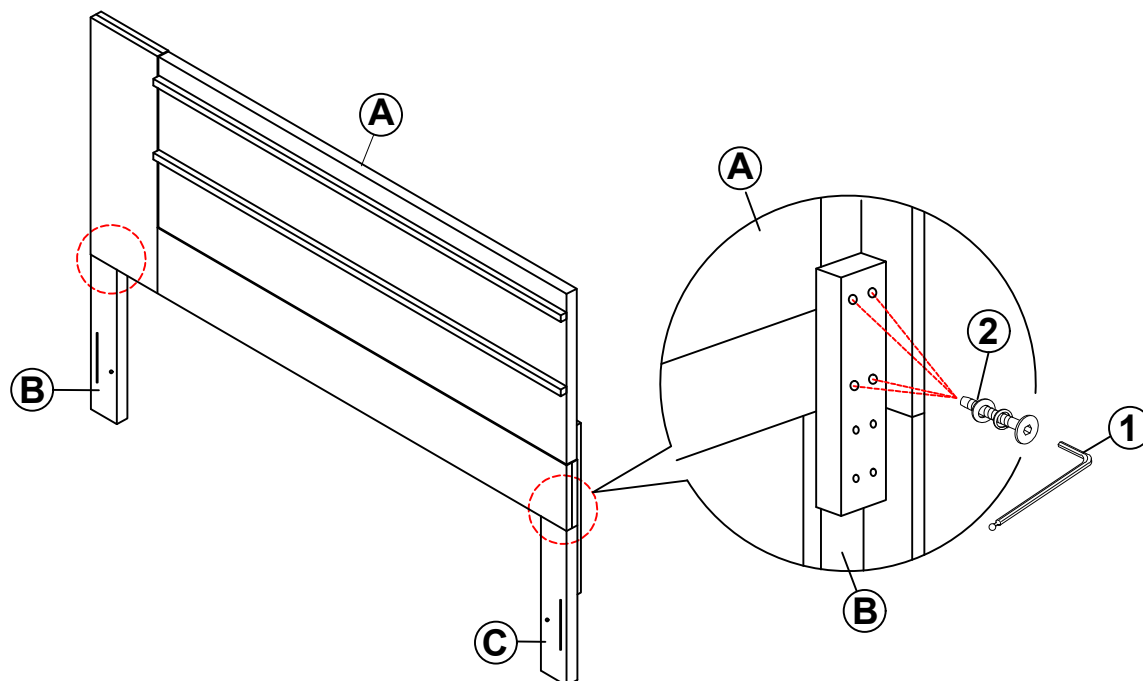

STEP 2

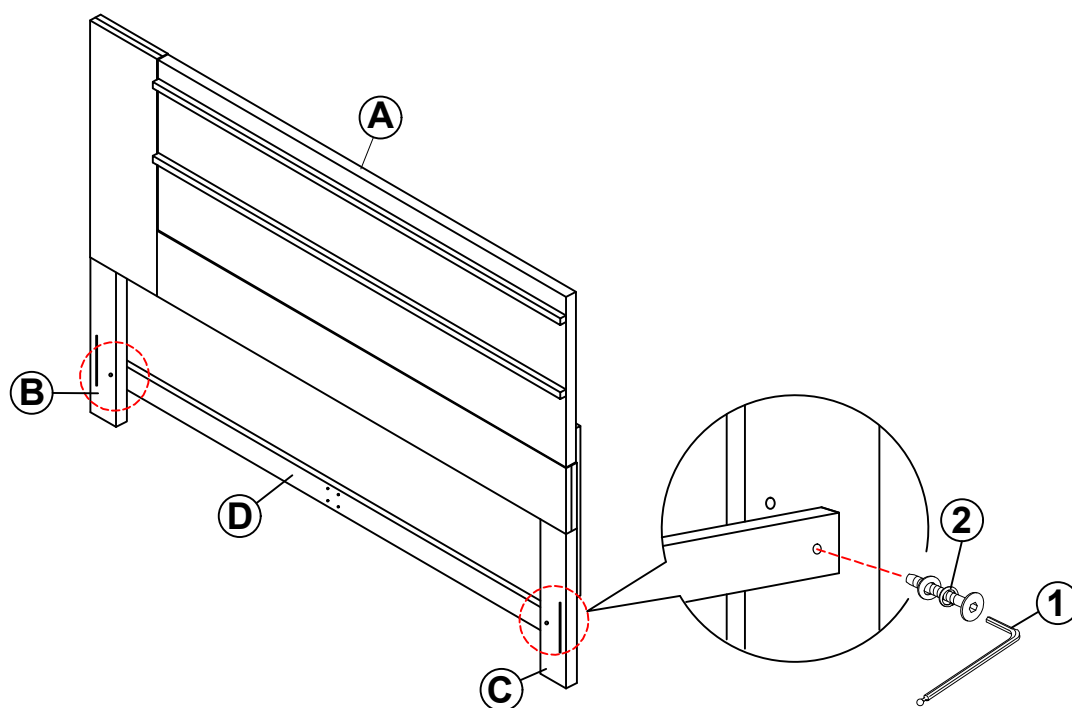


ITEM: **224281KW(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 3

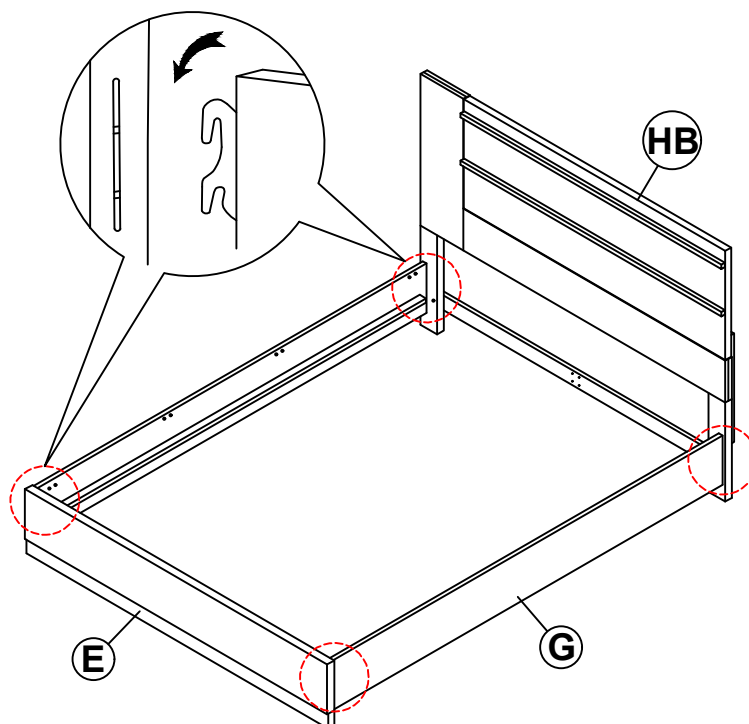

STEP 4

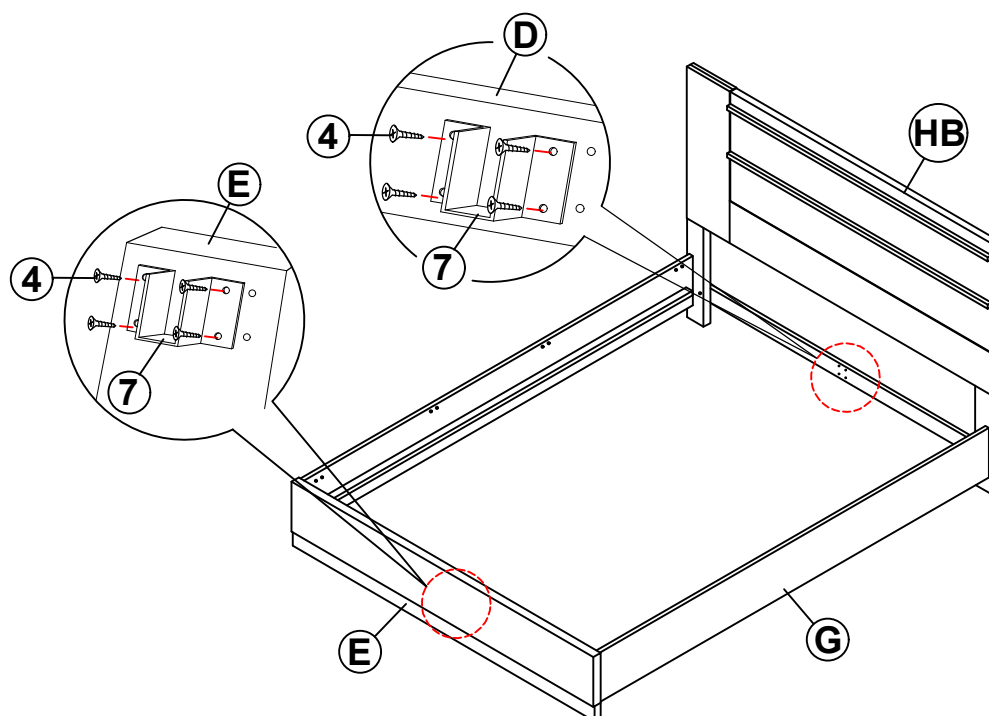


ITEM: **224281KW(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 5

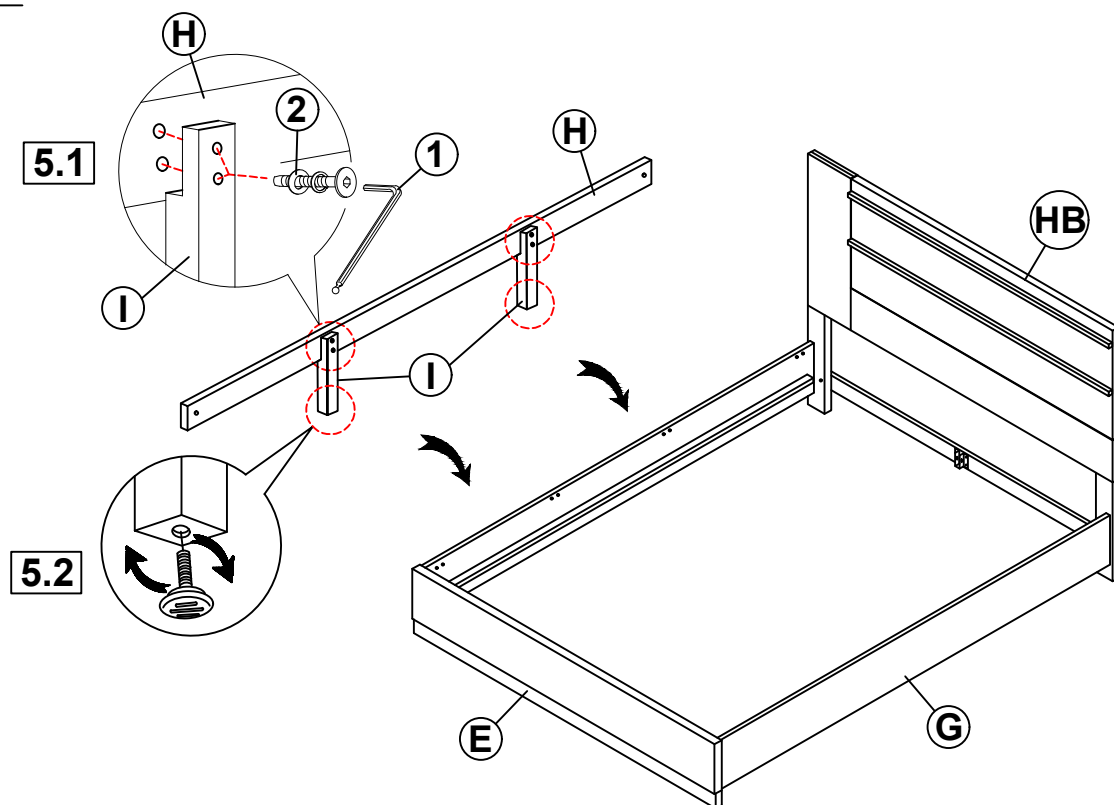

STEP 6

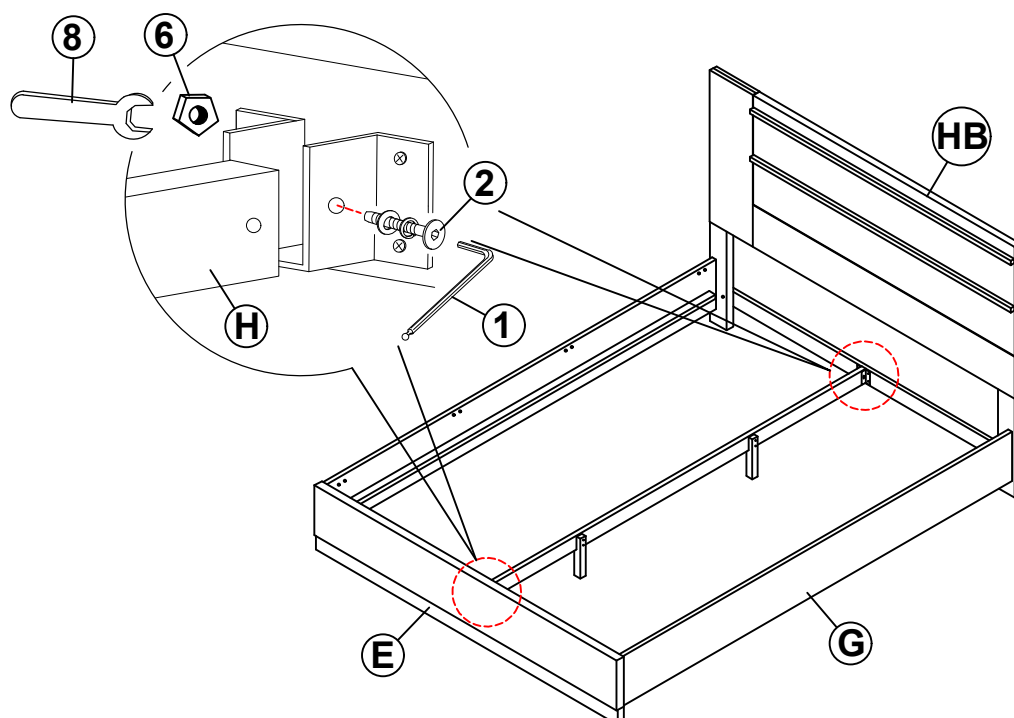


ITEM: **224281KW(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 7

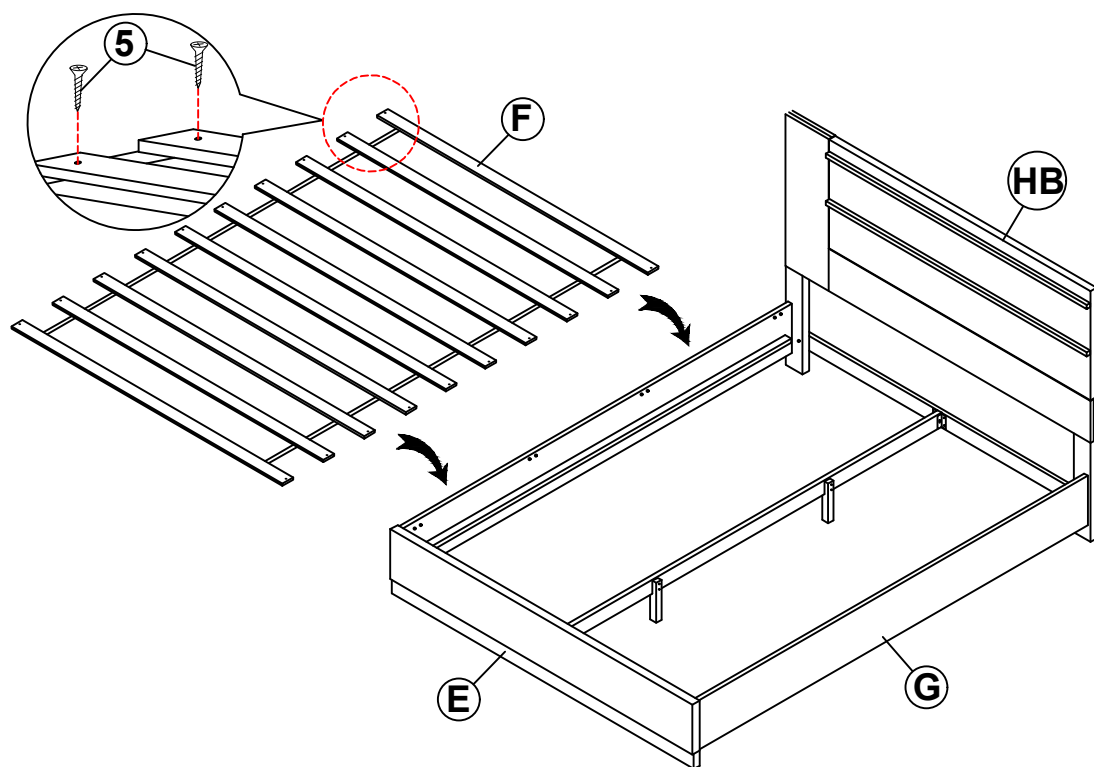

STEP 8

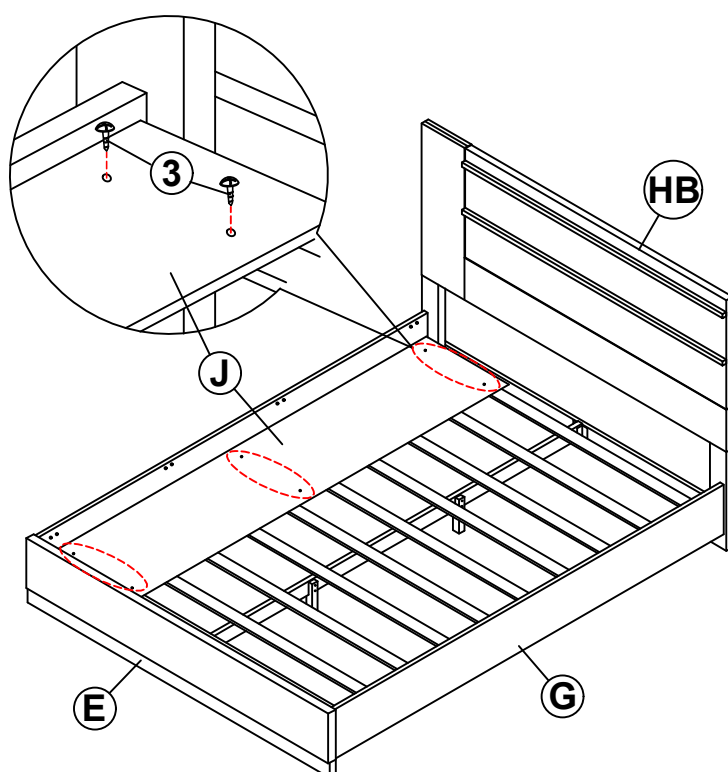


ITEM: **224281KW(B1-B3)**





ASSEMBLY INSTRUCTIONS

STEP 9

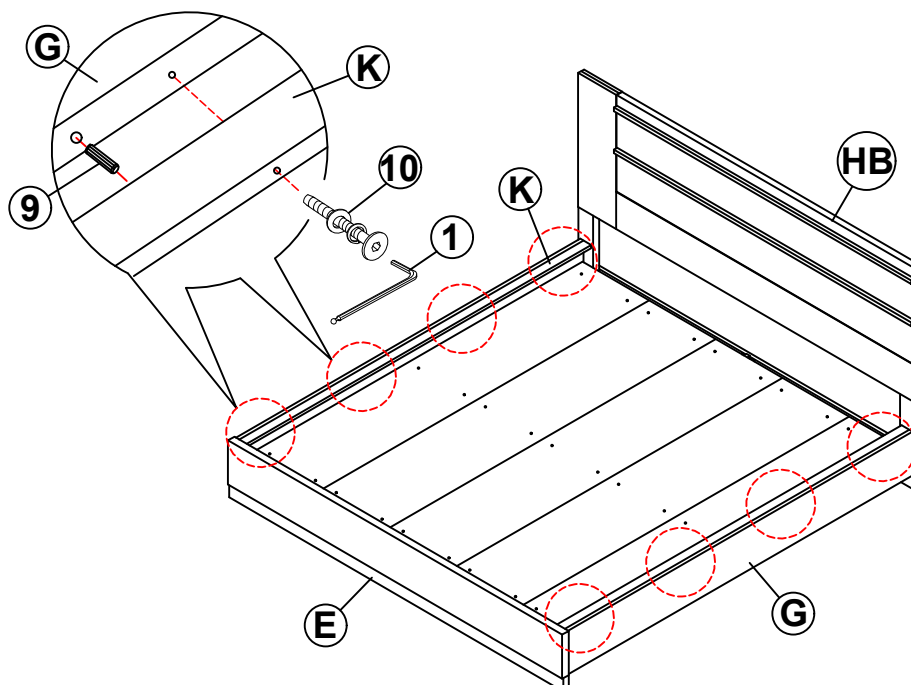


STEP 10 **COMPLETE**

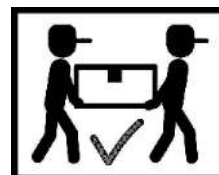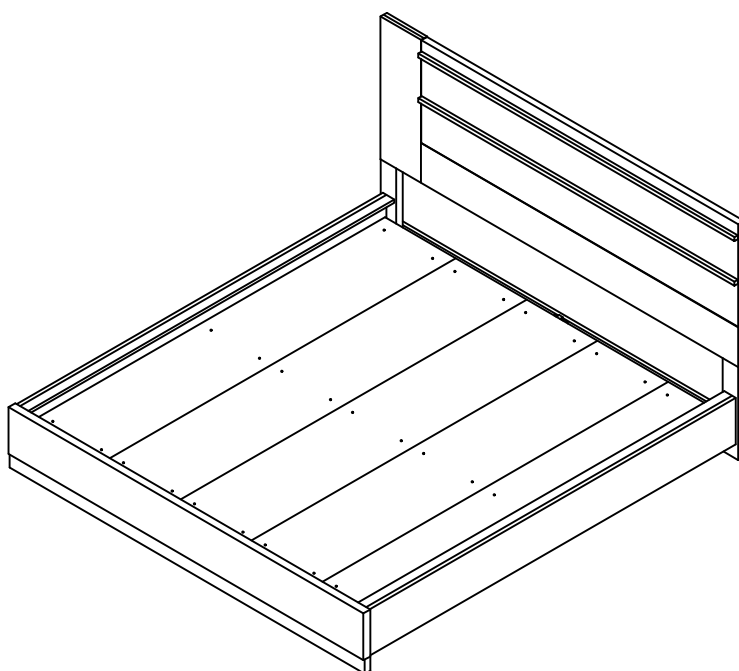

ITEM: **224281KW(B1-B3)**



Inner Size : 73.25"W x 85.00"D

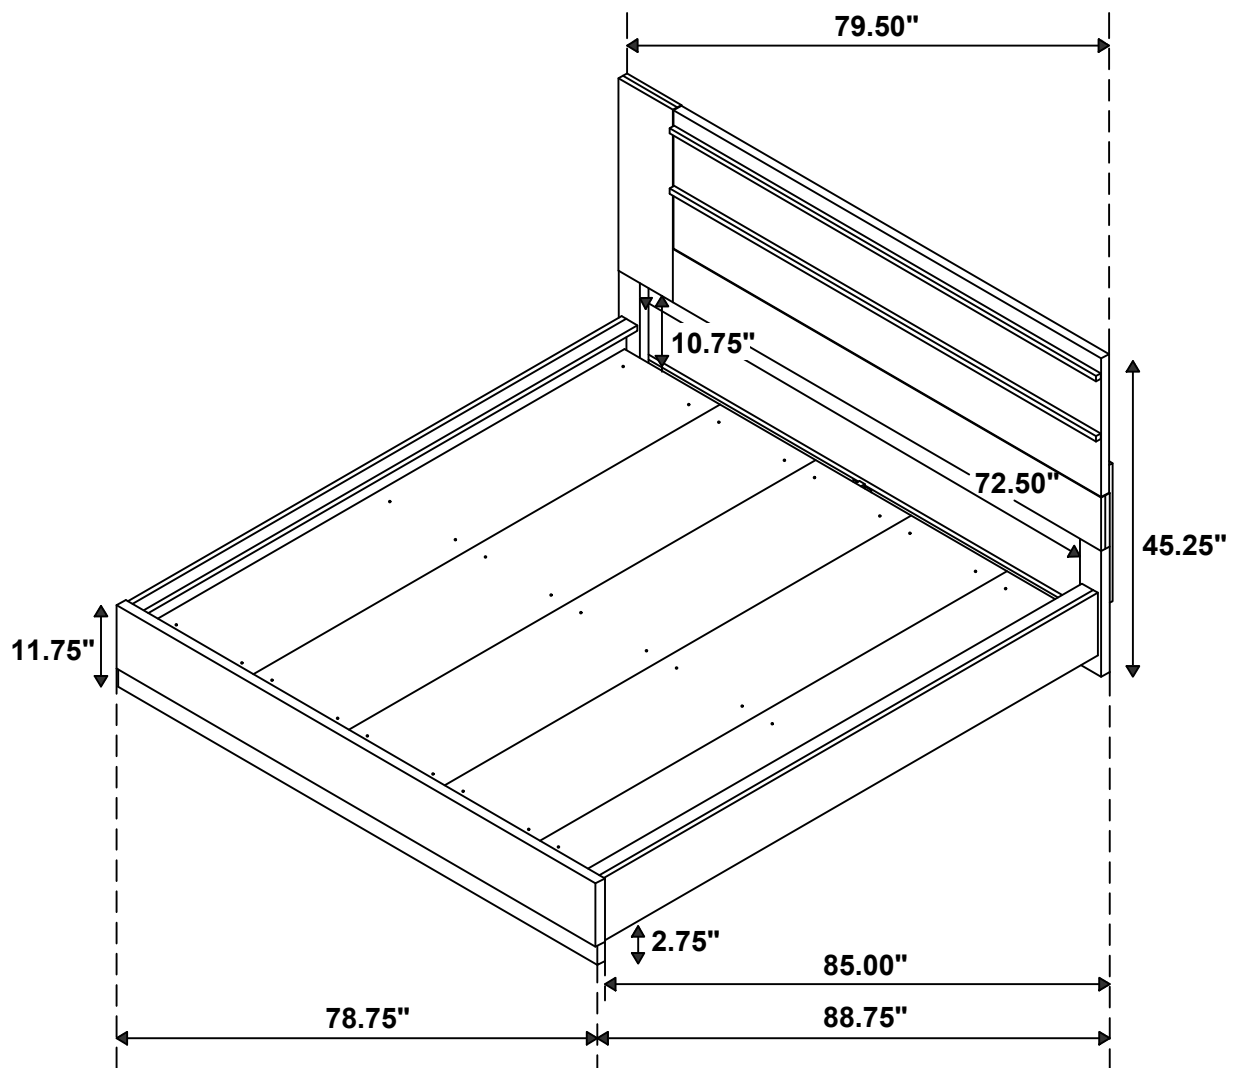

Note: Dimension tolerance $\pm 5\%$