

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223121Q (B1&B2)
Queen Bed

ITEM: 223121Q (B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL

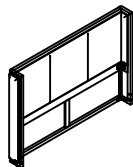

1PC

B FOOTBOARD PANEL



1PC

C LEG



4PCS

B2 (BOX 2)

D BED RAIL



2PCS

E BED SLAT



4PCS


F BED SLAT SUPPORT
WITH LEVELER



4PCS

HB


223121Q (B1)
*FROM BOX 1
HEADBOARD
COMPLETE

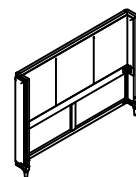

1PC

FB

223121Q (B1)
*FROM BOX 1
FOOTBOARD
COMPLETE



1PC

ITEM: 223121Q (B1&B2)

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.





WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223121Q (B2)

1	THREADED BOLT (M8 x 100mm - RBW)		8PCS
2	HEX NUT (M8 x 15mm - RBW)		8PCS
3	WRENCH (M13 - SR)		1PC
4	PAN HEAD SCREW (4 x 32mm - SR)		8PCS

NOTE:



Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223121Q (B1&B2)



ASSEMBLY INSTRUCTIONS

223121Q (B1) - BOX 1

STEP 1

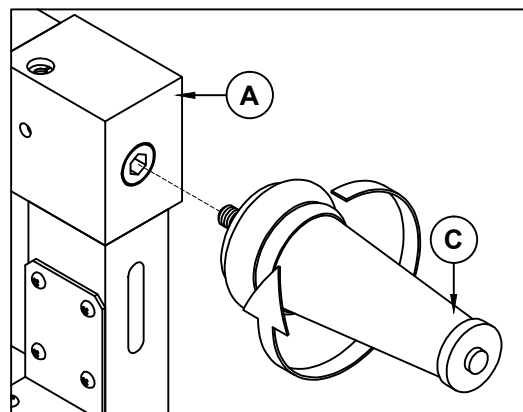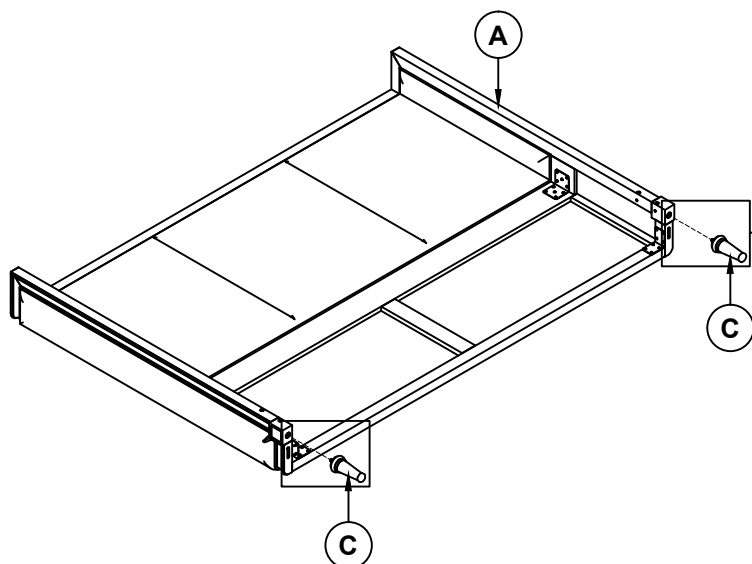

STEP 2

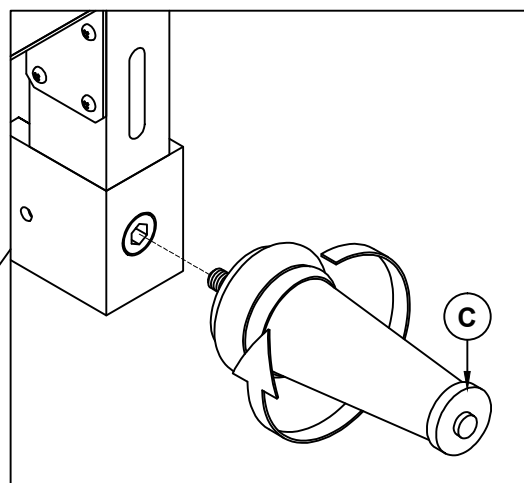
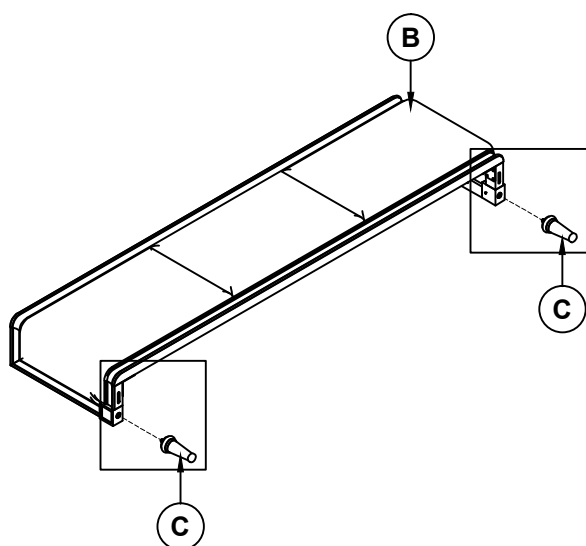


ITEM: 223121Q (B1&B2)


ASSEMBLY INSTRUCTIONS

223121Q (B1&B2) - BOX 1 & BOX 2

STEP 3

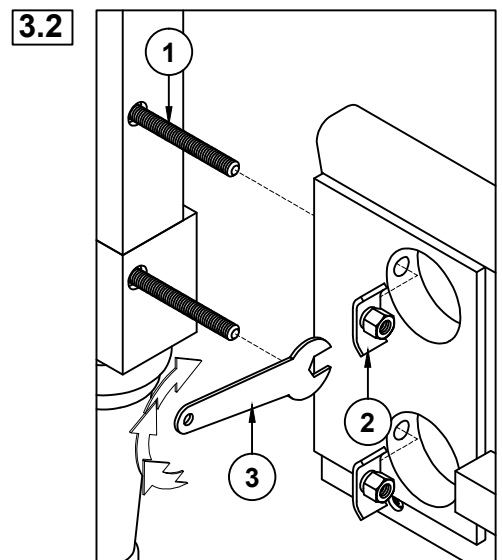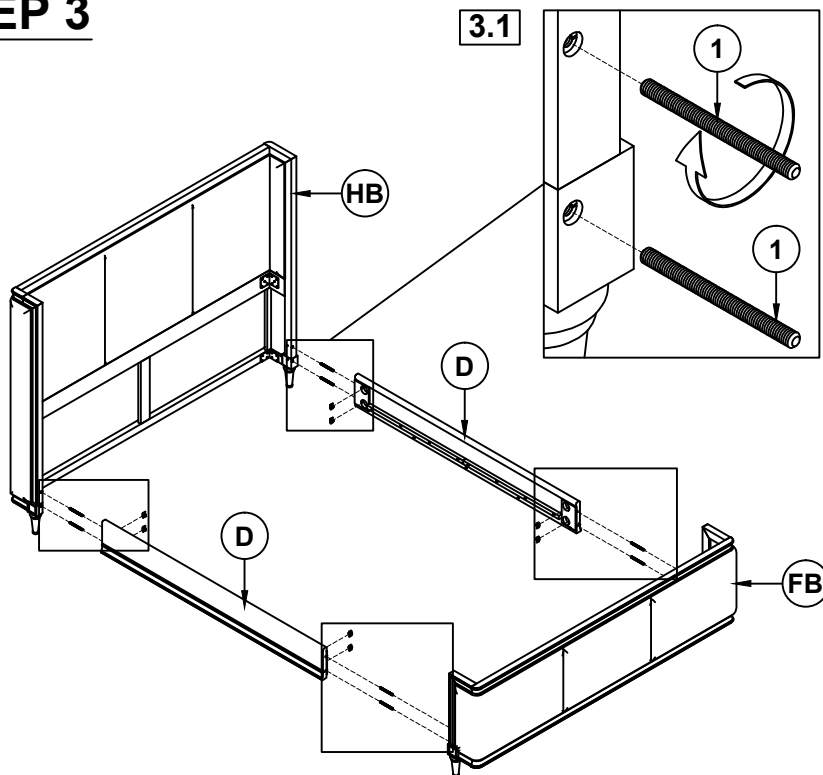



STEP 4

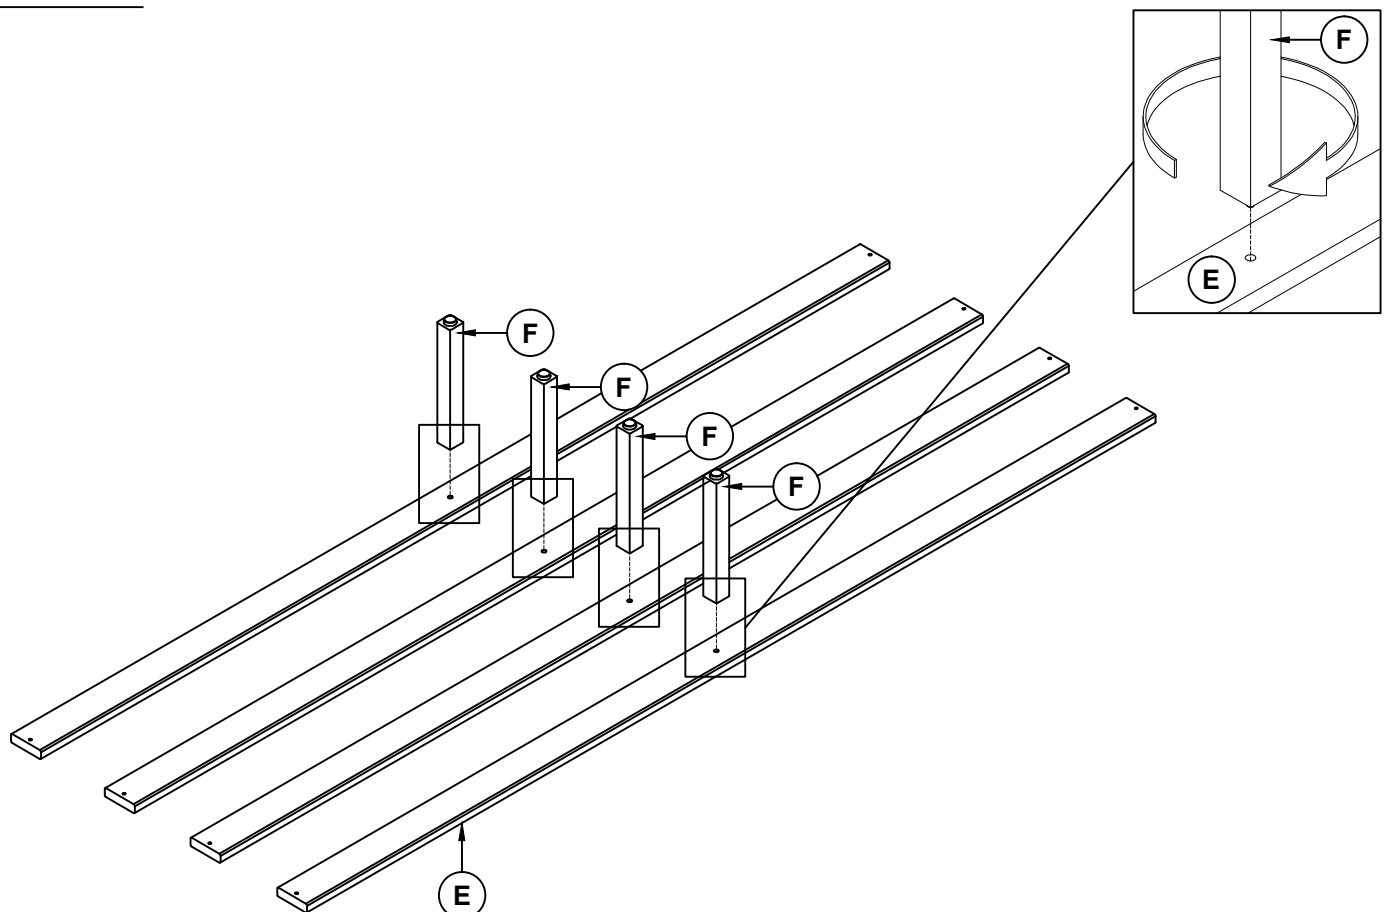


ITEM: 223121Q (B1&B2)

ASSEMBLY INSTRUCTIONS

STEP 5

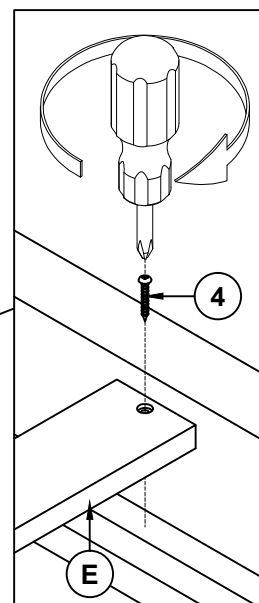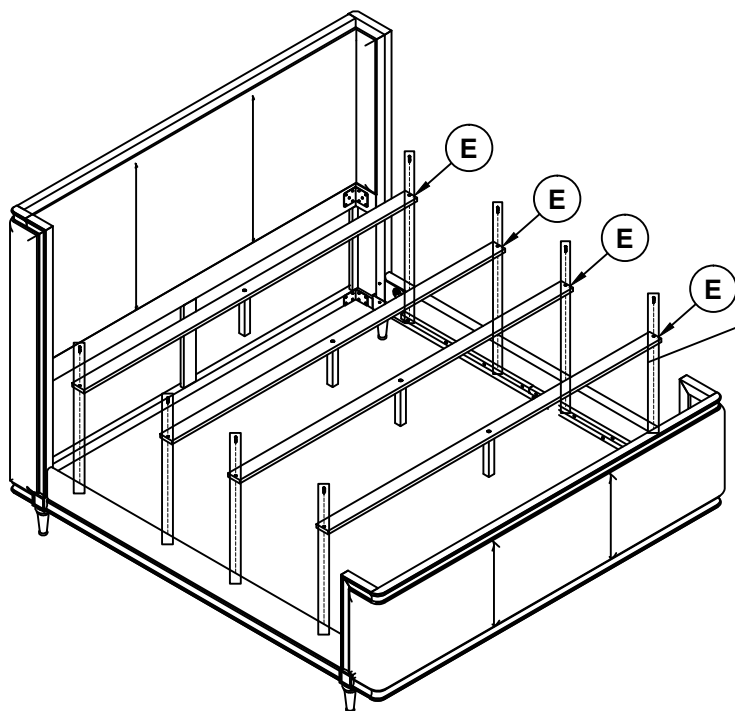


STEP 6 COMPLETE

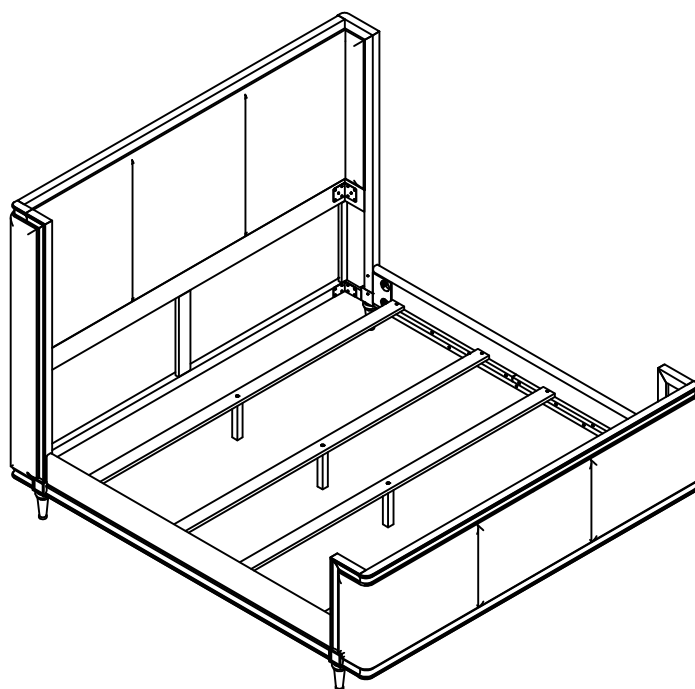

ITEM: **223121Q (B1&B2)**

Inner Size : 61.00"W X 81.00"D

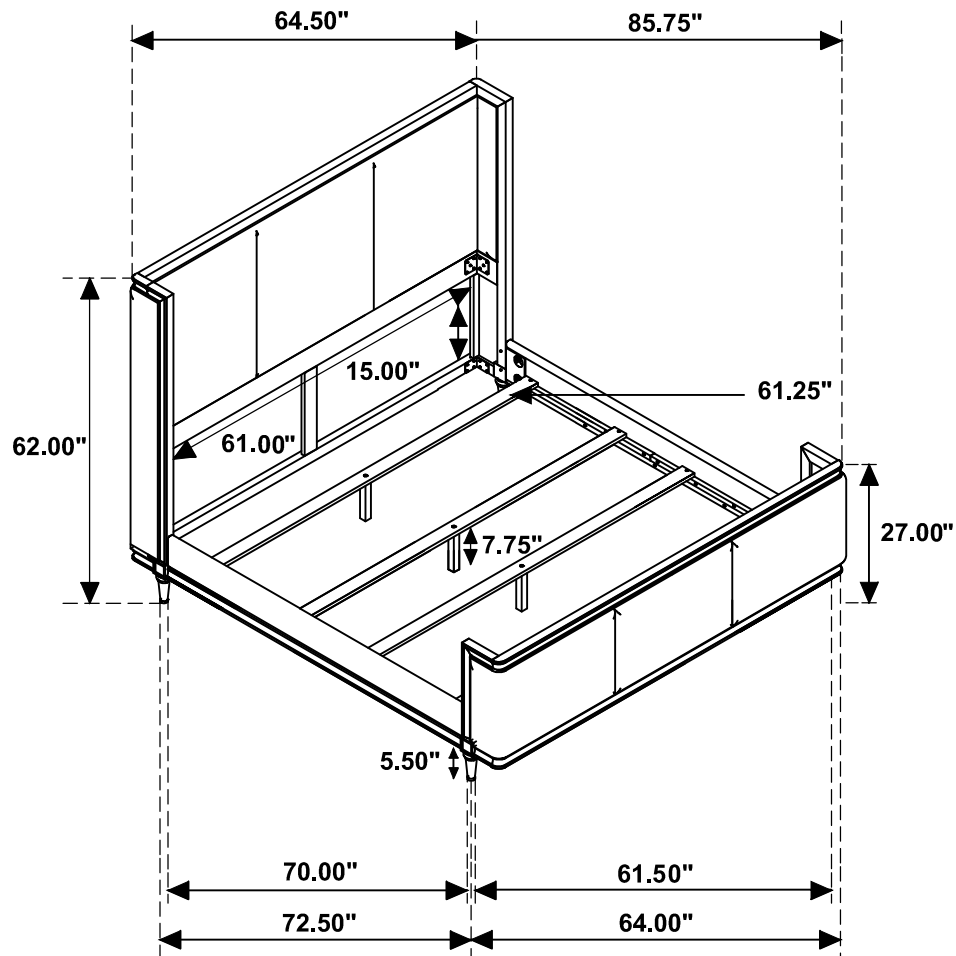

Note : Dimension tolerance $\pm 5\%$