


SEQUENZE DI MONTAGGIO

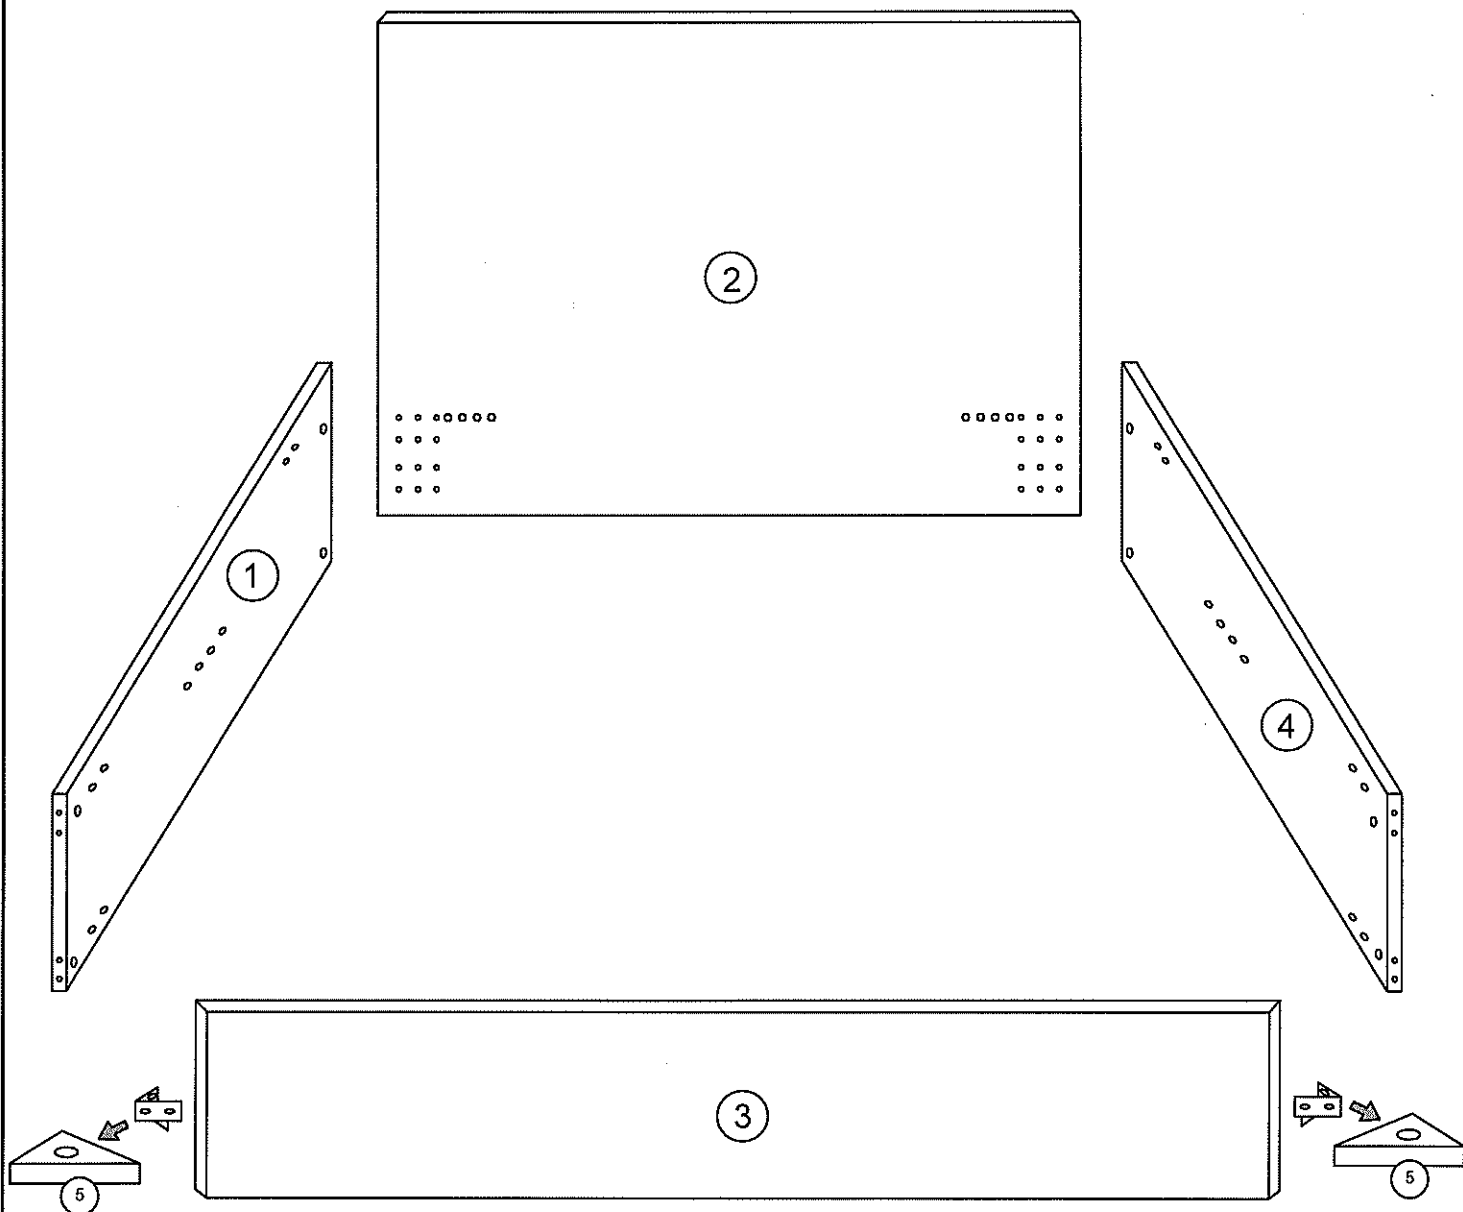


① Fascioni sinistro  
Long pan droit  
Bed side right

② Testiera letto  
Tet du lit  
Bed head






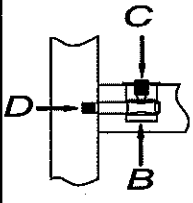
③ Pediera letto  
Pied du lit  
Bed food

④ Fascione destro  
Long pan gauche  
Bed side left

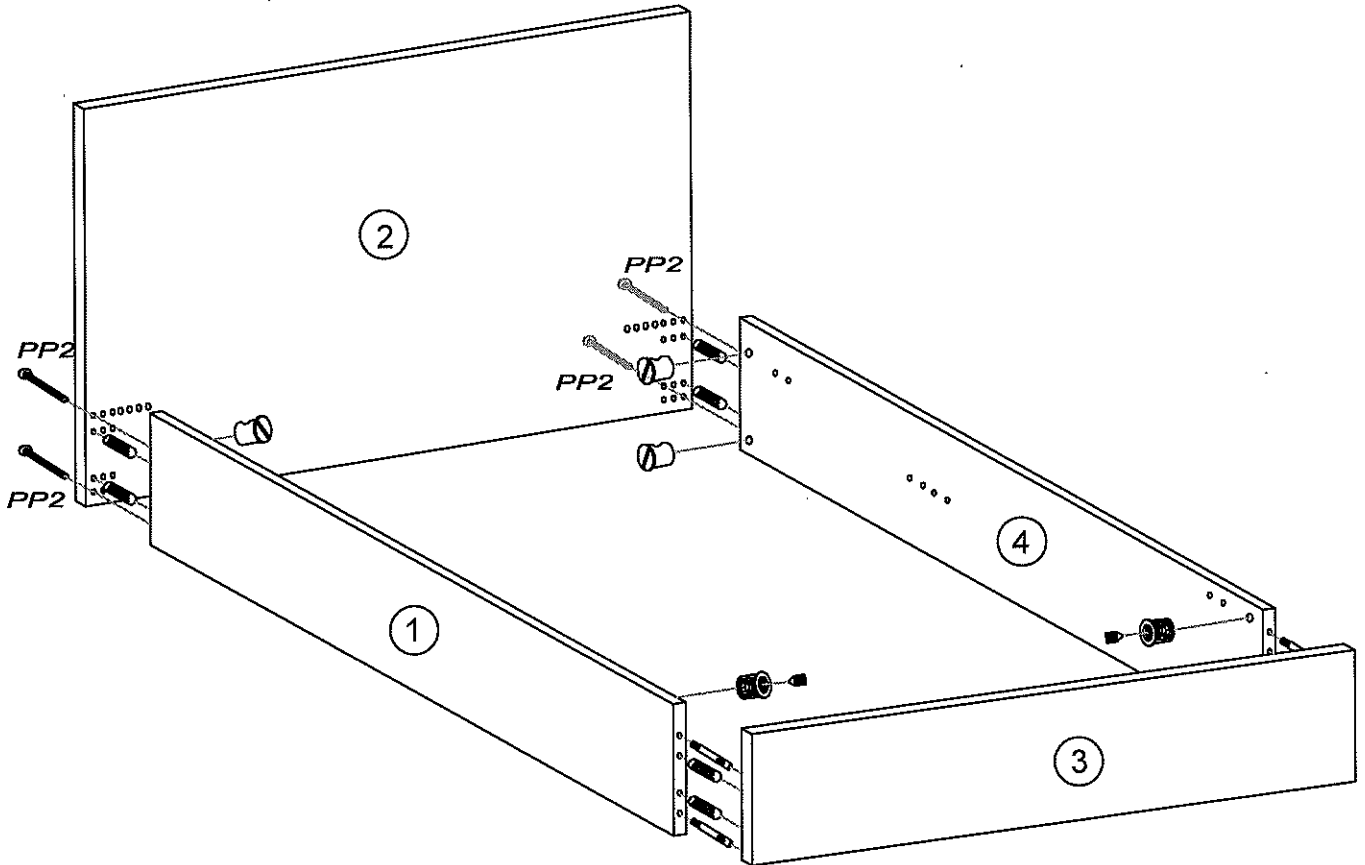⑤ Staffe  
Supports  
Bracket



Quincallerie Beschläge Hardware

 CC X 4	 DX 4	 BX 4	 CX 4	 AX 8	 Vite t6l 6max50 PP2 X 4		
---	---	---	---	---	--	--	--


MOD. OXFORD

LETTO OXFORD

NOTICE DE MONTAGE  
ASSEMBLING INSTRUCTIONS  
MANTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO

**NO STORAGE**

Pag. 3

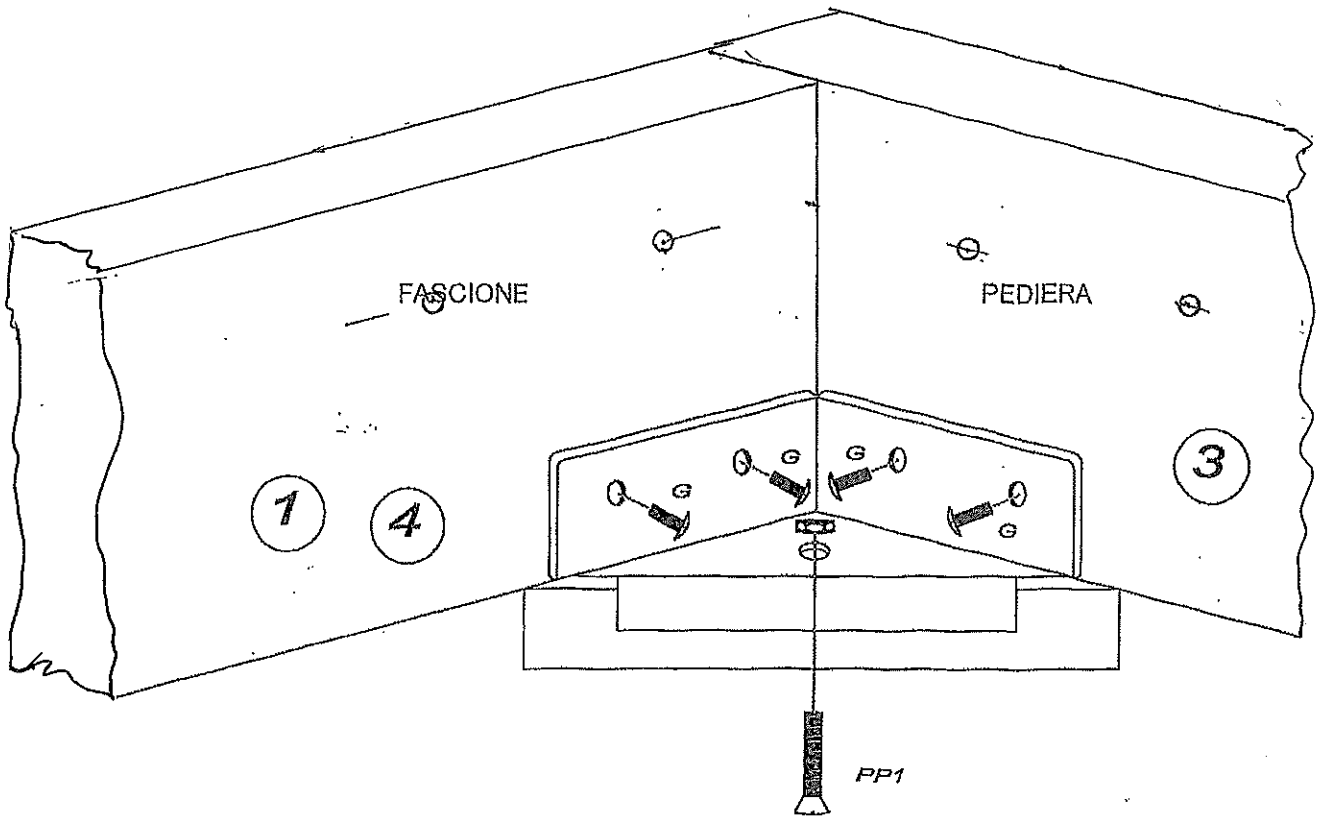

Quincaillerie Beschlage Hardware

G X 8




Vite tbi 8 MA x15


PP1 X 2



Vite tps 4 MA x25

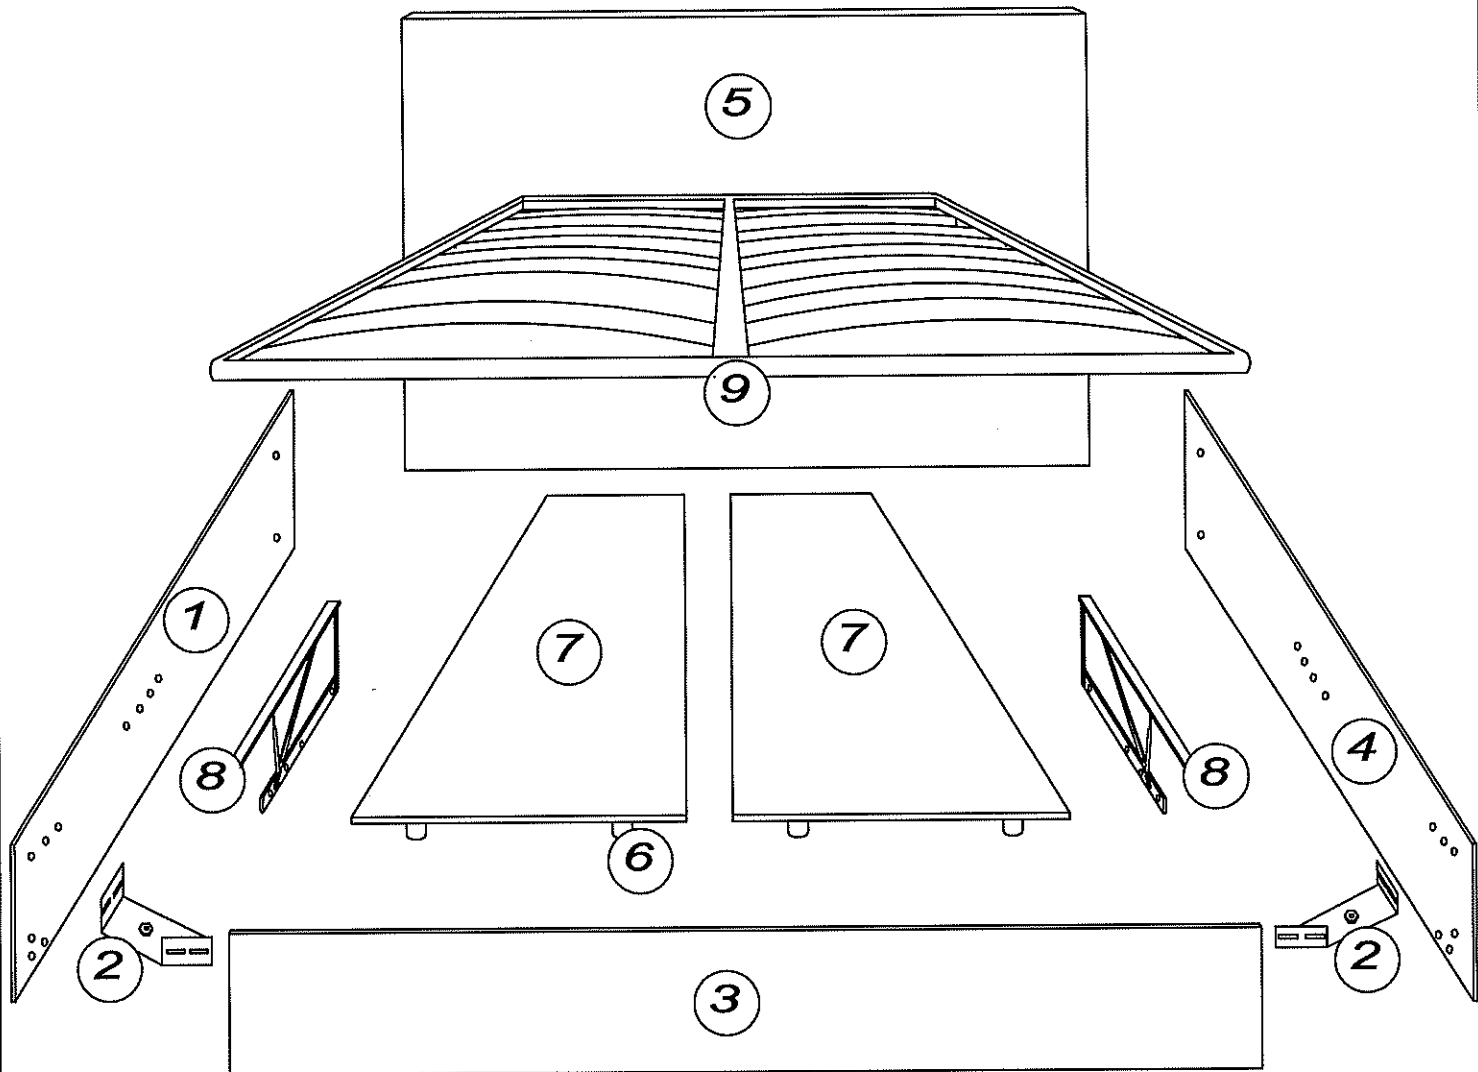

SUCCESSIONE DI MONTAGGIO  
 SEQUENCE DE MONTAGE  
 SEQUENCE OF ASSEMBLAGE



- |   |   |  |   |  |
|---|---|--|---|--|
| ① Fascioni sinistro<br>Long pan droit<br>Bed side right | ② Staffe<br>Supports<br>Bracket                     | ③ Pediera<br>Pied du lit<br>Foot Board                         | ④ Fascione destro<br>Long pan gauche<br>Bed side left | ⑤ Testiera letto<br>Tet du lit<br>Head board |
| ⑥ Piede<br>Pied<br>Foot                                 | ⑦ Pannello fondo<br>Panneau de fond<br>Botton panel | ⑧ Meccanismo alzata<br>Méccanisme haussement<br>Mechanism lift | ⑨ Rete<br>Sómmetere a lates<br>Wooden slats           |  |


MOD. OXFORD

# LETTO CONTENITORE









NOTICE DE MONTAGE  
ASSEMBLING INSTRUCTIONS  
MANTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO

## STORAGE BED

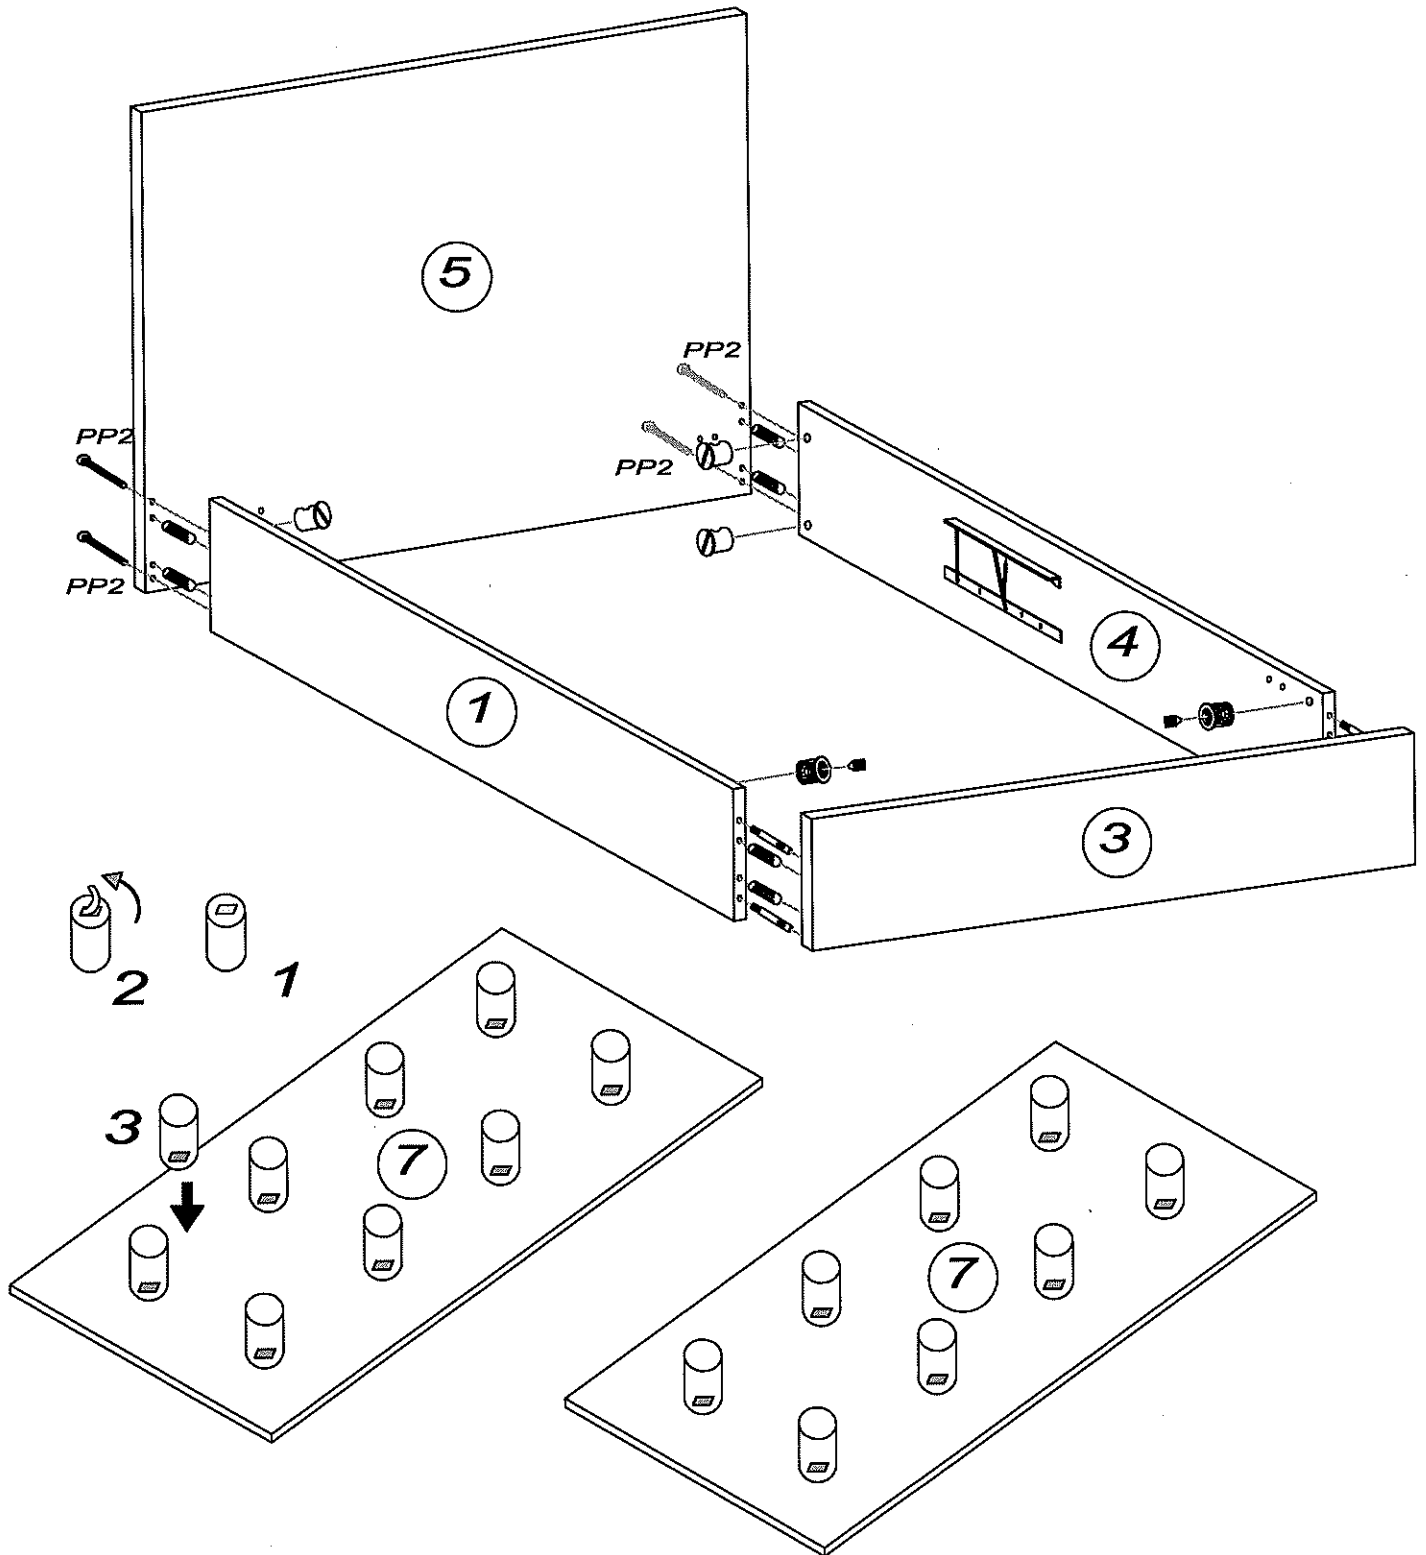Pag. 2



Quincallerie    Beschlage    Hardware

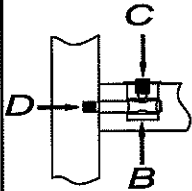
 CCX 4	 DX 4	 BX 4	 CX 4	 AX 8		 PP2 X 4	 PIEDI X 8	
--	---	---	---	---	--	--	--	--

MOD. OXFORD

# LETTO CONTENITORE

NOTICE DE MONTAGE  
ASSEMBLING INSTRUCTIONS  
MANTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO

STORAGE BED

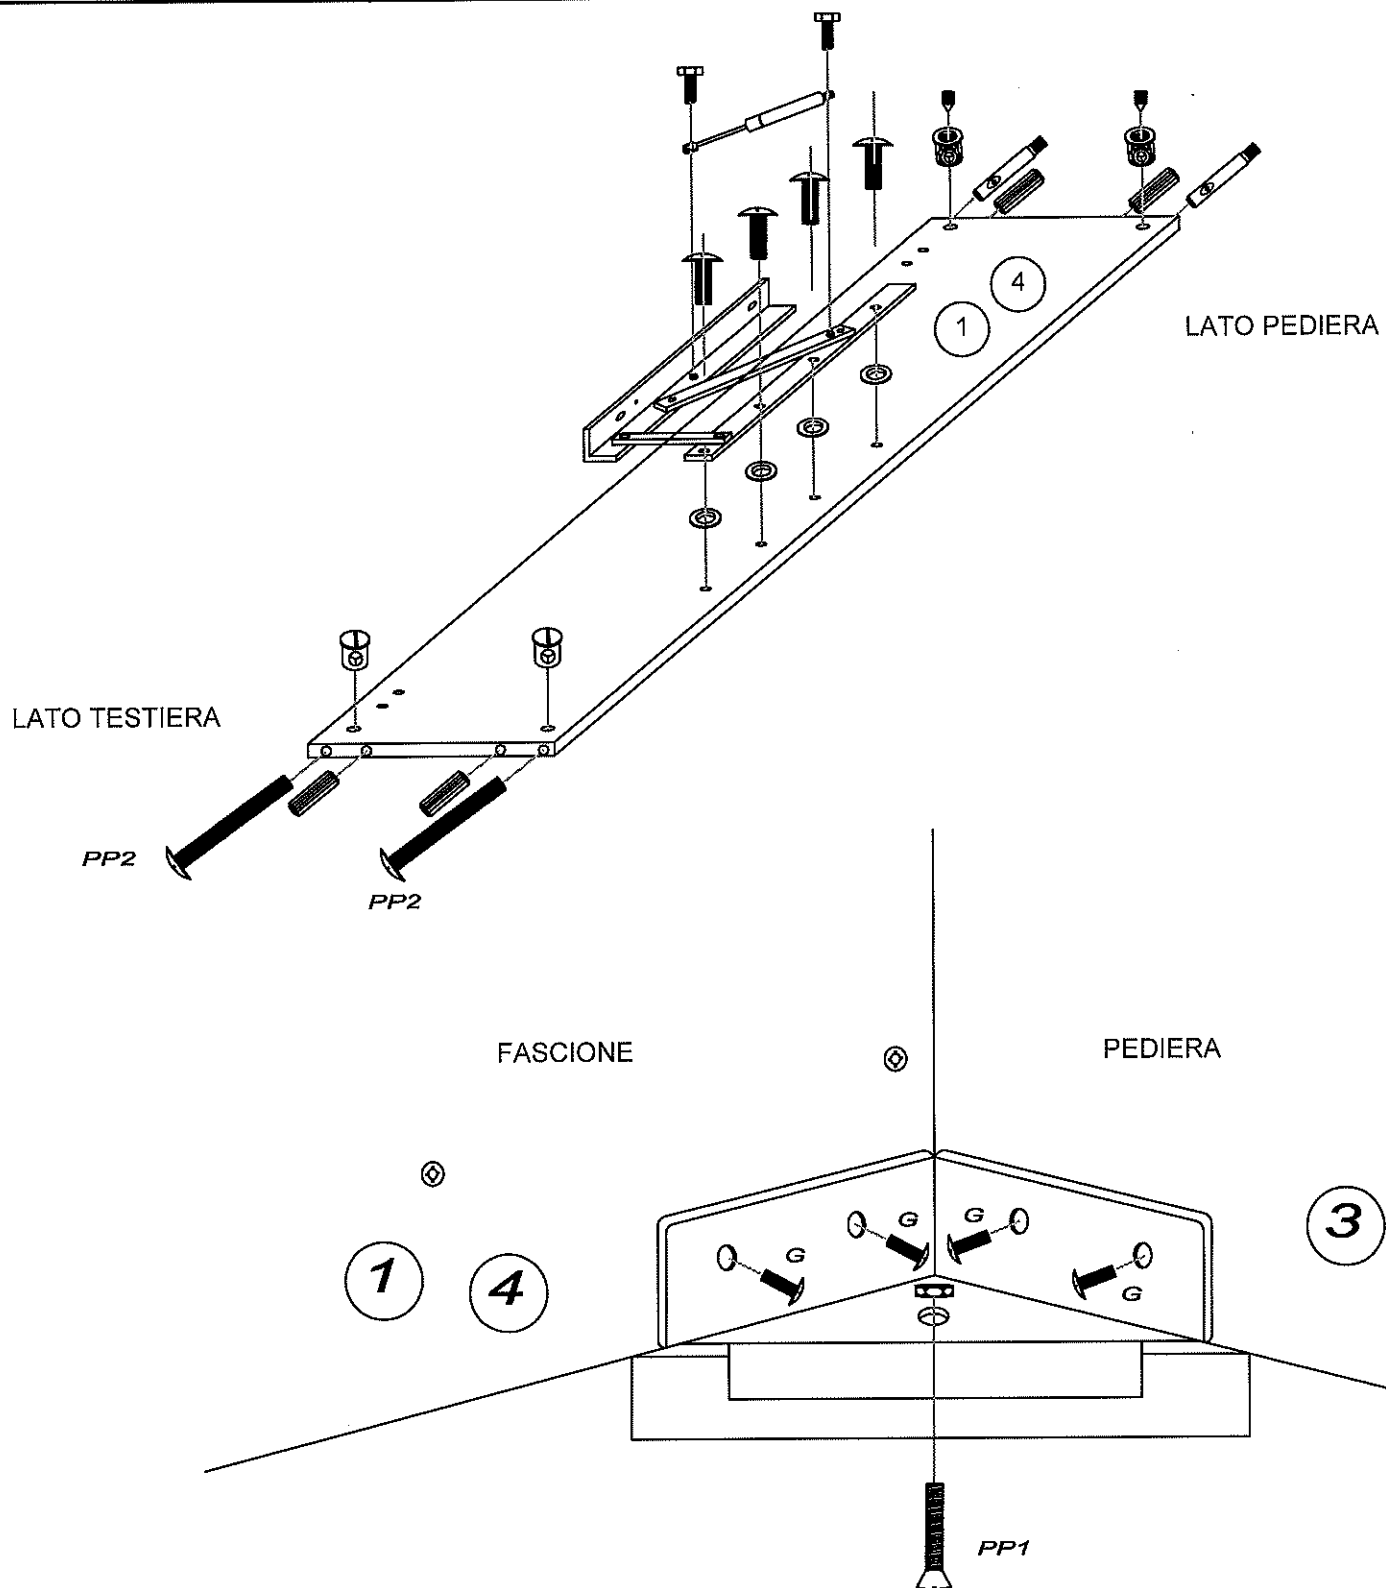

Quincallerie    Beschlage    Hardware

G X 8



Vite tbi 6 MA x 10



DX 2



BX 2



CX 2



AX 2

Vite tbi 6max50



PP2 X 2



CC X 2



RONDELLE X 8

PP1 X 2



Vite tps 4 MA x 25



MOD. OXFORD

# LETTO CONTENITORE

NOTICE DE MONTAGE  
ASSEMBLING INSTRUCTIONS  
MANTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO

STORAGE BED

Pag. 4

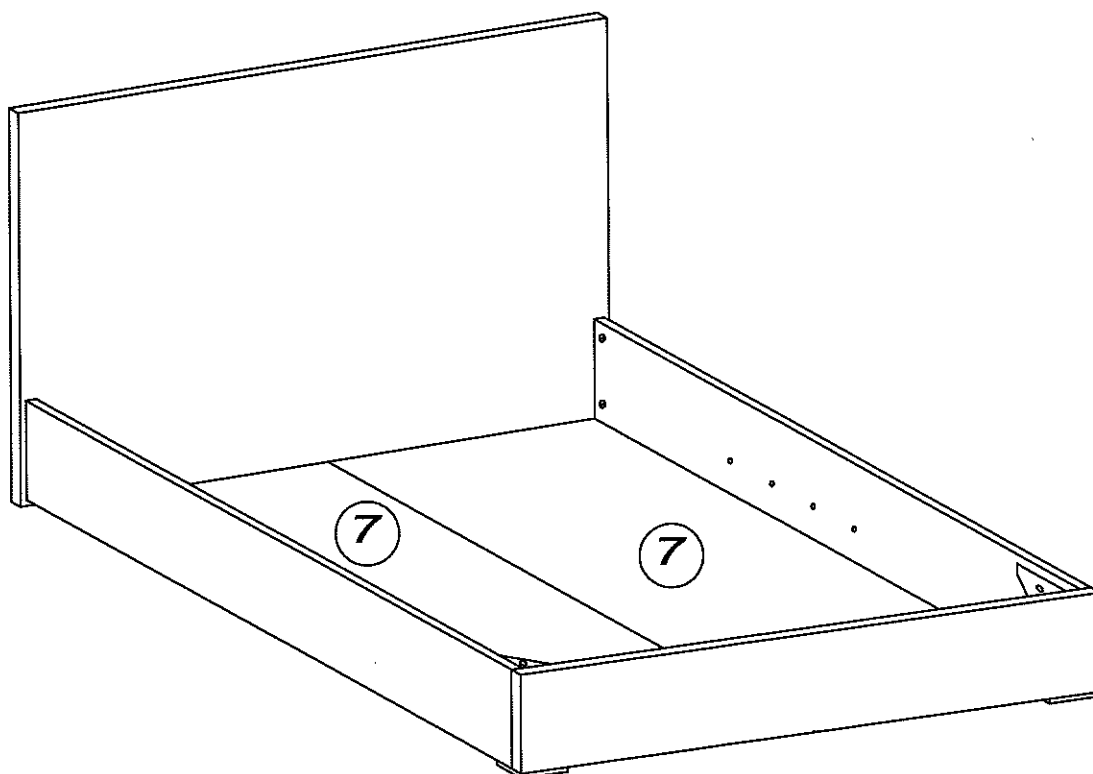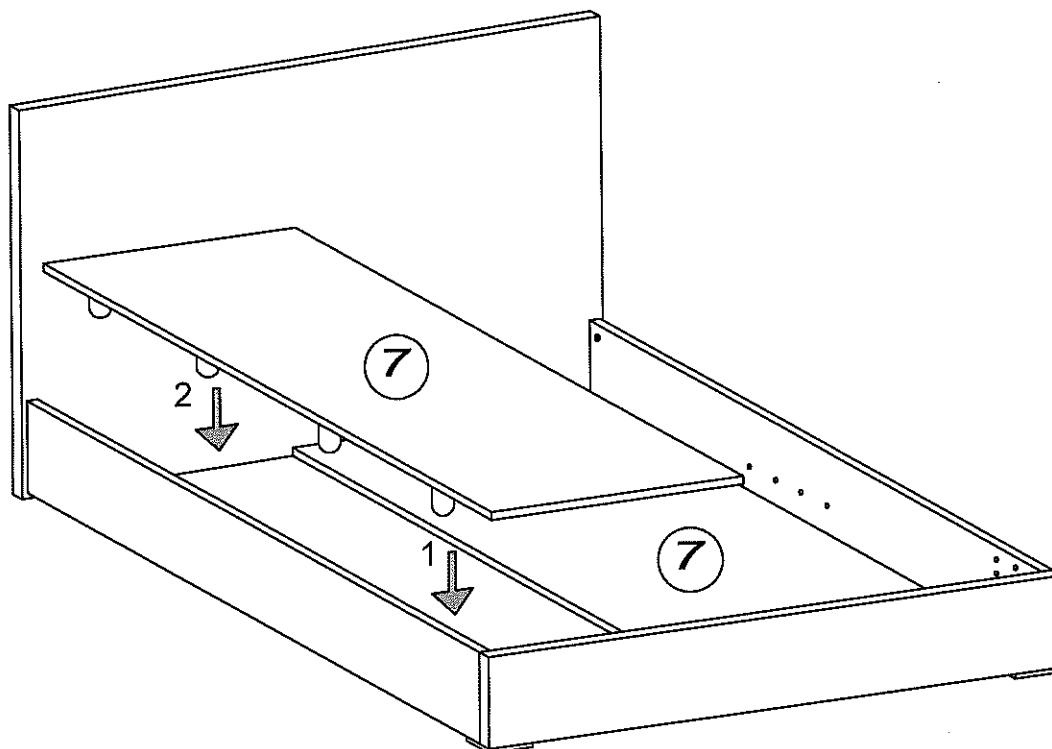


Quincaillerie    Beschlage    Hardware

Vite tbt 6max10



PP3 X 8



Staffe x 2


MOD. OXFORD

LETTO CONTENITORE


NOTICE DE MONTAGE  
ASSEMBLING INSTRUCTIONS  
MANTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO

STORAGE BED

Pag. 5

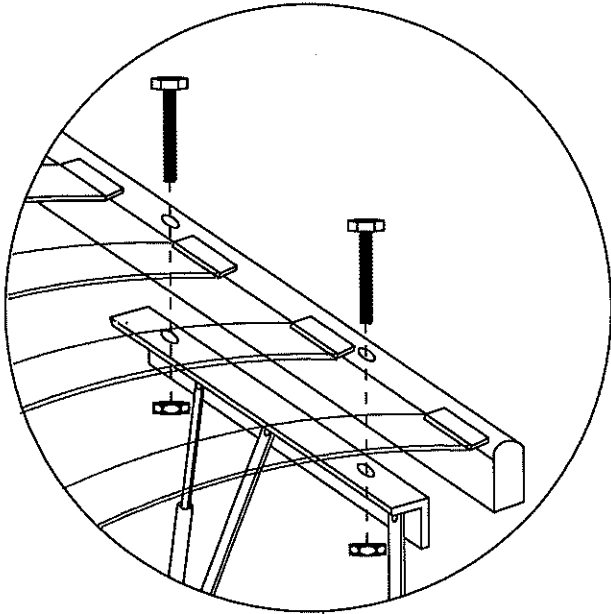

FERMA MATERASSO

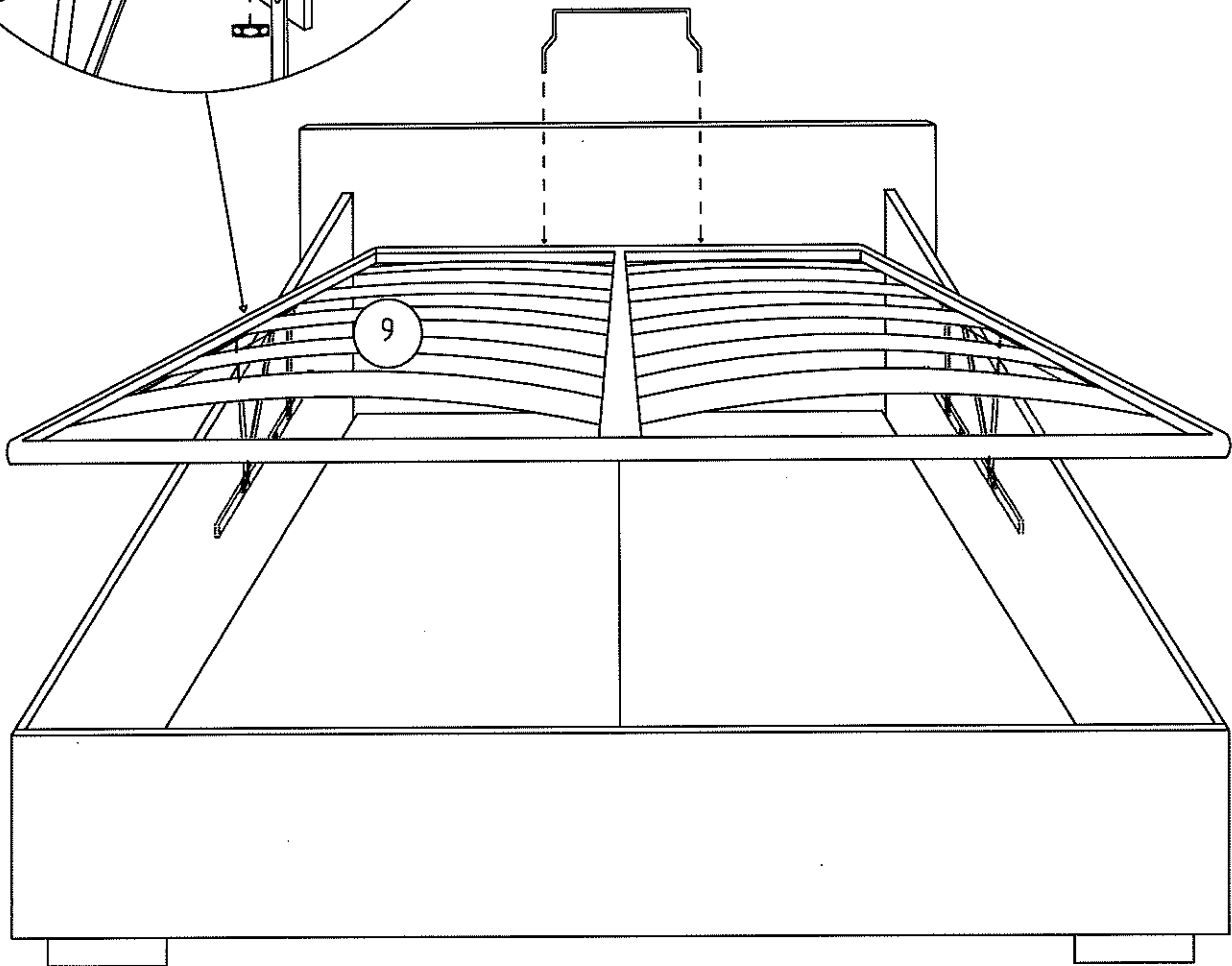

Quincaillerie    Beschlage    Hardware



TE 8max55 x4



DADO x4





MOD. OXFORD



LETTO OXFORD-MONTAGGIO BARRA LED

NOTICE DE MONTAGE  
ASSEMBLING INSTRUCTIONS  
MANTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO

STORAGE BED

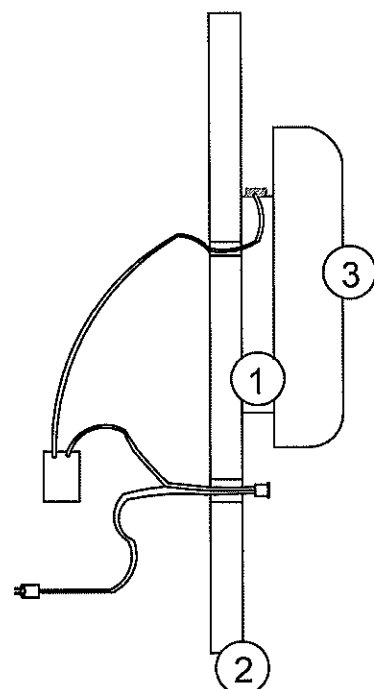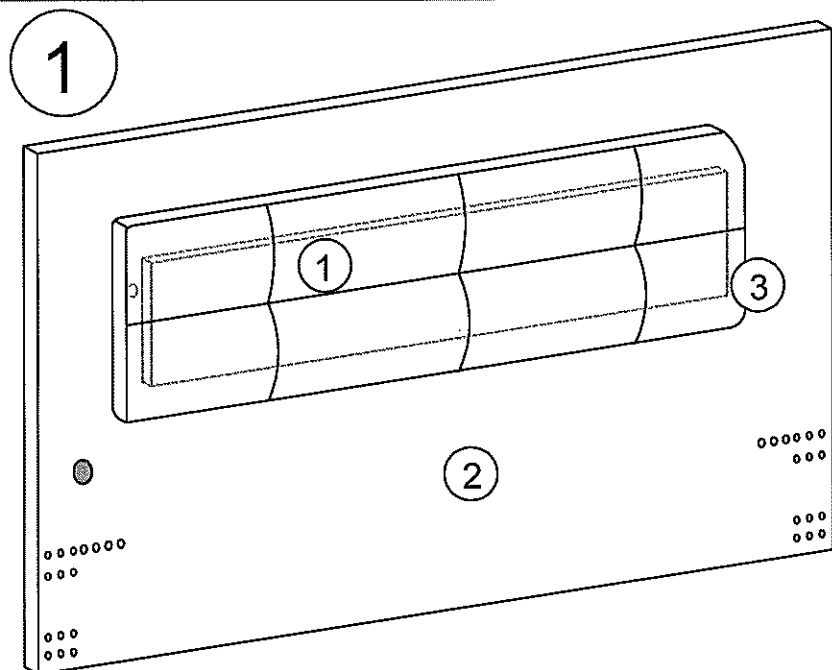

SEZIONE/SECTION

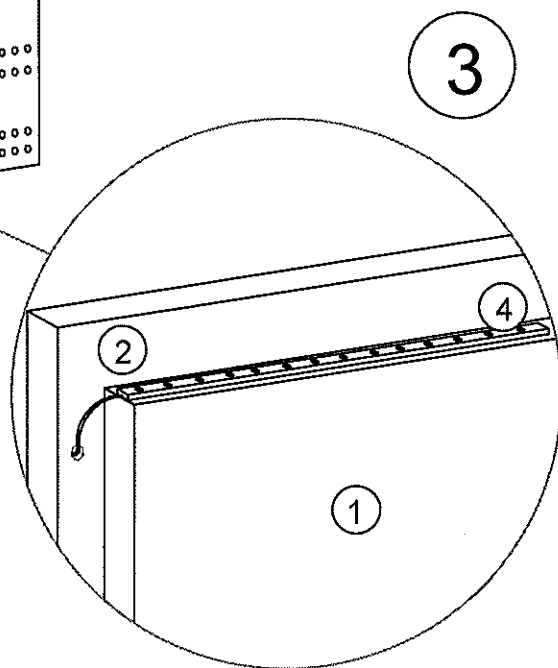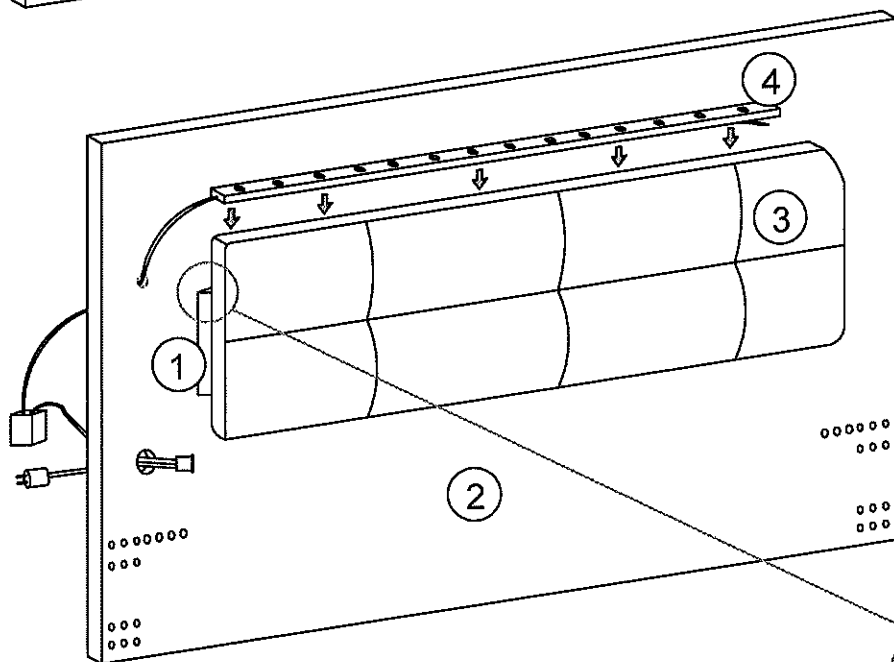

① Supporto pannello imbottito  
Support panneau tapissé  
Padded panel support



② Testiera letto  
Tet du lit  
Bed head

③ Pannello imbottito  
Panneau tapissé  
Padded panel


④ Barra led  
Bar led  
Bar led

Instruction de montage - ARMOIRE 4-PORTES  
Technical instructions - WARDROBE 4-DOORS  
Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

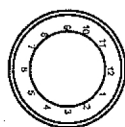



MADE IN ITALY

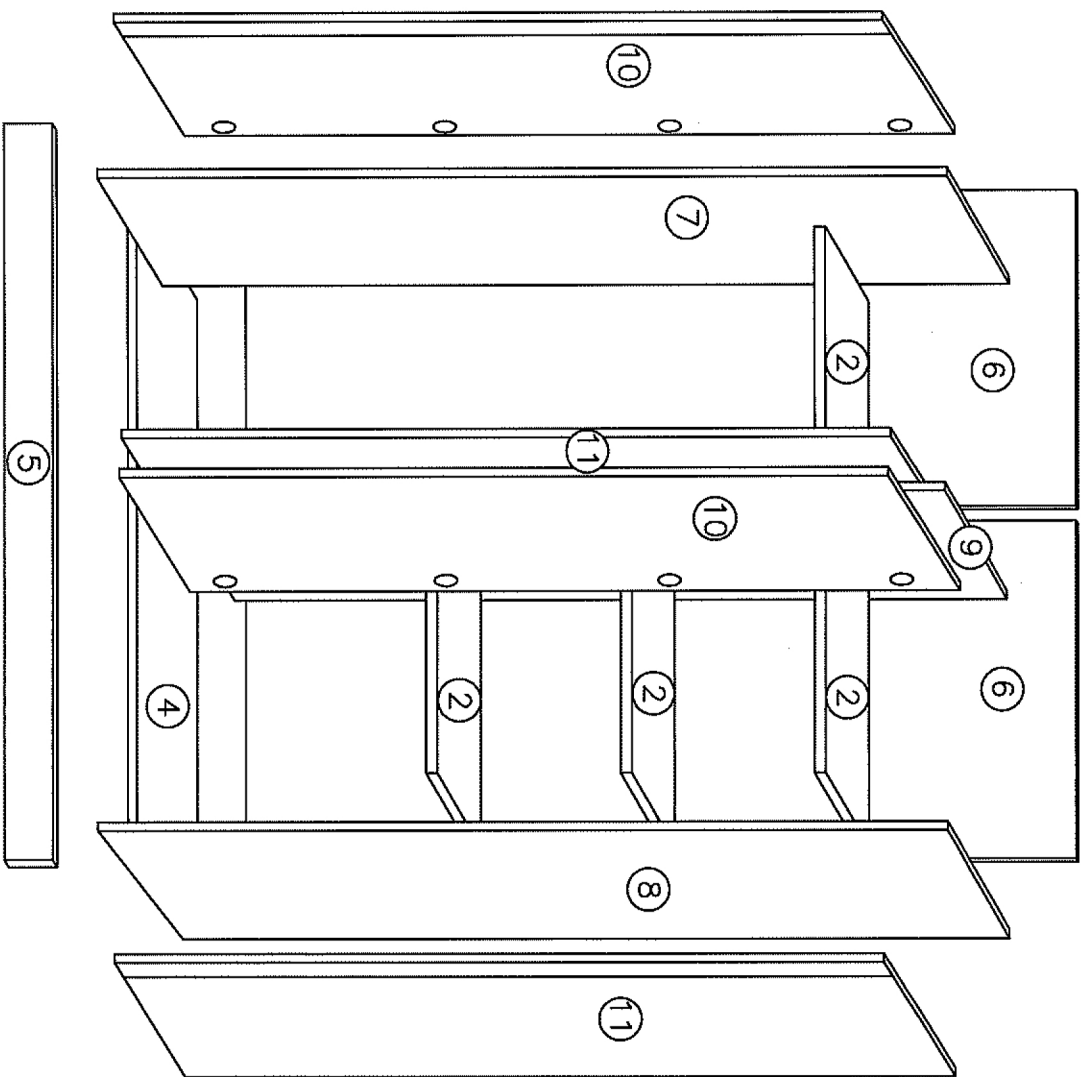

Instruction de montage - ARMOIRE 4-PORTES  
 Technical instructions - WARDROBE 4-DOORS  
 Montageschema - KLEIDERSCHARNIK 4-TUERIG

Mod. OXFORD

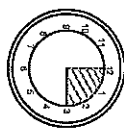

15 Min.

MADE IN ITALY

CHECKLISTE BESCHLÄGE





Kode	S	P3
ARTIKEL		
Menge	16	3

PP2	Z
tbl 8ma X 40	1

D	E



0	1	2	3	4	5	6	7	8	9
---	---	---	---	---	---	---	---	---	---

MASSITAB

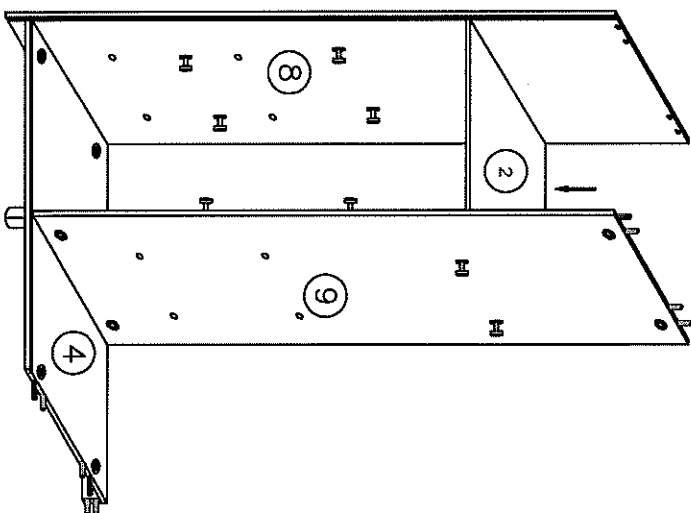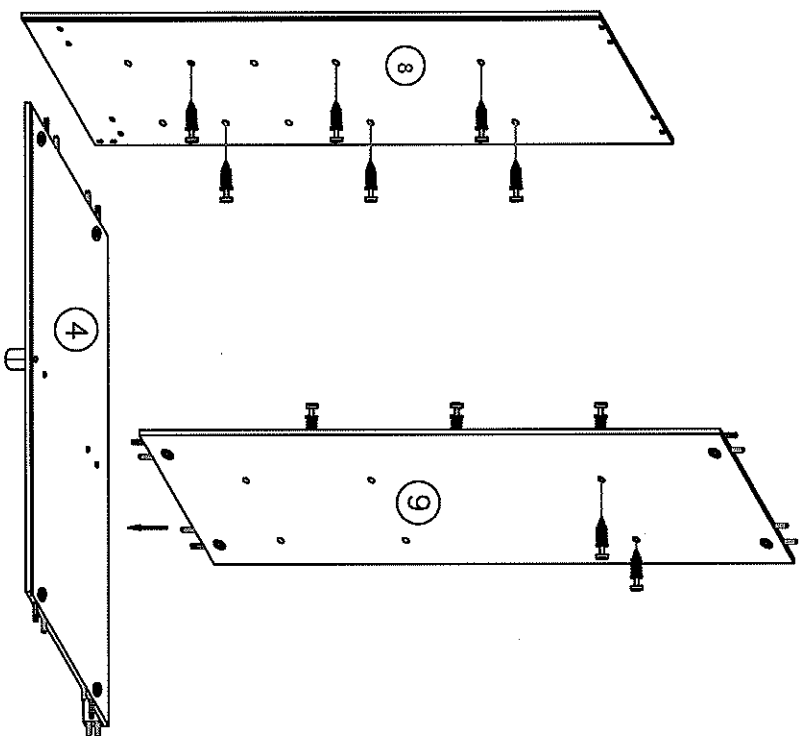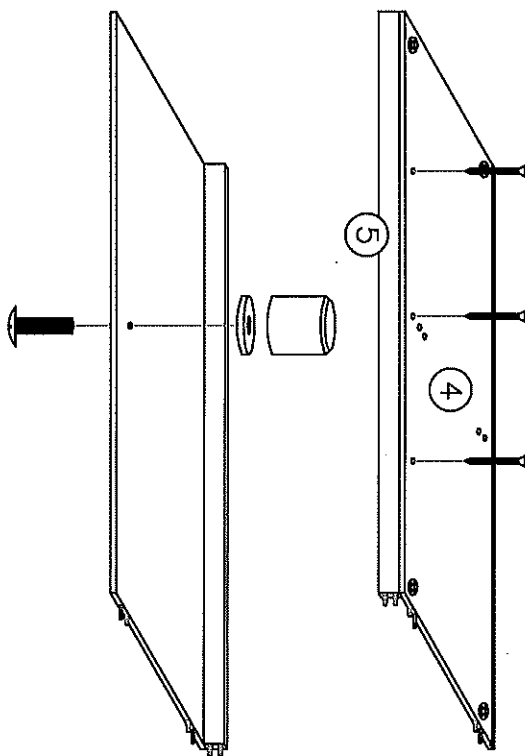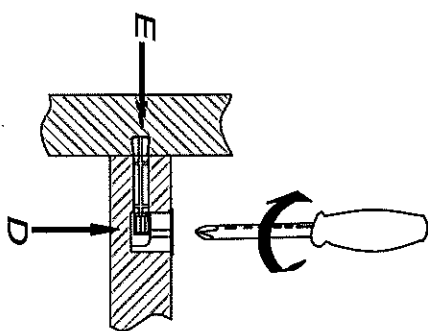

Instruction de montage - ARMOIRE 4-PORTES  
 Technical instructions - WARDROBE 4-DOORS  
 Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

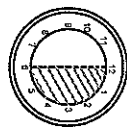

30 Min.

MADE IN ITALY



CHECKLISTE BESCHLÄGE

Kode	P1	Y
ARTIKEL		
Menge	10 tps 3,5 X 15	10



W		K	
20			





MASSITAB

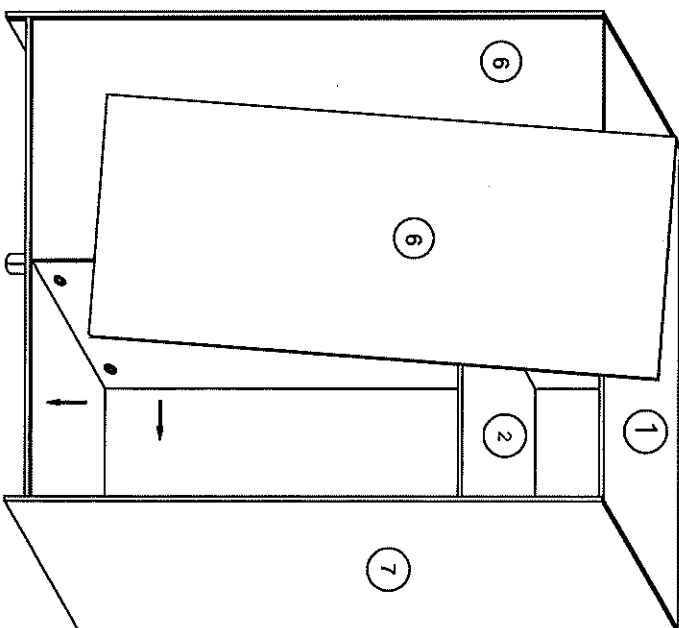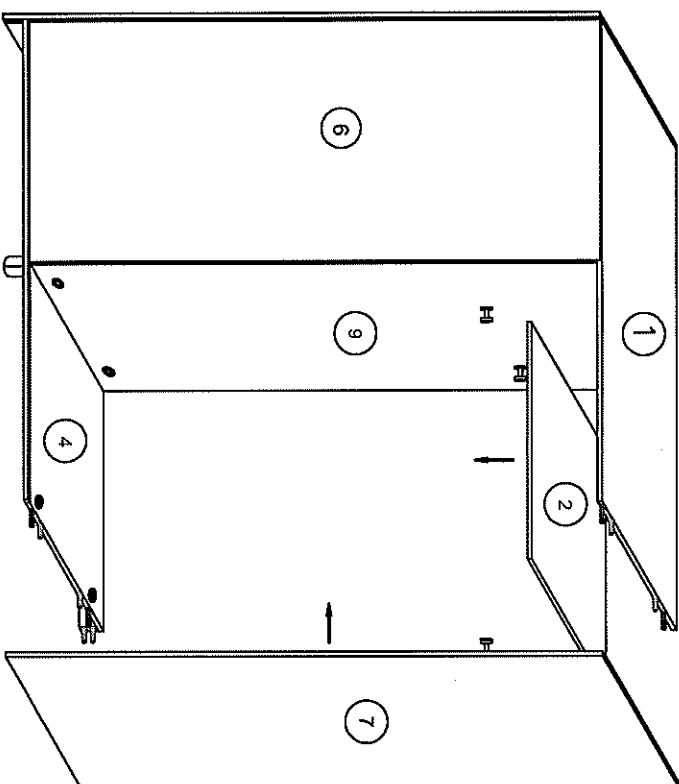

Zoom 1

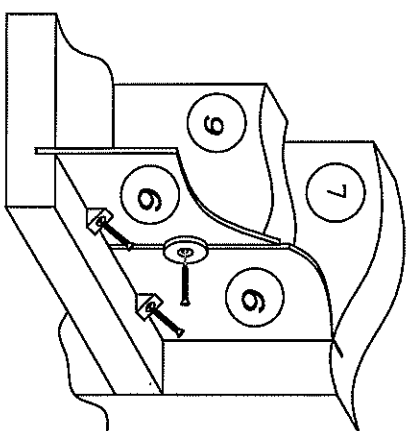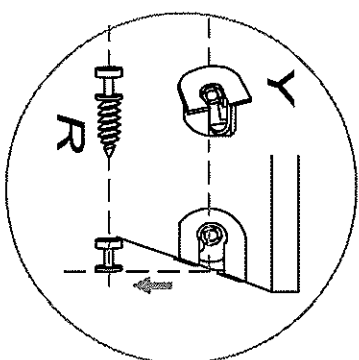

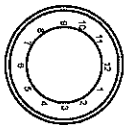

CHECKLISTE BESCHLÄGE




Kode	T	P1
ARTIKEL		
Menge	16	32

J		PP3	
2		tdl 6 ma X 25	2







MASSITAB

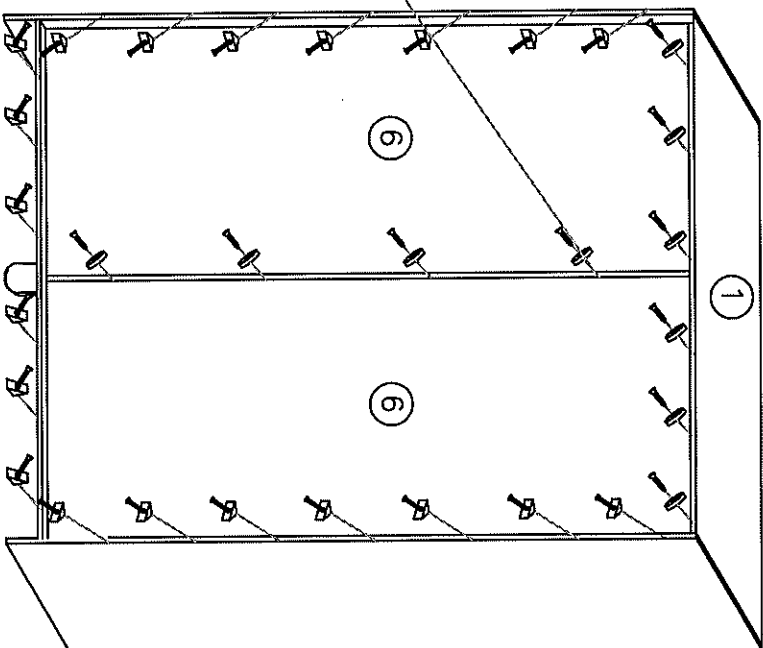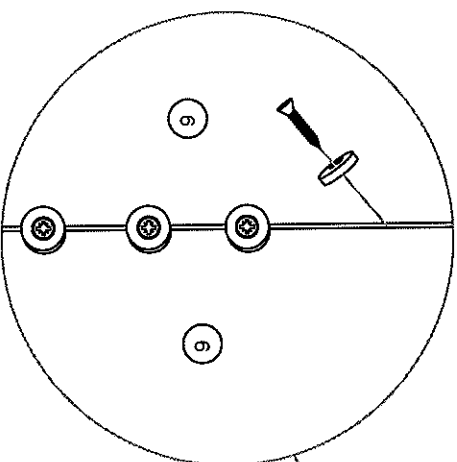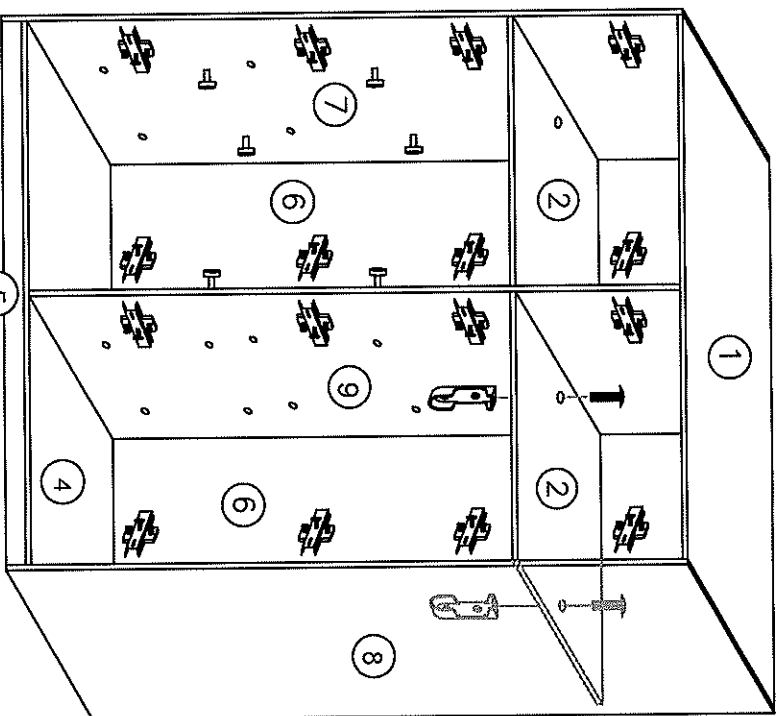

Instruction de montage - ARMOIRE 4-PORTES  
 Technical instructions - WARDROBE 4-DOORS  
 Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

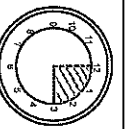



15 Min.

MADE IN ITALY

CHECKLISTE BESCHLÄGE

Kode		
ARTIKEL		
Menge		



0	1	2	3	4	5	6	7	8	9

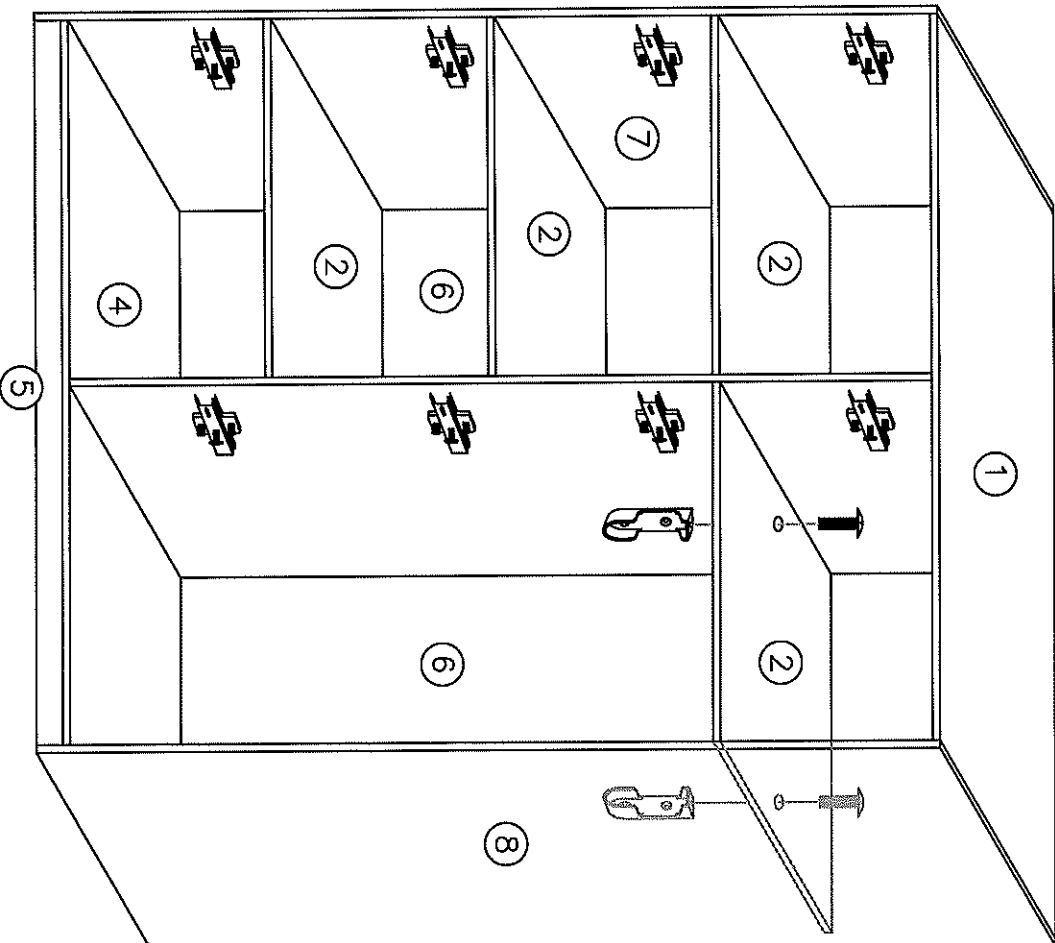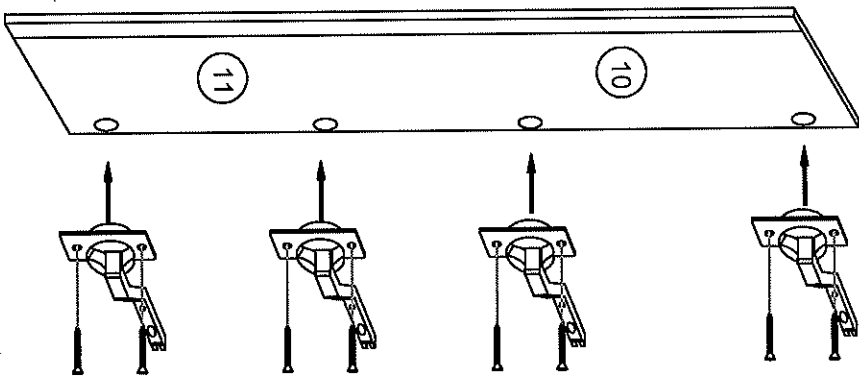

MASSITAB

Instruction de montage - ARMOIRE 4-PORTES  
 Technical instructions - WARDROBE 4-DOORS  
 Montageschema - KLEIDERSCHARNK 4-TUERIG


Mod. OXFORD

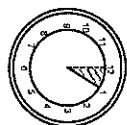






5 Min.

MADE IN ITALY

CHECKLISTE BESCHLÄGE

Kode	P2	
ARTIKEL		
	4ps 3,5 X 30	
Menge	9	

0	1	2	3	4	5	6	7	8	9

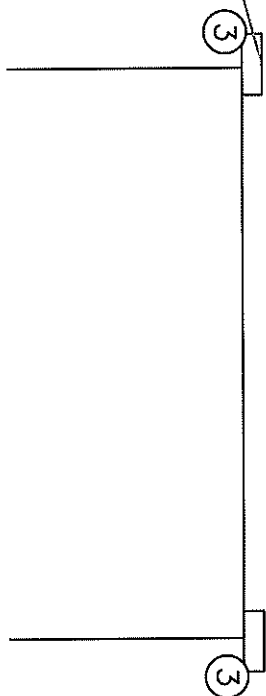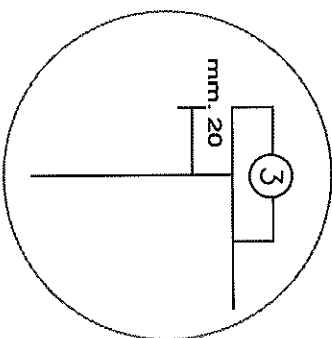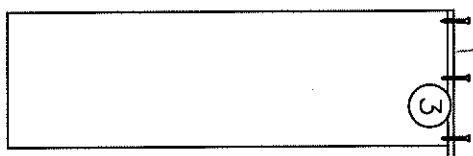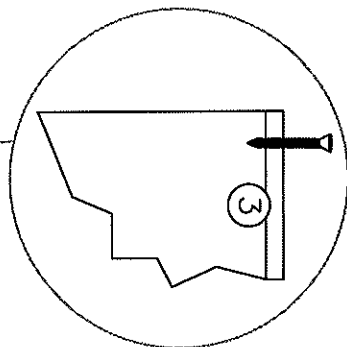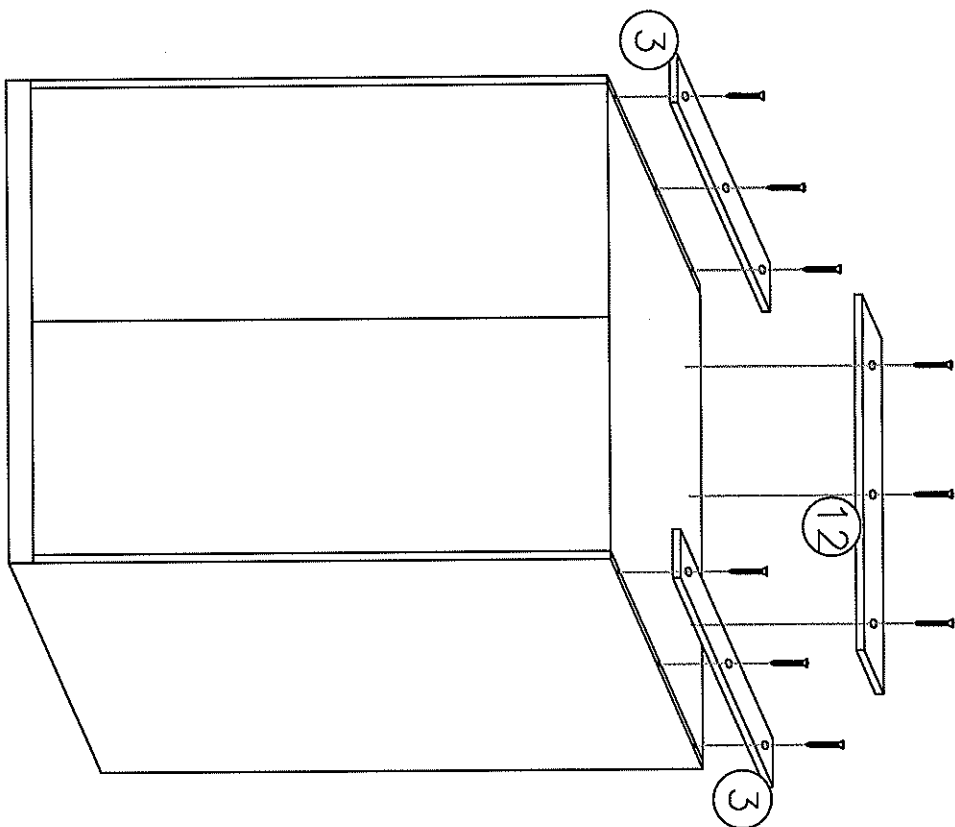

MASSITAB