

ASSEMBLY INSTRUCTIONS

MODEL #

CM1927

Questions?

GIVE US CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED



Allen Wrench

(Included)




Phillips
Screwdriver

(Not Included)



2 - People
Recommended

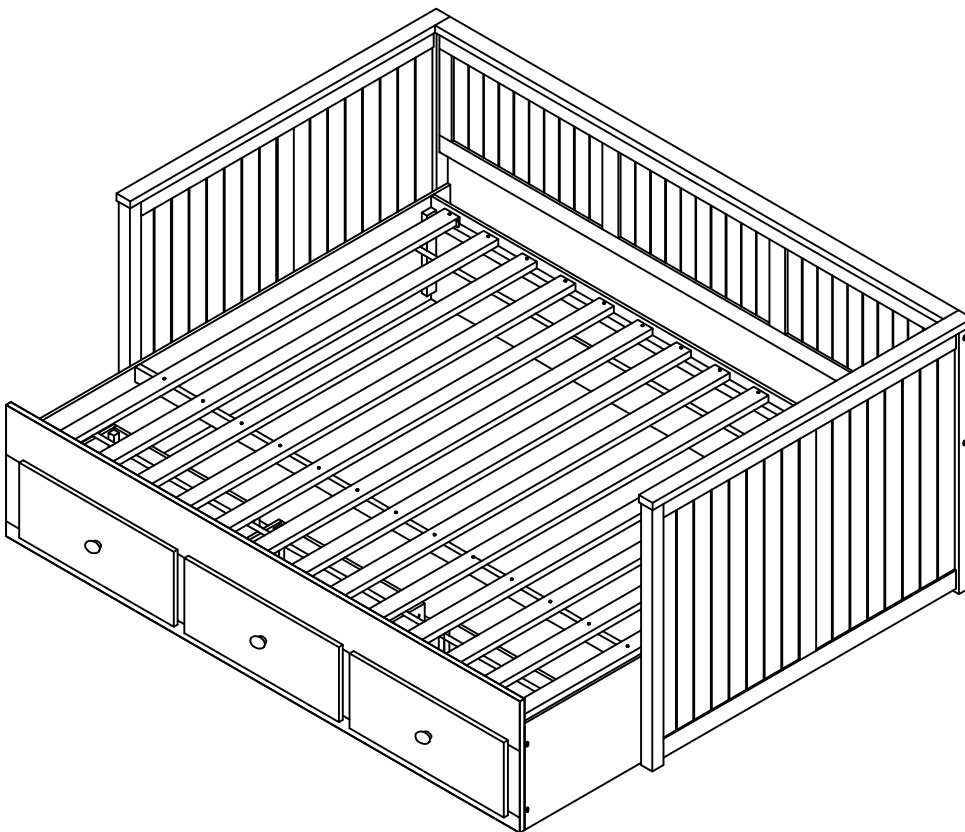

ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



Monday to Friday
8:30AM- 5:30PM (PST)



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

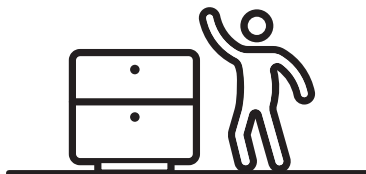

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

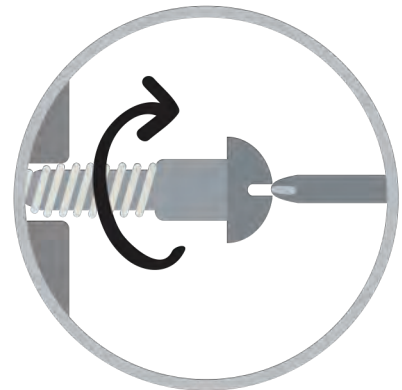

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DAYBED

CM1927




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

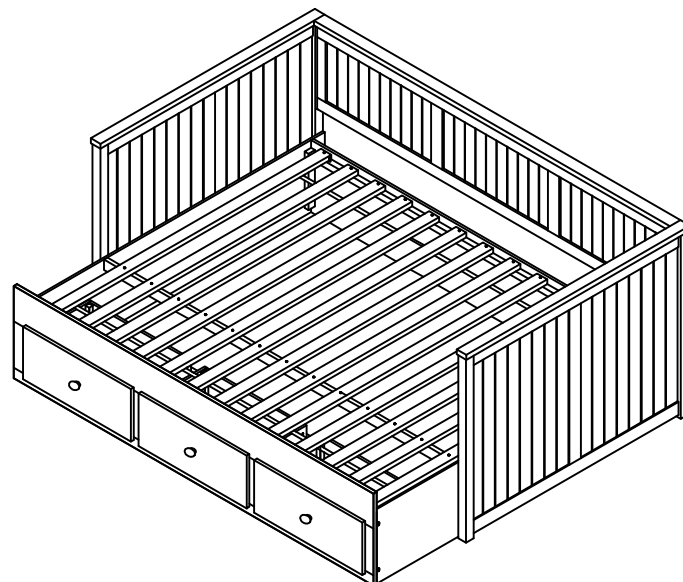


PARTS

#1 1pc

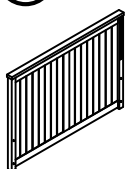


Headboard (L)

#2 1pc

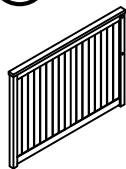


Headboard (R)

#3 1pc

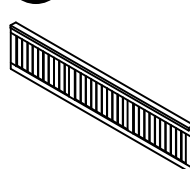


Guardrail

#4 1pc

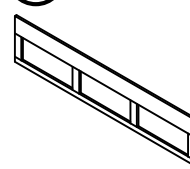


Front Trundle Panel

#5 1pc

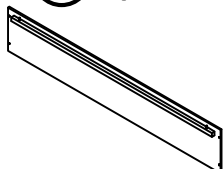


Back Trundle Panel

#6 2pcs

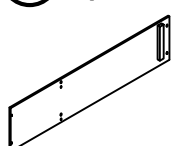

End Trundle Panel

#7 1pc

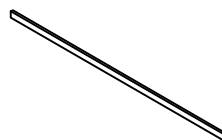


Top Trundle Support

#8 1pc




Bottom Trundle Support

#9 3pcs




Crossbar

#10 3pcs

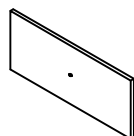


Front Drawer Panel

#11 3pcs




Drawer Panel (L)

#12 3pcs




Drawer Panel (R)

#13 3pcs

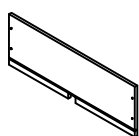


Back Drawer Panel

#14 3pcs

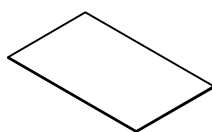

Bottom Drawer Panel

#15 1set

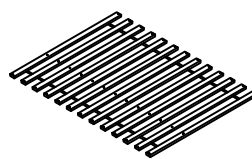

Slat Kit (13pcs)

HARDWARE

#A 4pcs



Bolt
Ø1/4" x 3-1/8"

#B 4pcs



Barrel Nut

#C 6pcs



Bolt
Ø1/4" x 1-3/8"

#D 20pcs



Bolt
Ø1/4" x 1-3/16"

#E 12pcs



Wood Dowel
Ø6 x 30mm

#F 63pcs



Screw
#4x30mm

#G 3pcs



Screw
#3x15mm

#H 6pcs



Screw
#3x12mm

#I 3pcs



Scroll Bar

#J 3pcs



Bolt
Ø5/32" x 25mm

#K 3pcs




Holder

#L 1pc
















Allen Wrench 4mm



Exploded View

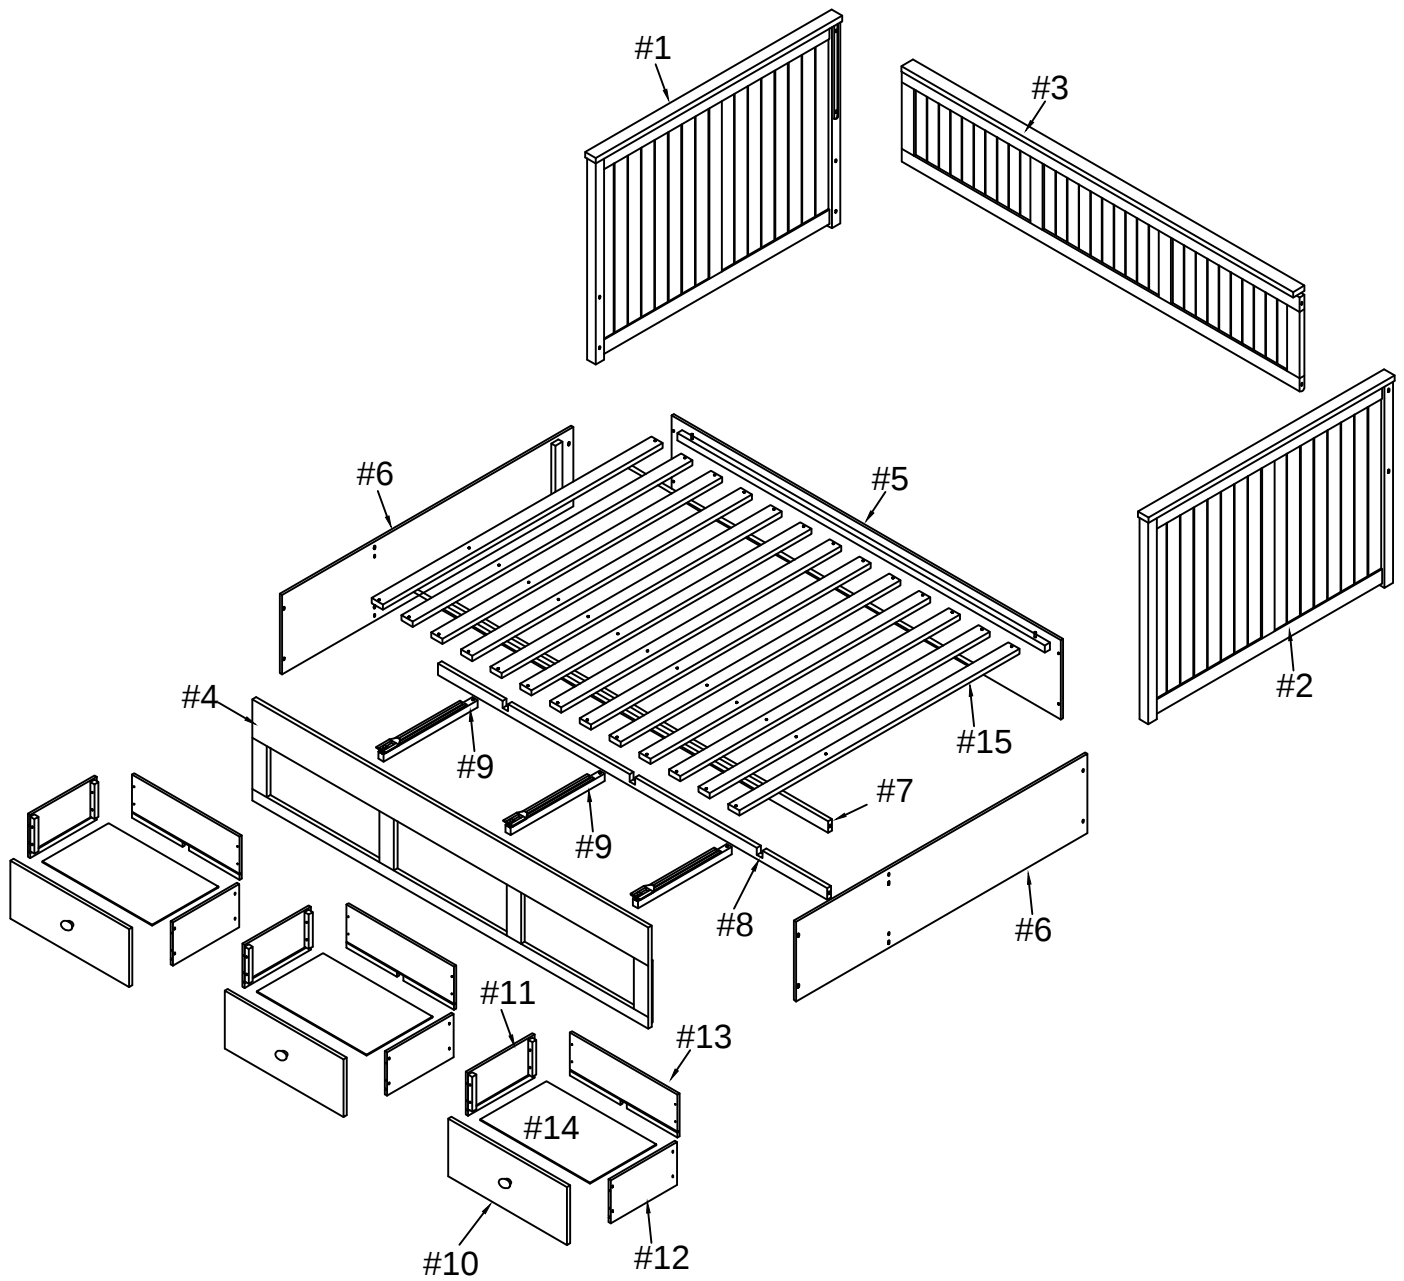

CM1927 is packed in 2 cases

Carton	Disignation	Part		Hardware
CM1927-1	Headboard (L)	#1		
	Headboard (R)	#2		
CM1927-2	Guardrail	#3		 #Ax4pcs
	Front Trundle Panel	#4		 #Bx4pcs
	Back Trundle Panel	#5		 #Cx6pcs
	End Trundle Panel	#6		 #Dx20pcs
	Top Trundle Support	#7		 #Ex12pcs
	Bottom Trundle Support	#8		 #Fx63pcs
	Crossbar	#9		 #Gx3pcs
	Front Drawer Panel	#10		 #Hx6pcs
	Drawer Panel (L)	#11		 #Jx3pcs
	Drawer Panel (R)	#12		 #Kx3pcs
	Back Drawer Panel	#13		
	Bottom Drawer Panel	#14		 #Lx1pc
	Slat Kit (13pcs)	#15		
	Scroll Bar	#I		

CM1927 is packed in 2 cases

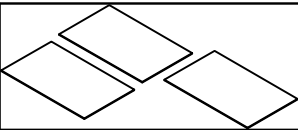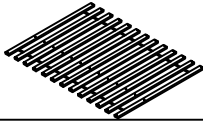Carton	Disignation	Part		Hardware
CM1927-2	Bottom Drawer Panel	#14		
	Slat Kit (13pcs)	#15		

ASSEMBLY INSTRUCTIONS

1

Part #1 x 1pc


Part #2 x 1pc

Part #3 x 1pc

Hardware #A x 4pcs

Hardware #B x 4pcs

Align guardrail (#3) to headboards (#1,2), then secure by using bolts (#A).

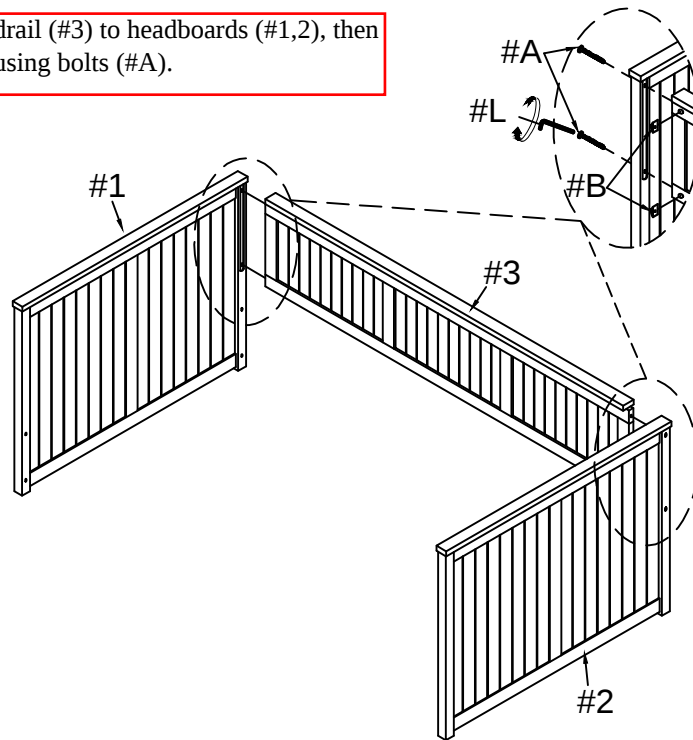

2


Part #4 x 1pc

Part #5 x 1pc

Part #6 x 2pcs

Hardware #D x 8pcs

Align trundle panels (#6) to the front and back trundle panels (#4,5). Secure by using bolts (#D).

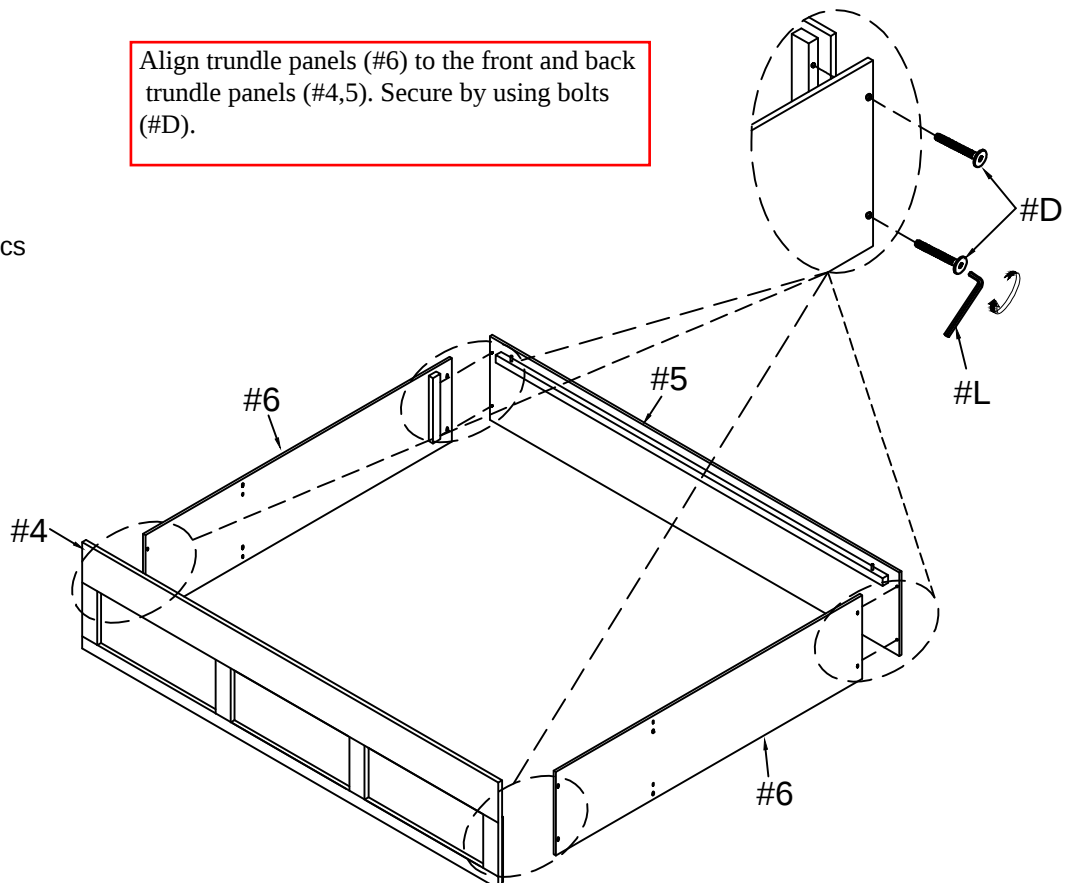

ASSEMBLY INSTRUCTIONS


Align trundle supports (#7,8) to the trundle side panels, then secure by using bolts (#D).

3

Part #7 x 1pc

Part #8 x 1pc

Hardware #D x 4pcs

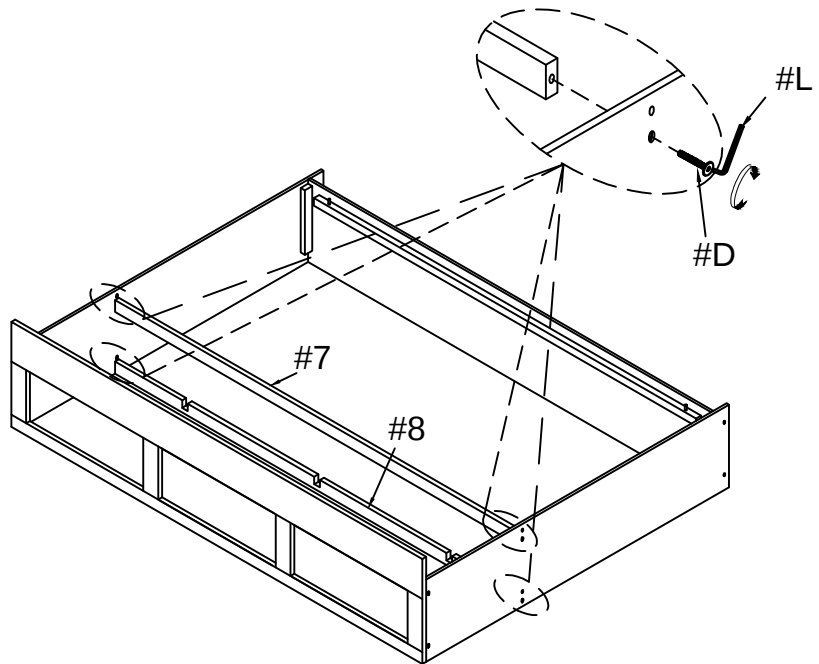


4

Part #9 x 3pcs

Hardware #C x 6pcs

Align crossbars (#9) to the trundle, then secure by using bolts (#C).

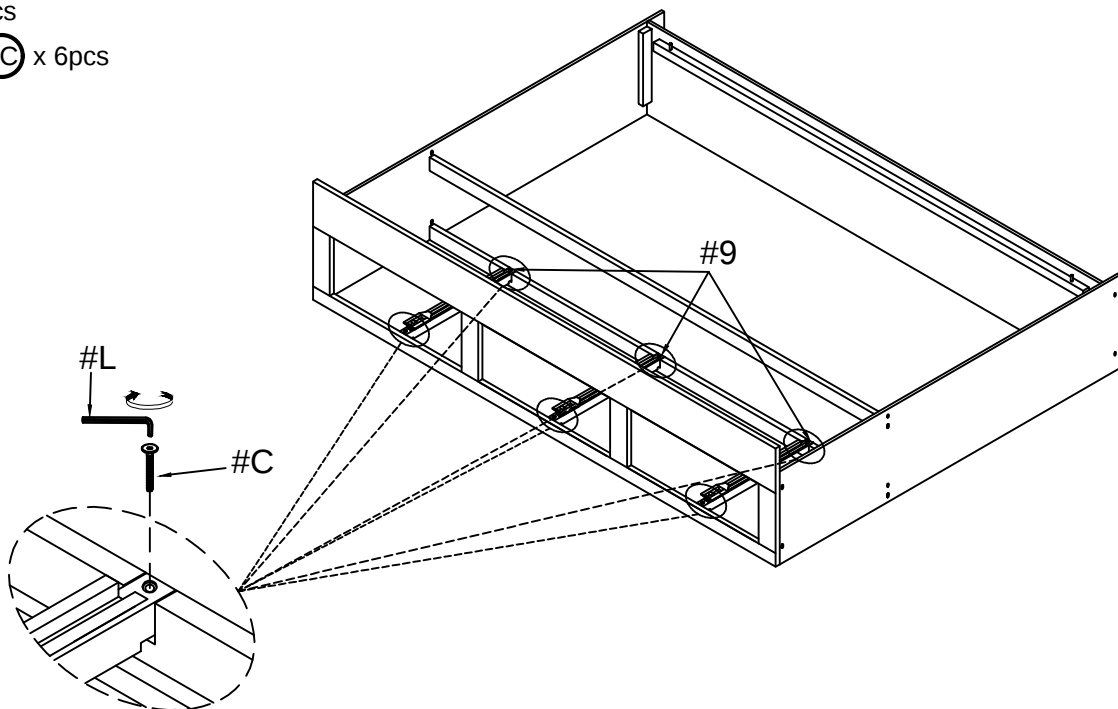


ASSEMBLY INSTRUCTIONS

5

Insert dowels (#E) to front drawer panel (#10), then align side panels (#11,12) and bottom panel (#14) to the front panel (#10). Secure by screwing screws (#F) directly to front panel (#10). There will be no pre-drilled screw holes for front panel (#10).

Part #10 x 1pc
Part #11 x 1pc
Part #12 x 1pc
Part #14 x 1pc
Hardware #E x 4pcs
Hardware #F x 4pcs

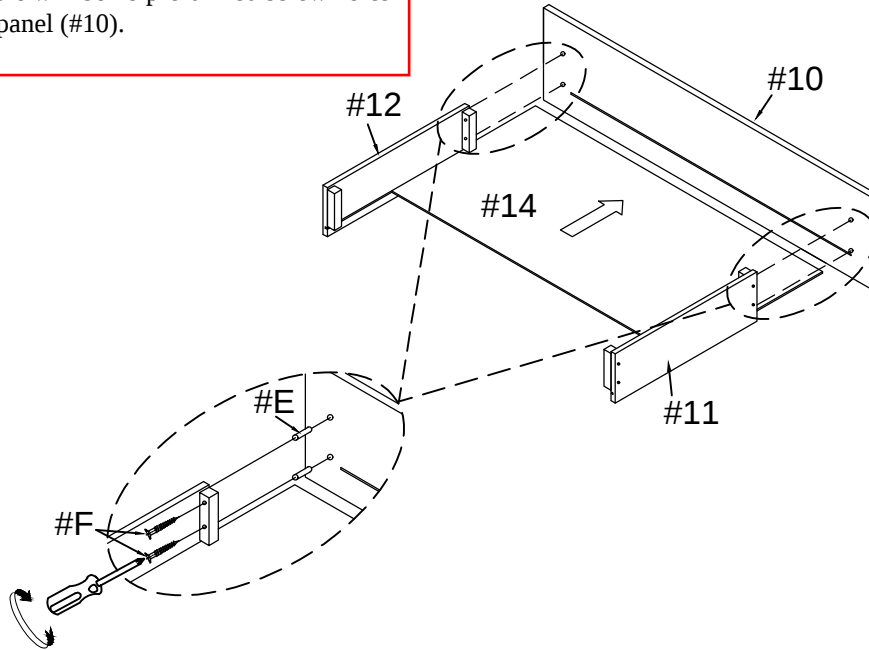


X3

6

Align back drawer panel (#13) to the drawer side panels, then secure by using screws (#F).

Part #13 x 1pc
Hardware #F x 4pcs

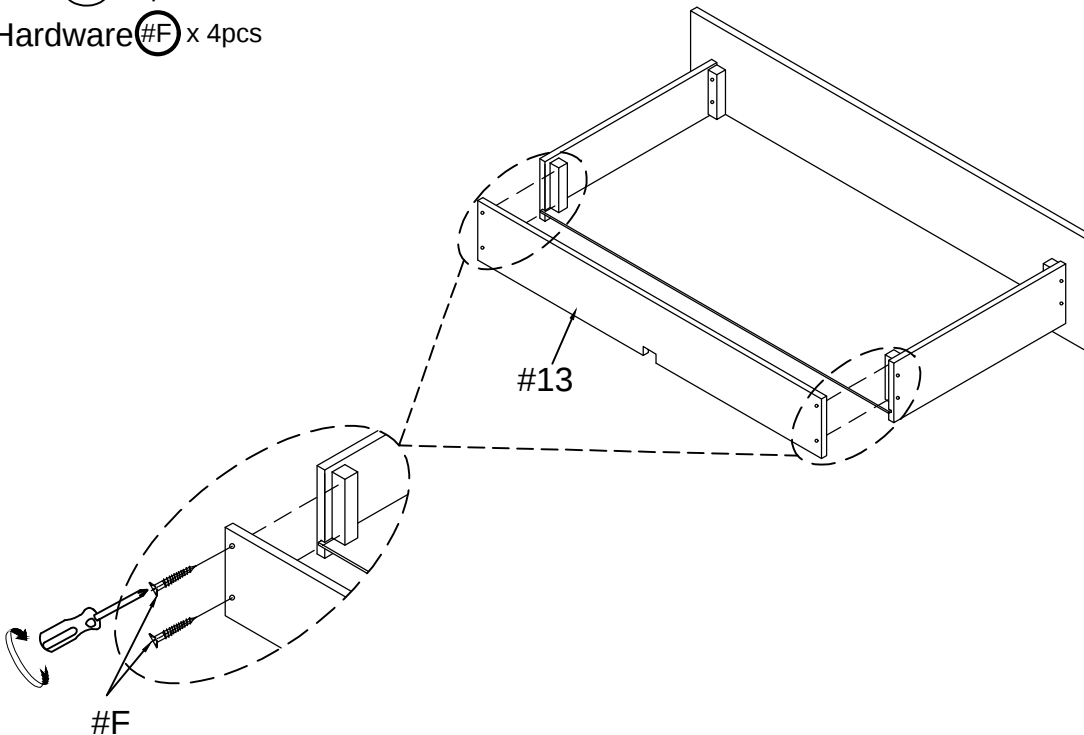


X3

ASSEMBLY INSTRUCTIONS

7


Hardware  #G x 1pc
Hardware  #H x 2pcs
Hardware  #I x 1pc

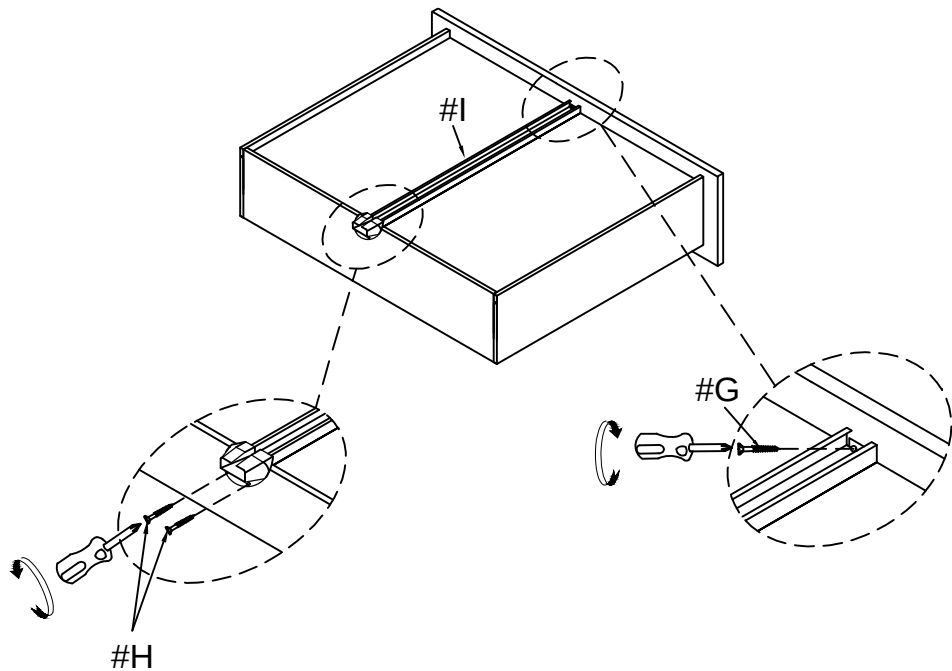

X3

8

Hardware  #J x 1pc
Hardware  #K x 1pc

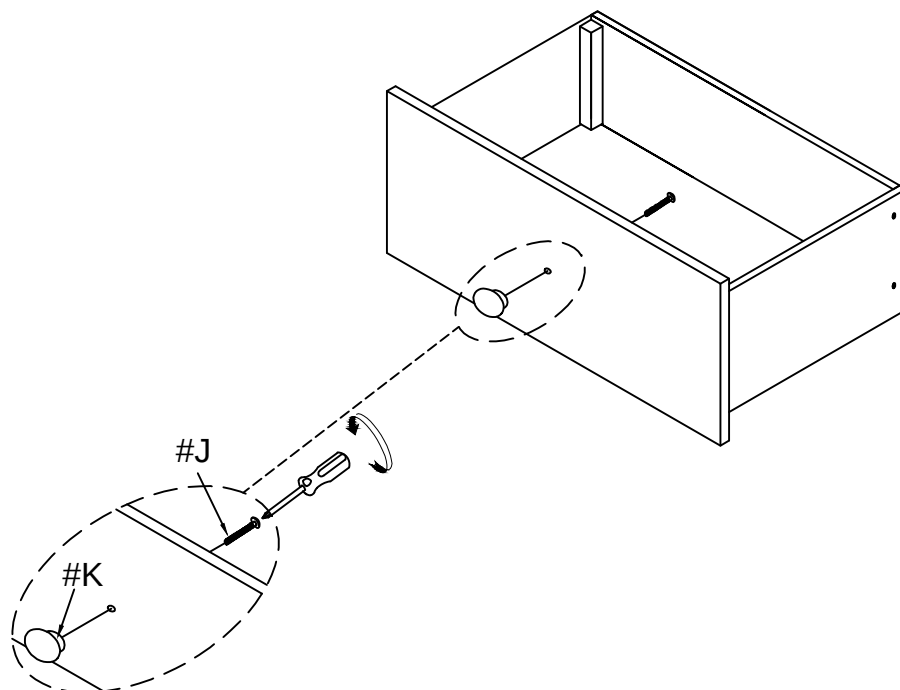

X3

Align scroll bar (#I) to the bottom of the drawer, then secure by using screws (#H,G) as shown in the diagram.


Secure knob (#K) onto drawer by using bolts (#J).

ASSEMBLY INSTRUCTIONS


Align trundle frame to the headboard (#1,2), then secure by using bolts (#D).

9

Hardware  #D x 8pcs

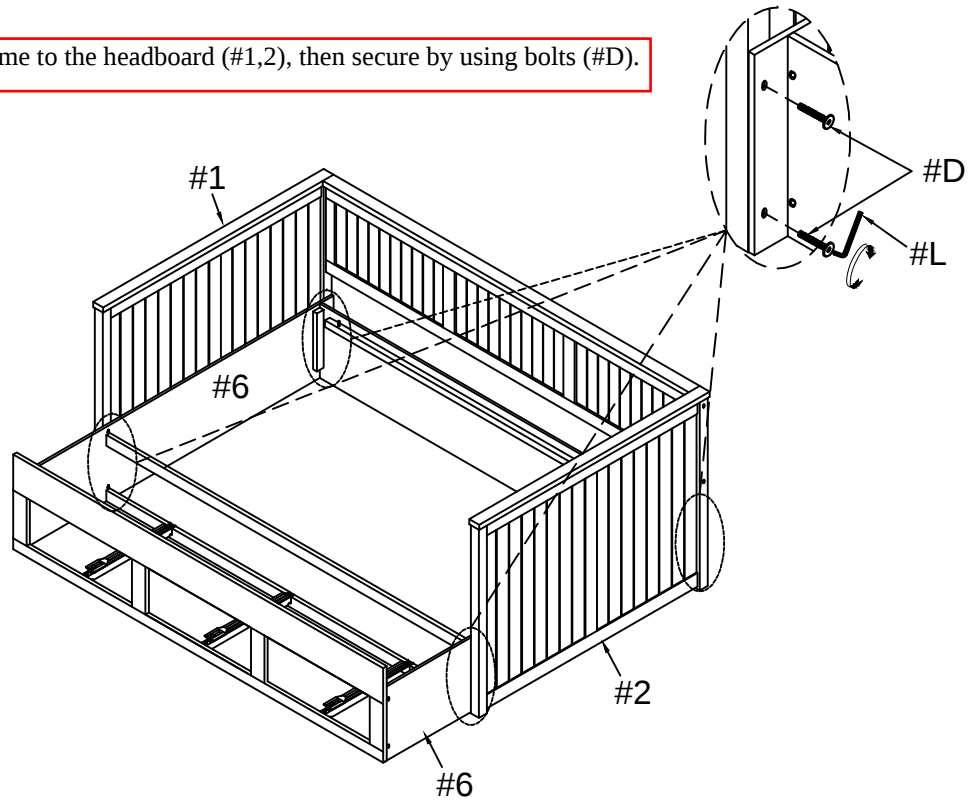

10

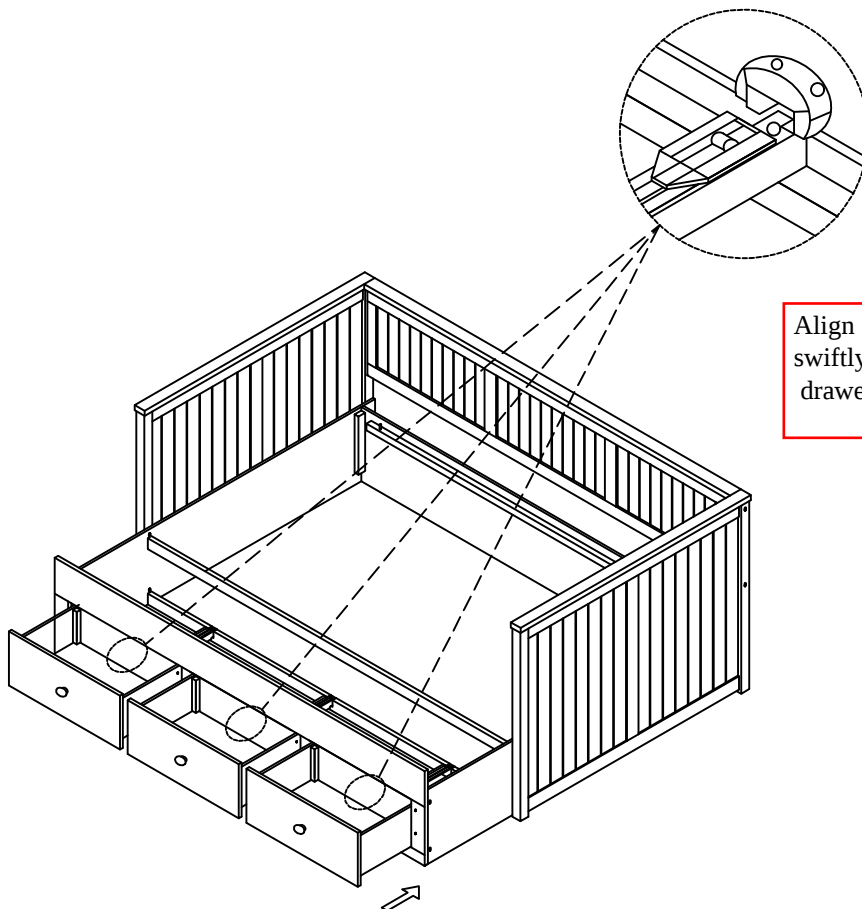

Align drawers to the railing, then swiftly with slight force, push the drawer in to lock.


ASSEMBLY INSTRUCTIONS

11


Part (#15) x 1set

Hardware (#F) x 39pcs

Align slats (#15) to the product, then secure by using screws (#F).

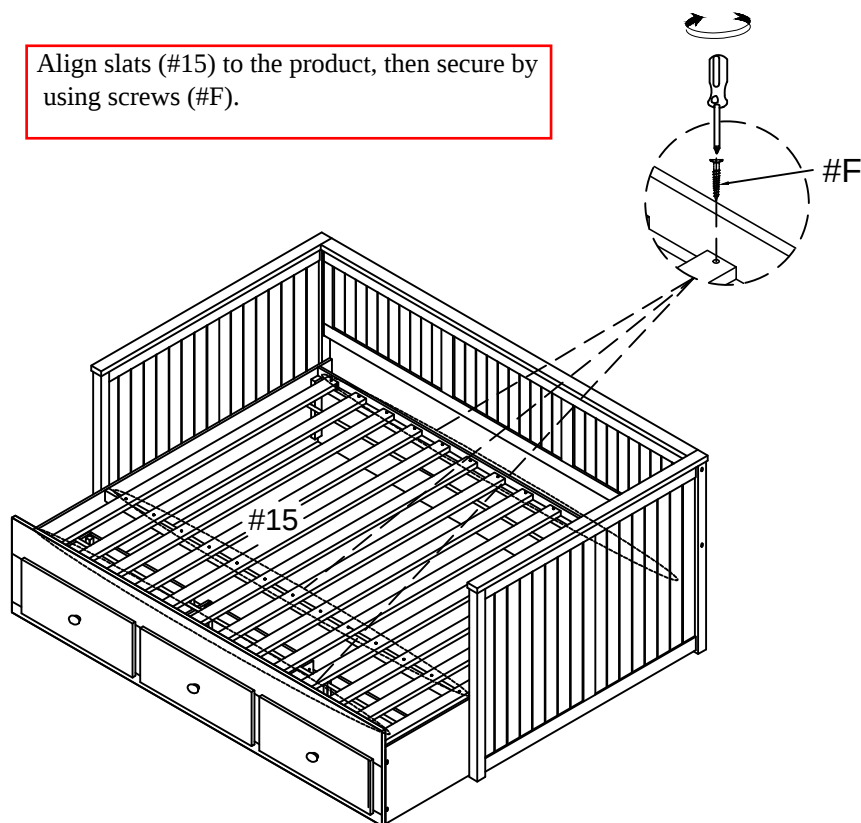

12

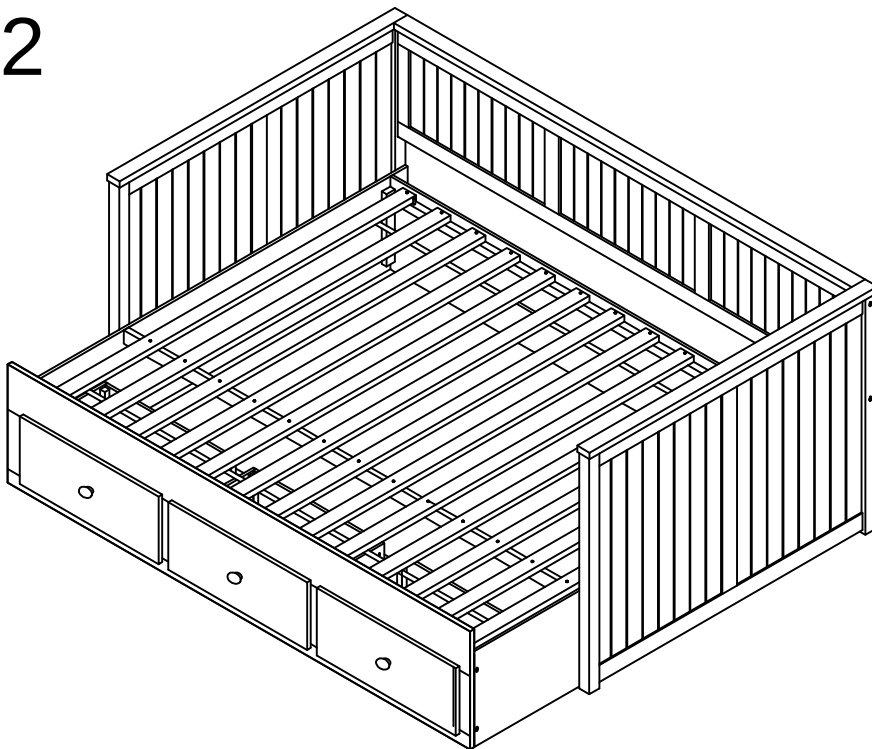

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.