

MODEL#

CM1928

Questions?

GIVE US CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)




3 - People Recommended

ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

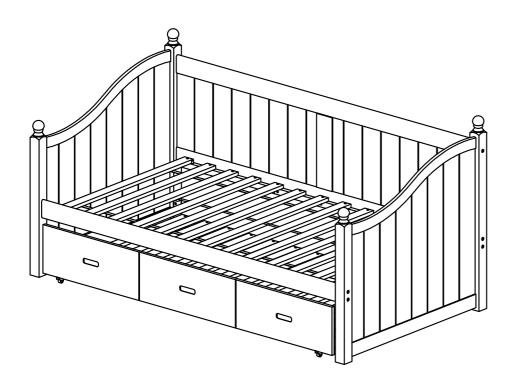

VERSION # 20-09-24





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com









foagroup



Monday to Friday 8:30AM- 5:30PM (PST)



E-MAIL cs.ec@foagroup.com



FurnitureOfAmerica



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

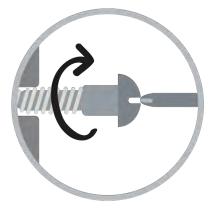

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

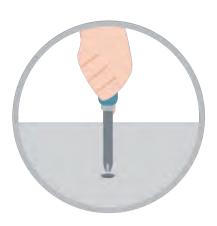

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DAYBED

CM1928




- · Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

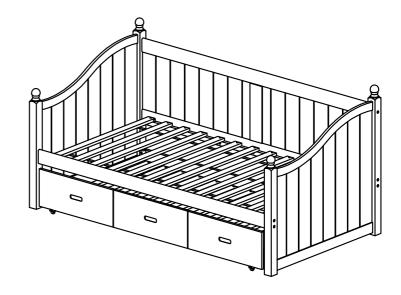





Headboard (L)



Front Trundle Panel



Headboard (R)



Rear Trundle **Panel**



Guardrail



Side Trundle Panel






Side Rail





Twin Slat Kit (13pcs)

HARDWARE



Bolt & Barrel Nut Ø1/4" x 4"



Screw #4 x 20mm

muuu (





Bolt Ø1/4" x 1-3/16"





Wheel





Screw Ø1/4" x 4"



07777770

Wood Dowel Ø10 x 40mm






Screw #4 x 30mm





Allen Wrench 4mm

Exploded View

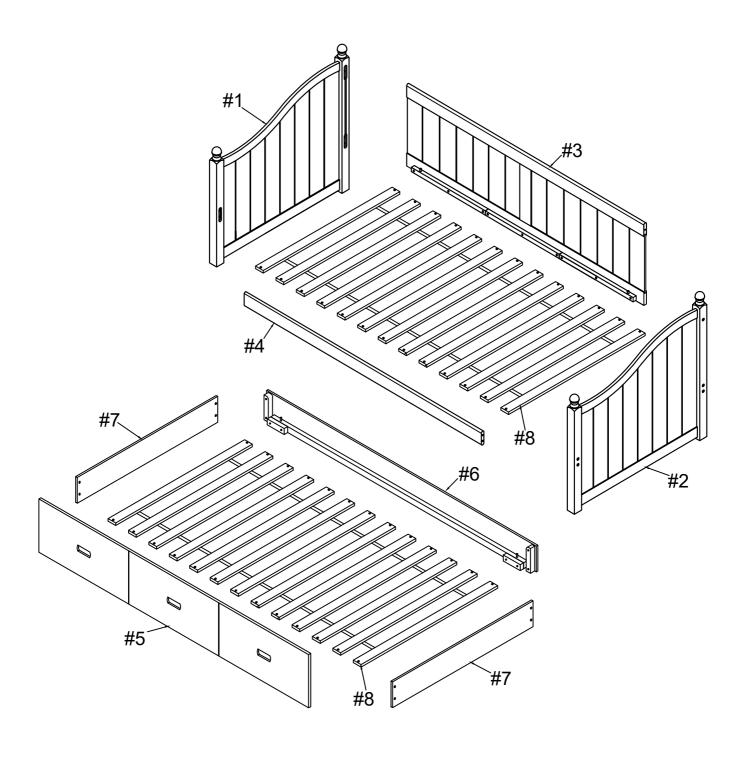


CM1928 is packed in 2 cases

Carton	Disignation	Part		Hardware	
	Headboard Left	#1			
CM1928-1	Headboard Right	#2			
	Twin Slat Kit	#8			
	Guardrail	#3		0	#A x 8set
	Side Rail	#4		○	#B x 8pcs #C x 2pcs #D x 52pcs
	Front Trundle Panel	#5		→	#E x 8pcs #F x 4pcs
CM1928-2	Rear Trundle Panel	#6			#G x 2pcs #H x 1pc
	Side Trundle Panel	#7			
	Twin Slat Kit	#8			


1

Part #1 x 1pc
Part #2 x 1pc
Part #3 x 1pc
Hardware #A x 4set
Hardware #C x 2pcs

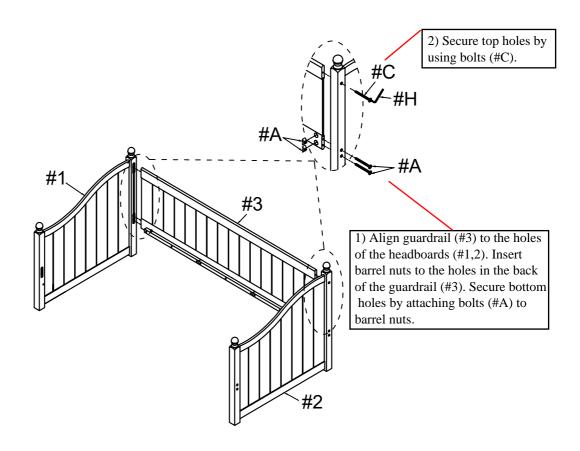


2

Part #4 x 1pc Hardware #A x 4set Align side rails (#4) to the holes of the headboards (#1,2). Insert barrel nuts to the holes of the side rails (#4). Secure by attaching bolts (#A) to the barrel nuts of the side rail (#4).

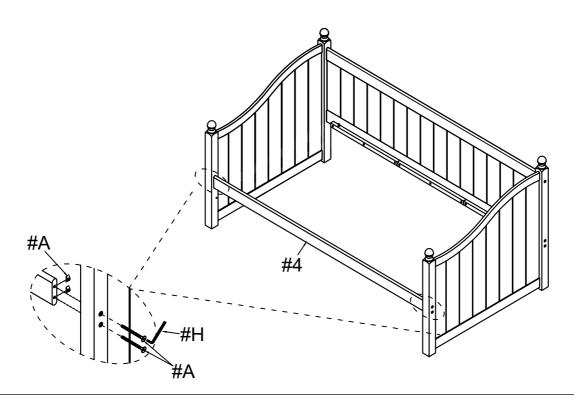

3


Part #8 x 1set Hardware #D x 26pcs

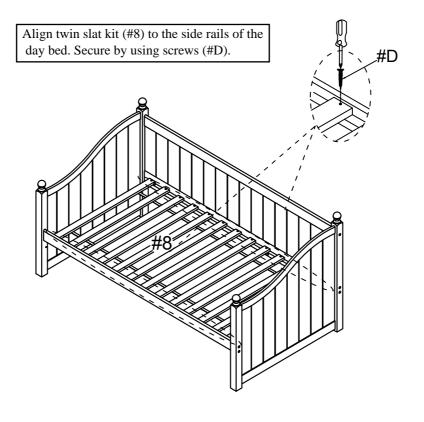

4

Hardware#G x 2pcs


Insert dowels (#G) to the bottom hole of the headboard (#1,2).

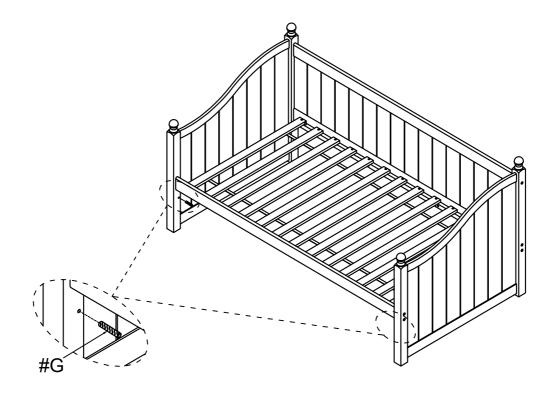

5


Align front and rear trundle panels (#5,6) to the holes of the side panels (#7), then secure with bolts (#B).

Part #5 x 1pc
Part #6 x 1pc
Part #7 x 2pcs
Hardware #B x 8pcs

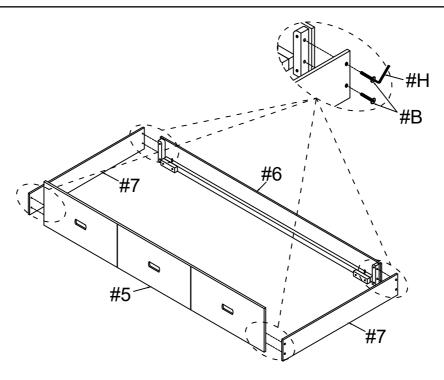


6

Align twin slat kit (#8) to the front and rear trundle panels (#5,6), then secure with screws (#D).

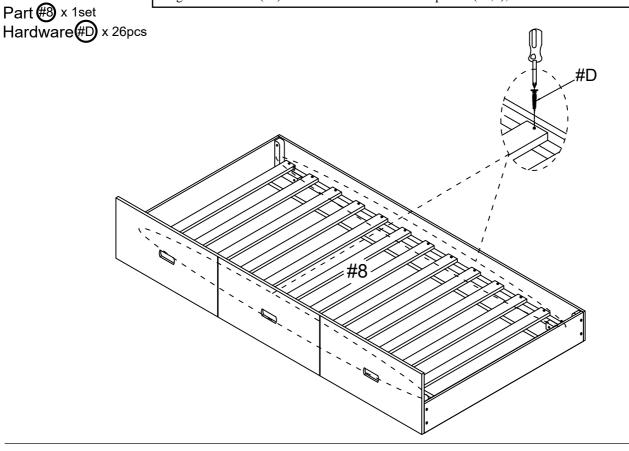


7

Hardware#F x 8pcs Hardware#F x 4pcs Align the wheels (#F) to the bottom corners of the trundle. Secure by using screws (#E). There will be no pre-drilled holes.

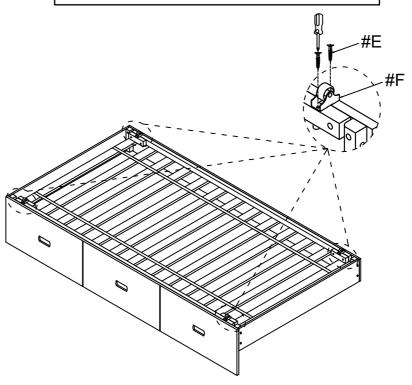

8

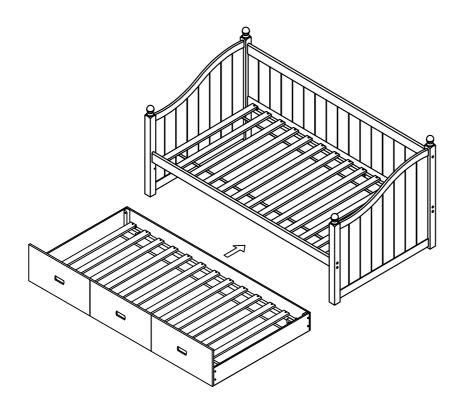

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

√ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.