

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED




Allen Wrench

(Included)



Phillips
Screwdriver

(Not Included)

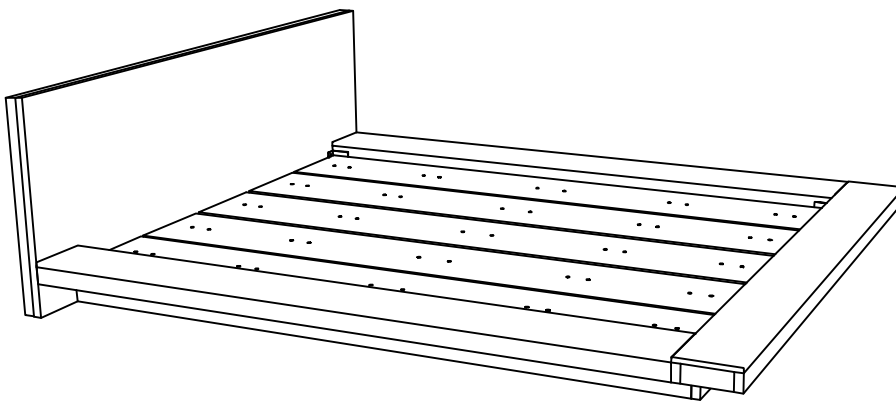

**3 - People
Recommended**

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



Monday to Friday
8:30AM- 5:30PM (PST)



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!


☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

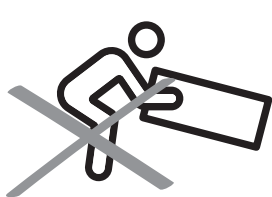

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

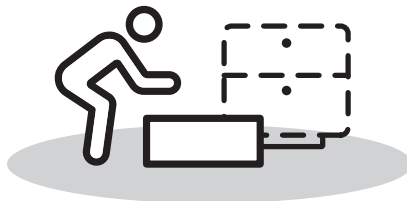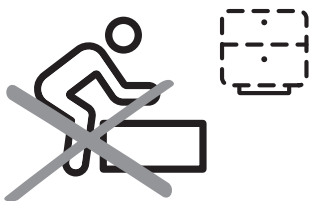


Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.

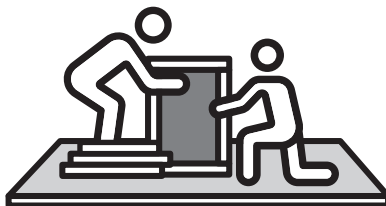

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

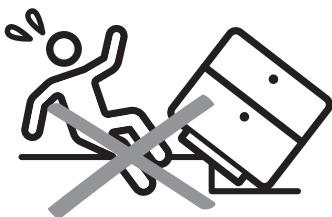

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

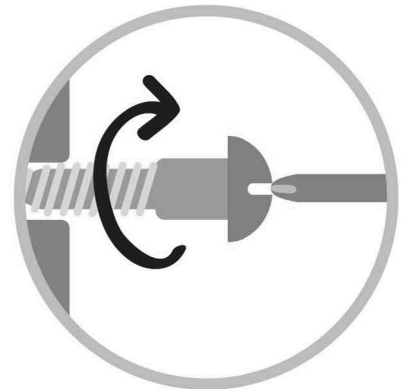

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.





Save the instructions and store
any supplied tools for later
maintenance.

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

QUEEN BED

CM7540Q

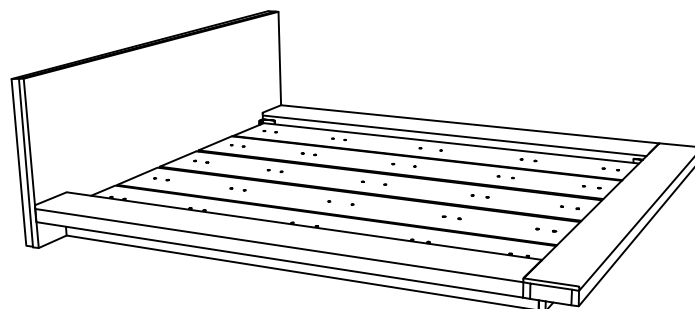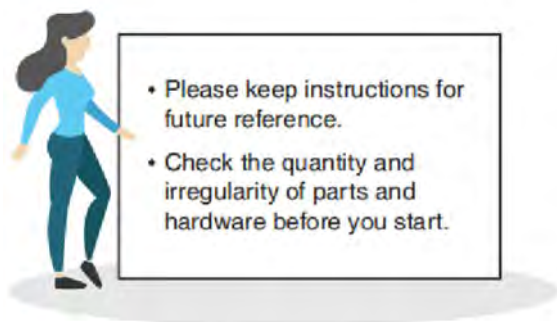
















PARTS
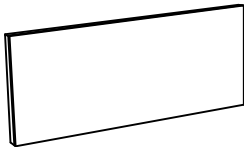
#1 1pc	#2 1pc	#3 2pcs	#4 3pcs	#5 2pcs
Headboard	Footboard	Side Rail	Bed Slat w/o marking -1545 x 45 x 18	Bed Slat with marking -1545 x 45 x 18
#6 5pcs	#7 5pcs			
Bed Slat Support -82 x 30 x 30	Concealed Panel -2040 x 295 x 9			

HARDWARE

#A 5pcs	#B 4pcs	#C 8pcs	#D 4pcs
Bolt 1/4" x 2"	Bolt 5/16" x 2-3/4"	Flat Washer	Wing Nut M8
#E 1pc	#F 1pc	#G 10pcs	#H 25pcs
Allen Key M4	Allen Key M5	CSK m4 x 32mm	P.H Screw m3.5x20mm

CM7540Q is packed in 3 cartons

Carton	Designation	Part		Hardware
CM7540Q-HB	Headboard (1pc)	#1		
CM7540Q-FB	Footboard (1pc)	#2		
CM7540Q-R	Side Rail (2pcs)	#3		 #A x 5pcs  #B x 4pcs  #C x 8pcs  #D x 4pcs  #E x 1pc  #F x 1pc  #G x 10pcs  #H x 25pcs
	Bed Slat w/o marking (3pcs)	#4		
	Bed Slat with marking (2pcs)	#5		
	Bed Slat Support (5pcs)	#6		
	Concealed Panel (5pcs)	#7		

ASSEMBLY INSTRUCTIONS


1

Part #1 x1pc Hardware #B x4pcs


Part #2 x1pc Hardware #C x8pcs

Part #3 x2pcs Hardware #D x4pcs

1) Prepare 4 bolts assembly by inserting (#C) onto bolts (#B). Insert bolts (#B) to headboard (#1) 75% in, then hook side rails (#3) to the bolts (#B) on headboard (#1). Secure by inserting washer (#C) and wing nut (#D) from the back of the headboard (#1) onto bolts (#B).

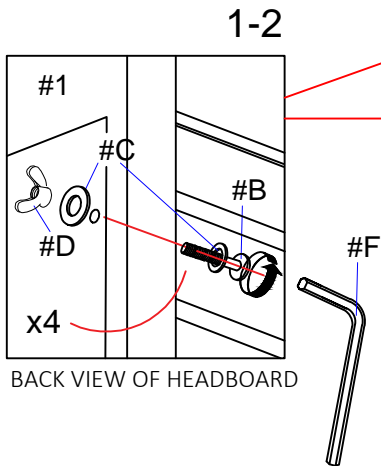


1-1

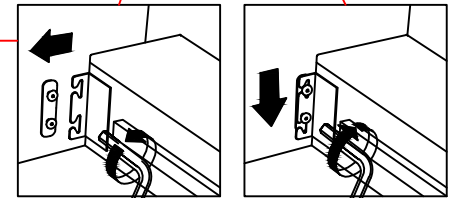

#F

1-3

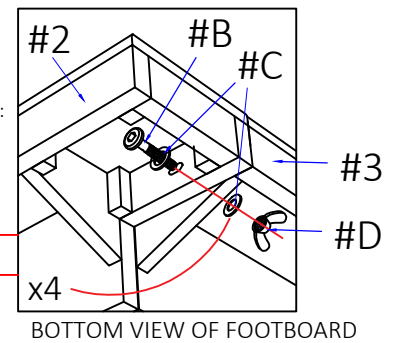

STEP 3:


2) Align footboard (#2) to the bottom holes of the side rails (#3). Insert bolts (#B) from footboard (#2) to side rails (#3), then secure by inserting washer (#C) and wing nut (#D) from the other end of the bolts (#B).

2

Part #4 x3pcs

Part #5 x2pcs

Hardware #A x5pcs

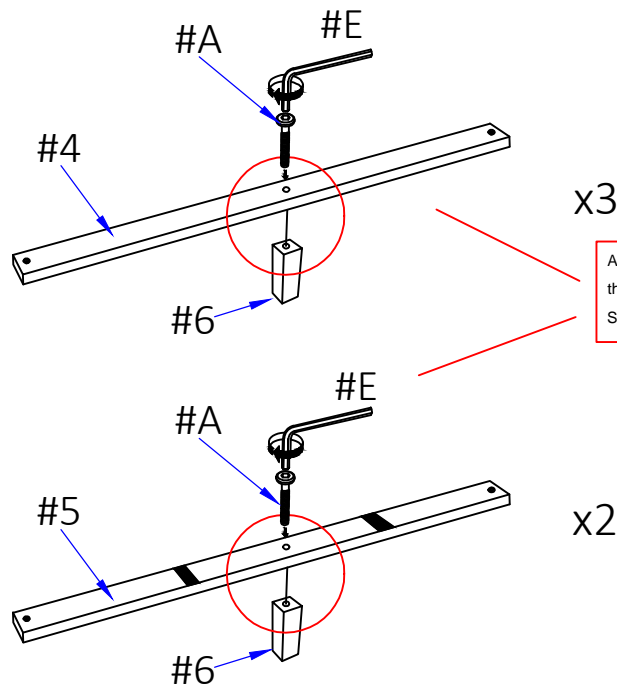


Align slat support legs (#6) to the holes of the slats (#4,5). Secure by using bolts (#A).

ASSEMBLY INSTRUCTIONS

3


Hardware  x10pcs

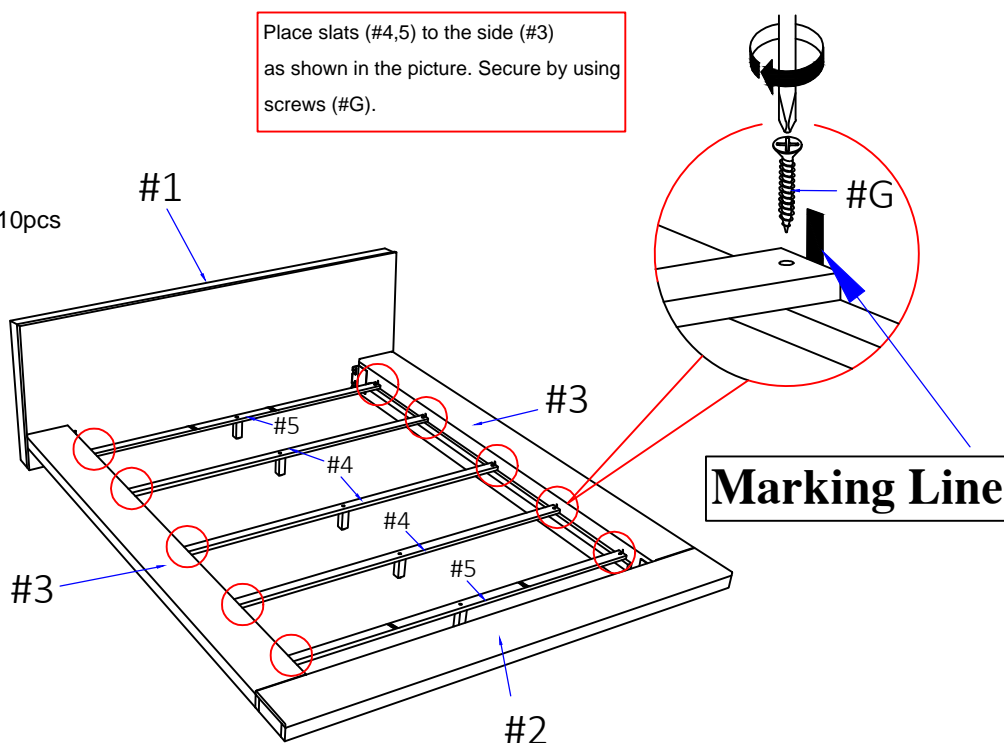

4

Part  x5pcs
Hardware  x25pcs


- 1) Please refer to steps (#5) on how to align and place concealed panels(#7) correctly.
- 2) Secure concealed panels (#7) to bed slats by using screws (#H).

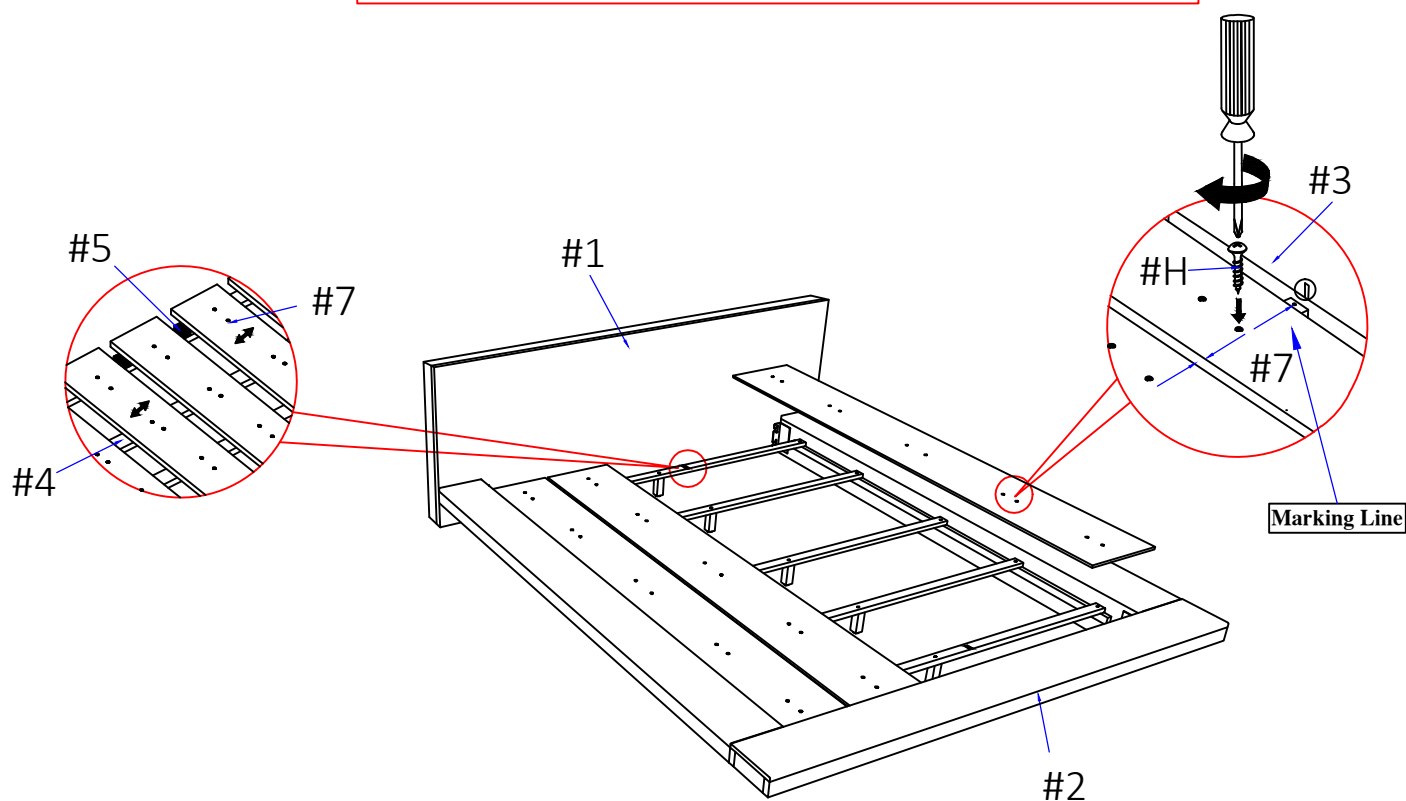


ASSEMBLY INSTRUCTIONS

5

This is how the concealed panel (#7)
look like on the bed from a high view.

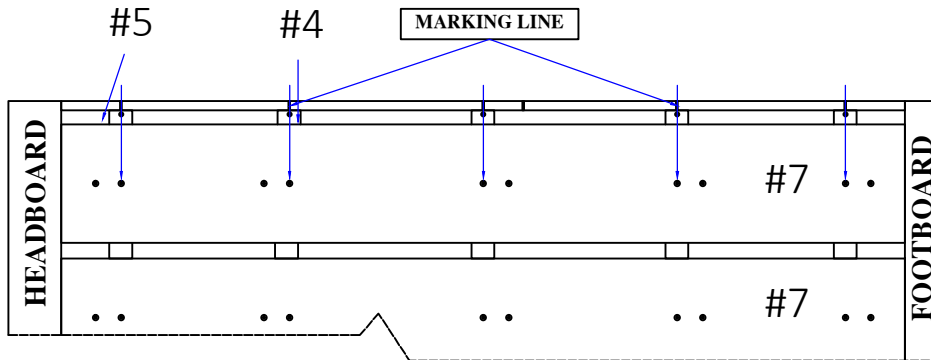

6

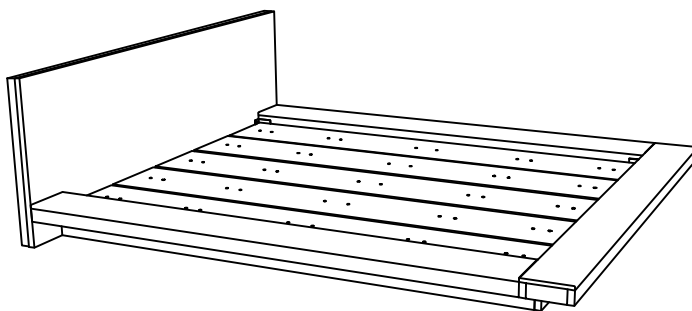

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.