

ASSEMBLY INSTRUCTIONS

MODEL #

CM7683EK

Questions?

GIVE US CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED




Allen Wrench

(Included)



Phillips
Screwdriver

(Not Included)

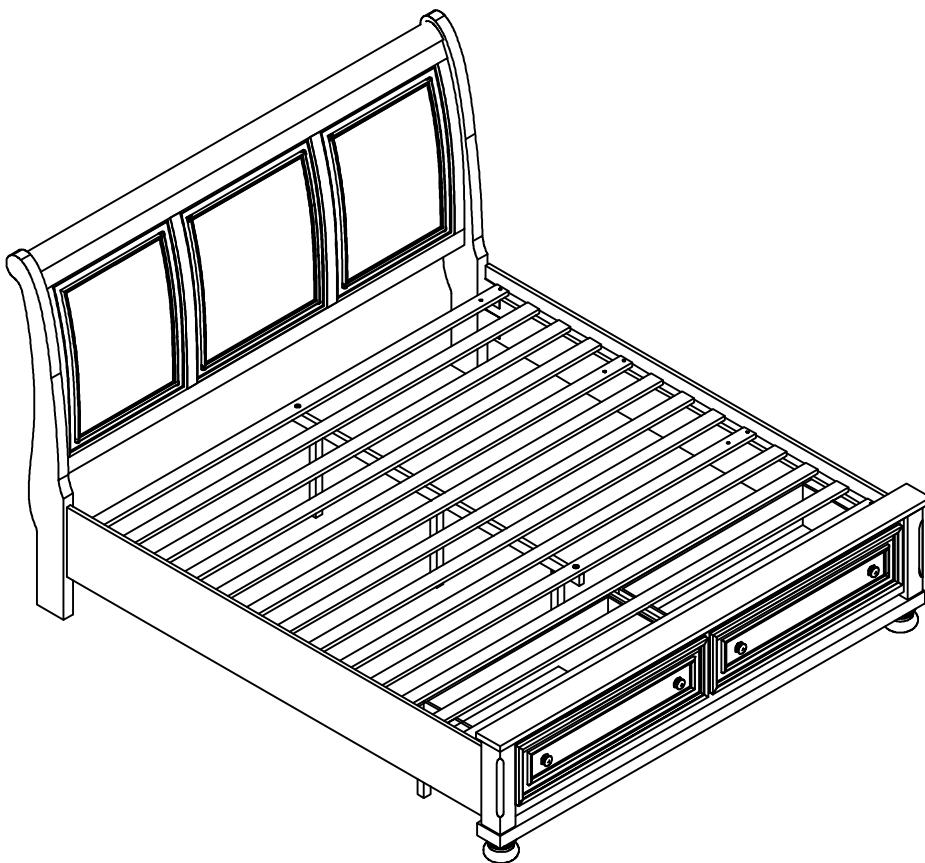

3 - People
Recommended

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

 **Consumer Hotline**
Toll-Free 1-888-980-5122

 **WEBSITE**
www.foagroup.com

    foagroup

 **Monday to Friday**
8:30AM- 5:30PM (PST)

 **E-MAIL**
cs.ec@foagroup.com

 FurnitureOfAmerica

CHECK BEFORE STARTING

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

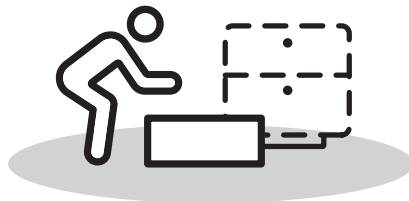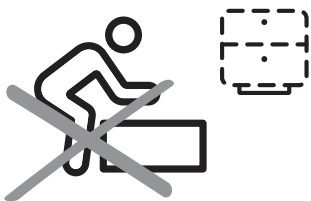

Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

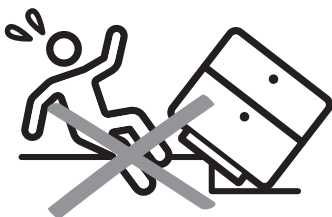

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

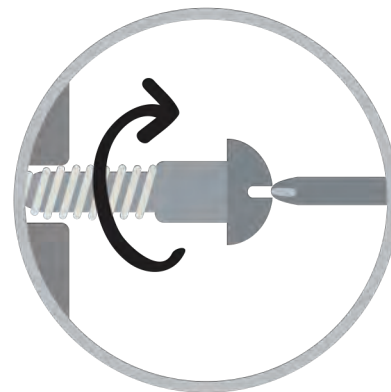

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

BED

CM7683EK




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

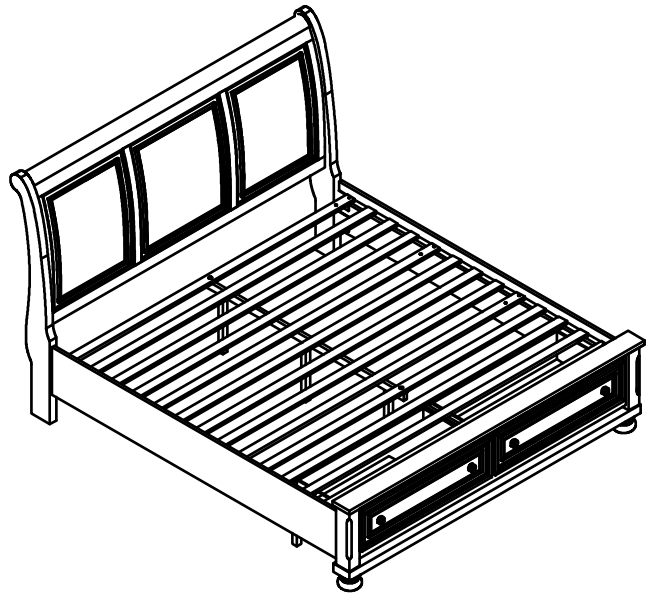

PARTS

#1 1pc

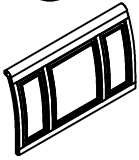


Headboard

#2 2pcs




Headboard Leg(L/R)

#3 1pc

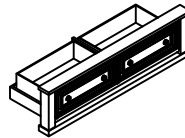


Footboard

#4 2pcs



Footboard Leg

#5 3pcs

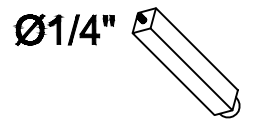


Support Leg
32x32x150mm

#6 2pcs




Side Rail

#7 1Set

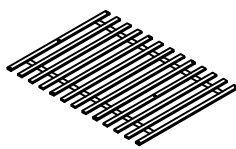


Slat

#8 1pc



Support Rail


#9 3pcs

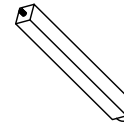

Rail Support Leg
32x32x357mm

HARDWARE

#A 6pcs




Bolt Ø5/16x1-3/4"

#B 6pcs




Lock Washer
Ø5/16

#C 6pcs



Flat Washer
Ø5/16

#D 1pc



Allen Wrench M5

#E 2pcs



Bolt Ø1/4x1-1/4"

#F 2pcs



Lock Washer
Ø1/4

#G 1pc




Flat Washer
Ø1/4

#H 8pcs




Screw #8x30mm

#I 2pcs




Wood Dowel

#J 1pc








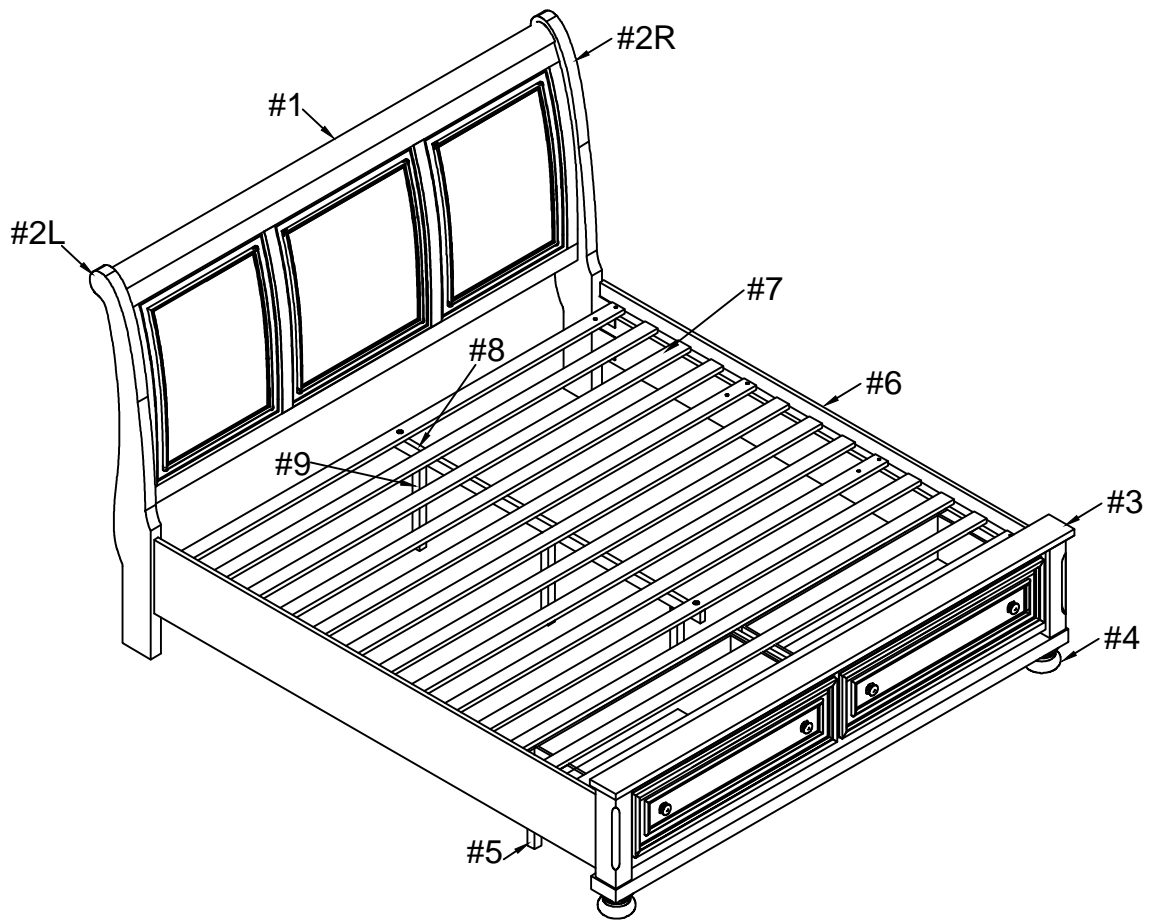








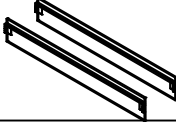




Allen Wrench M4

Exploded View

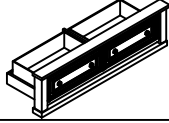

CM7683EK is packed in 3 cases


Carton	Disignation	Part	Hardware
CM7683EK-HB	Headboard	#1 	 #A x 6pcs  #B x 6pcs  #Cx 6pcs  #D x 1pc  #Ix 2pcs
	Headboard Leg	#2 	
CM7683EK-FB	Footboard	#3 	 #E x 2pcs  #F x 2pcs  #Gx 1pcs  #Hx 8pcs  #J x 1pc
	Footboard Leg	#4 	
	Support Leg	#5 	
	Slat	#7 	
CM7683EK-R	Side Rail	#6 	
	Support Rail	#8 	
	Rail Support Leg	#9 	

ASSEMBLY INSTRUCTIONS

1

- Part #1 x1pc
- Part #2 x2pcs
- Hardware #A x6pcs
- Hardware #B x6pcs
- Hardware #C x6pcs
- Hardware #I x2pcs


1) Attach wood dowels (#I) to the top hole of each headboard legs (#2R/L).

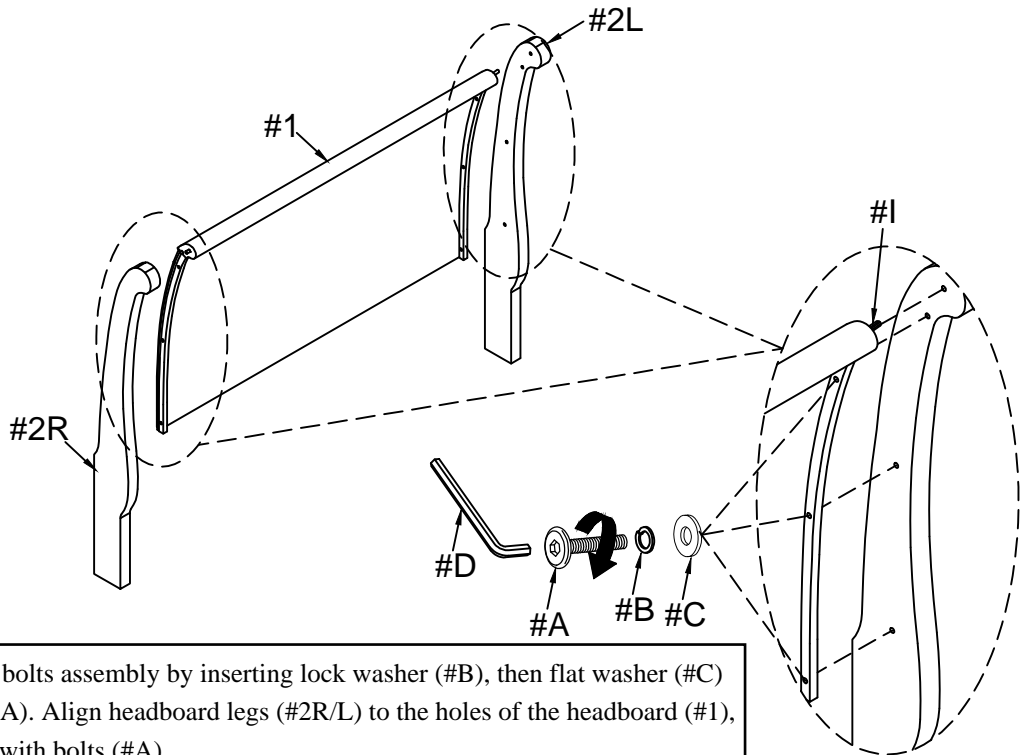

2) Prepare 6 bolts assembly by inserting lock washer (#B), then flat washer (#C) onto bolts (#A). Align headboard legs (#2R/L) to the holes of the headboard (#1), then secure with bolts (#A).

2

- Part #3 x1pc
- Part #4 x2pcs

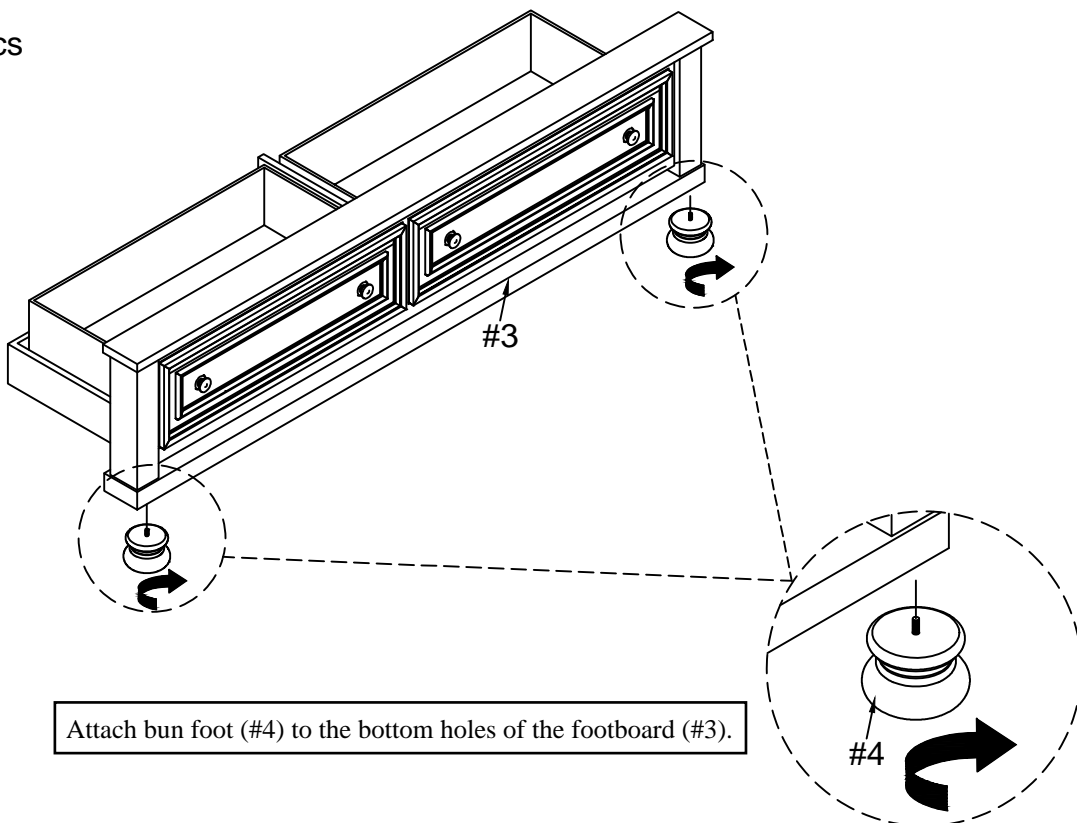


Attach bun foot (#4) to the bottom holes of the footboard (#3).

ASSEMBLY INSTRUCTIONS

3

Attach support legs (#5) to the holes at the bottom of the footboard (#3).
Adjust adjustable foot according to the ground level.


Part #5 x3pc

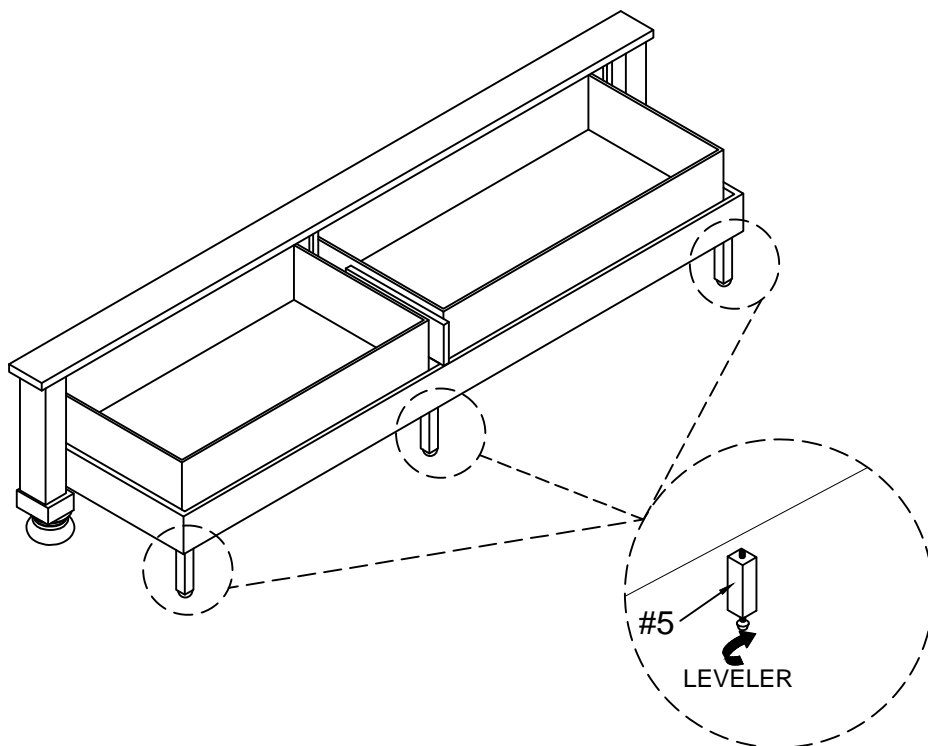

4

Part #6 x2pcs

Hook the side rails (#6) to the latch of the headboard (#1) and footboard (#3).
Make sure it is firmly in place.

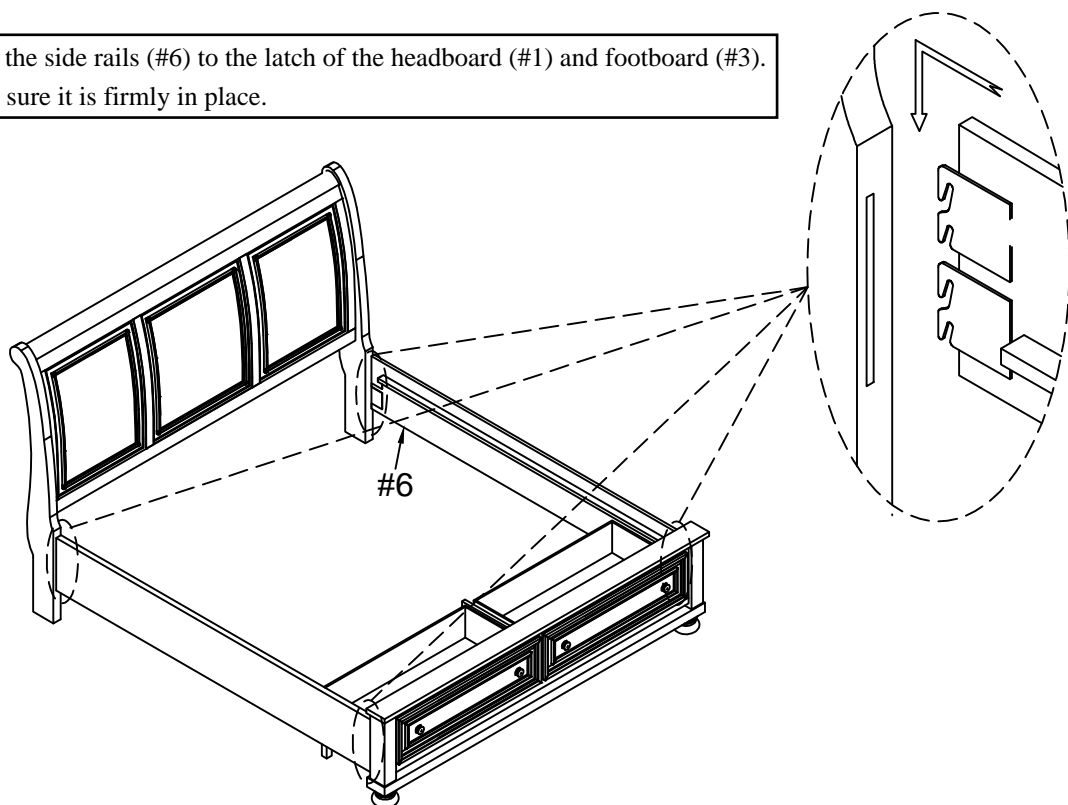


ASSEMBLY INSTRUCTIONS

5

Part #8 x 1pc

Part #9 x 3pcs

Attach support legs (#9) to the holes of the support rails (#8).
Adjust adjustable foot according to ground level.

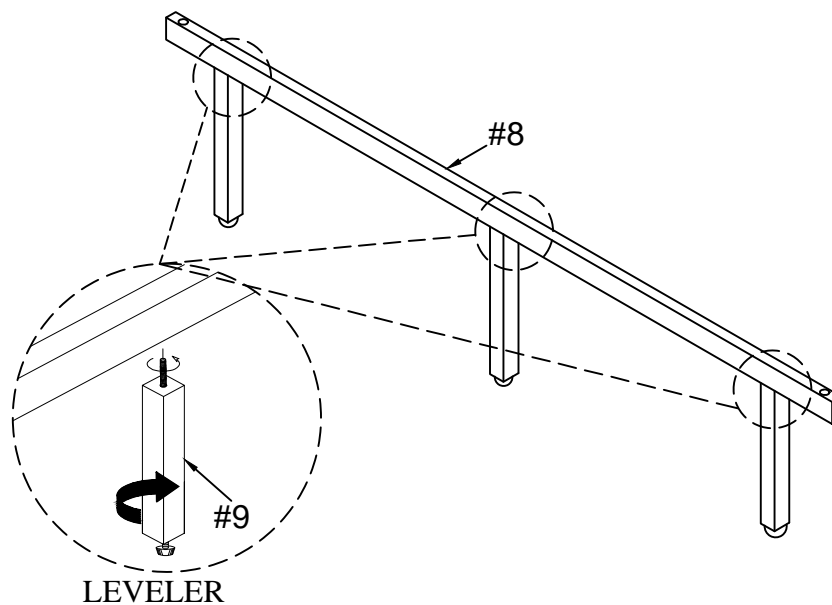

6


Part #7 x 1Set

Hardware #E x 2pcs

Hardware #F x 2pcs

Hardware #G x 2pcs

Prepare 2 bolts assembly by inserting lock washer (#F), then flat washer (#G) onto bolts (#E).
Align slats (#7) to the holes of the support rail (#8). Secure with bolts (#E).


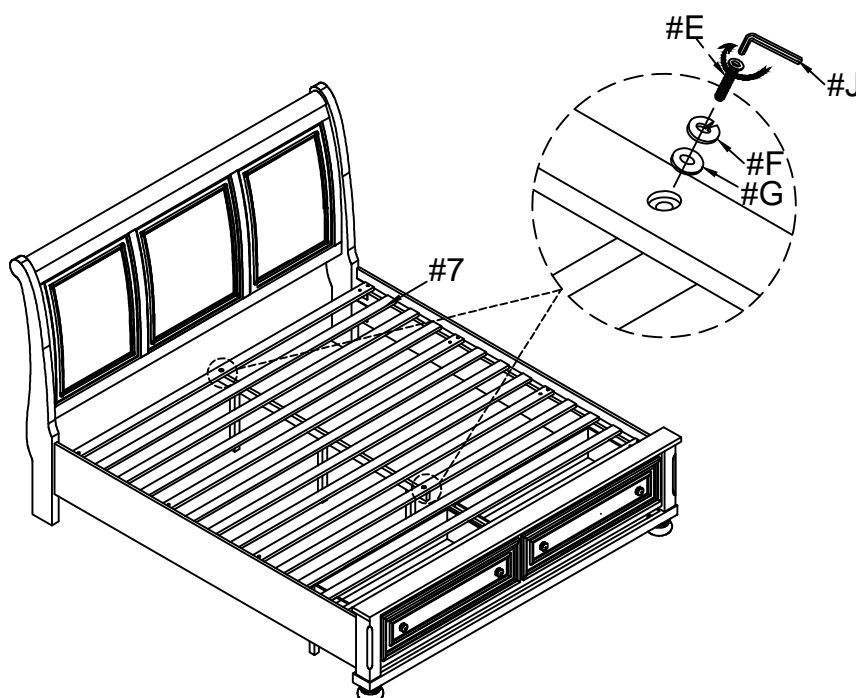


ASSEMBLY INSTRUCTIONS


7

Hardware (#H) x8pcs

Secure slats (#7) to the side rails (#6) with screws (#H).

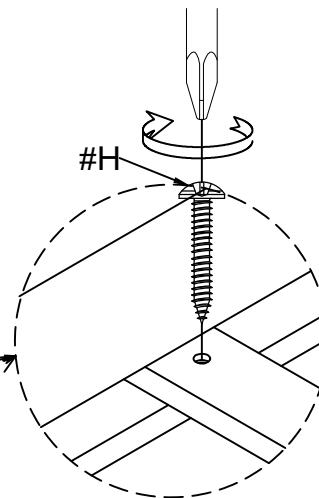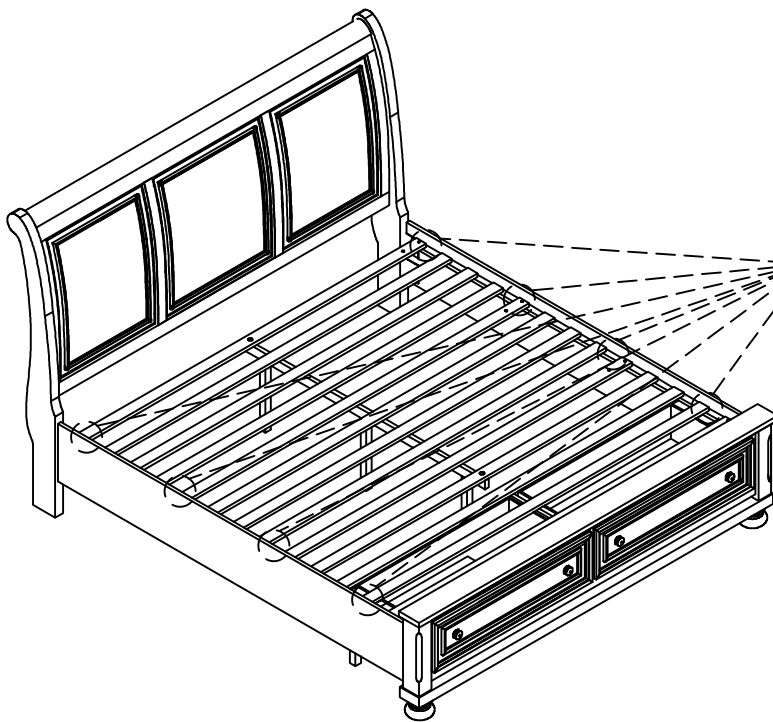

8

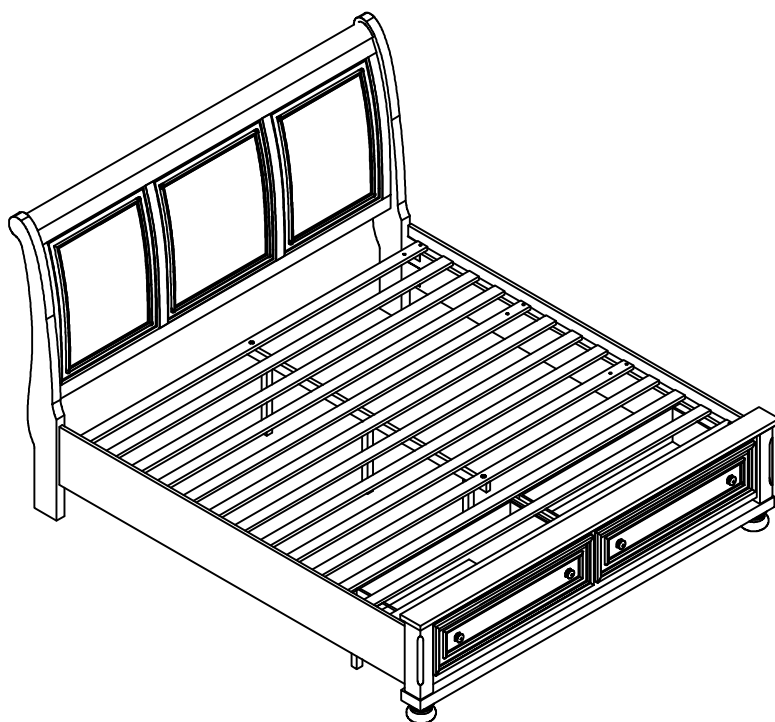

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.