


ASSEMBLY INSTRUCTIONS

Model : Callie-Brown-FB-HB/FB
Callie-Brown-FB-SR/Slats
Callie-Brown-FB-FB DWR


Description : Full Bed Headboard & Footboard
Full Bed Side Rails & Slats
Full Bed Footboard Drawers

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment


PART LIST : HEADBOARD & FOOTBOARD BOX

No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Footboard		1 pc
C	Headboard Leg (L)		1 pc
D	Headboard Leg (R)		1 pc
E	Storage Rail		1 pc

PART LIST : SIDE RAILS BOX

No	Description	Diagram	Quantity
F	Side rail		2 pcs
G	Center slat Support		2 pcs
H	Bed slat		14 pcs
I	Bed slat support		4 pcs
J	Storage Box Wood Support		1 pc

PART LIST : STORAGE SIDE RAILS BOX

No	Description	Diagram	Quantity
K	Drawer		2 pcs

HARDWARE LIST


PACKED IN HEADBOARD

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	6 pcs
2	Spring Washer		Spring Washer 1/4" Blk	6 pcs
3	Flat Washer		Flat Washer 1/4" ID 13mm OD Blk	6 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
6	Adaptor			

HARDWARE LIST

PACKED IN SIDE RAILS

No	Description	Diagram	Size	Quantity
7	Flat Head Chipboard Screw		CSK M4 x 32mm	28 pcs
8	JCBC Bolt		M6 x 35mm	6pcs
9	JCBC Bolt		M6 x 50mm	5 pcs
10	Spring Washer		Spring Washer 1/4" Blk	6 pcs
11	Flat Washer		Flat Washer 1/4" ID 19mm OD Bl	6 pcs
12	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
13	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
14	Flat Washer		Flat Washer 1/4" ID 13mm OD Bl	4 pcs
15	Flat Head Chipboard Screw		CSK M4 x 20mm	2 pcs

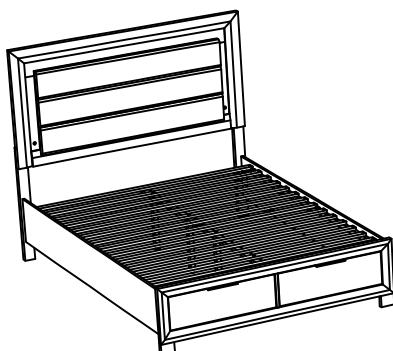


COMPLETE ASSEMBLY



1 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


STEP 1 : Attach Head Board Leg (C & D) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

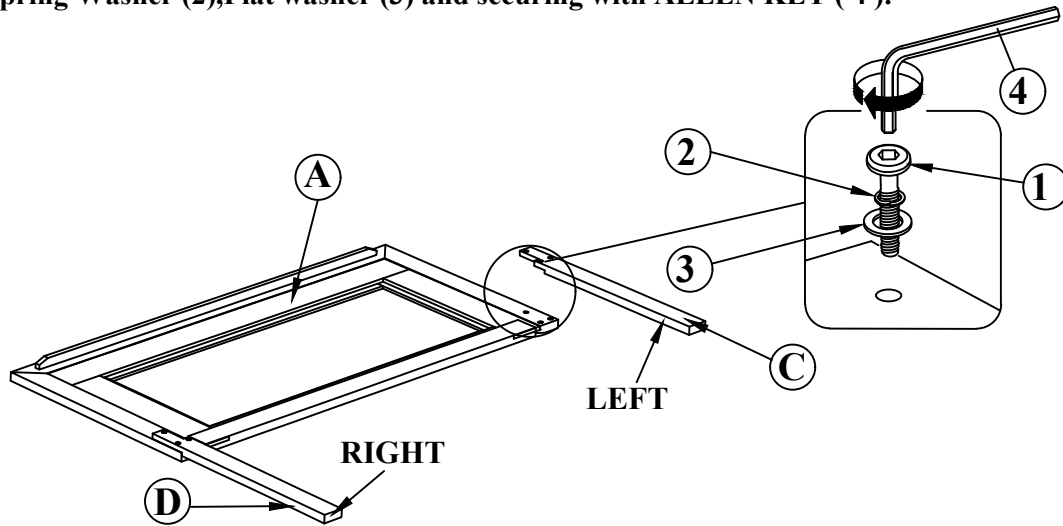


STEP 2 : Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (5). Attach the Side Rail (F) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. Tighten the JCBB Bolt by ALLEN KEY (5).

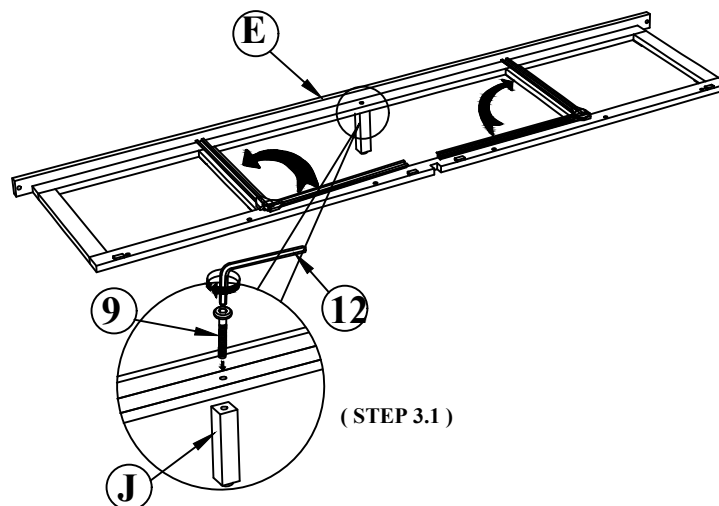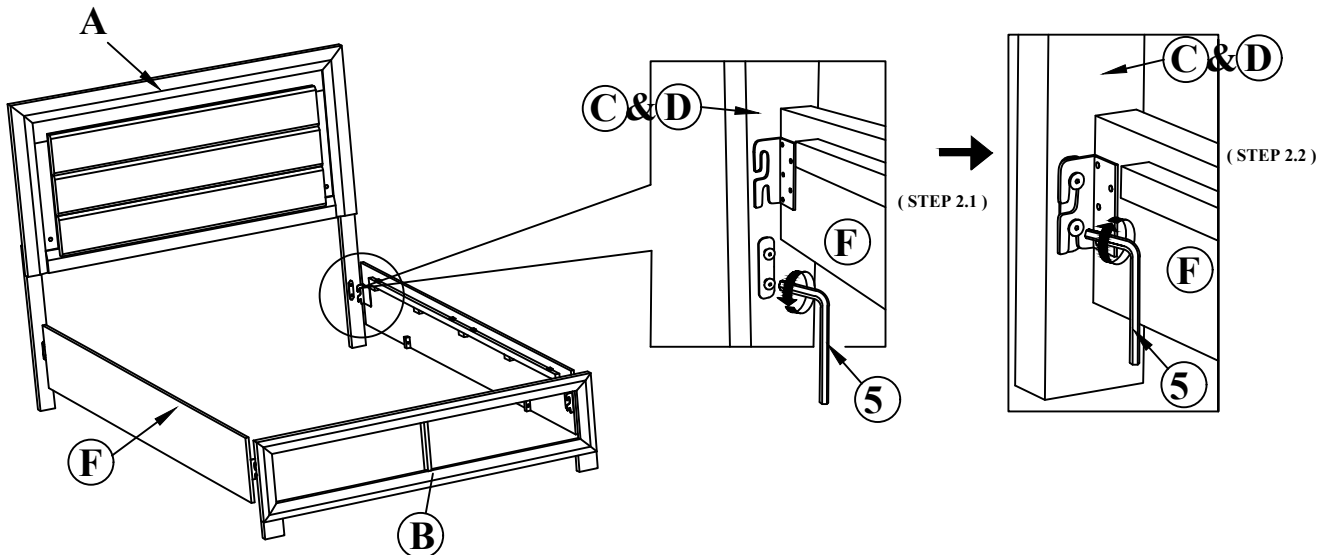


STEP 4 : Attach the Storage Rail (E) between Footboard (B) and side rails (F) as shown.

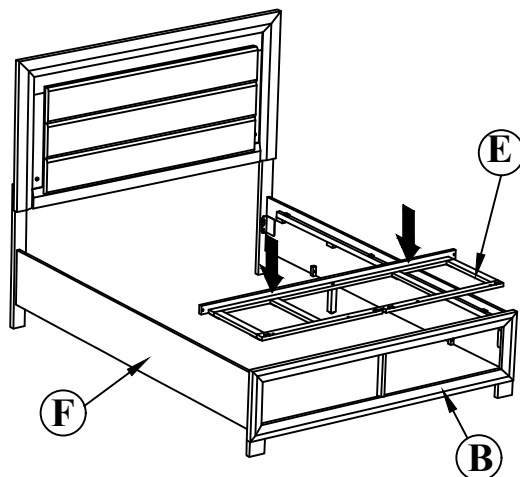

STEP 5: Tighten the Storage Rail (E) to Footboard (B) as shown. Using JCBC BOLT (8) with Spring Washer (10), Flat washer (11) and securing with ALLEN KEY (12).

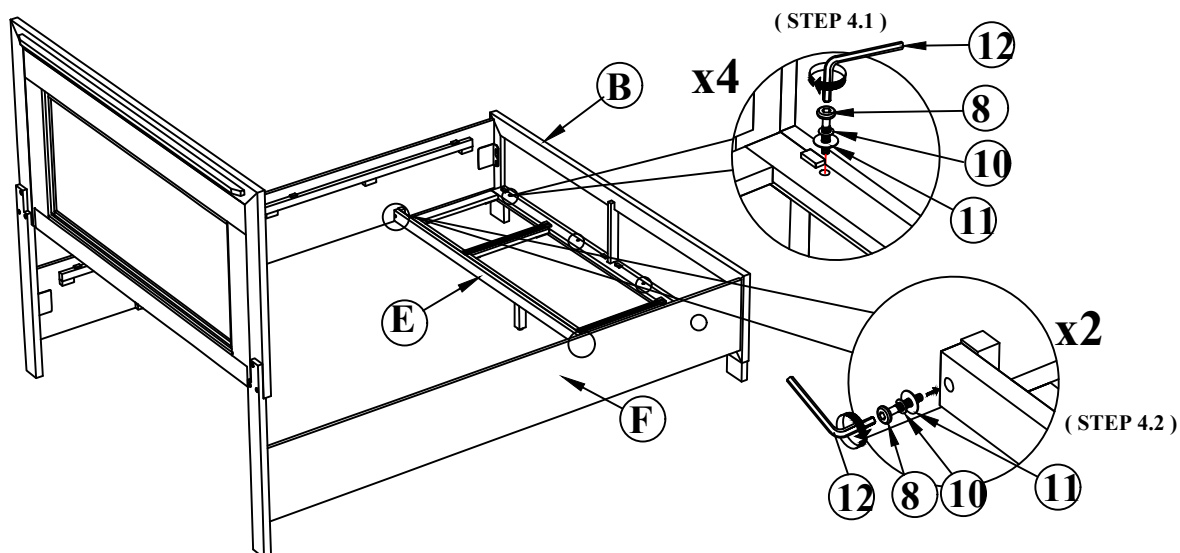



STEP 6 : Insert the Drawer (K) at the Storage Rail (E).Align drawer and using CSK Screw(15).Then tighten with Screw Driver(Not Included)

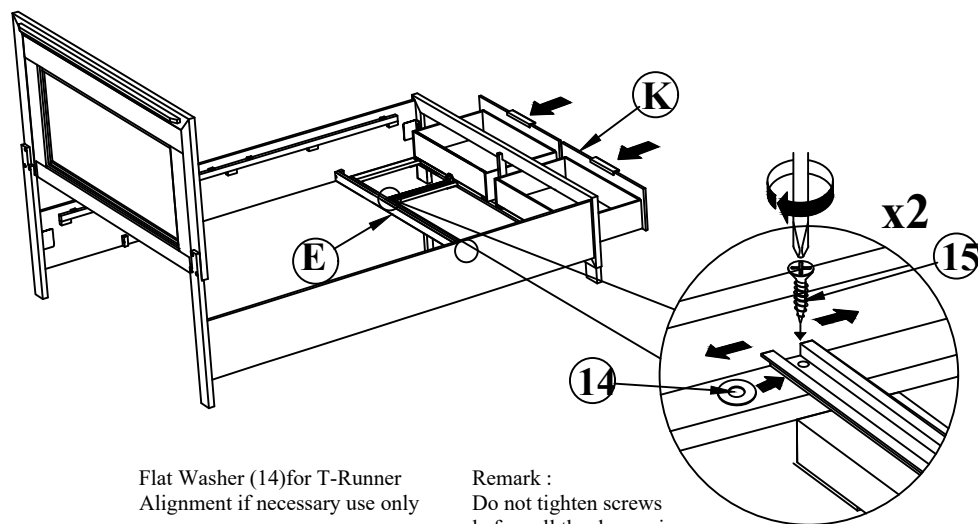


Flat Washer (14) for T-Runner
Alignment if necessary use only

Remark :
Do not tighten screws
before all the drawer in
perfect position.


**STEP 7 : Attach Bed slat support (I) and Center slat Support (G)to bed slat (H)as shown.
Then Using JCBC Bolt (8) and securing with ALLEN KEY (11).**

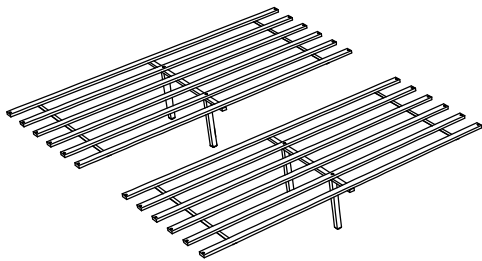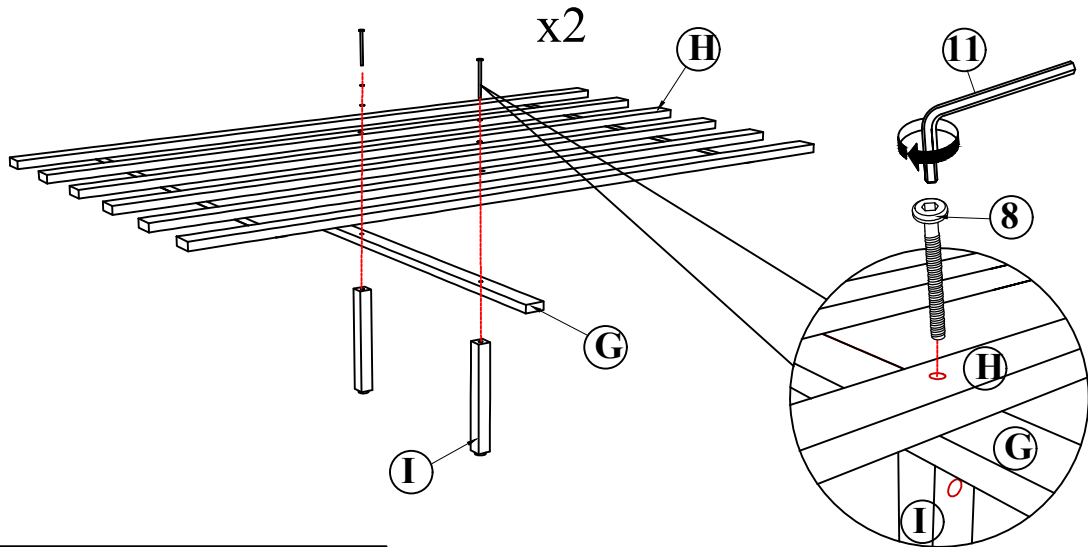


STEP 8 :Install the slat assembly as shown.

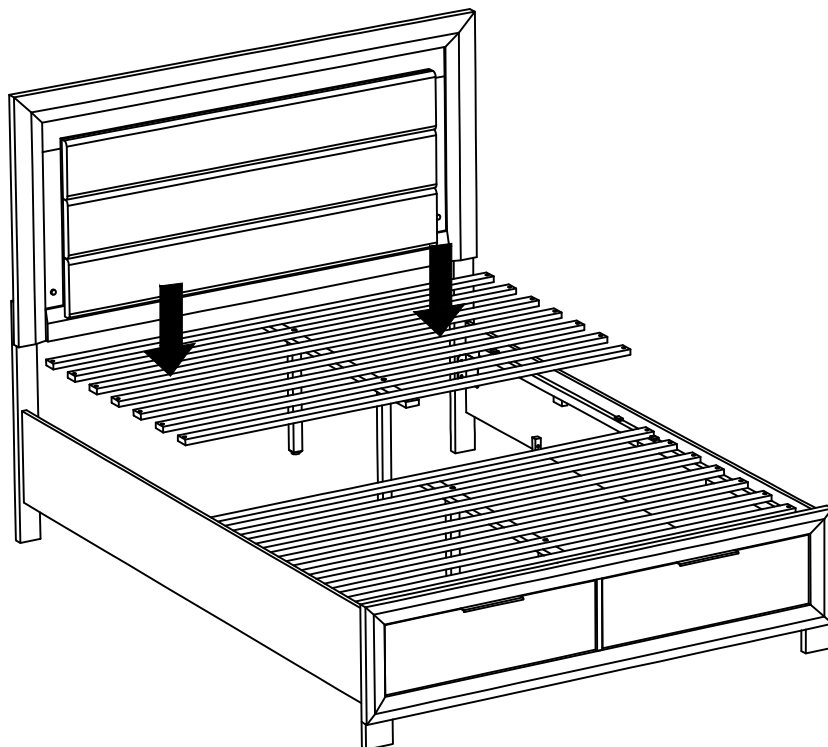

**STEP 9 : Fix the Bed Slat (H) by push closely to the Side Rail (F) by using CSK Screw (7) .
Then securing with screw driver(not include) as shown.**

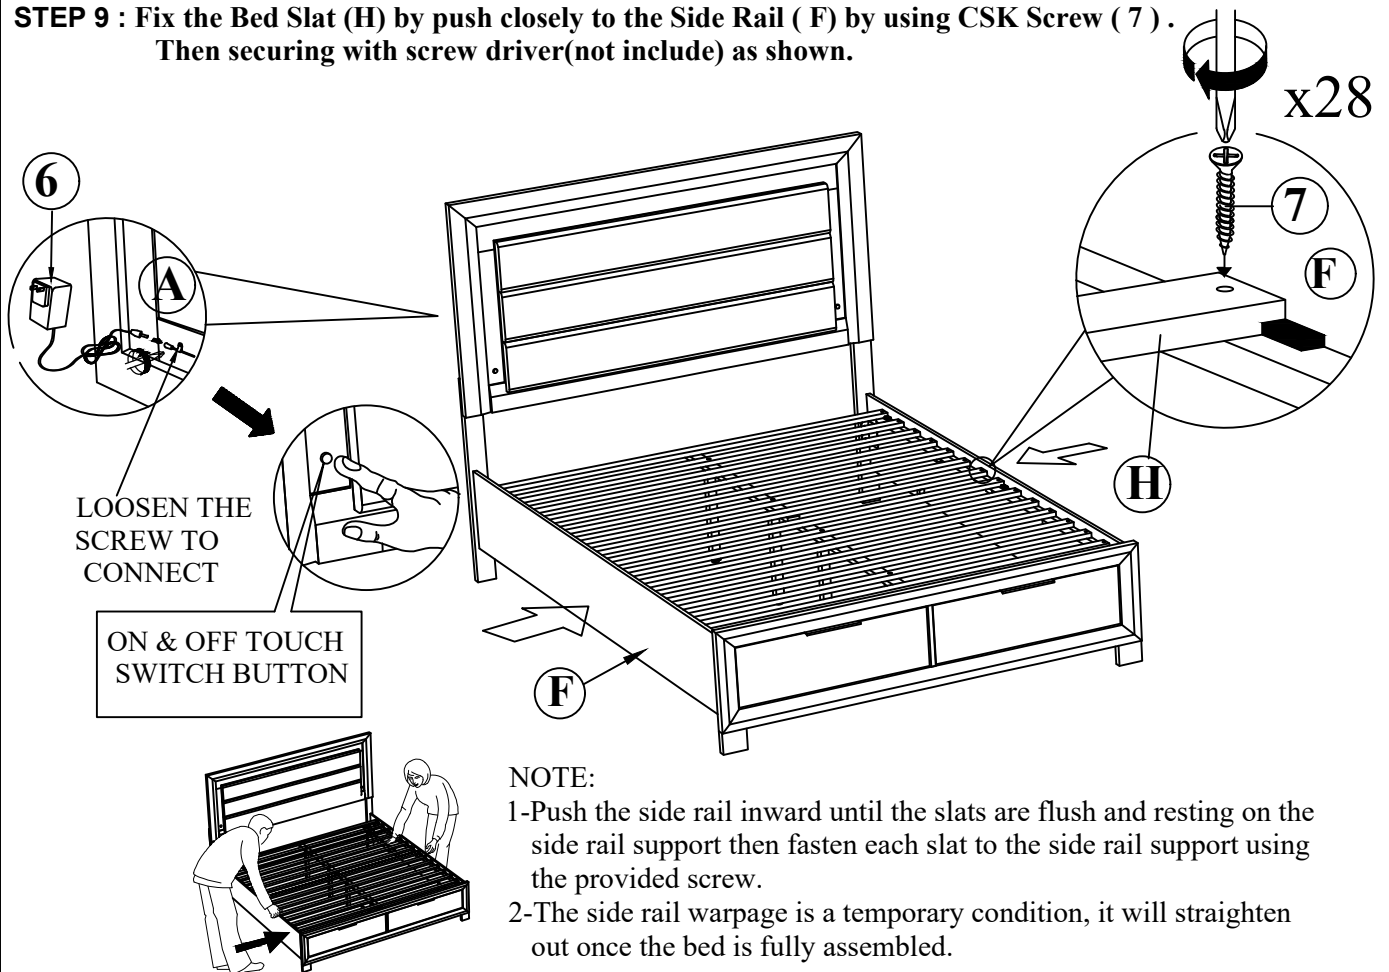

STEP 10:

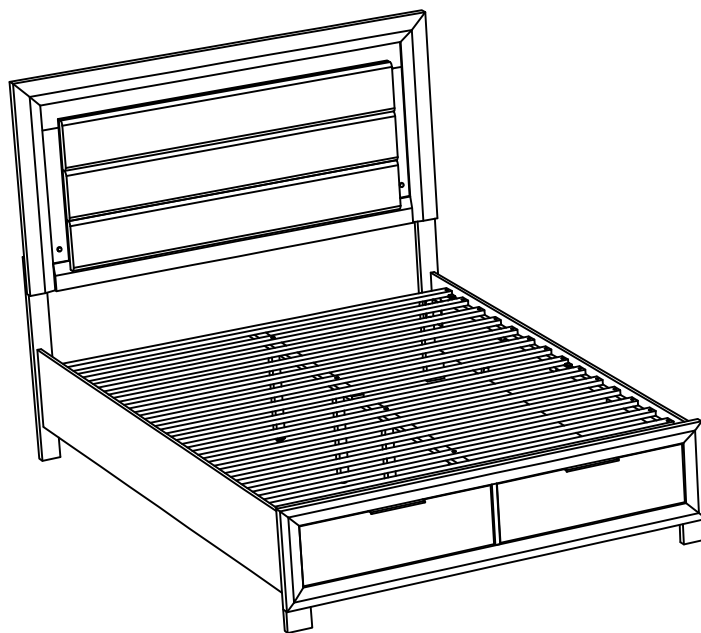

COMPLETED ASSEMBLY 5 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

Model : Callie-Brown-KB-HB/FB
Callie-Brown-KB-SR/Slats
Callie-Brown-KB-FB DWR


Description : King Bed Headboard & Footboard
King Bed Side Rails & Slats
King Bed Footboard Drawers

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment


PART LIST : HEADBOARD & FOOTBOARD BOX

No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Footboard		1 pc
C	Headboard Leg (L)		1 pc
D	Headboard Leg (R)		1 pc
E	Storage Rail		1 pc

PART LIST : SIDE RAILS BOX

No	Description	Diagram	Quantity
F	Side rail		2 pcs
G	Center slat Support		2 pcs
H	Bed slat		14 pcs
I	Bed slat support		4 pcs
J	Storage Box Wood Support		1 pc

PART LIST : STORAGE SIDE RAILS BOX

No	Description	Diagram	Quantity
K	Drawer		2 pcs

HARDWARE LIST


PACKED IN HEADBOARD

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	6 pcs
2	Spring Washer		Spring Washer 1/4" Blk	6 pcs
3	Flat Washer		Flat Washer 1/4" ID 13mm OD Blk	6 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
6	Adaptor			1 pc

HARDWARE LIST

PACKED IN SIDE RAILS

No	Description	Diagram	Size	Quantity
7	Flat Head Chipboard Screw		CSK M4 x 32mm	28 pcs
8	JCBC Bolt		M6 x 35mm	8pcs
9	JCBC Bolt		M6 x 50mm	5 pcs
10	Spring Washer		Spring Washer 1/4" Blk	8 pcs
11	Flat Washer		Flat Washer 1/4" ID 19mm OD Bl	8 pcs
12	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
13	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
14	Flat Washer		Flat Washer 1/4" ID 13mm OD Bl	4 pcs
15	Flat Head Chipboard Screw		CSK M4 x 20mm	2 pcs

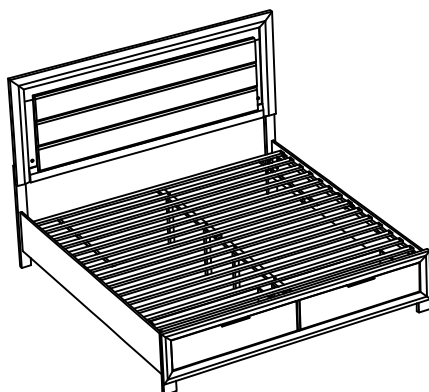


COMPLETE ASSEMBLY


1 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


STEP 1 : Attach Head Board Leg (C & D) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

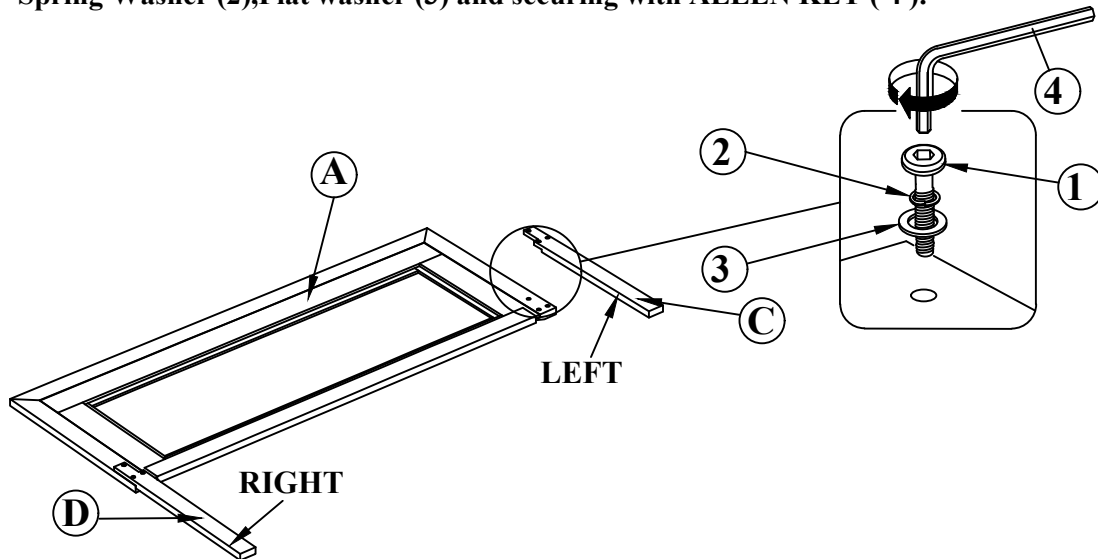


STEP 2 : Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (5). Attach the Side Rail (F) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. Tighten the JCBB Bolt by ALLEN KEY (5).

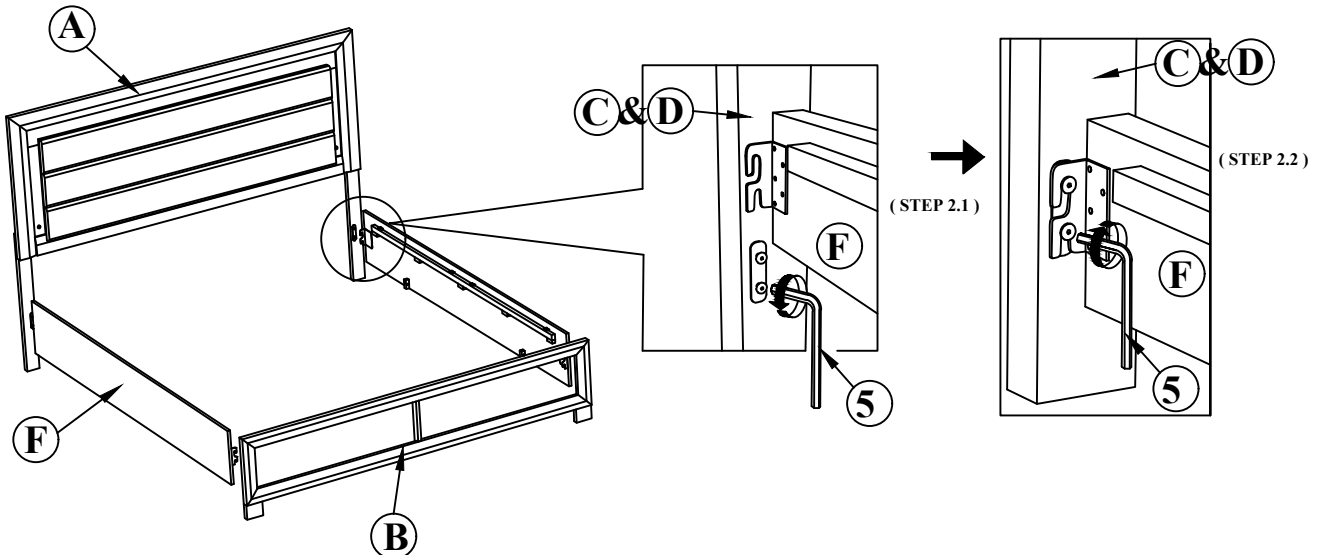


STEP 3 : Turn T-slide as shown(Kenlin Metal). Attach the storage box wood support (J) to storage rail (E) with using JCBC bolt (9) and securing with Allen Key (12) as shown.

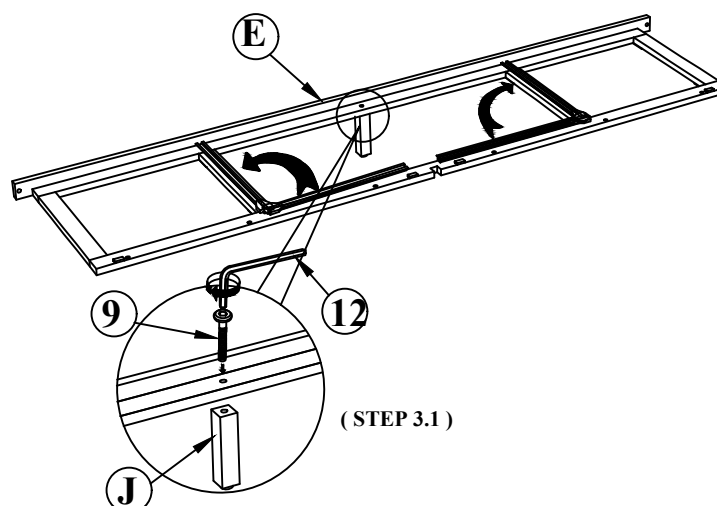


STEP 4 : Attach the Storage Rail (E) between Footboard (B) and side rails (F) as shown.

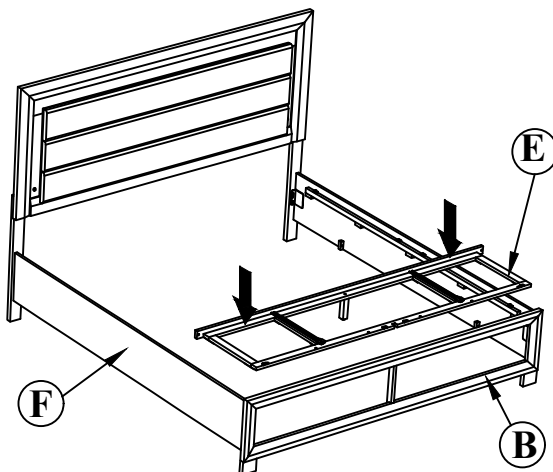

STEP 5: Tighten the Storage Rail (E) to Footboard (B) as shown. Using JCBC BOLT (8) with Spring Washer (10), Flat washer (11) and securing with ALLEN KEY (12).

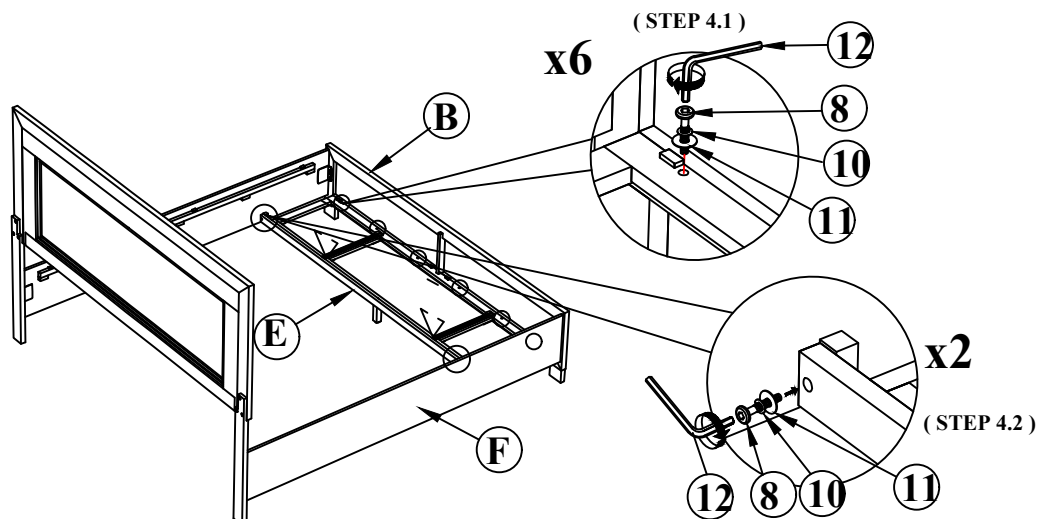



STEP 6 : Insert the Drawer (K) at the Storage Rail (E).Align drawer and using CSK Screw(15).Then tighten with Screw Driver(Not Included)

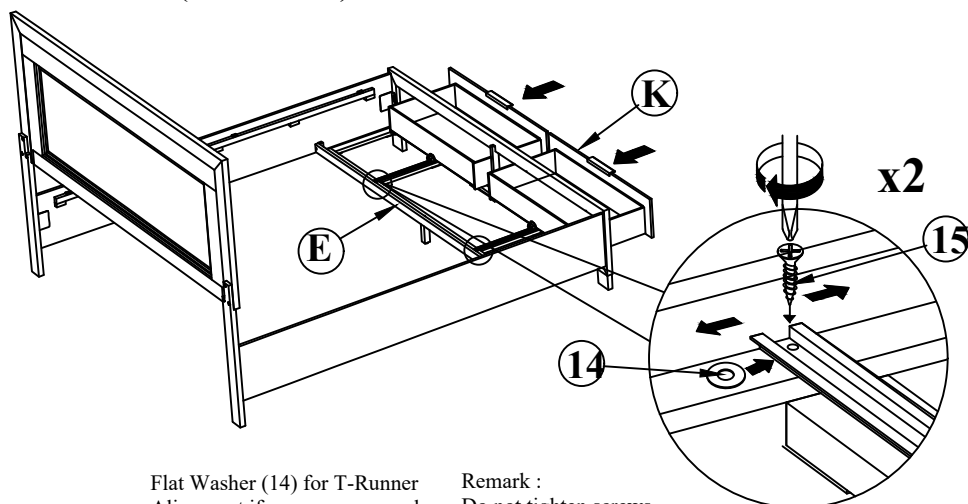


Flat Washer (14) for T-Runner
Alignment if necessary use only

Remark :
Do not tighten screws
before all the drawer in
perfect position.



**STEP 7 : Attach Bed slat support (I) and Center slat Support (G)to bed slat (H)as shown.
Then Using JCBC Bolt (9) and securing with ALLEN KEY (12).**

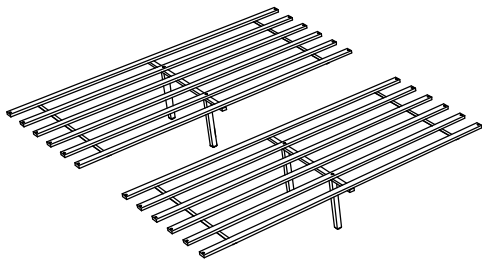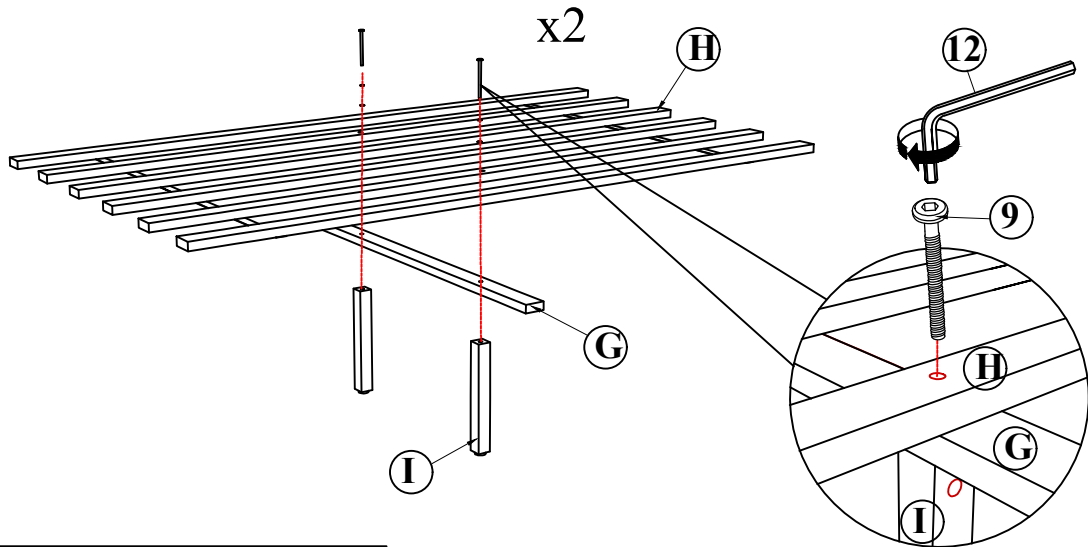

STEP 8 :Install the slat assembly as shown.

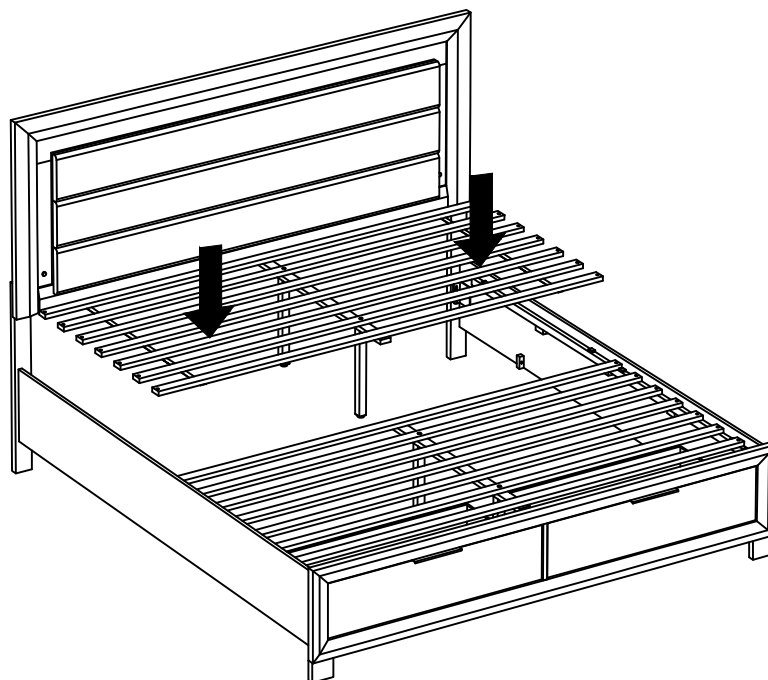


**STEP 9 : Fix the Bed Slat (H) by push closely to the Side Rail (F) by using CSK Screw (7) .
Then securing with screw driver(not include) as shown.**

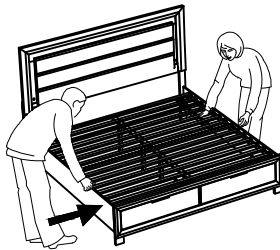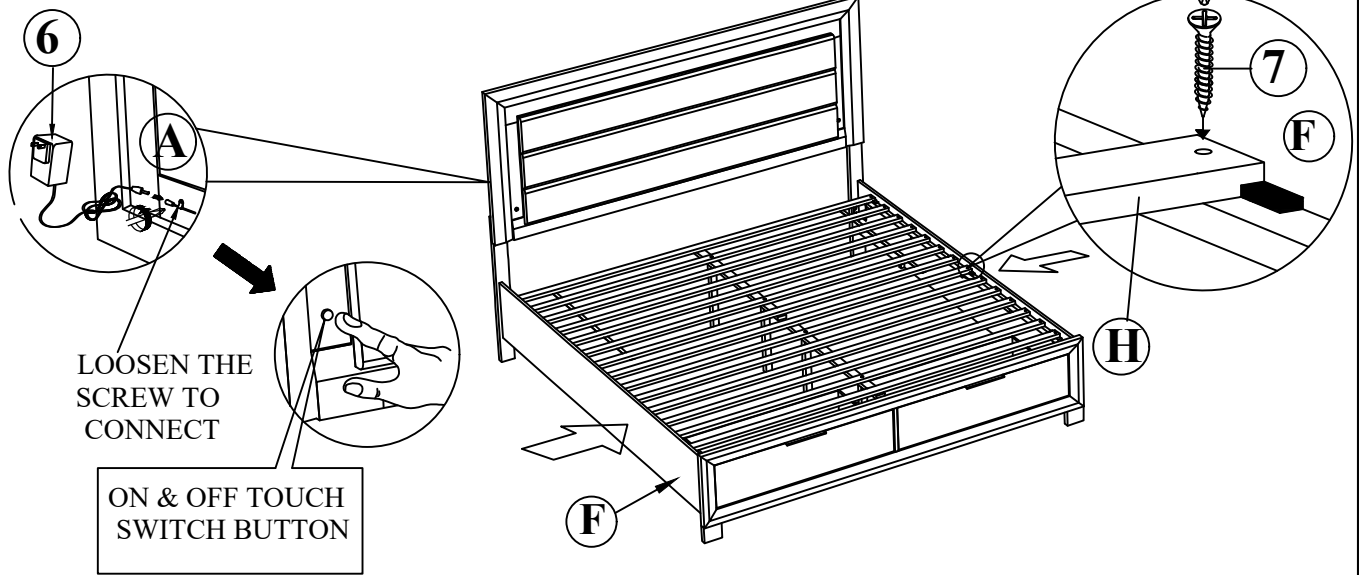

NOTE:

- 1-Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.
- 2-The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.

STEP 10:

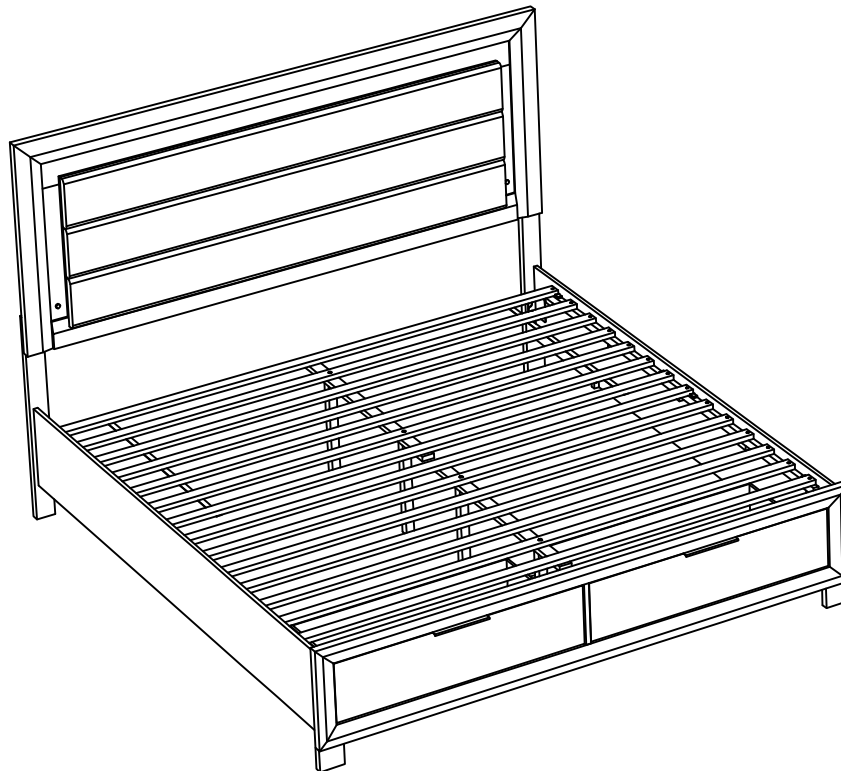

COMPLETED ASSEMBLY 5 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

Model : Callie-Brown-QB-HB/FB
Callie-Brown-QB-SR/Slats
Callie-Brown-QB-FB DWR


Description : Queen Bed Headboard & Footboard
Queen Bed Side Rails & Slats
Queen Bed Footboard Drawers

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment


PART LIST : HEADBOARD & FOOTBOARD BOX


No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Footboard		1 pc
C	Headboard Leg (L)		1 pc
D	Headboard Leg (R)		1 pc
E	Storage Rail		1 pc

PART LIST : SIDE RAILS BOX

No	Description	Diagram	Quantity
F	Side rail		2 pcs
G	Center slat Support		2 pcs
H	Bed slat		14 pcs
I	Bed slat support		4 pcs
J	Storage Box Wood Support		1 pc

PART LIST : STORAGE SIDE RAILS BOX

No	Description	Diagram	Quantity
K	Drawer		2 pcs

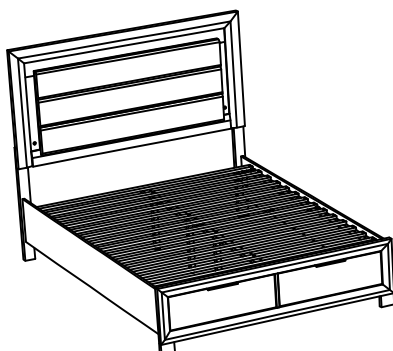

HARDWARE LIST

PACKED IN HEADBOARD

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	6 pcs
2	Spring Washer		Spring Washer 1/4" Blk	6 pcs
3	Flat Washer		Flat Washer 1/4" ID 13mm OD Blk	6 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
6	Adaptor			

HARDWARE LIST

PACKED IN SIDE RAILS


No	Description	Diagram	Size	Quantity
7	Flat Head Chipboard Screw		CSK M4 x 32mm	28 pcs
8	JCBC Bolt		M6 x 35mm	6pcs
9	JCBC Bolt		M6 x 50mm	5 pcs
10	Spring Washer		Spring Washer 1/4" Blk	6 pcs
11	Flat Washer		Flat Washer 1/4" ID 19mm OD Bl	6 pcs
12	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
13	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
14	Flat Washer		Flat Washer 1/4" ID 13mm OD Bl	4 pcs
15	Flat Head Chipboard Screw		CSK M4 x 20mm	2 pcs

COMPLETE ASSEMBLY



1 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


STEP 1 : Attach Head Board Leg (C & D) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

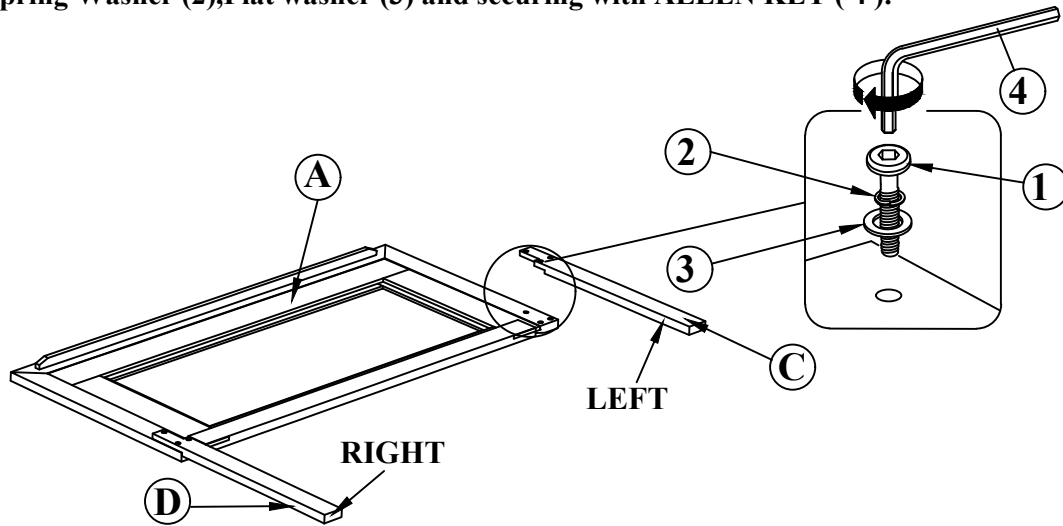


STEP 2 : Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (5).
Attach the Side Rail (F) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it.
Tighten the JCBB Bolt by ALLEN KEY (5).

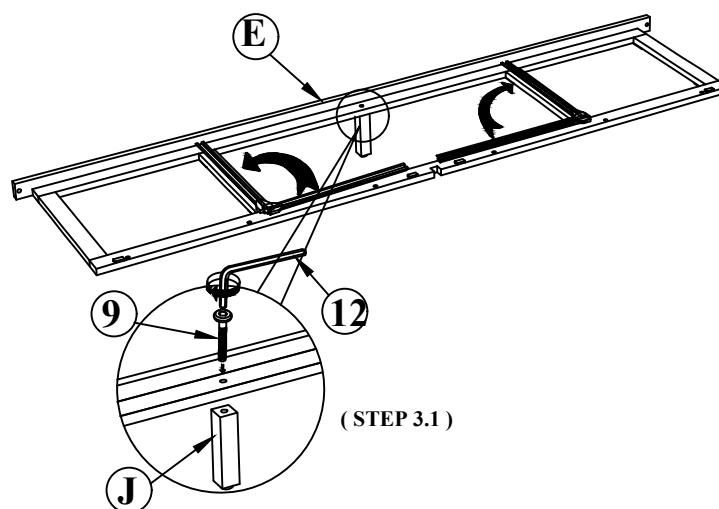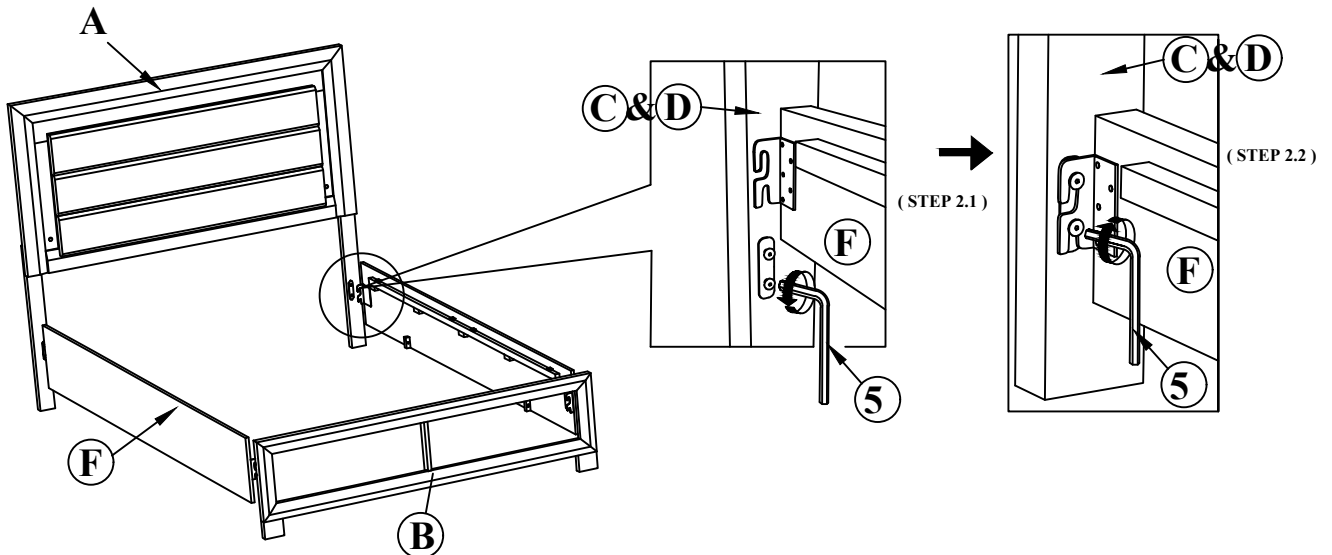


STEP 4 : Attach the Storage Rail (E) between Footboard (B) and side rails (F) as shown.

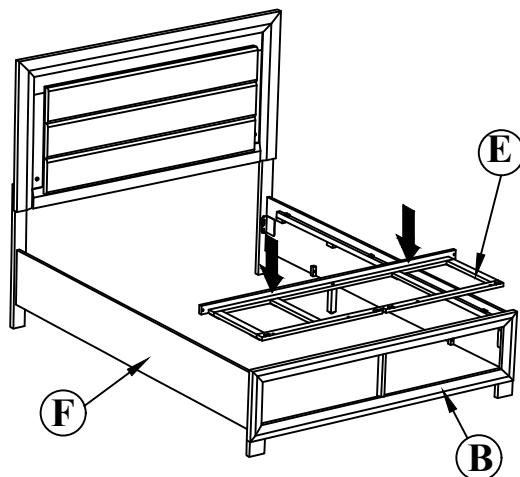

STEP 5: Tighten the Storage Rail (E) to Footboard (B) as shown. Using JCBC BOLT (8) with Spring Washer (10), Flat washer (11) and securing with ALLEN KEY (12).

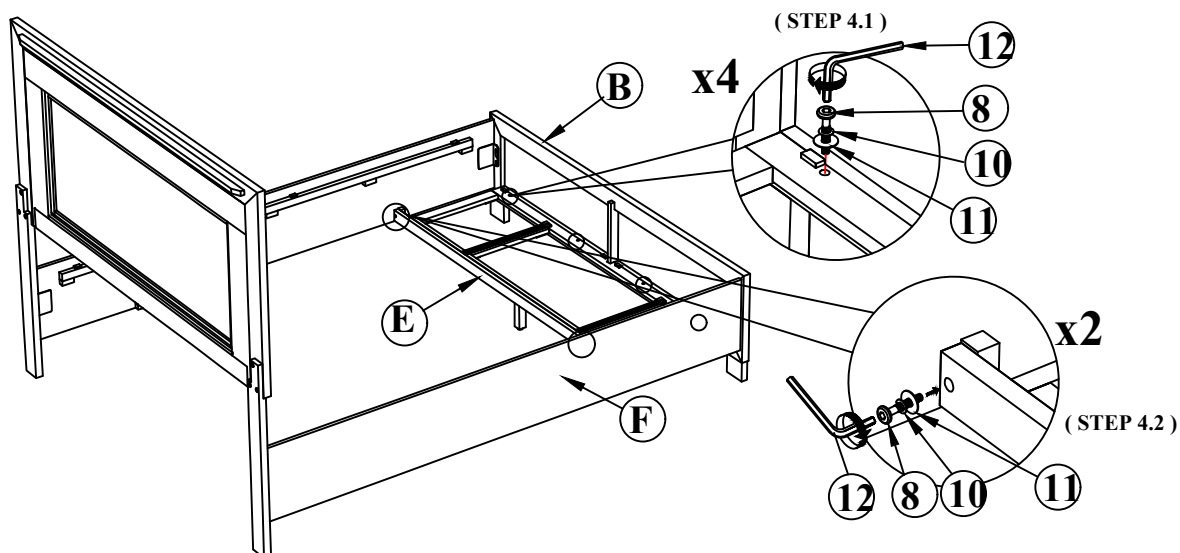



STEP 6 : Insert the Drawer (K) at the Storage Rail (E).Align drawer and using CSK Screw(15).Then tighten with Screw Driver(Not Included)

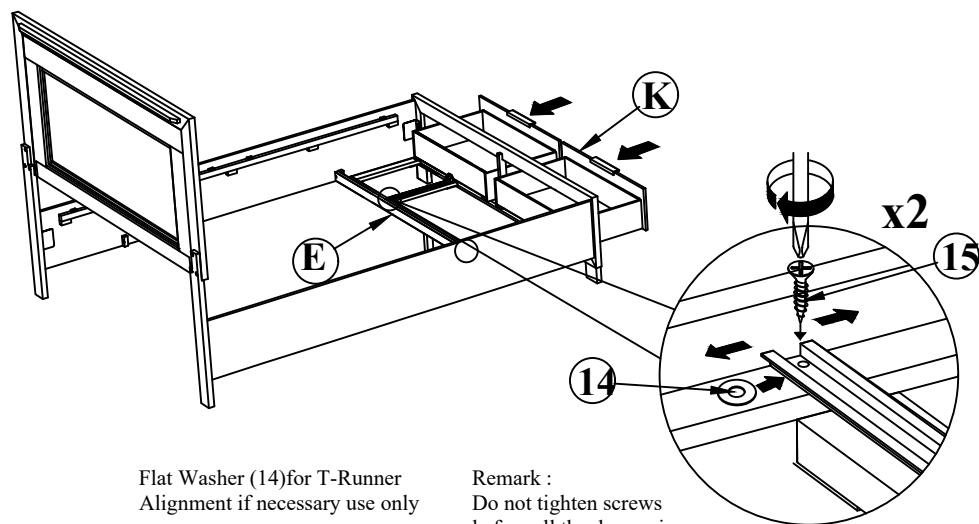


Flat Washer (14) for T-Runner
Alignment if necessary use only

Remark :
Do not tighten screws
before all the drawer in
perfect position.


**STEP 7 : Attach Bed slat support (I) and Center slat Support (G)to bed slat (H)as shown.
Then Using JCBC Bolt (9) and securing with ALLEN KEY (12).**

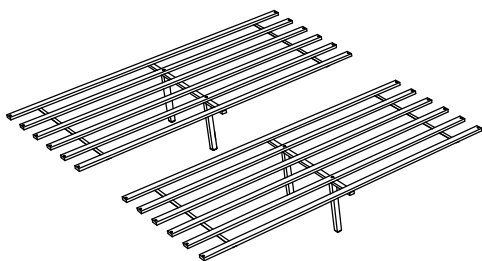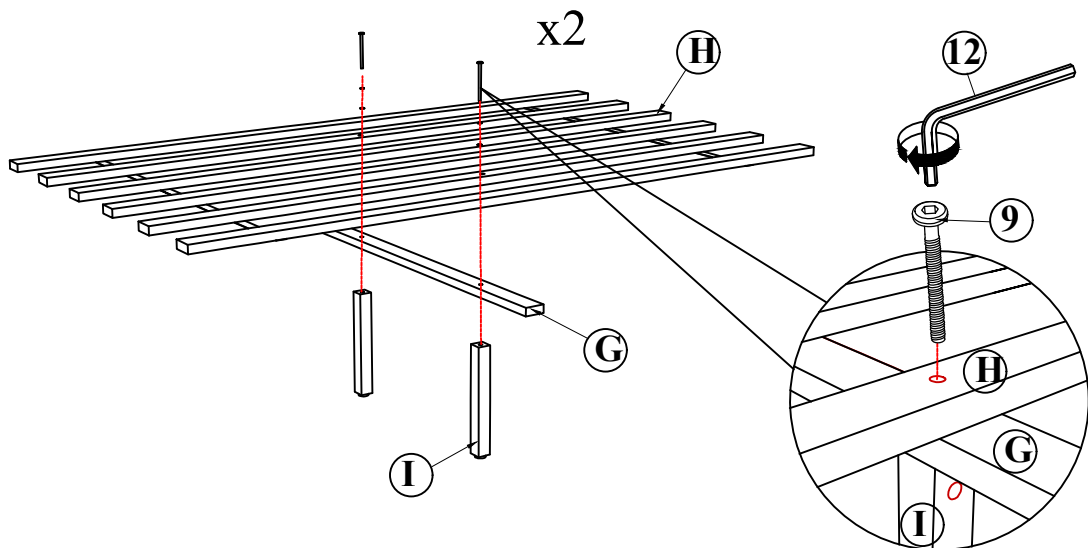


STEP 8 :Install the slat assembly as shown.

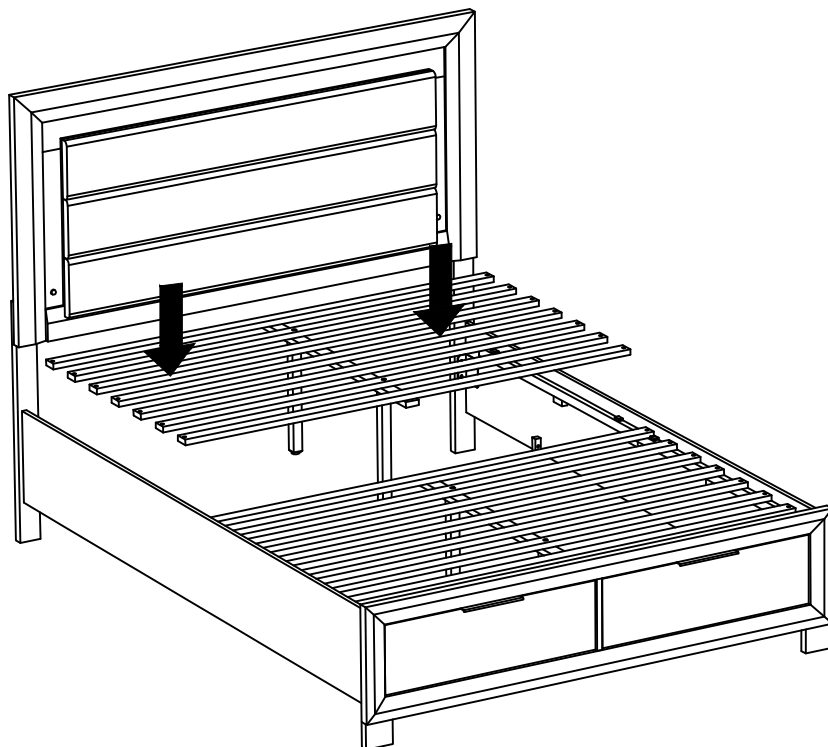

**STEP 9 : Fix the Bed Slat (H) by push closely to the Side Rail (F) by using CSK Screw (7) .
Then securing with screw driver(not include) as shown.**

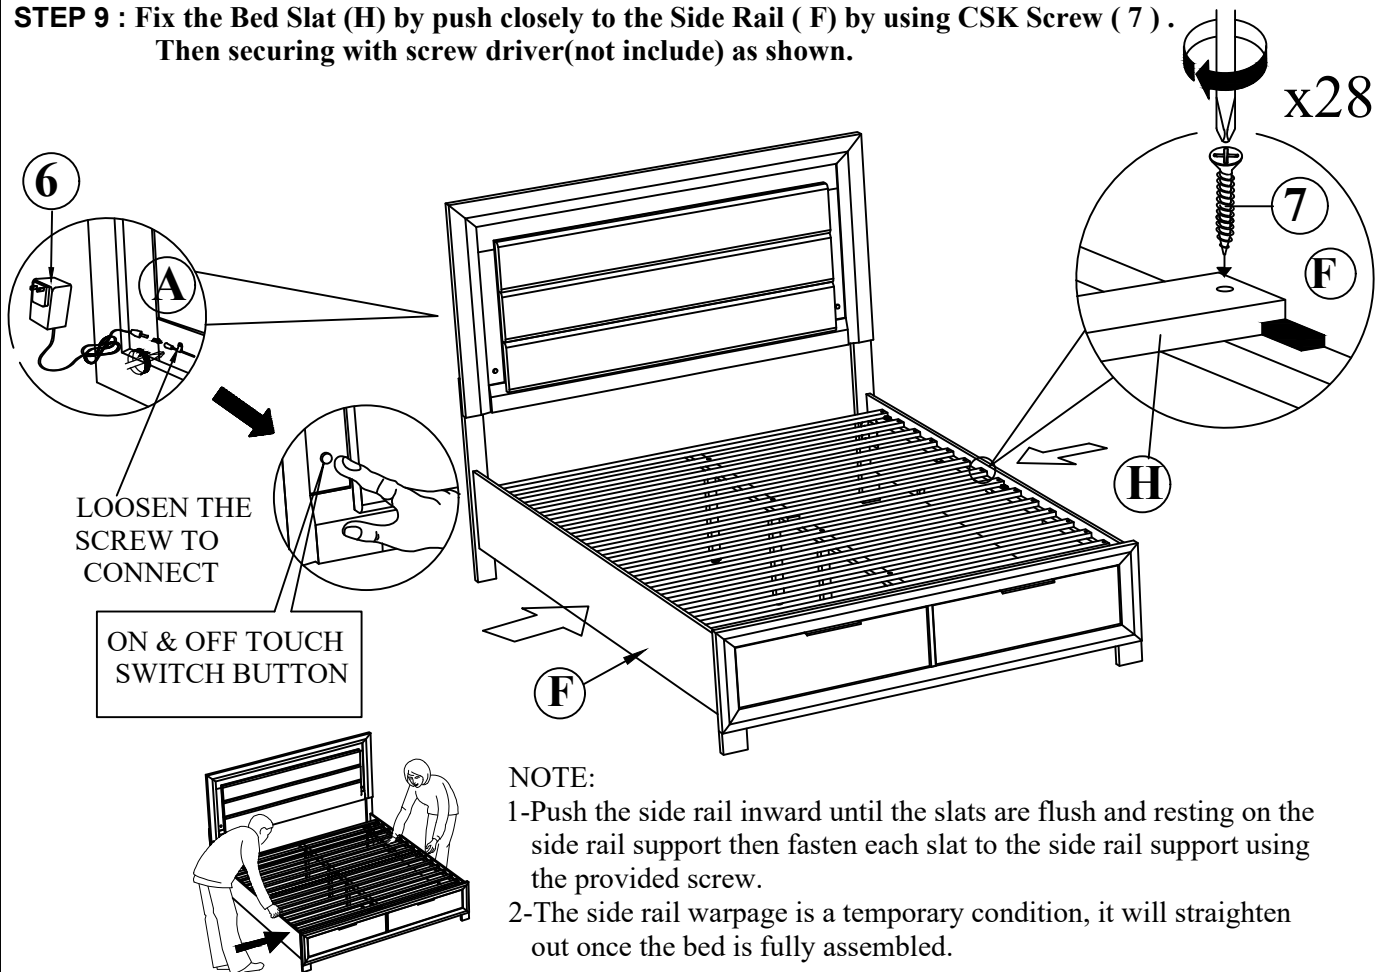

STEP 10:

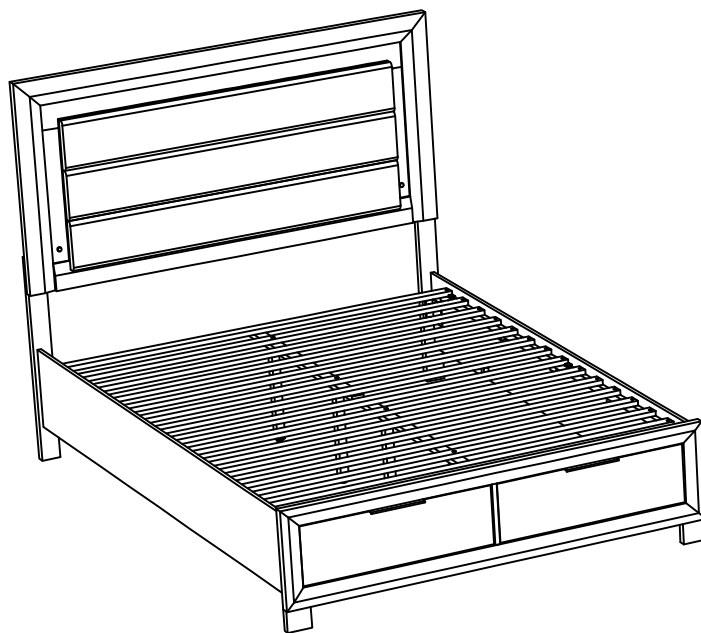

COMPLETED ASSEMBLY 5 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.