


ASSEMBLY INSTRUCTIONS

Model :Callie-Brown-DR

Description : Dresser


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : DRESSER


No	Description	Diagram	Quantity
A	Dresser		1 pc
B	Leg Left		2 pcs
C	Leg Right		2 pcs
D	Center Leg		1 pc

HARDWARE LIST



PACKED IN INNER CARTON LEG

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	4 pcs
2	Spring Washer		Spring Washer 1/4" Blk	4 pcs
3	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	4 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Pan Head Chipboard Screw		M4 x 28mm	2 pcs
6	Wood Dowel		Wood Dowel 6 x 30mm	2 pcs
7	Wood Dowel		Wood Dowel 8 x 20mm	4 pcs

STEP 1 : Remove the Legs (B & C) from the bottom drawer of the Chest (A).

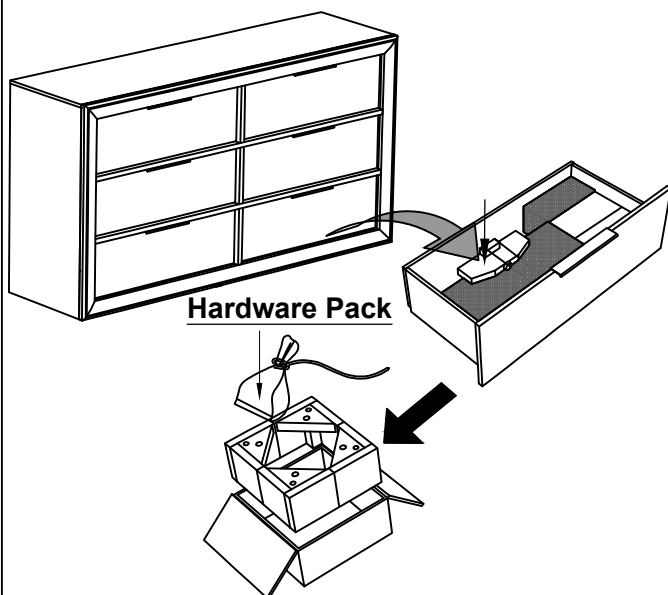

STEP 2 : Place the Nightstand (A) upside down on a flat and clean surface. Insert The Wood Dowel (6) into night stand bottom as shown. Attach the Leg (B) & (C) at the bottom night stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

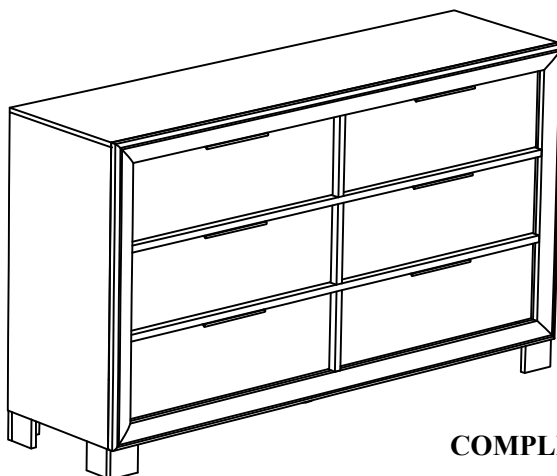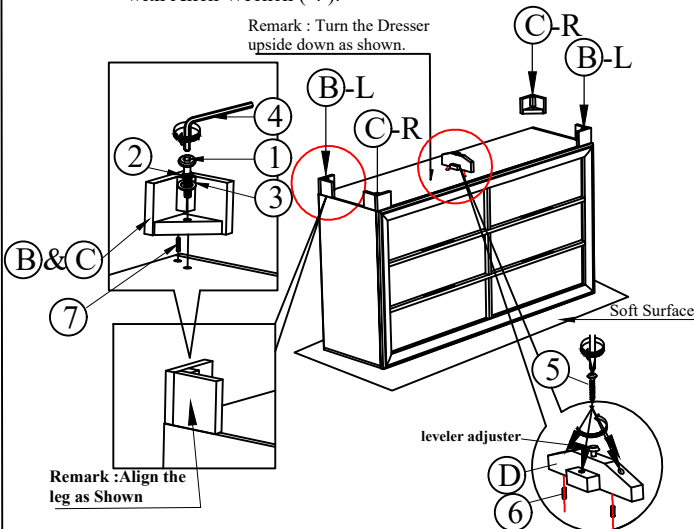

COMPLETE ASSEMBLY

1 OF 1

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.