



ASSEMBLY INSTRUCTIONS

Model :Callie-Brown-MR


Description : Mirror

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : MIRROR

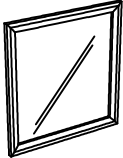
No	Description	Diagram	Quantity
A	Mirror		1 pc
B	Mirror Back Support		2 pcs

PART LIST : DRESSER

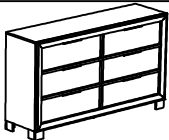No	Description	Diagram	Quantity
C	Dresser		1 pc

HARDWARE LIST


PACKED IN MIRROR BOX

No	Description	Diagram	Size	Quantity
1	JCBC Bolt Short		M6 x 35mm	4 pcs
2	JCBC Bolt Long		M6 x 40mm	4 pcs
3	Spring Washer		Spring Washer 1/4" Blk	8 pcs
4	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	8 pcs
5	Allen Key		ALLEN KEY m4x65mm Blk	1 pc

STEP 1 :

Draw out mirror support (B) from the carton box.

ARROW MARKING - UP

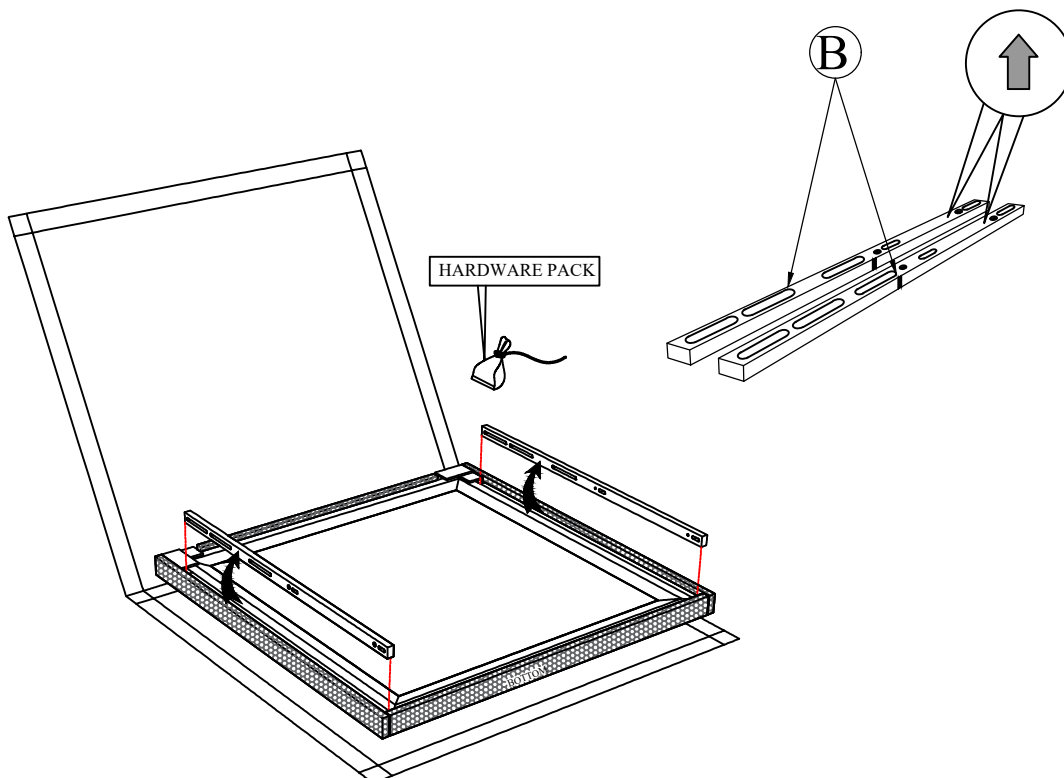


COMPLETE VANITY ASSEMBLY 1 OF 2

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.



STEP 2 :Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt(1),spring washer (3) & flat washer (4). **DO NOT FULLY TIGHTEN AT THIS STEP.**

Note : Make sure arrow marking of the mirror support (B) is aligned up.

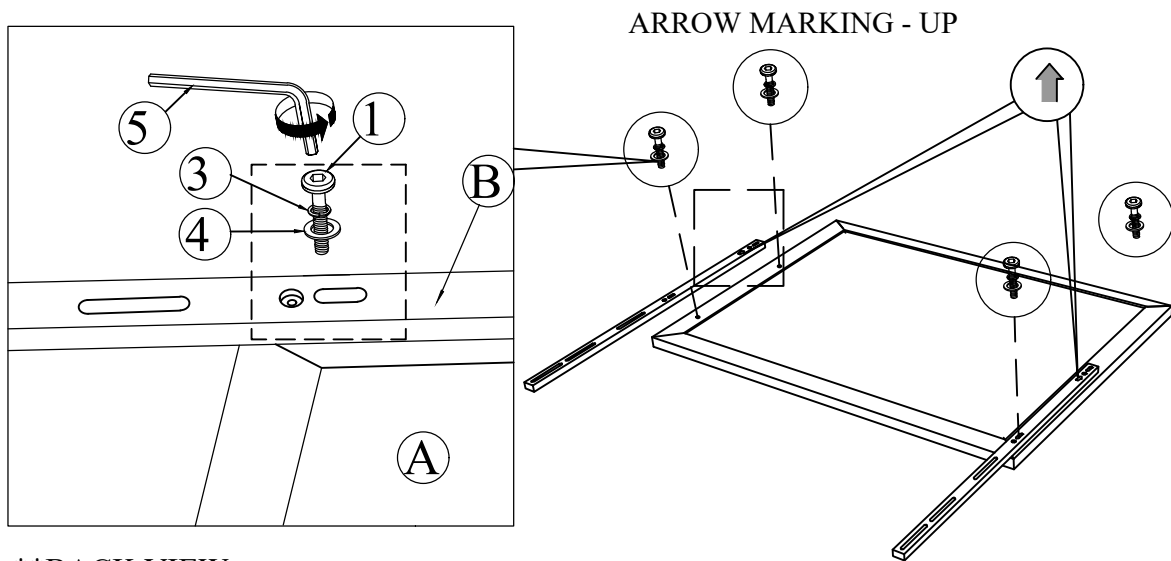

****BACK VIEW**

STEP 3 : Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using long JCBC bolt (2), spring washer (3) & flat washer (4) THEN FULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY (4).

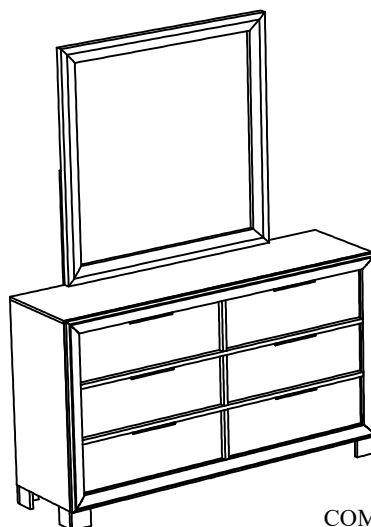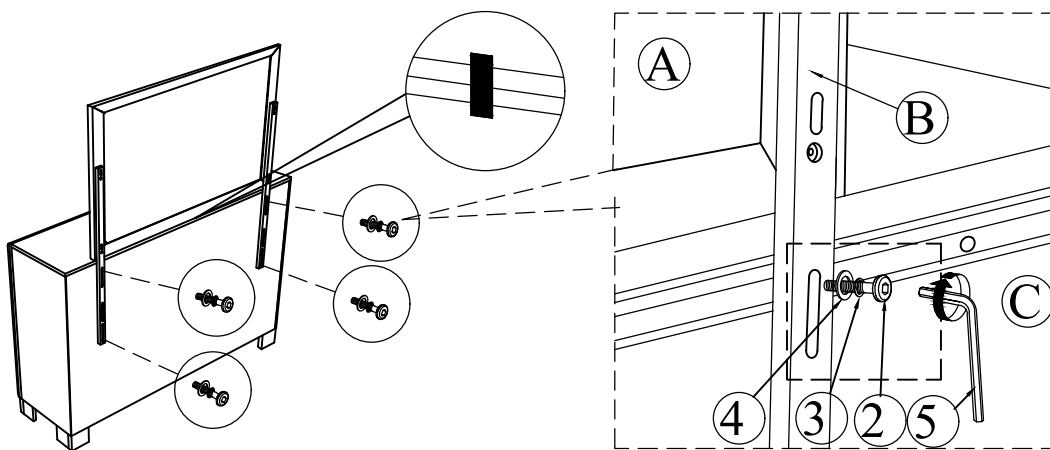

COMPLETED ASSEMBLY