

ASSEMBLY INSTRUCTIONS


Model :Callie-Brown-NS W/SPKR&WC

Description : Nightstand W/Wireless Charging Platform&LED Speaker

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

Bluetooth Connection: Enable Bluetooth on your device and pair with [GFUSA] from the list of available devices.

PART LIST : NIGHT STAND

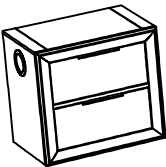
No	Description	Diagram	Quantity
A	Night Stand		1 pc
B	Leg Left		2 pcs
C	Leg Right		2 pcs

HARDWARE LIST


PACKED IN INNER CARTON LEG

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	4 pcs
2	Spring Washer		Spring Washer 1/4" Blk	4 pcs
3	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	4 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Adaptor			1 pc
6	Wood Dowel		Wood Dowel 8 x 20mm	4 pcs



STEP 1 : Remove the Legs (B & C) from the bottom drawer of the Nightstand (A).

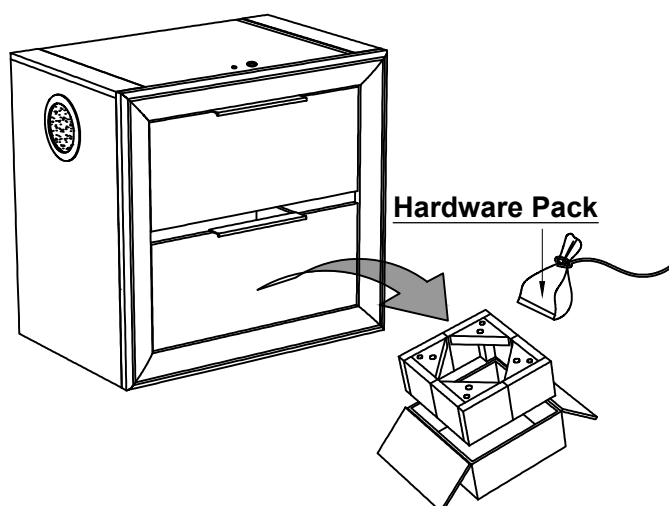

STEP 2 : Place the Nightstand (A) upside down on a flat and clean surface. Insert The Wood Dowel (6) into night stand bottom as shown. Attach the Leg (B) & (C) at the bottom night stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

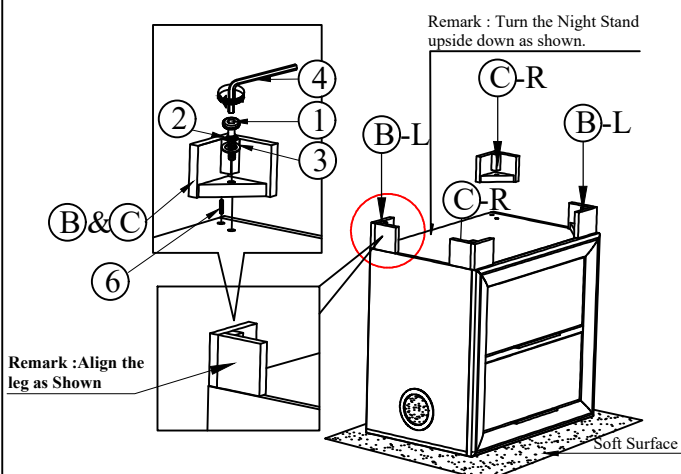

STEP 3 :

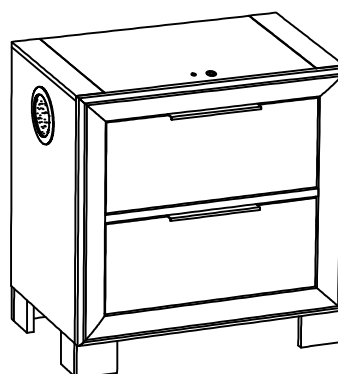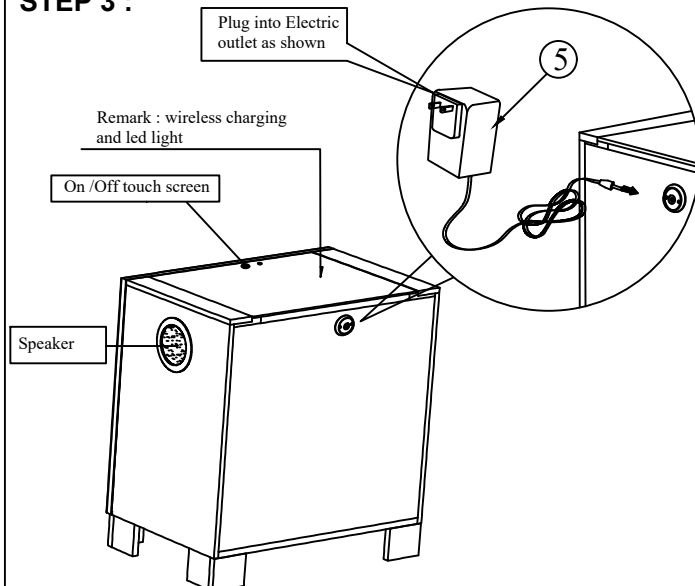

COMPLETE ASSEMBLY

1 OF 1

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

Model :Callie-Brown-DR

Description : Dresser


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : DRESSER


No	Description	Diagram	Quantity
A	Dresser		1 pc
B	Leg Left		2 pcs
C	Leg Right		2 pcs
D	Center Leg		1 pc

HARDWARE LIST



PACKED IN INNER CARTON LEG

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	4 pcs
2	Spring Washer		Spring Washer 1/4" Blk	4 pcs
3	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	4 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Pan Head Chipboard Screw		M4 x 28mm	2 pcs
6	Wood Dowel		Wood Dowel 6 x 30mm	2 pcs
7	Wood Dowel		Wood Dowel 8 x 20mm	4 pcs

STEP 1 : Remove the Legs (B & C) from the bottom drawer of the Chest (A).

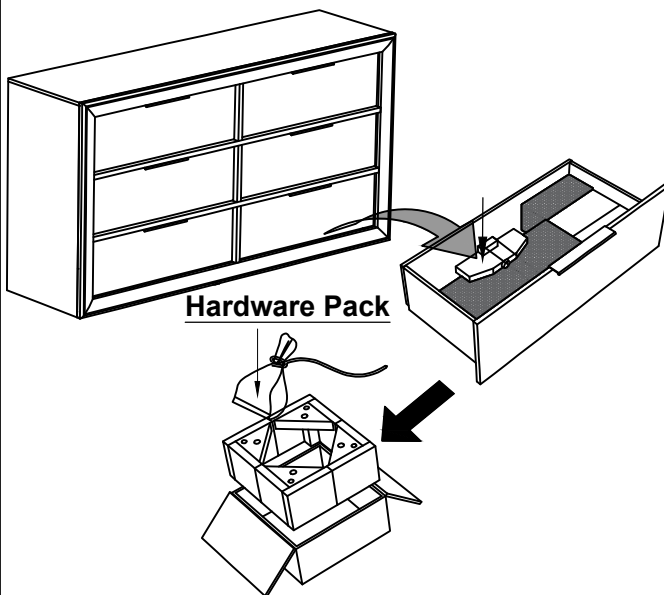

STEP 2 : Place the Nightstand (A) upside down on a flat and clean surface. Insert The Wood Dowel (6) into night stand bottom as shown. Attach the Leg (B) & (C) at the bottom night stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

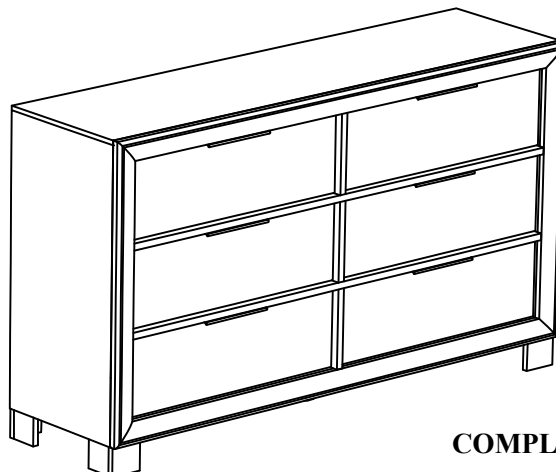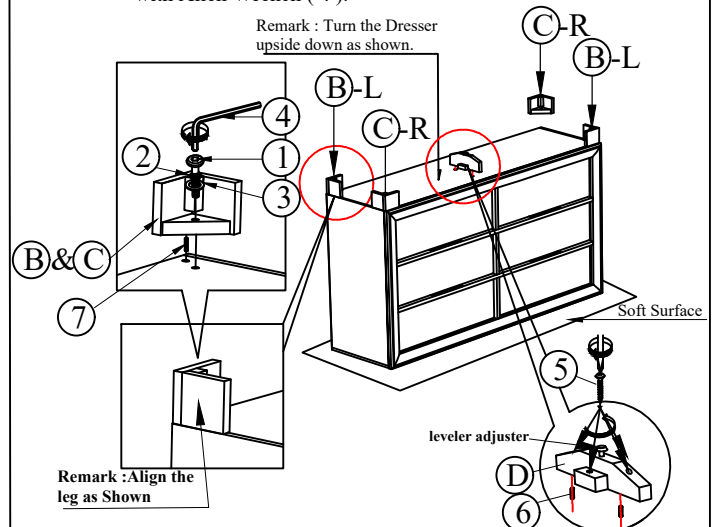

COMPLETE ASSEMBLY

1 OF 1

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.



ASSEMBLY INSTRUCTIONS

Model :Callie-Brown-MR


Description : Mirror

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : MIRROR

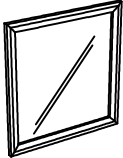
No	Description	Diagram	Quantity
A	Mirror		1 pc
B	Mirror Back Support		2 pcs

PART LIST : DRESSER

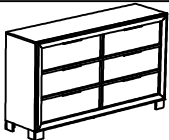No	Description	Diagram	Quantity
C	Dresser		1 pc

HARDWARE LIST


PACKED IN MIRROR BOX

No	Description	Diagram	Size	Quantity
1	JCBC Bolt Short		M6 x 35mm	4 pcs
2	JCBC Bolt Long		M6 x 40mm	4 pcs
3	Spring Washer		Spring Washer 1/4" Blk	8 pcs
4	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	8 pcs
5	Allen Key		ALLEN KEY m4x65mm Blk	1 pc

STEP 1 :

Draw out mirror support (B) from the carton box.

ARROW MARKING - UP

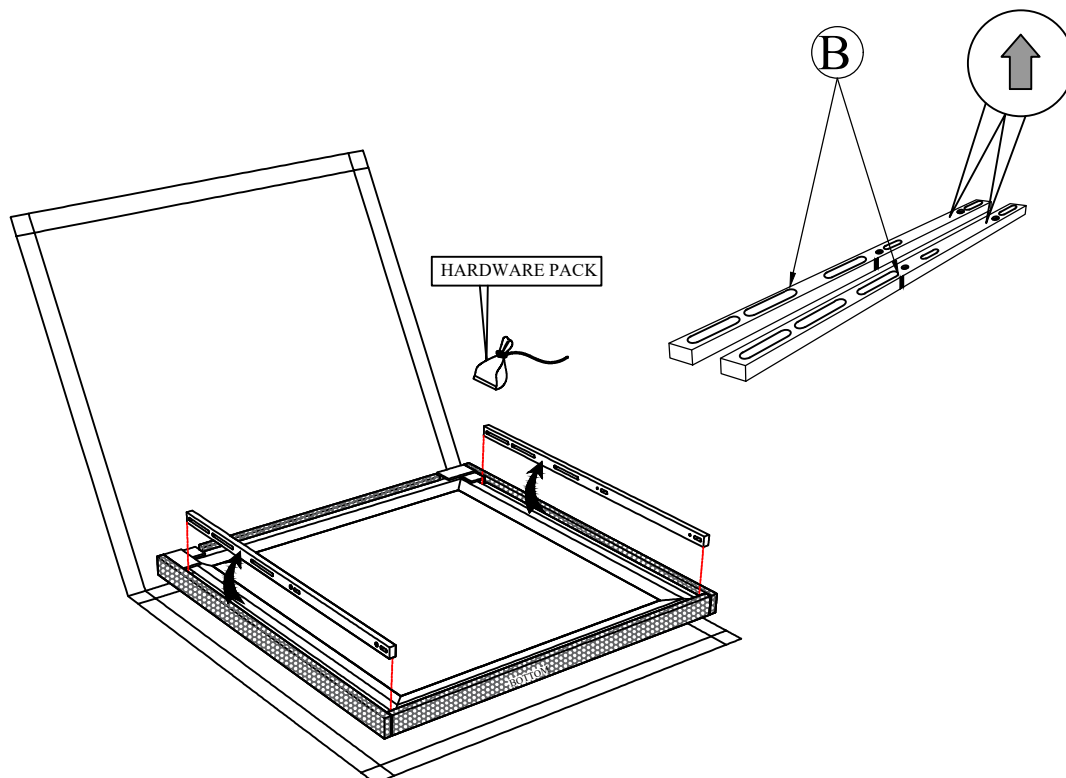


COMPLETE VANITY ASSEMBLY 1 OF 2

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.



STEP 2 :Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt(1),spring washer (3) & flat washer (4). **DO NOT FULLY TIGHTEN AT THIS STEP.**

Note : Make sure arrow marking of the mirror support (B) is aligned up.

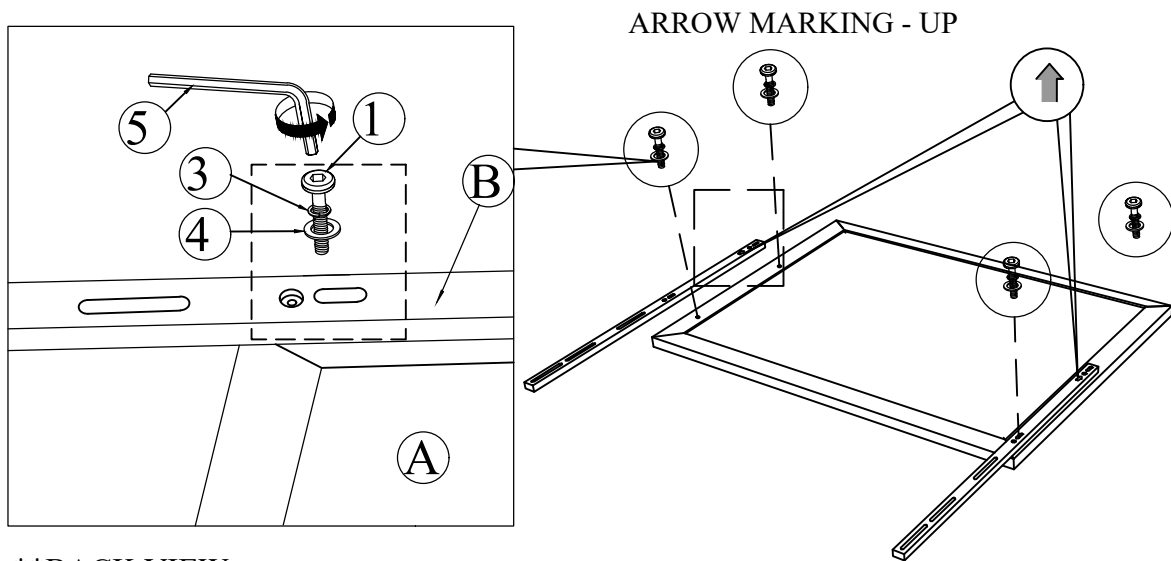

****BACK VIEW**

STEP 3 : Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using long JCBC bolt (2) , spring washer (3) & flat washer (4) THEN FULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY (4).

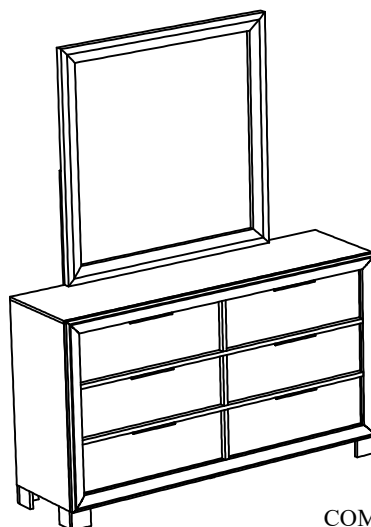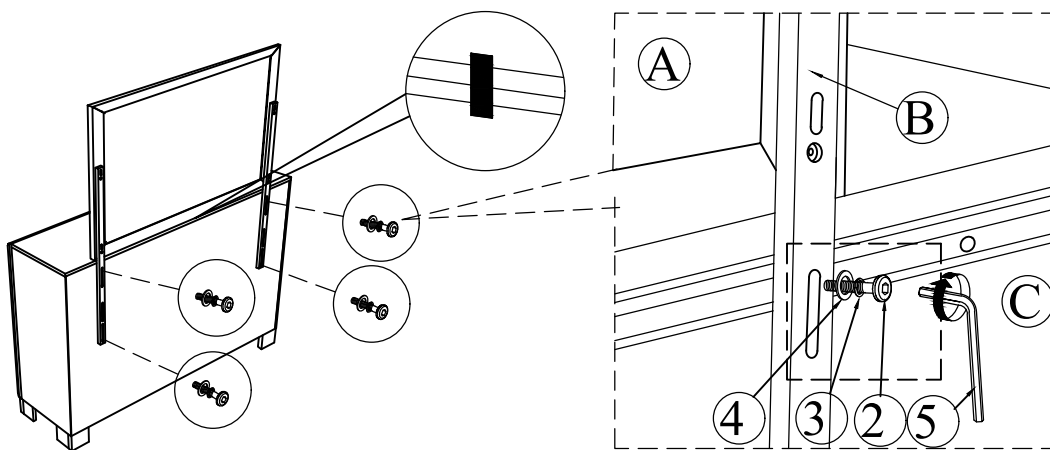

COMPLETED ASSEMBLY

ASSEMBLY INSTRUCTIONS

Model :Callie-Brown-CH

Description : Chest


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : CHEST


No	Description	Diagram	Quantity
A	Chest		1 pc
B	Leg Left		2 pcs
C	Leg Right		2 pcs

HARDWARE LIST



PACKED IN INNER CARTON LEG

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	4 pcs
2	Spring Washer		Spring Washer 1/4" Blk	4 pcs
3	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	4 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Wood Dowel		Wood Dowel 8 x 20mm	4 pcs

STEP 1 : Remove the Legs (B & C) from the bottom drawer of the Chest (A).

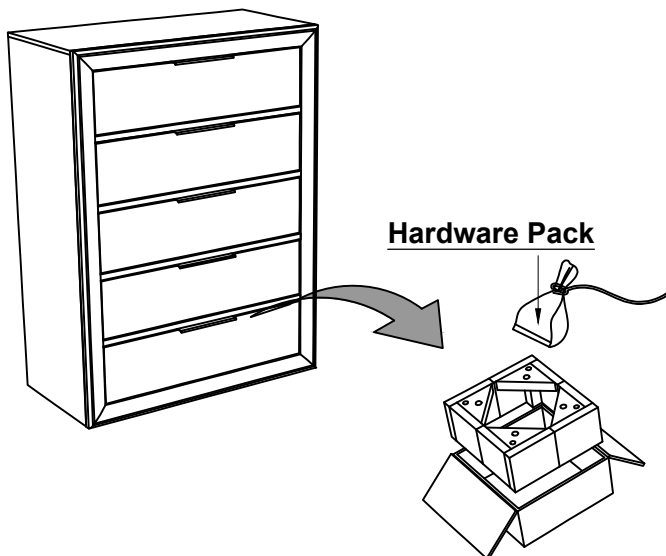

STEP 2 : Place the Nightstand (A) upside down on a flat and clean surface. Insert The Wood Dowel (5) into night stand bottom as shown. Attach the Leg (B) & (C) at the bottom night stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).

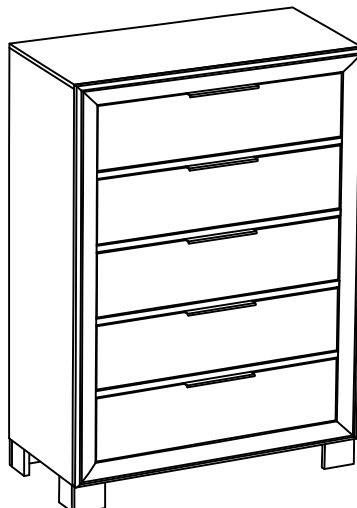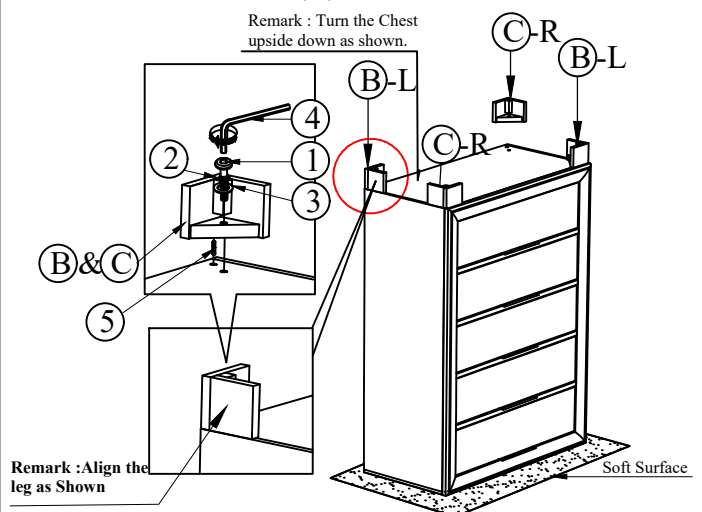

COMPLETE ASSEMBLY

1 OF 1

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

Model : Callie-Brown-QB-HB/FB
Callie-Brown-QB-SR/Slats
Callie-Brown-QB-FB DWR


Description : Queen Bed Headboard & Footboard
Queen Bed Side Rails & Slats
Queen Bed Footboard Drawers

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment


PART LIST : HEADBOARD & FOOTBOARD BOX


No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Footboard		1 pc
C	Headboard Leg (L)		1 pc
D	Headboard Leg (R)		1 pc
E	Storage Rail		1 pc

PART LIST : SIDE RAILS BOX

No	Description	Diagram	Quantity
F	Side rail		2 pcs
G	Center slat Support		2 pcs
H	Bed slat		14 pcs
I	Bed slat support		4 pcs
J	Storage Box Wood Support		1 pc

PART LIST : STORAGE SIDE RAILS BOX

No	Description	Diagram	Quantity
K	Drawer		2 pcs

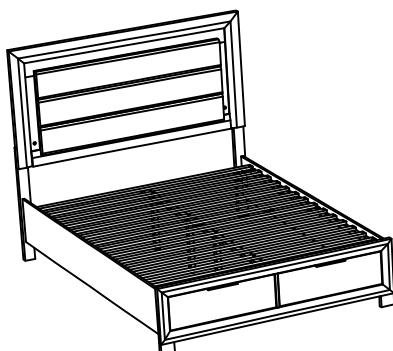

HARDWARE LIST

PACKED IN HEADBOARD

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 35mm	6 pcs
2	Spring Washer		Spring Washer 1/4" Blk	6 pcs
3	Flat Washer		Flat Washer 1/4" ID 13mm OD Blk	6 pcs
4	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
5	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
6	Adaptor			

HARDWARE LIST

PACKED IN SIDE RAILS


No	Description	Diagram	Size	Quantity
7	Flat Head Chipboard Screw		CSK M4 x 32mm	28 pcs
8	JCBC Bolt		M6 x 35mm	6pcs
9	JCBC Bolt		M6 x 50mm	5 pcs
10	Spring Washer		Spring Washer 1/4" Blk	6 pcs
11	Flat Washer		Flat Washer 1/4" ID 19mm OD Bl	6 pcs
12	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
13	Allen Key		ALLEN KEY m5x65mm Blk	1 pc
14	Flat Washer		Flat Washer 1/4" ID 13mm OD Bl	4 pcs
15	Flat Head Chipboard Screw		CSK M4 x 20mm	2 pcs

COMPLETE ASSEMBLY



1 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


STEP 1 : Attach Head Board Leg (C & D) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

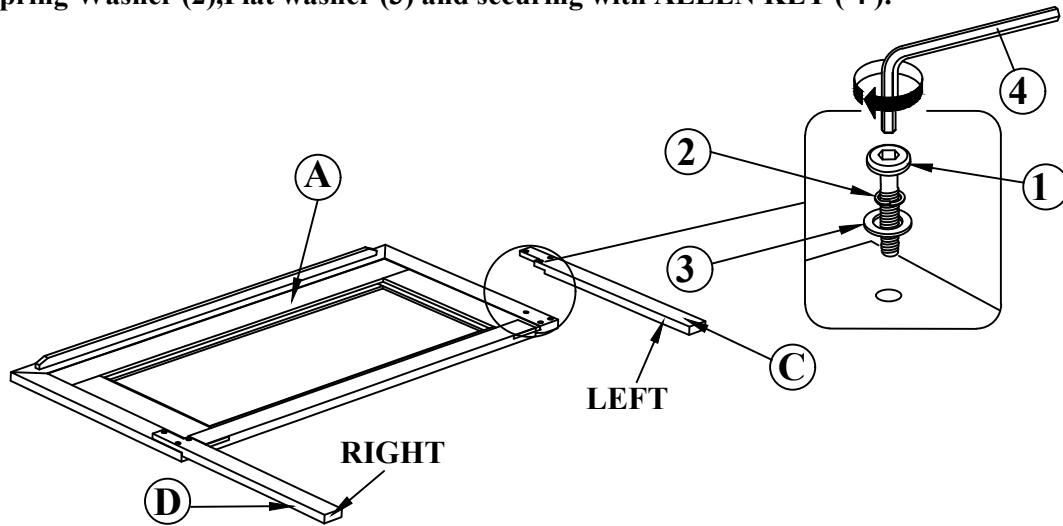


STEP 2 : Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (5). Attach the Side Rail (F) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. Tighten the JCBB Bolt by ALLEN KEY (5).

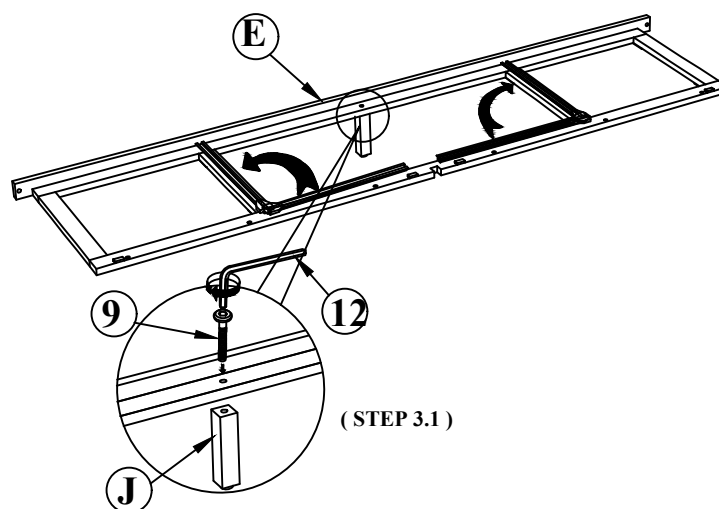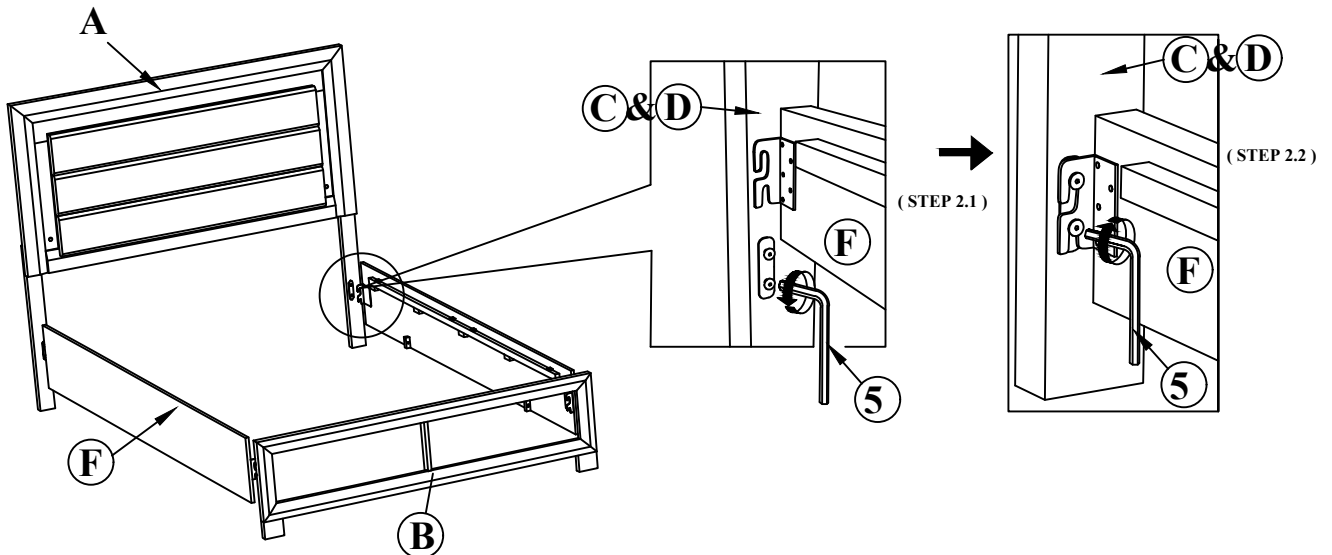


STEP 4 : Attach the Storage Rail (E) between Footboard (B) and side rails (F) as shown.

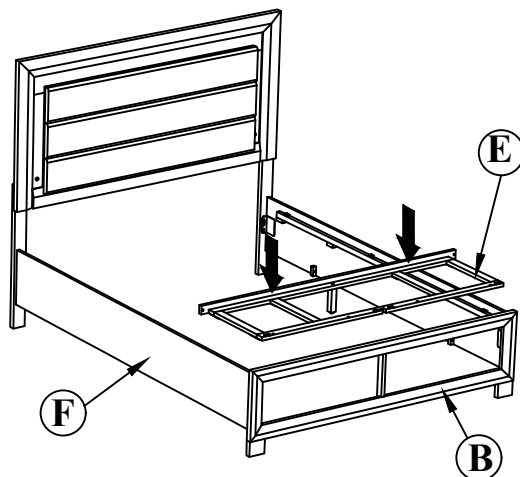

STEP 5: Tighten the Storage Rail (E) to Footboard (B) as shown. Using JCBC BOLT (8) with Spring Washer (10), Flat washer (11) and securing with ALLEN KEY (12).

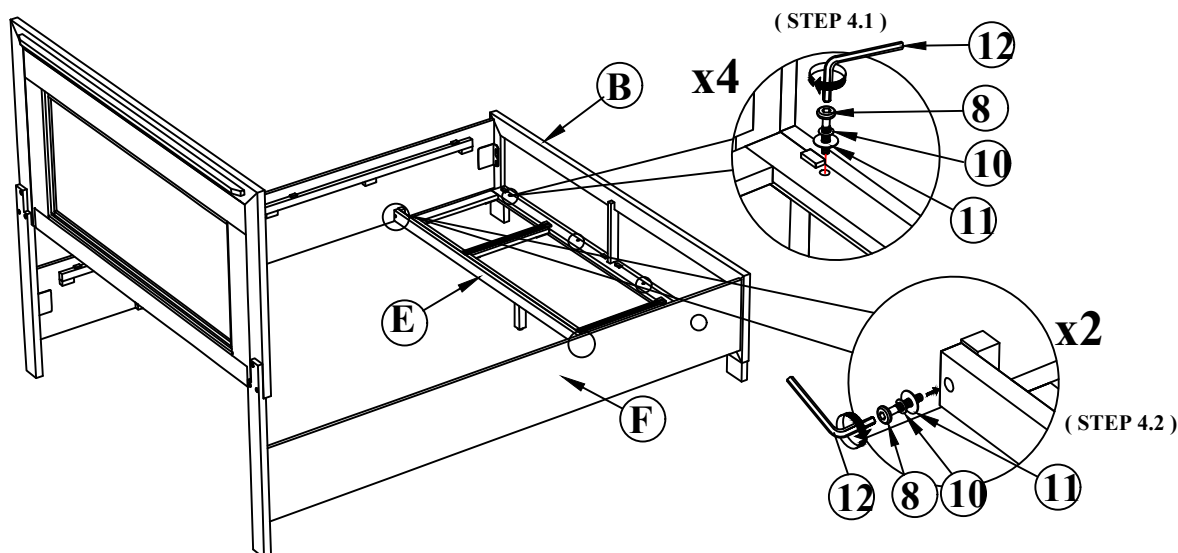



STEP 6 : Insert the Drawer (K) at the Storage Rail (E).Align drawer and using CSK Screw(15).Then tighten with Screw Driver(Not Included)

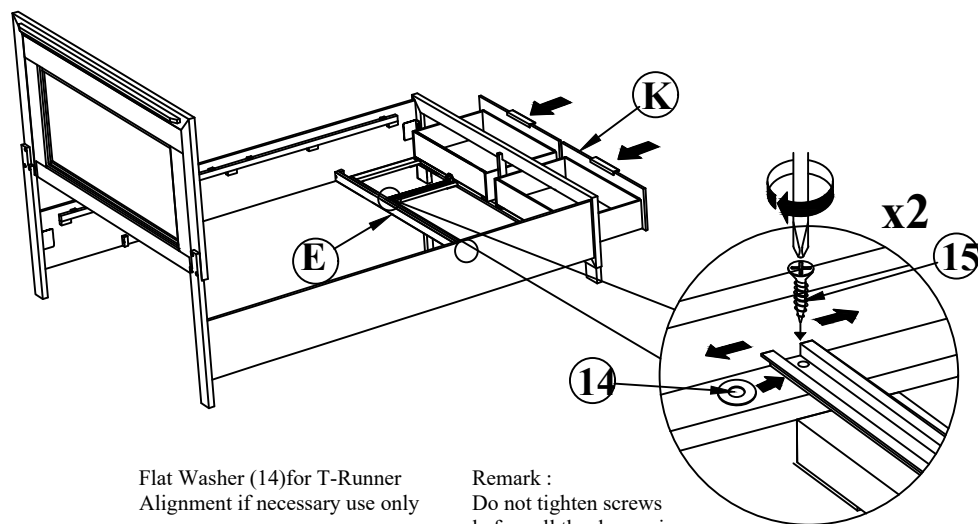


Flat Washer (14) for T-Runner
Alignment if necessary use only

Remark :
Do not tighten screws
before all the drawer in
perfect position.


**STEP 7 : Attach Bed slat support (I) and Center slat Support (G)to bed slat (H)as shown.
Then Using JCBC Bolt (9) and securing with ALLEN KEY (12).**

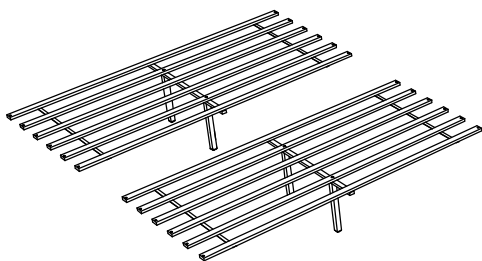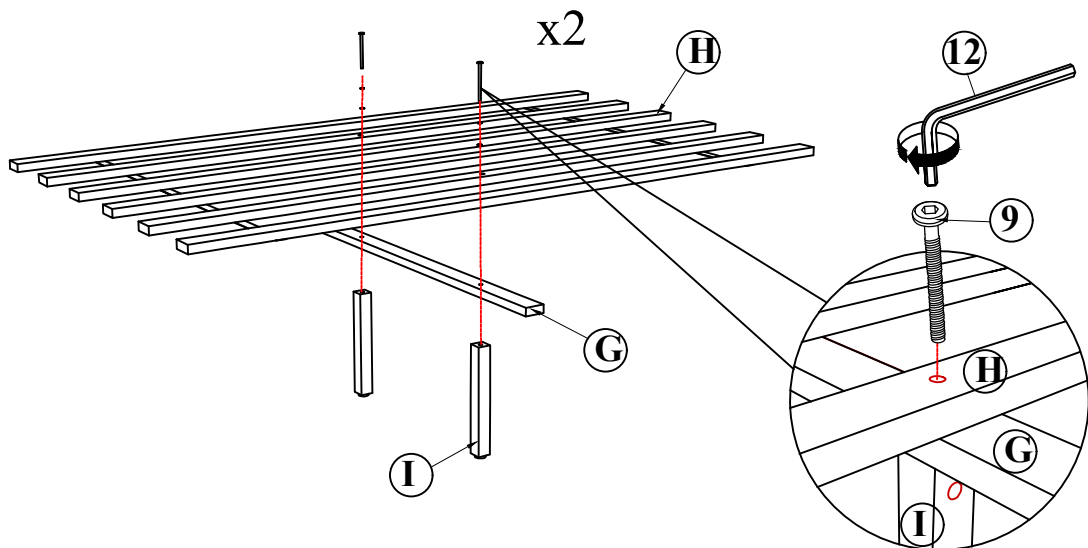


STEP 8 :Install the slat assembly as shown.

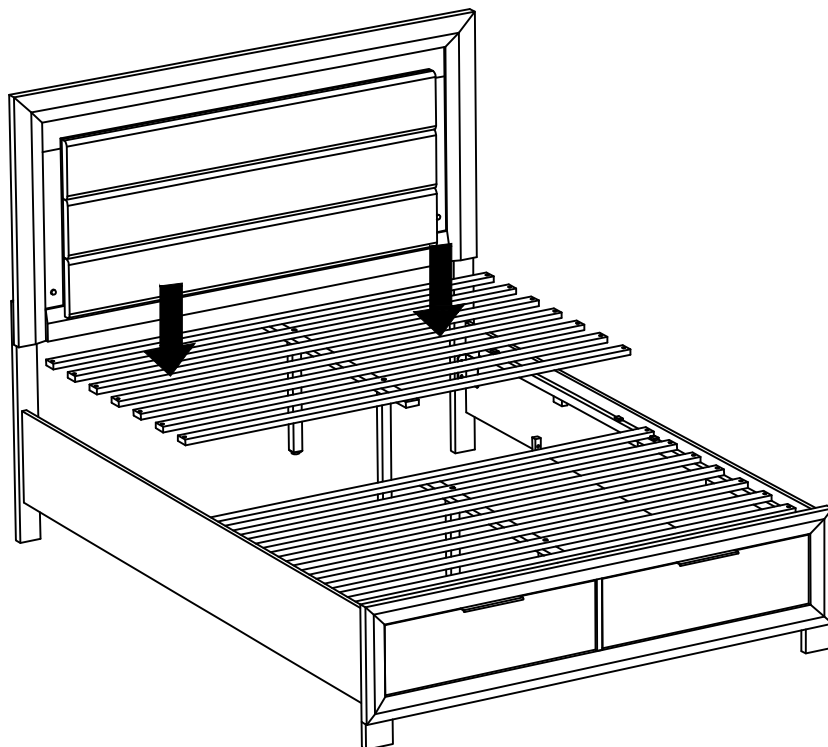

**STEP 9 : Fix the Bed Slat (H) by push closely to the Side Rail (F) by using CSK Screw (7) .
Then securing with screw driver(not include) as shown.**

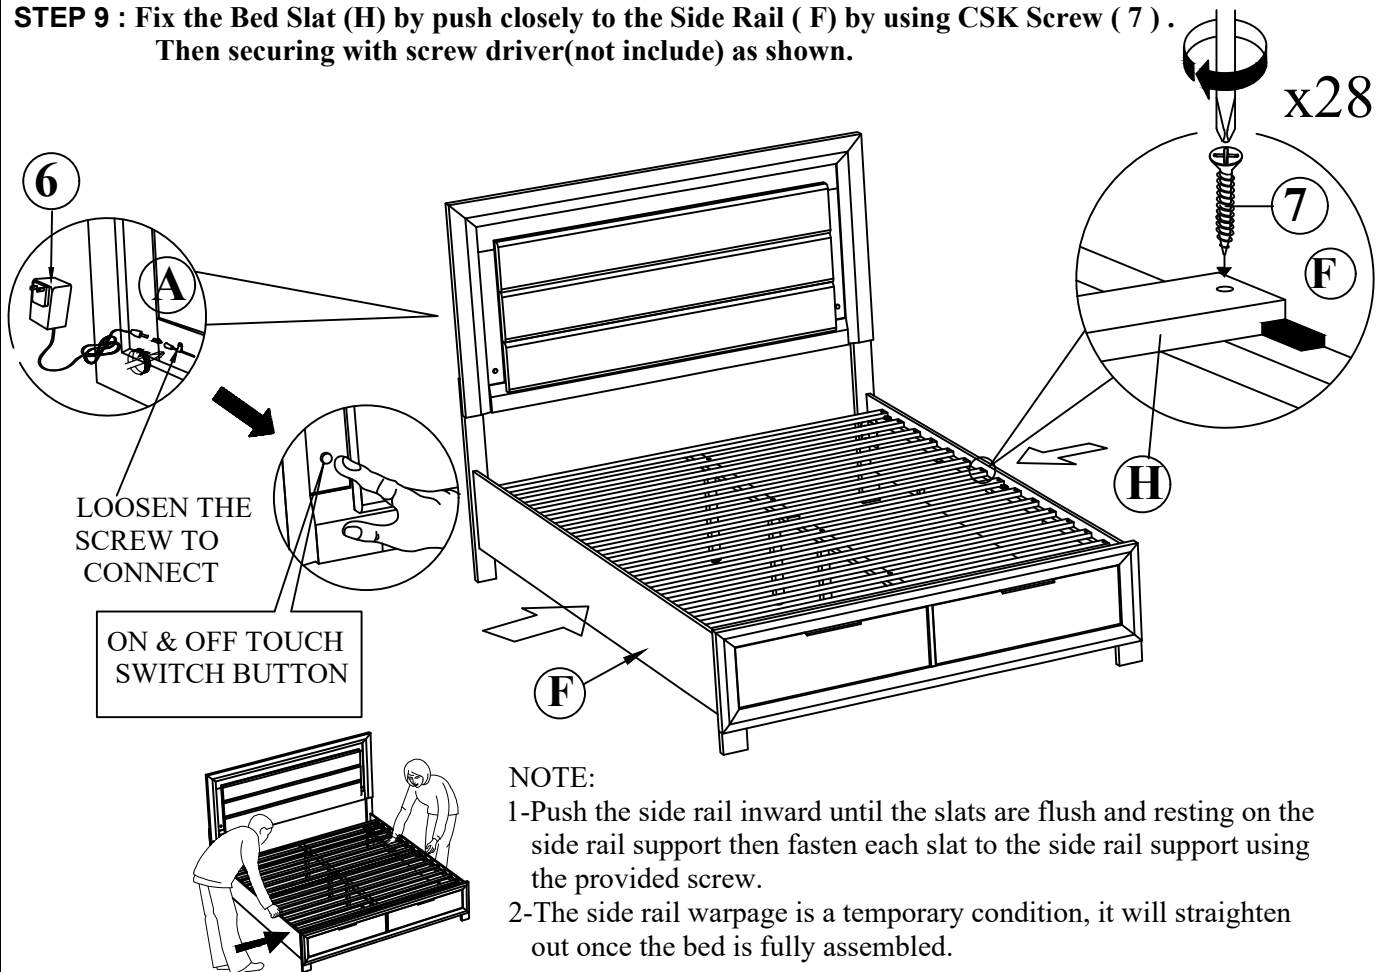

STEP 10:

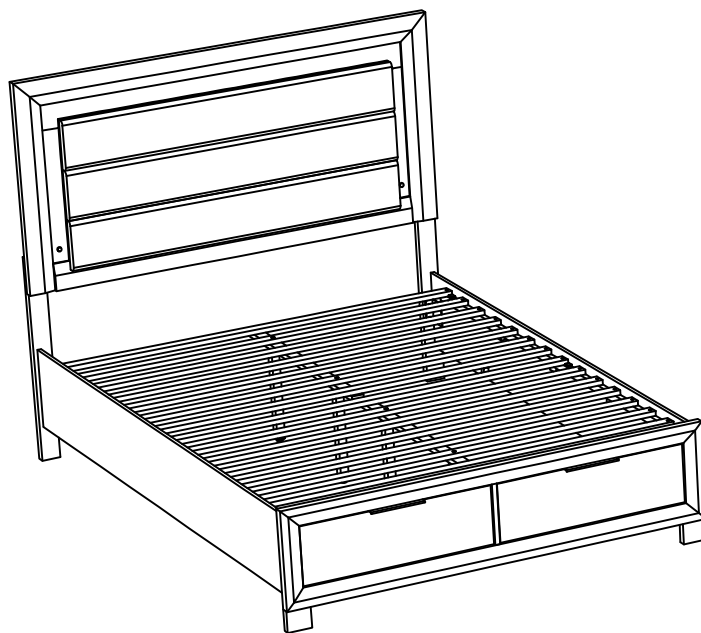

COMPLETED ASSEMBLY 5 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.