

ASSEMBLY INSTRUCTIONS

Model : Emma-Natural/White/Black/Gray-FB-HB W/LED / USB

Emma-Natural/White/Black/Gray-FB-HB Base

Emma-Natural/White/Black/Gray-FB-FB W/Drawer & Shelf

Emma-Natural/White/Black/Gray-FB-SR DWR 1

Emma-Natural/White/Black/Gray-FB-SR DWR 2

Description : Full Bed Headboard W/LED & USB

Full Bed Headboard Base



Full Bed Footboard With 2 Drawers & 1 Shelf

Full Bed Siderail Drawer1


Full Bed Siderail Drawer2

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : UPPER HEADBOARD BOX


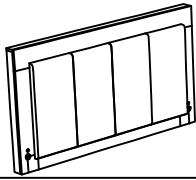

No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Headboard Leg Left		1 pc
C	Headboard Leg Right		1 pc

PART LIST : STORAGE FOOTBOARD BOX

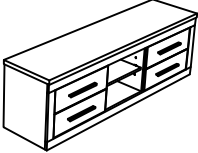
No	Description	Diagram	Quantity
D	Storage Footboard		1 pc
E	Chrome Metal Leg		4 pcs
F	Footboard Bottom Center Leg		2 pcs
G	Bed Slat		14 pcs


HARDWARE LIST

PACKED IN UPPER HEADBOARD BOX

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 30mm	8 pcs
2	Spring Washer		Spring Washer 1/4" Blk	8 pcs
3	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	8 pcs
4	Flat Head Chipboard Screw		CSK M4 x 32mm	48 pcs
5	Pan Head Chipboard Screw		Pan Head Screw M3.5 x 16 blk	32 pcs
6	Flat Head Chipboard Screw		CSK M4 x 25mm	12 pcs
7	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
8	Adaptor Led			1 pc
9	Adaptor Usb			1 pc

PART LIST : STORAGE SIDE RAILS BOX

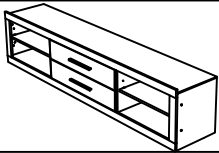
No	Description	Diagram	Quantity
H	Storage Side Rail		2 pcs
I	Chrome Metal Leg		4 pcs
J	Side Rail Bottom Back Leg		4 pcs
K	Side Rail Bottom Center Leg		4 pcs

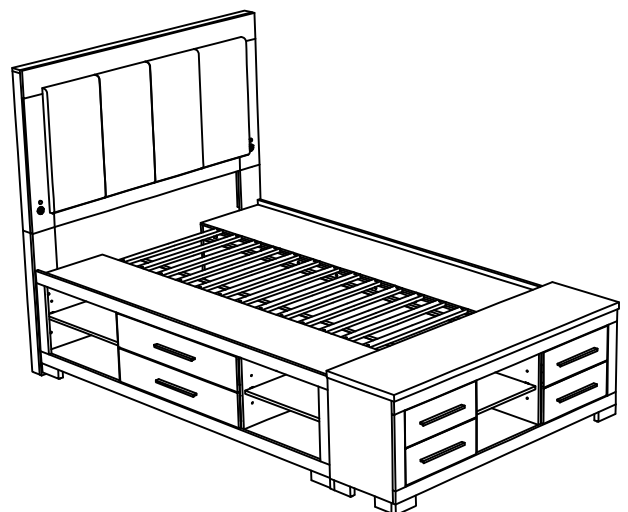

COMPLETE ASSEMBLY


STEP 1 :Attach Head Board leg (B) and (C) to Head Board (A) as shown. using flat head chipboard screw(6) and Tighten as shown.

THE HARDWARE IS LOCATED IN THE PACKING ITEM.

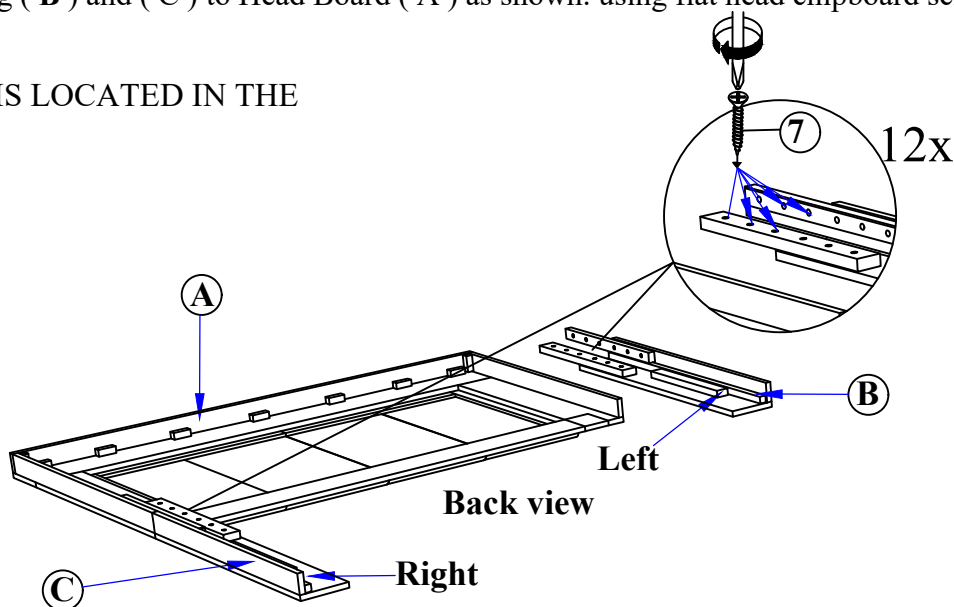


STEP 2.1 : Pull the drawer and take out the Leg (E)&(F). Attach the Chrome metal leg (E) at the bottom Storage footboard (D). Used Pan head chipboard screw(5) and Tighten as shown.

STEP 2.2 : Attach the Footboard bottom leg (F) at the bottom Storage footboard (D). Used flat head chipboard screw(4) and Tighten as shown.

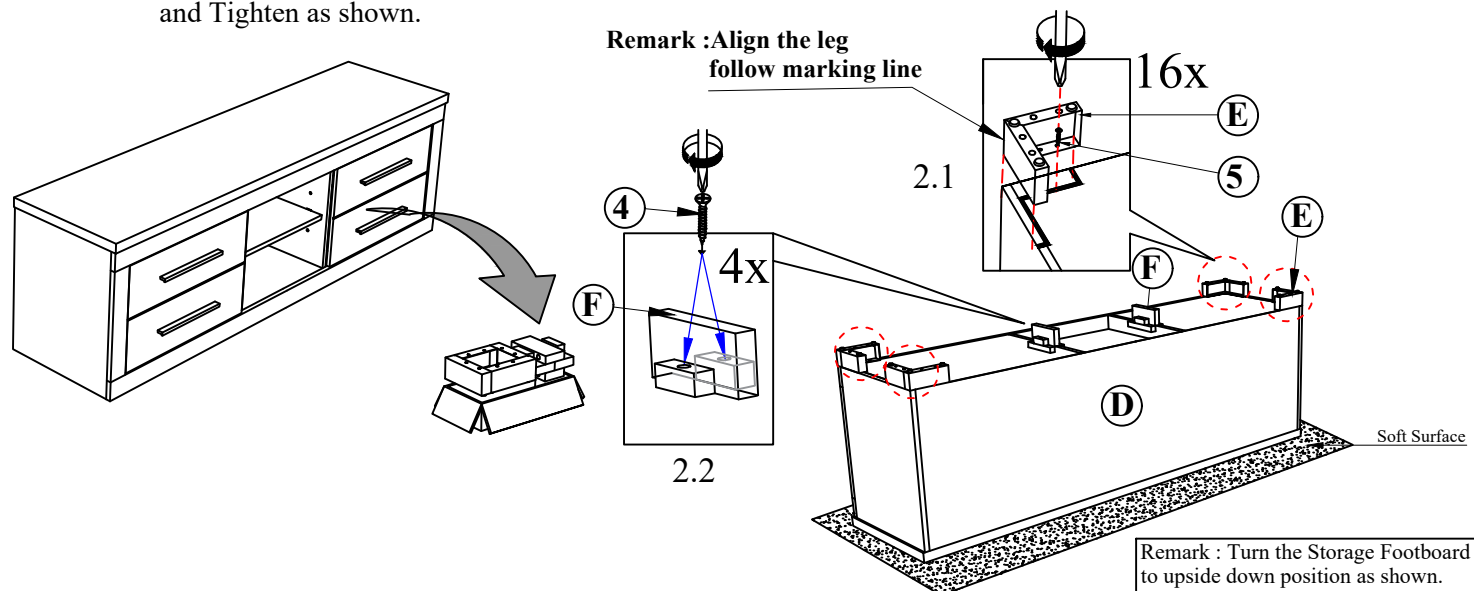


STEP 3.1 : Pull the drawer and take out the Leg (I),(J)&(K). Attach the Chrome metal leg (I) at the bottom Storage side rails (H). Used Pan head chipboard screw(5) and Tighten as shown.


STEP 3.2 : Attach the side rails bottom leg (J) & (K) at the bottom Storage Side Rail (H). Used Flat head chipboard screw(4) and Tighten as shown.

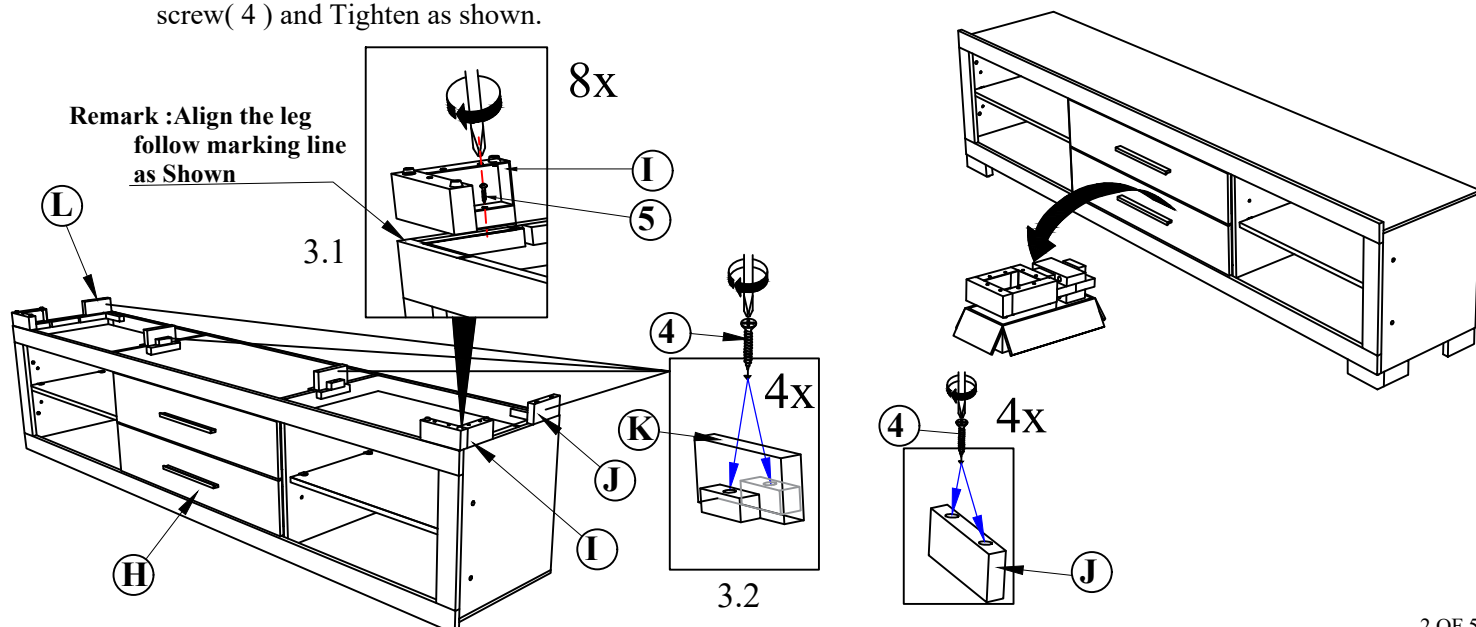


STEP 4 : Attach Storage Side Rails (H) to Headboard assembly(A) and Storage Footboard (D) as shown. using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (7) as shown.

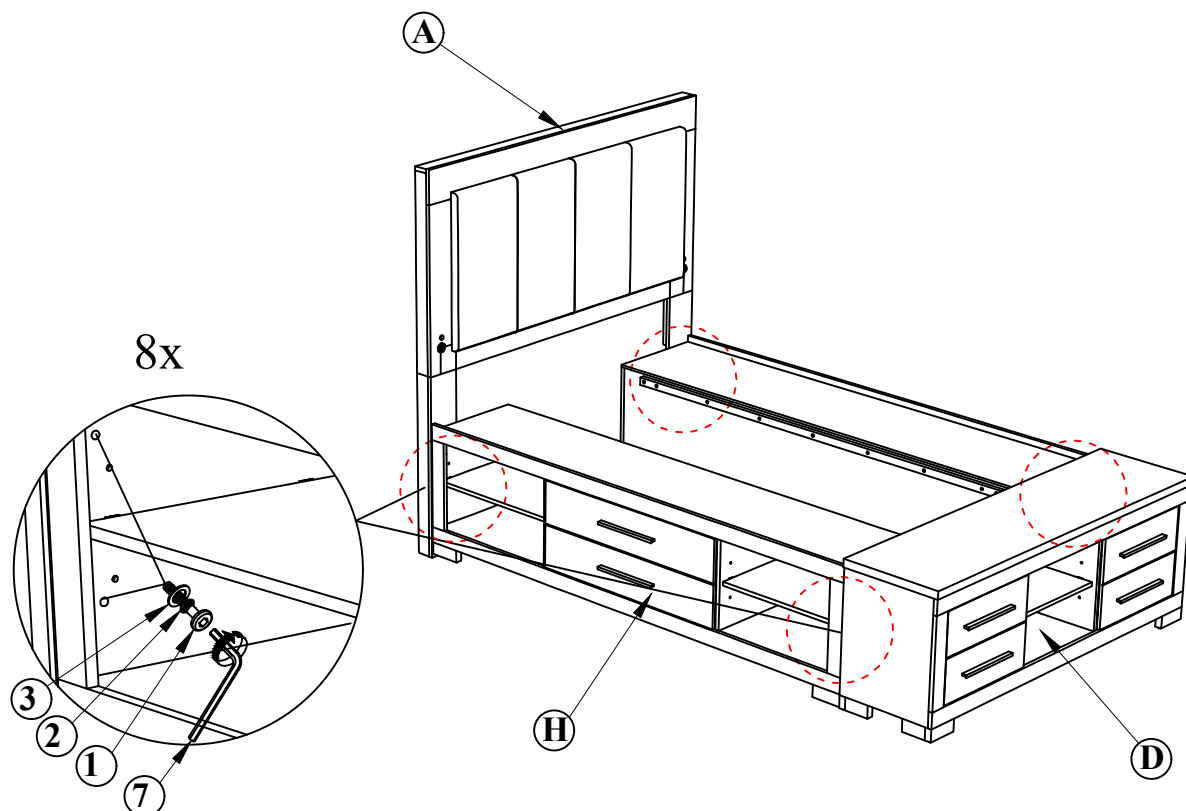


STEP 5 : Attach and align the Bed slat (G) on into a bed frame as shown.

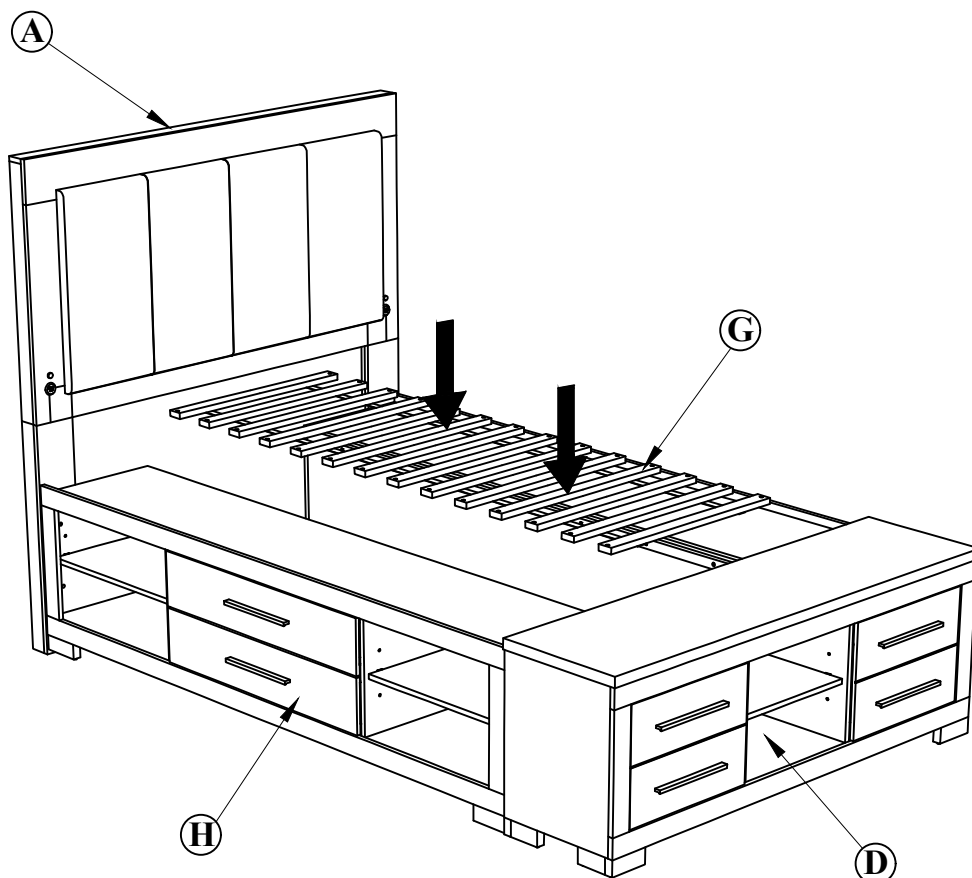


STEP 6 : Install Bed slat (G) with CSK screw (4) with screw driver (not include) as shown.

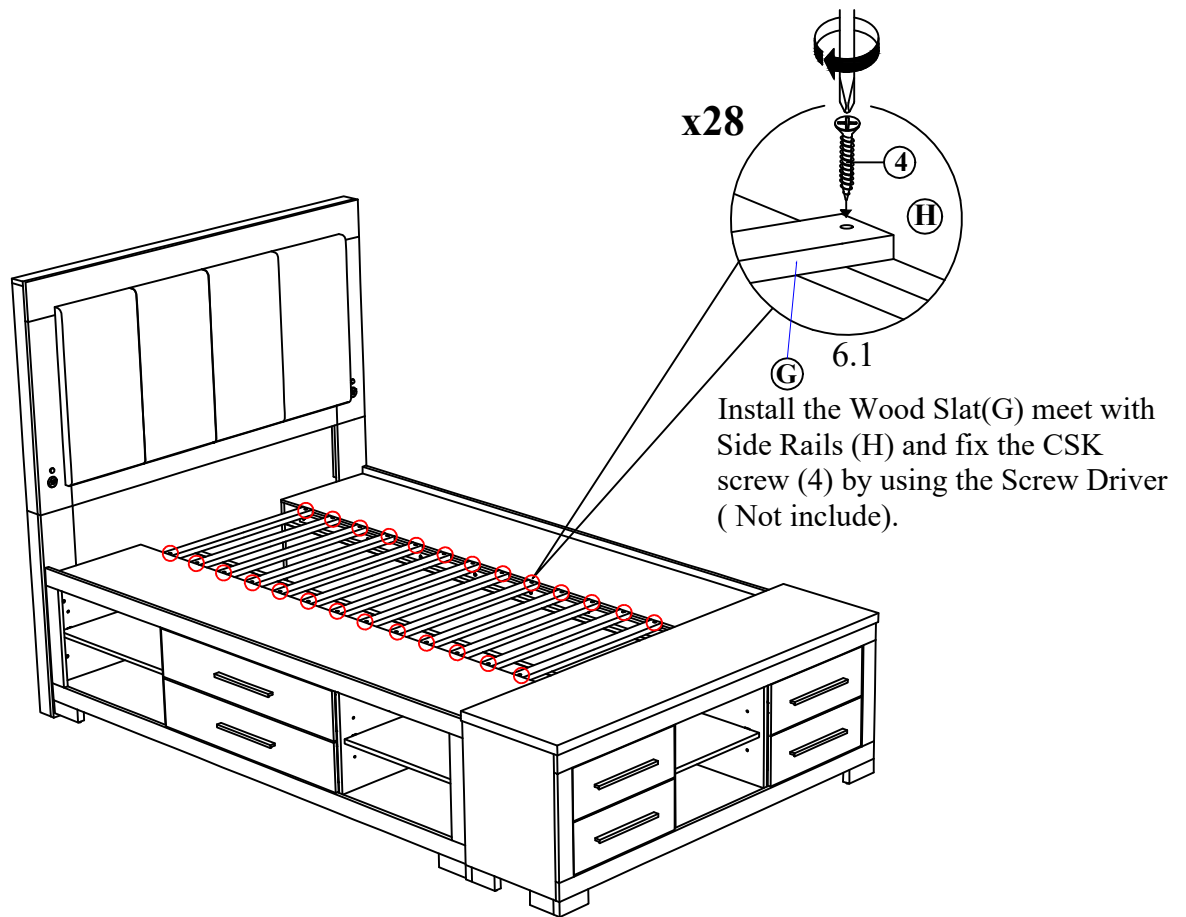

STEP 7: Attach adaptor and plug into electric outlet.

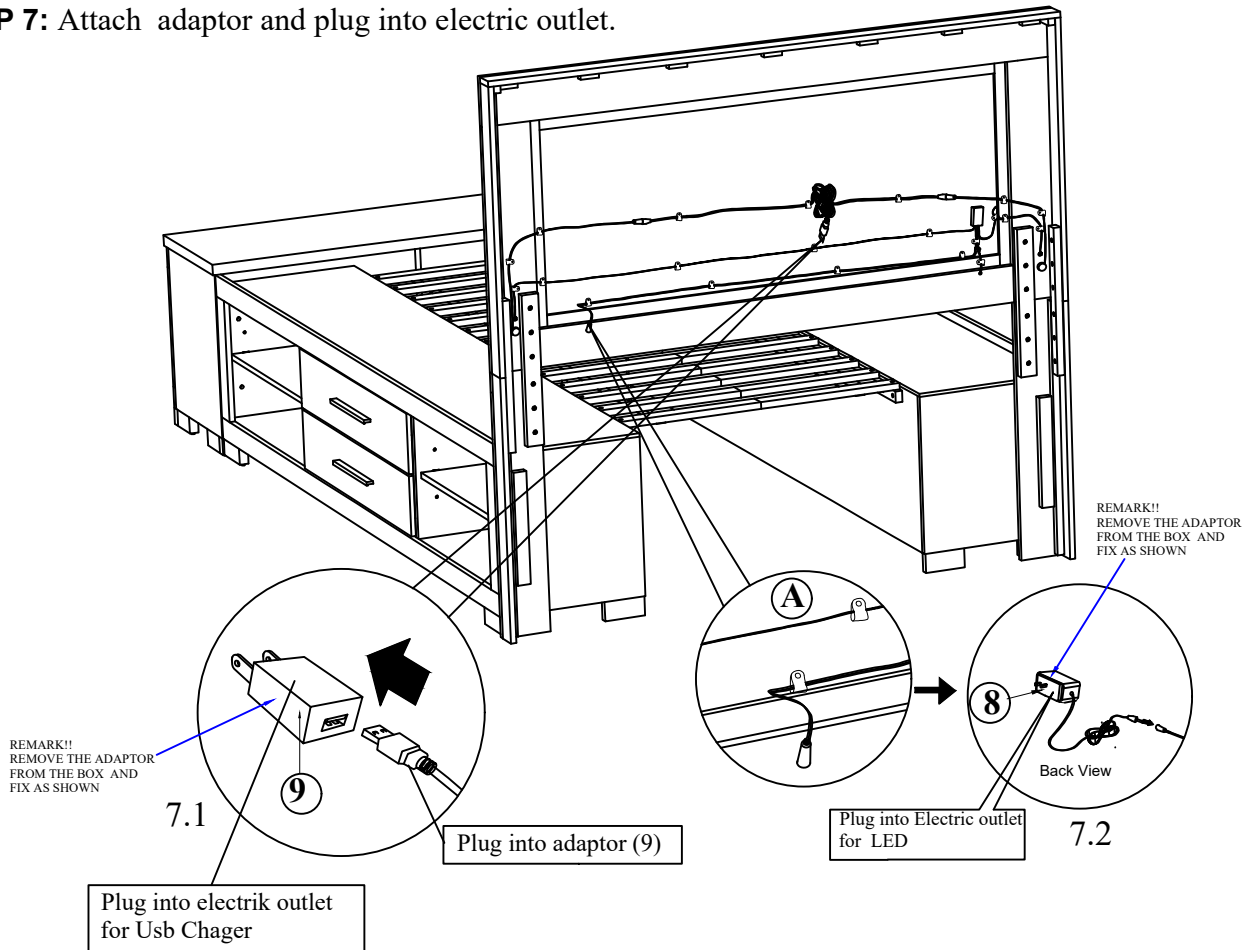

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

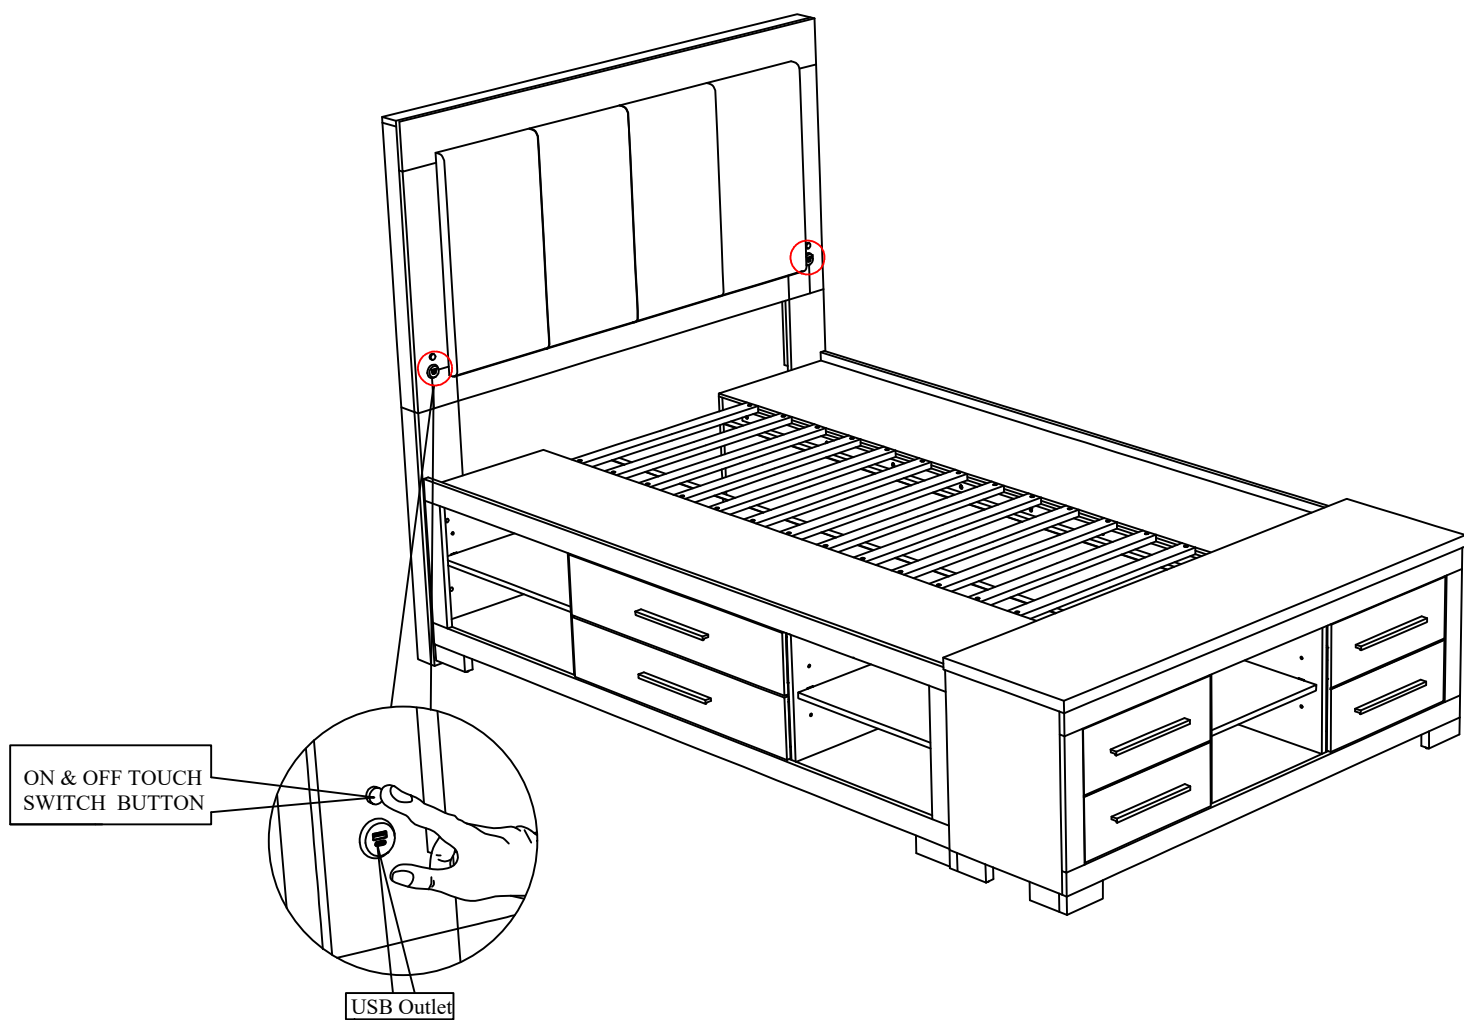

COMPLETED ASSEMBLY

ASSEMBLY INSTRUCTIONS

Model : Emma-Natural/White/Black/Gray-QB-HB W/LED / USB

Emma-Natural/White/Black/Gray-QB-HB Base

Emma-Natural/White/Black/Gray-QB-FB W/Drawer & Shelf

Emma-Natural/White/Black/Gray-QB/KB-SR DWR 1

Emma-Natural/White/Black/Gray-QB/KB-SR DWR 2

Description : Queen Bed Headboard W/LED & USB

Queen Bed Headboard Base



Queen Bed Footboard With 2 Drawers & 1 Shelf

Queen/King Bed Siderail Drawer1


Queen/King Bed Siderail Drawer2

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment


PART LIST : UPPER HEADBOARD BOX

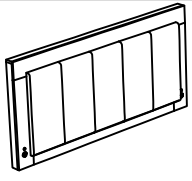No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Headboard Leg Left		1 pc
C	Headboard Leg Right		1 pc

PART LIST : STORAGE FOOTBOARD BOX


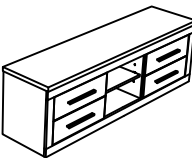
No	Description	Diagram	Quantity
D	Storage Footboard		1 pc
E	Chrome Metal Leg		4 pcs
F	Footboard Bottom Center Leg		2 pcs
G	Bed Slat		14 pcs


PART LIST : STORAGE SIDE RAILS BOX

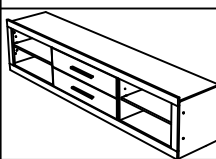No	Description	Diagram	Quantity
H	Storage Side Rail		2 pcs
I	Chrome Metal Leg		4 pcs
J	Side Rail Bottom Back Leg		4 pcs
K	Side Rail Bottom Center Leg		4 pcs

HARDWARE LIST

PACKED IN UPPER HEADBOARD BOX


No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 30mm	8 pcs
2	Spring Washer		Spring Washer 1/4" Blk	8 pcs
3	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	8 pcs
4	Flat Head Chipboard Screw		CSK M4 x 32mm	48 pcs
5	Pan Head Chipboard Screw		Pan Head Screw M3.5 x 16 blk	32 pcs
6	Flat Head Chipboard Screw		CSK M4 x 25mm	12 pcs
7	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
8	Adaptor Led			1 pc
9	Adaptor Usb			1 pc

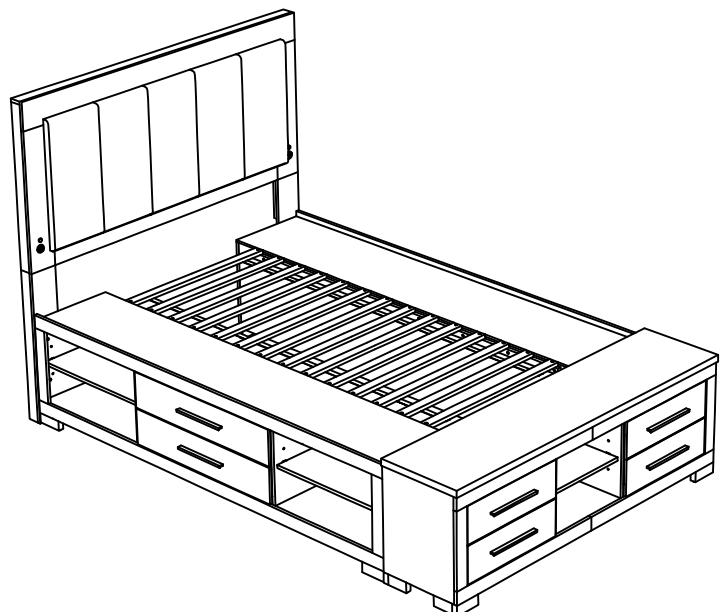

COMPLETE ASSEMBLY


STEP 1 :Attach Head Board leg (B) and (C) to Head Board (A) as shown. using flat head chipboard screw(6) and Tighten as shown.

THE HARDWARE IS LOCATED IN THE PACKING ITEM.

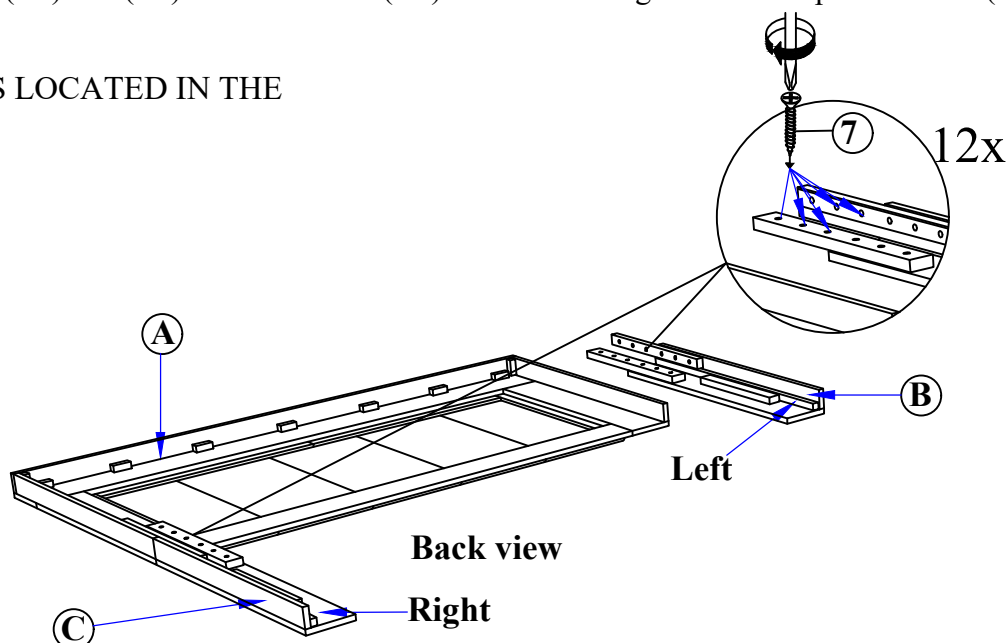


STEP 2.1 : Pull the drawer and take out the Leg (E)&(F). Attach the Chrome metal leg (E) at the bottom Storage footboard (D). Used Pan head chipboard screw(5) and Tighten as shown.

STEP 2.2 : Attach the Footboard bottom leg (F) at the bottom Storage footboard (D). Used flat head chipboard screw(4) and Tighten as shown.

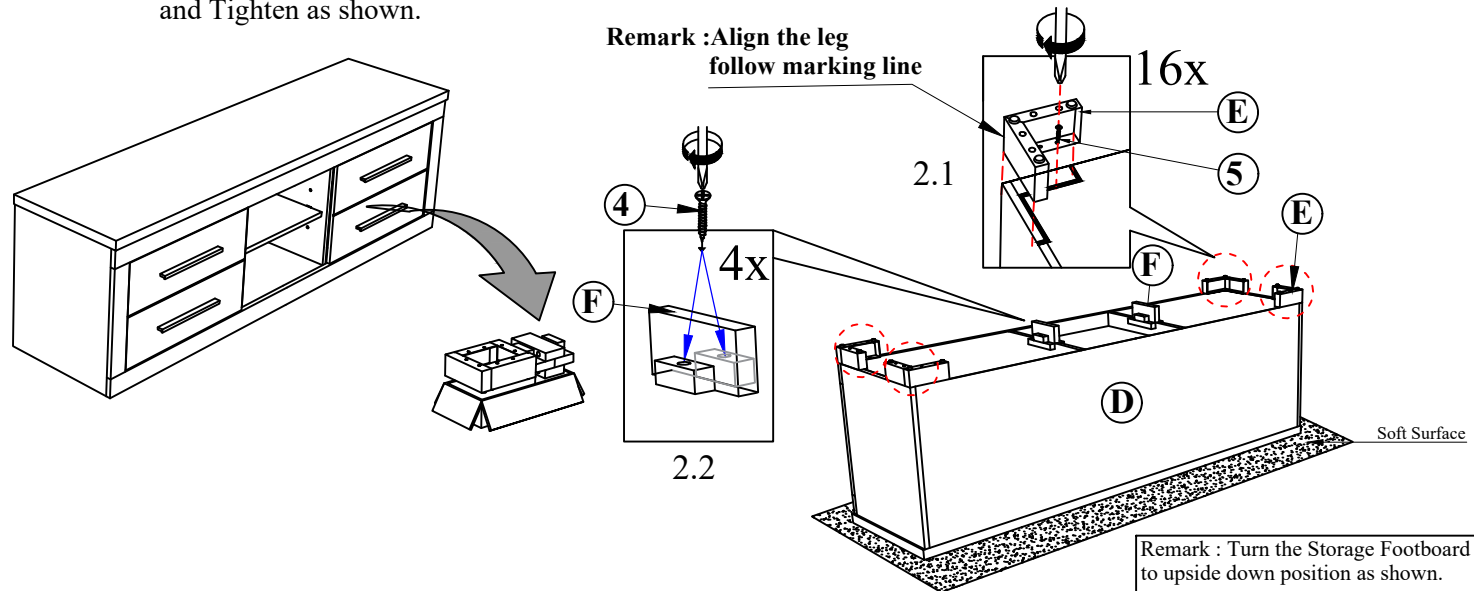


STEP 3.1 : Pull the drawer and take out the Leg (I),(J)&(K). Attach the Chrome metal leg (I) at the bottom Storage side rails (H). Used Pan head chipboard screw(5) and Tighten as shown.


STEP 3.2 : Attach the side rails bottom leg (J) & (K) at the bottom Storage Side Rail (H). Used Flat head chipboard screw(4) and Tighten as shown.

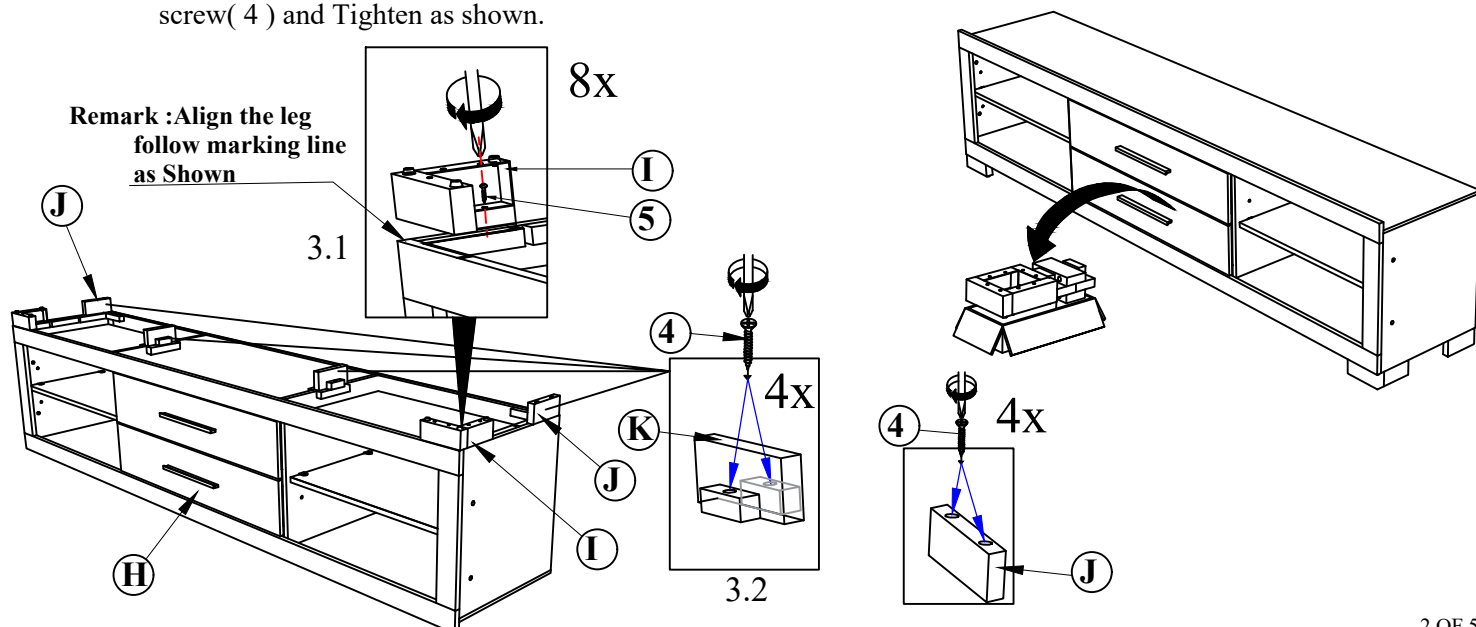


STEP 4 : Attach Storage Side Rails (H) to Headboard assembly(A) and Storage Footboard (D) as shown. using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (7) as shown.

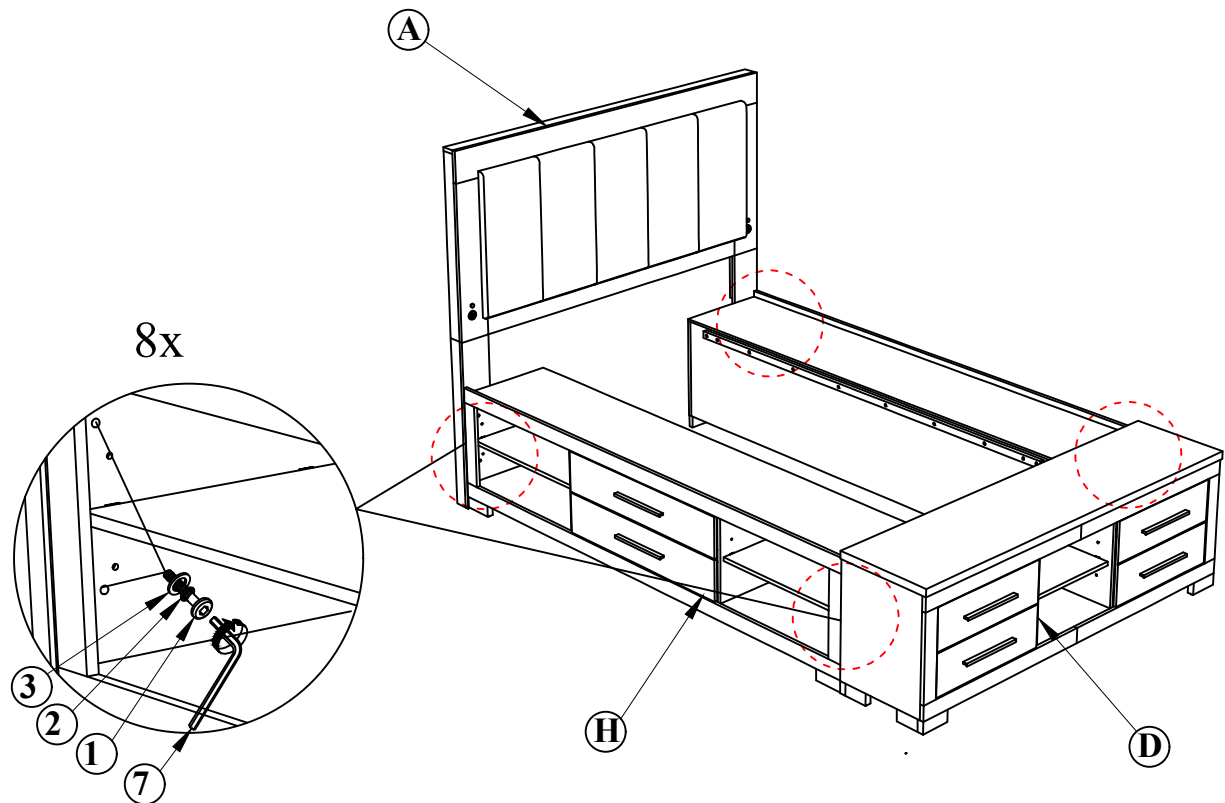


STEP 5 : Attach and align the Bed slat (G) on into a bed frame as shown.

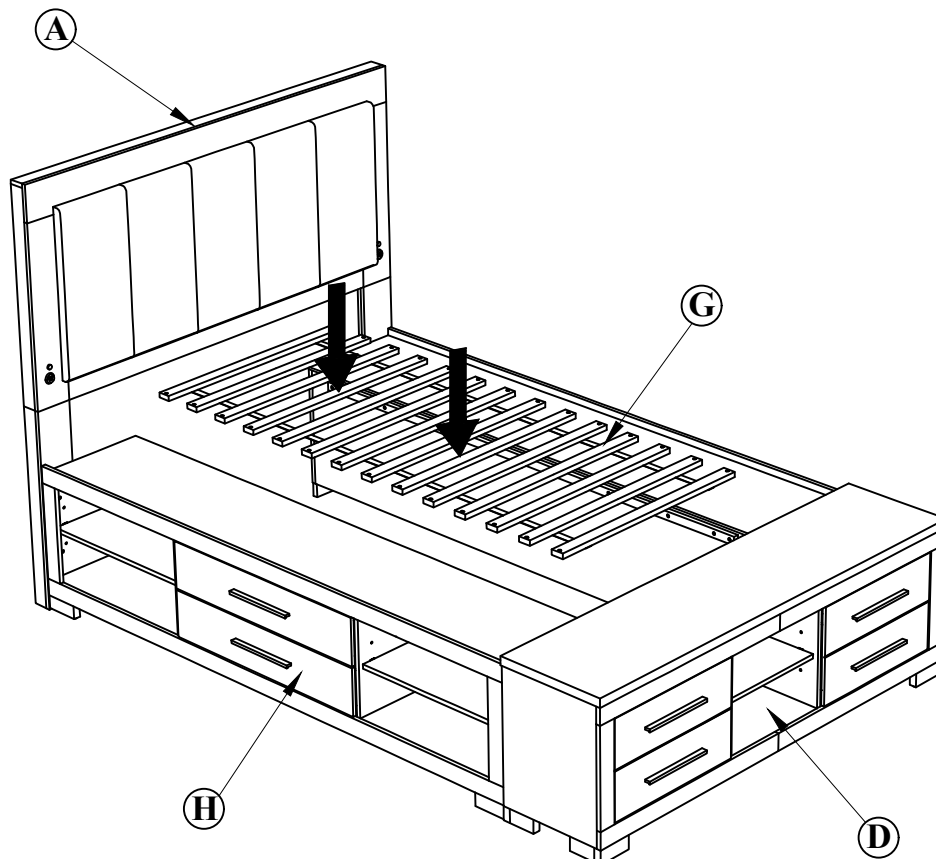


STEP 6 : Install Bed slat (G) with CSK screw (4) with screw driver (not include) as shown.

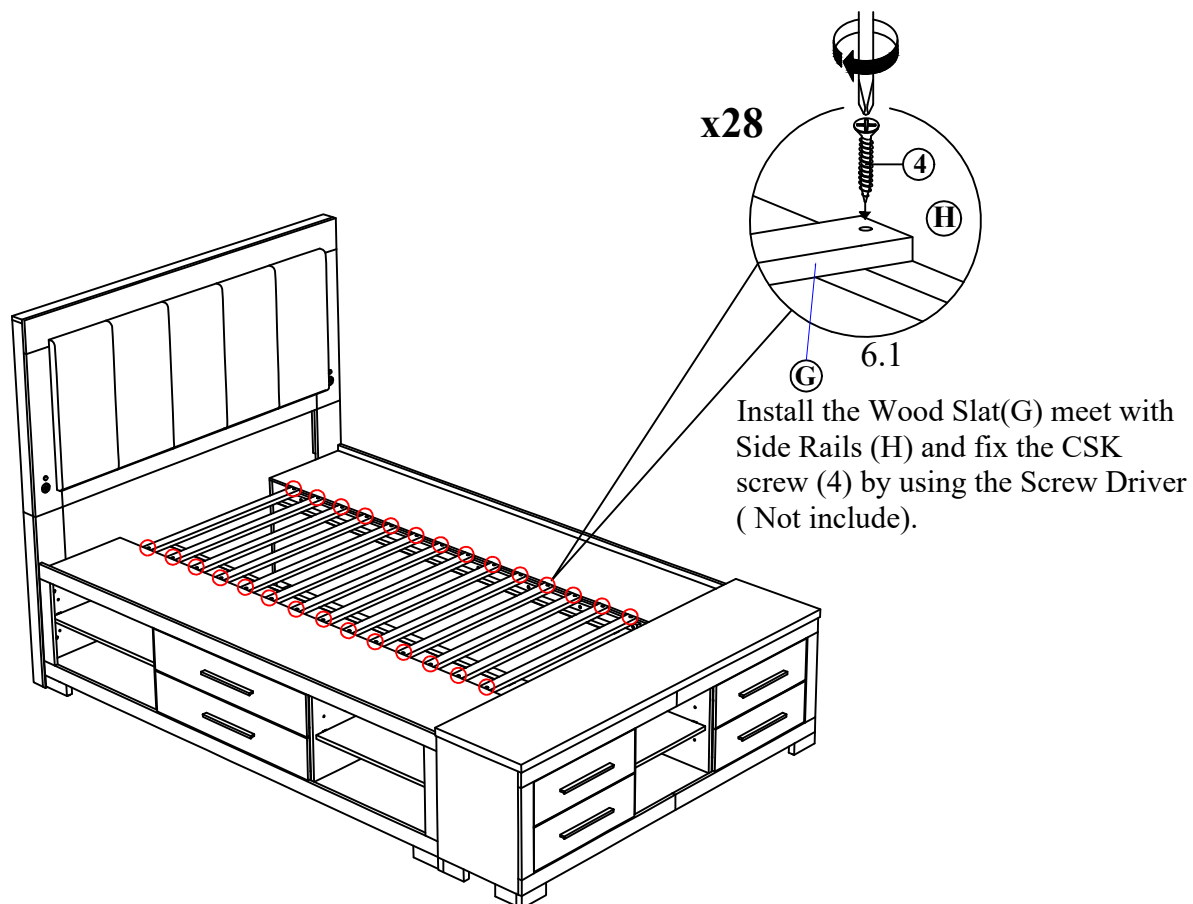

STEP 7: Attach adaptor and plug into electric outlet.

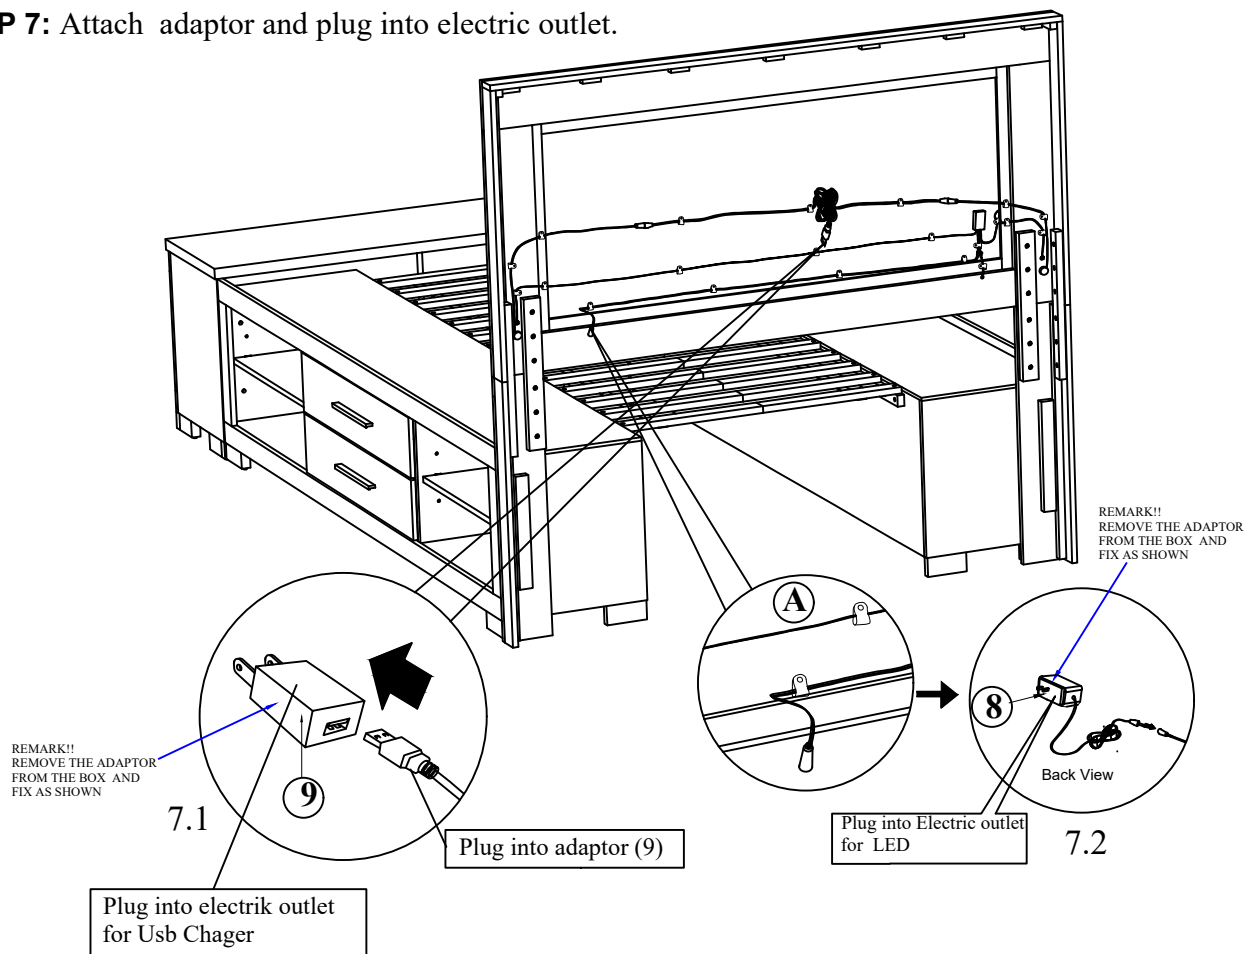

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

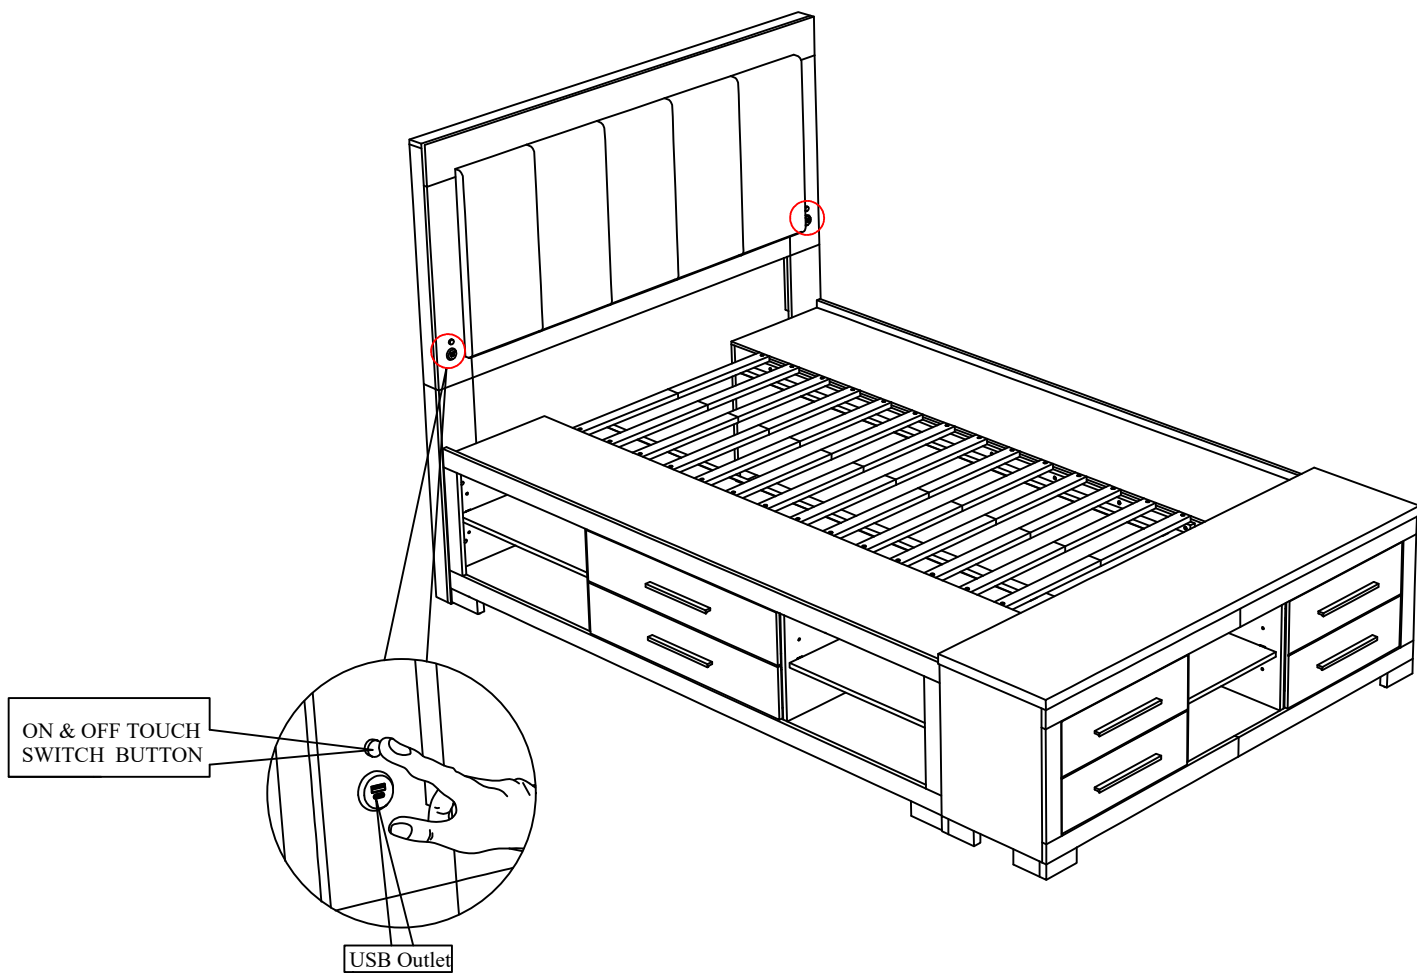

COMPLETED ASSEMBLY



ASSEMBLY INSTRUCTIONS

Model : Emma-Natural/White/Black/Gray-KB-HB W/LED / USB
 Emma-Natural/White/Black/Gray-KB-HB Base
 Emma-Natural/White/Black/Gray-KB-FB W/Drawer & Shelf
 Emma-Natural/White/Black/Gray-KB/KB-SR DWR 1
 Emma-Natural/White/Black/Gray-KB/KB-SR DWR 2



Description : King Bed Headboard W/LED & USB,
 King Bed Headboard Base
 King Bed Footboard With 2 Drawers & 1 Shelf
 Queen/King Bed Siderail Drawer1
 Queen/King Bed Siderail Drawer2

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : UPPER HEADBOARD BOX



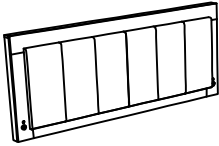

No	Description	Diagram	Quantity
A	Headboard		1 pc
B	Headboard Leg Left		1 pc
C	Headboard Leg Right		1 pc

PART LIST : STORAGE FOOTBOARD BOX

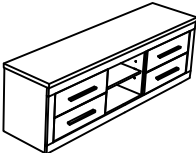
No	Description	Diagram	Quantity
D	Storage Footboard		1 pc
E	Chrome Metal Leg		4 pcs
F	Footboard BottomCenter Leg		2 pcs
G	Bed Slat		14 pcs
H	Center Slat		1 pc
I	Slat Support		3 pcs


HARDWARE LIST

PACKED IN UPPER HEADBOARD BOX

No	Description	Diagram	Size	Quantity
1	JCBC Bolt		M6 x 30mm	8 pcs
2	JCBC Bolt		M6 x 80mm	3 pcs
3	Spring Washer		Spring Washer 1/4" Blk	8 pcs
4	Flat Washer		Flat Washer 1/4" ID 19mm OD Blk	8 pcs
5	Flat Head Chipboard Screw		CSK M4 x 32mm	48 pcs
6	Pan Head Chipboard Screw		Pan Head Screw M3.5 x 16 blk	32 pcs
7	Flat Head Chipboard Screw		CSK M4 x 25mm	12 pcs
8	Barrel Nut		M6 x 15mm	3 pcs
9	Allen Key		ALLEN KEY m4x65mm Blk	1 pc
10	Adaptor Led			1 pc
11	Adaptor Usb			1 pc

PART LIST : STORAGE SIDE RAILS BOX

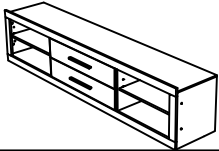No	Description	Diagram	Quantity
J	Storage Side Rail		2 pcs
K	Chrome Metal Leg		4 pcs
L	Side Rail Bottom Back Leg		4 pcs
M	Side Rail Bottom Center Leg		4 pcs

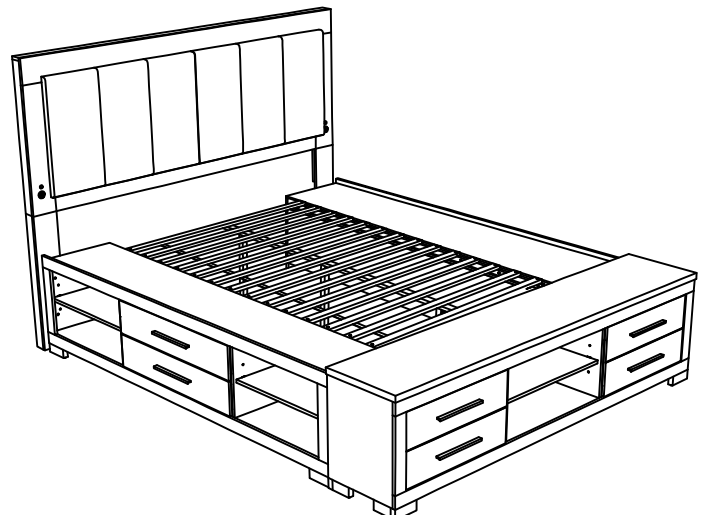


COMPLETE ASSEMBLY

1 OF 5

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


STEP 1 : Attach Head Board leg (B) and (C) to Head Board (A) as shown. using flat head chipboard screw(7) and Tighten as shown.

THE HARDWARE IS LOCATED IN THE PACKING ITEM.

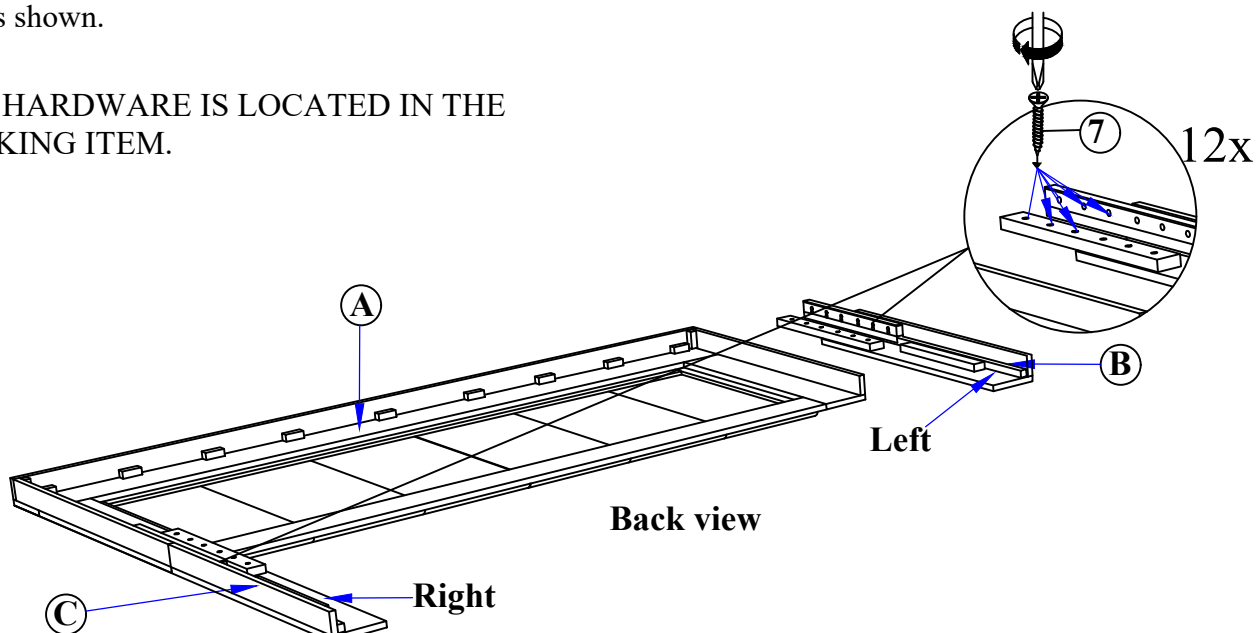


STEP 2.1 : Pull the drawer and take out the Leg (E) & (F). Attach the Chrome metal leg (E) at the bottom Storage footboard (D). Used Pan head chipboard screw(6) and Tighten as shown.

STEP 2.2 : Attach the Footboard bottom leg (F) at the bottom Storage footboard (D). Used flat head chipboard screw(5) and Tighten as shown.

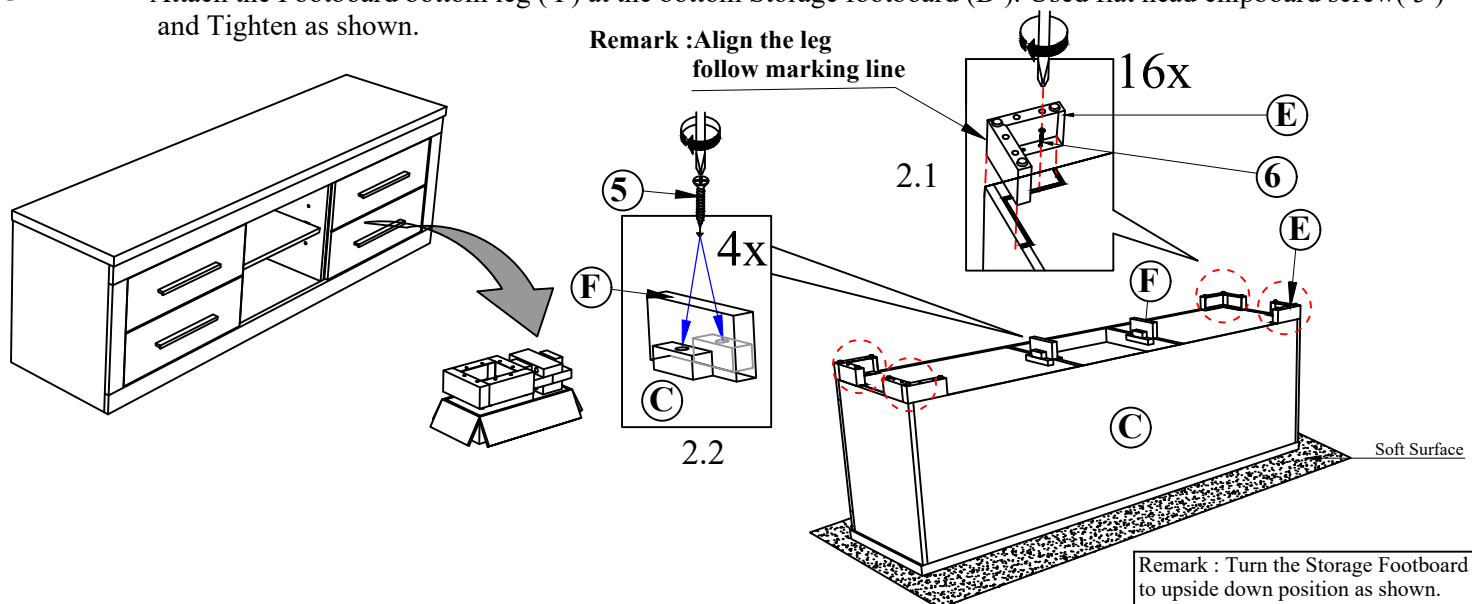


STEP 3.1 : Pull the drawer and take out the Leg (K), (L) & (M). Attach the Chrome metal leg (K) at the bottom Storage side rails (J). Used Pan head chipboard screw(6) and Tighten as shown.

STEP 3.2 : Attach the side rails bottom leg (L) & (M) at the bottom Storage Side Rail (J). Used Flat head chipboard screw(5) and Tighten as shown.


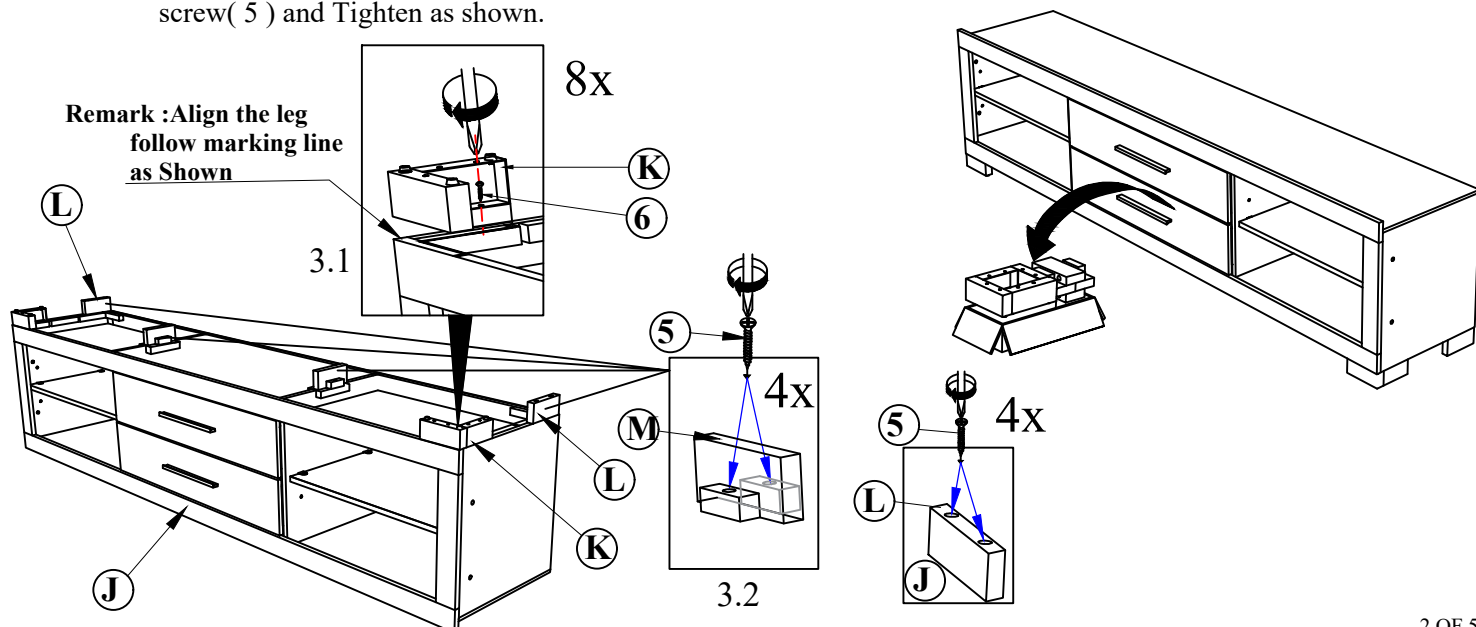


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

STEP 4 : Attach Storage Side Rails (J) to Headboard assembly(A) and Storage Footboard (D) as shown. using JCBC BOLT (1) with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (9) as shown.

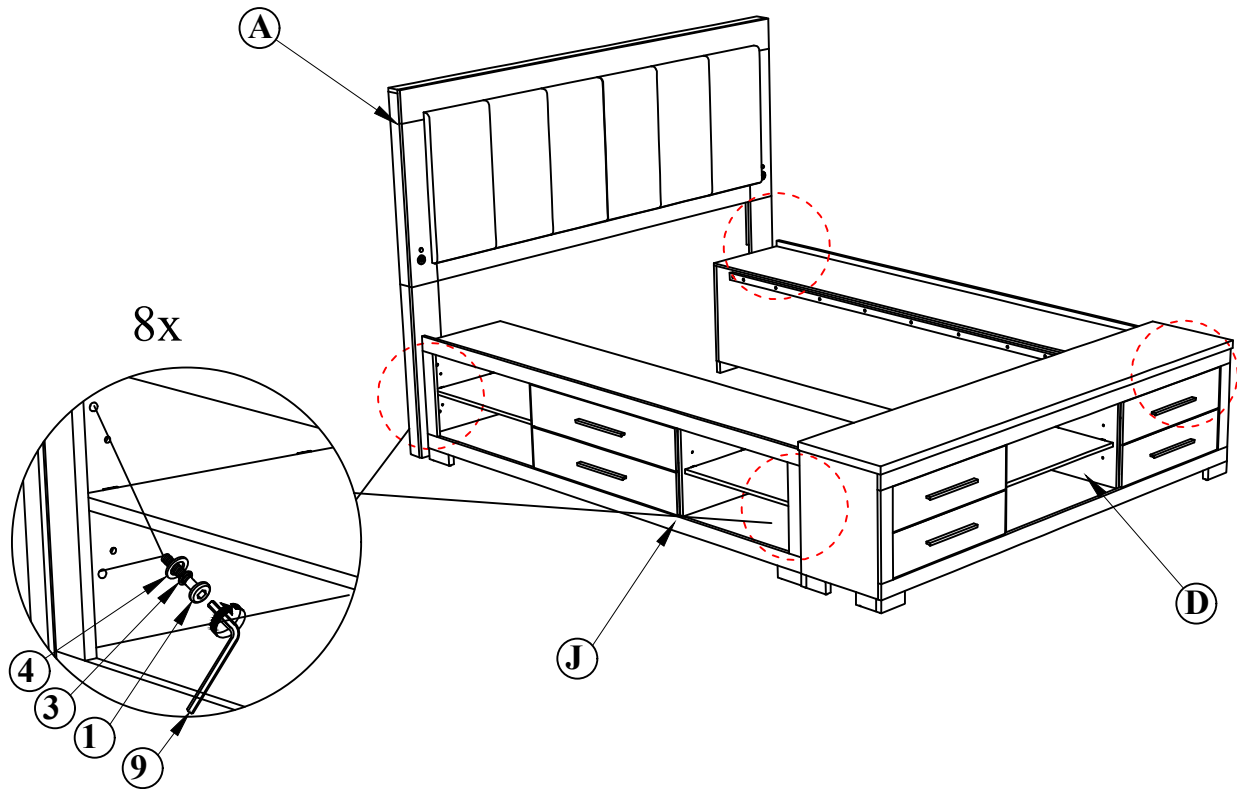


STEP 5 : Attach slat support (I) and center slat (H) to bed slat (G) as shown. Using JCBC BOLT (2) and insert barrel nut (8) at slat support hole(H) then securing with ALLEN KEY (9).

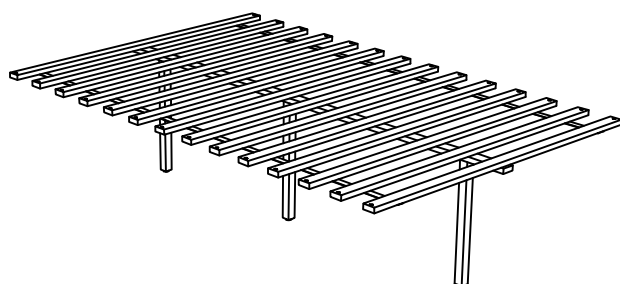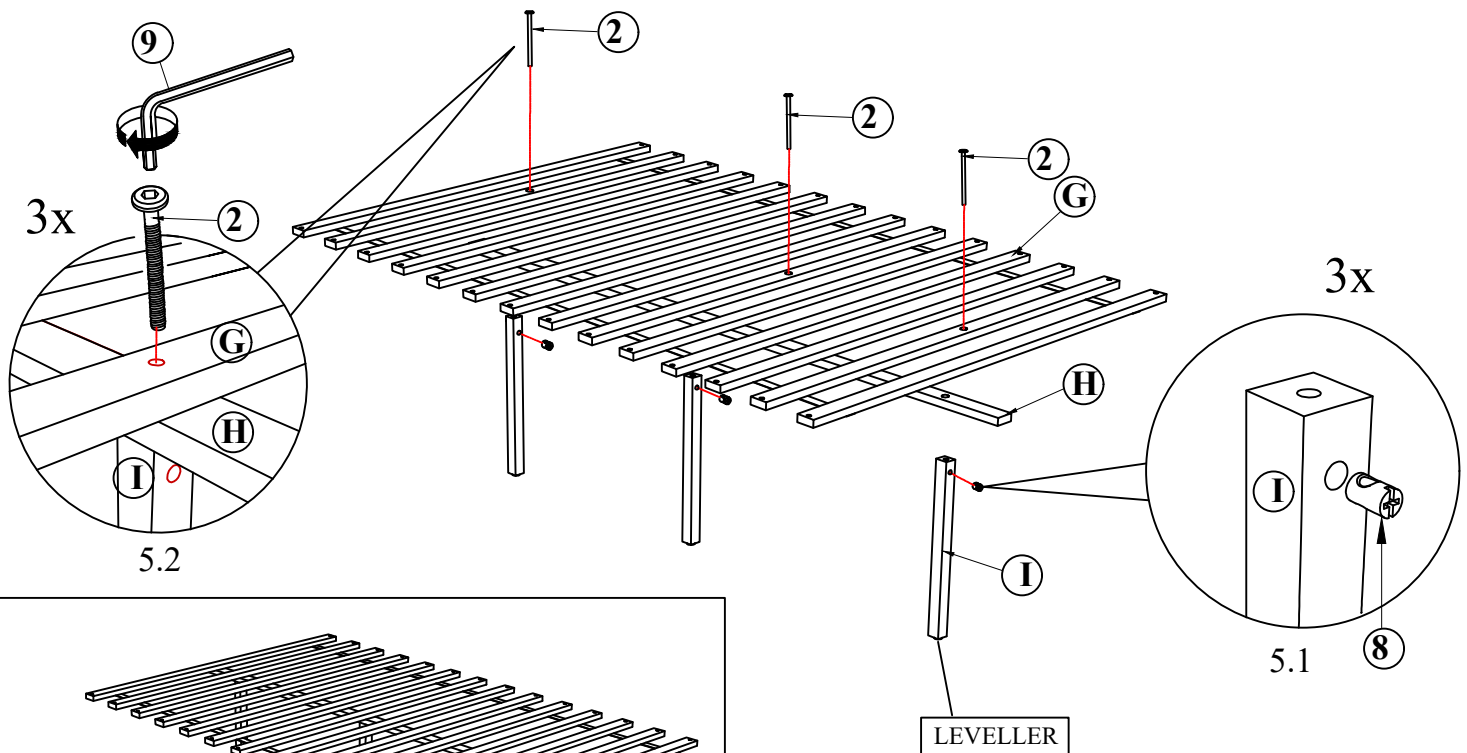


COMPLETE ASSEMBLY

STEP 6 : Attach and align Assembly slat (G) on into a bed frame as shown.

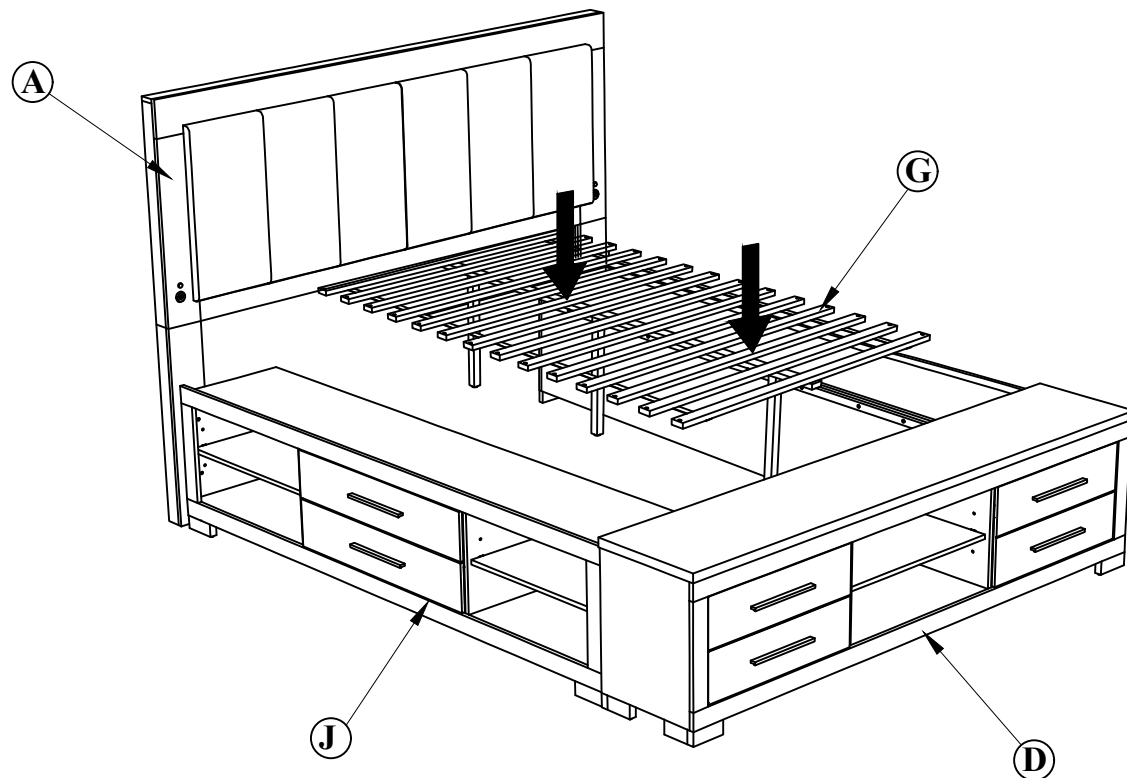

STEP 7 : Install bed slat (G) with CSK screw (5) with screw driver (not include)

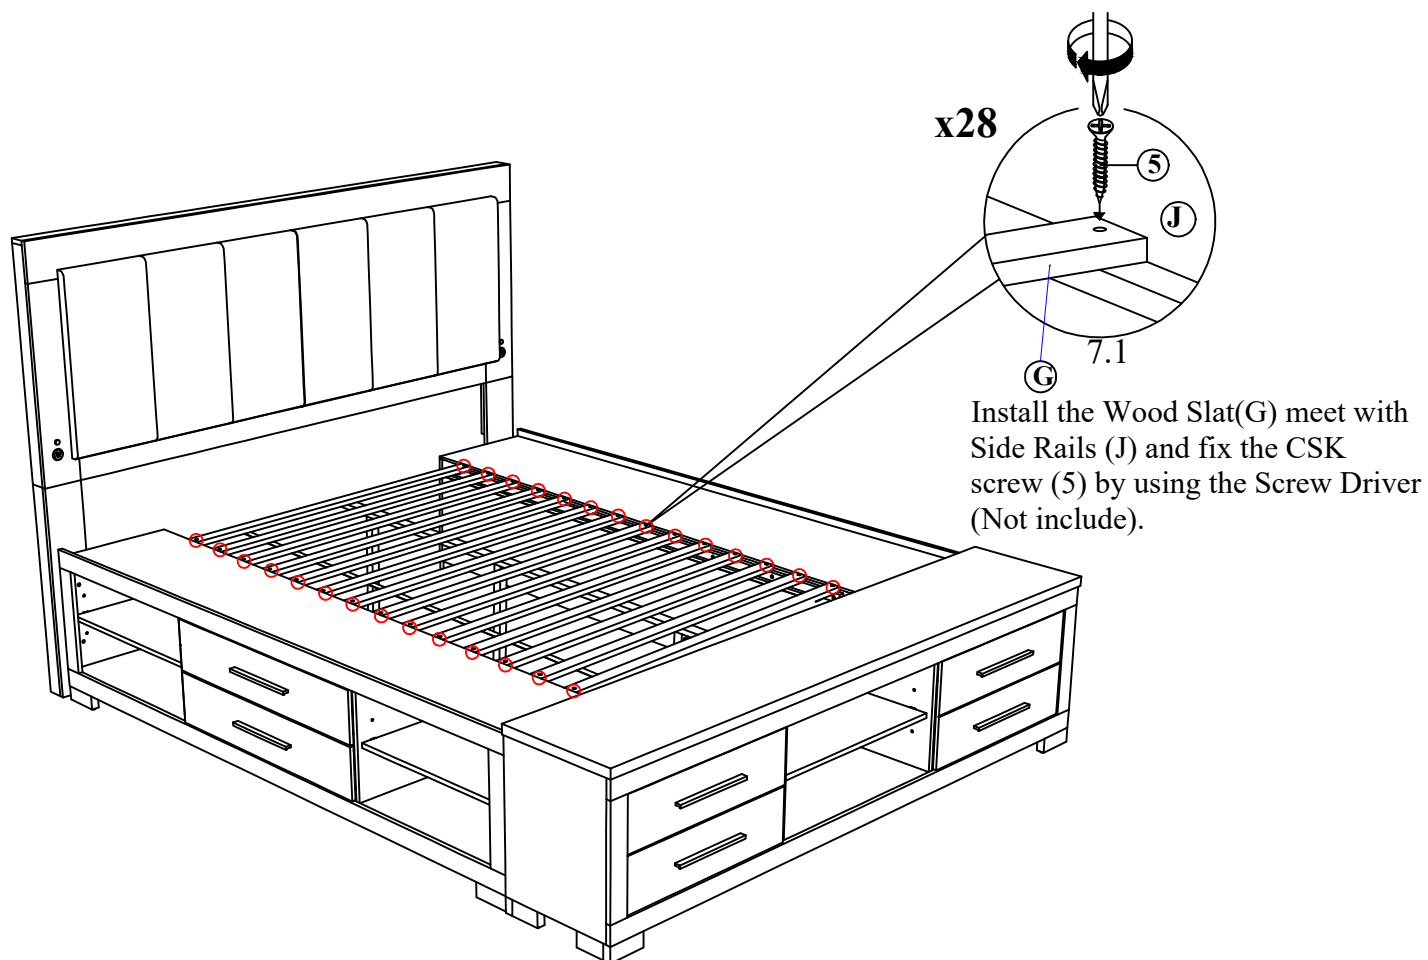

Install the Wood Slat(G) meet with Side Rails (J) and fix the CSK screw (5) by using the Screw Driver (Not include).

STEP 8: Attach adaptor and plug into electric outlet.

