

ASSEMBLY INSTRUCTION

MODEL : U8880-PR

DESCRIPTION : POWER RECLINER WITH ARMREST CUPHOLDER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

PARTS LIST:

NO.	DESCRIPTION	SKETCH	Q'TY
A	Seat Body		1 PC
B	Backrest		1 PC
C	Left wing		1 PC
D	Right wing		1 PC
E	Power source		1 PC


Step 1:

Attach Backrest (B) to the Seat (A).

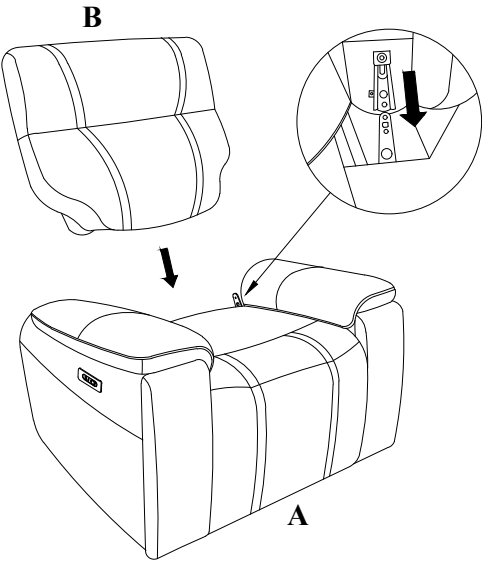


Step 2:

Attach the Left/Right Wings (C/D) to the Left/Right side of the Backrest (B).

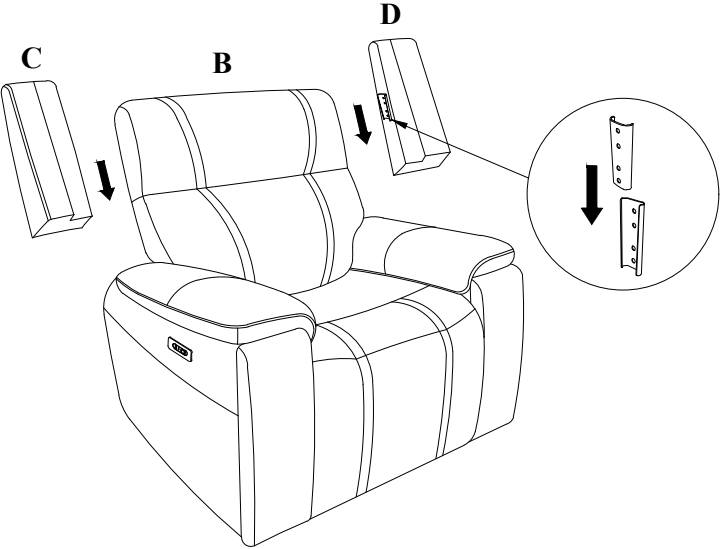

Step 3:

Connect the power wire under the Armrest frame to the Power source (E).

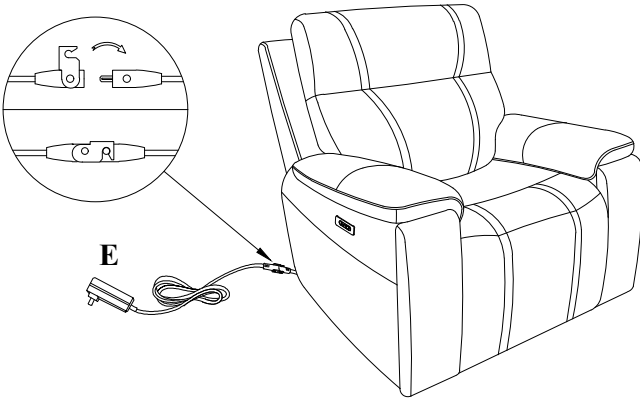

Step 4:

Open the footrest by pressing the power button on/off.

