


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-QB-HB/FB/SR/POST

Description : Queen Bed

Thank you for purchasing this quality product. Be sure to check all pacQueen materials carefully for small parts, which may have come loose inside the carton during shipment.

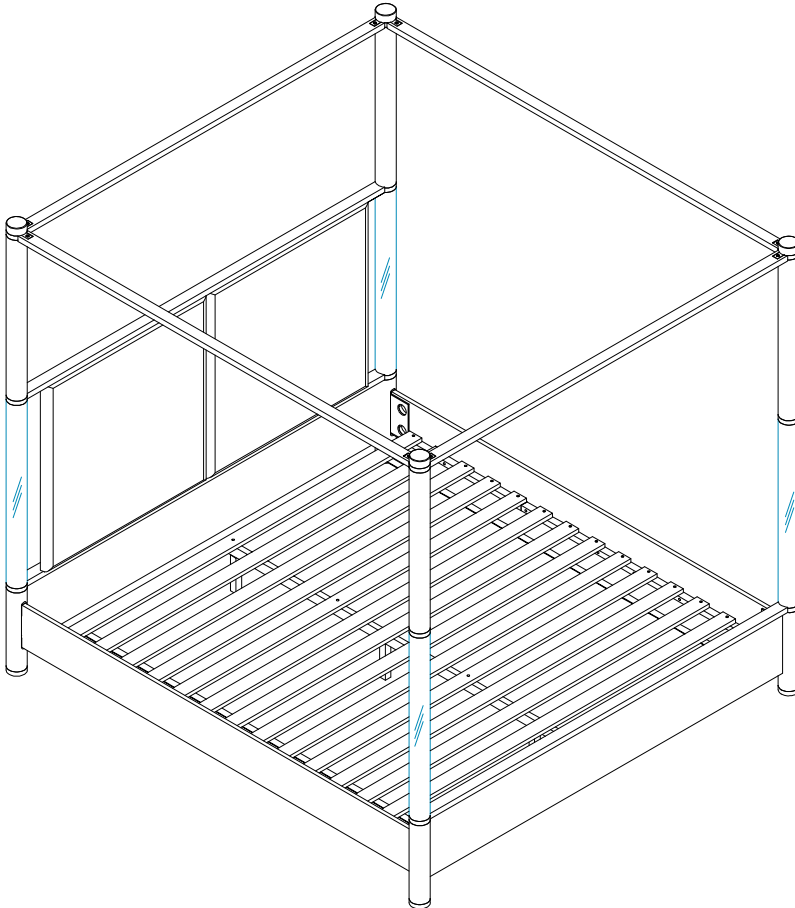

PART LIST:

No.	Description	Diagram	Quantity
A	Headboard Panel		1
B	Under HB Panel		1
C	Cross Bar		1
D	Footboard Panel		1
E	Slats		14
F	Bottom Bed Leg (L/R)		4
G	Lower Middle Bed Leg		4
H	Upper Middle Bed Leg		4
I	Siderail		2
J	Center Support		1
K	Center Support Leg		3
L	Vertical Top Bar		2
M	Horizontal Top Bar		2

HARDWARE LIST:

	No.	Description	Diagram	Size	Quantity
Headboard and Footboard	N	Bolt		Ø1/4"x35mm	10
	O	Bolt		Ø1/4"x40mm	8
	P	Allen Key		M4	1
	Q	Screw		Ø4x30mm	28
HB & FB Post	R	Middle Iron Ring		Ø80x20x2mm	2
	S	Top Iron Ring		Ø80x55mm	4
	T	Bolt		Ø1/4"x15mm	10
Siderails	U	Threaded rods		Ø5/16"x90mm	8
	V	Half moon nut		Ø5/16"	8
	X	Hex Nut		Ø5/16"	8
	Y	Wrench		12mm	1


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-QB-HB/FB/SR/POST

Description : Queen Bed


Thank you for purchasing this quality product. Be sure to check all pacQueen materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 1:

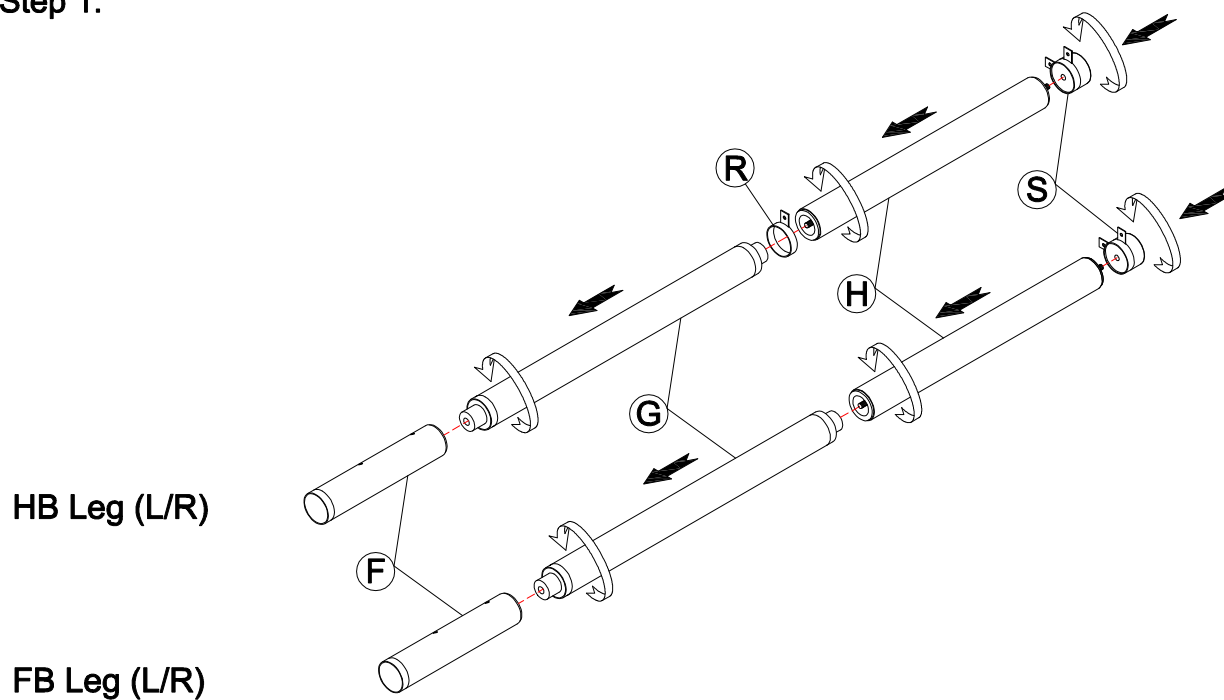

Insert Iron rings (R,S) into the connectors and gradually assemble the parts of the bed leg (F,G,H) together to form a complete leg.

Step 2:

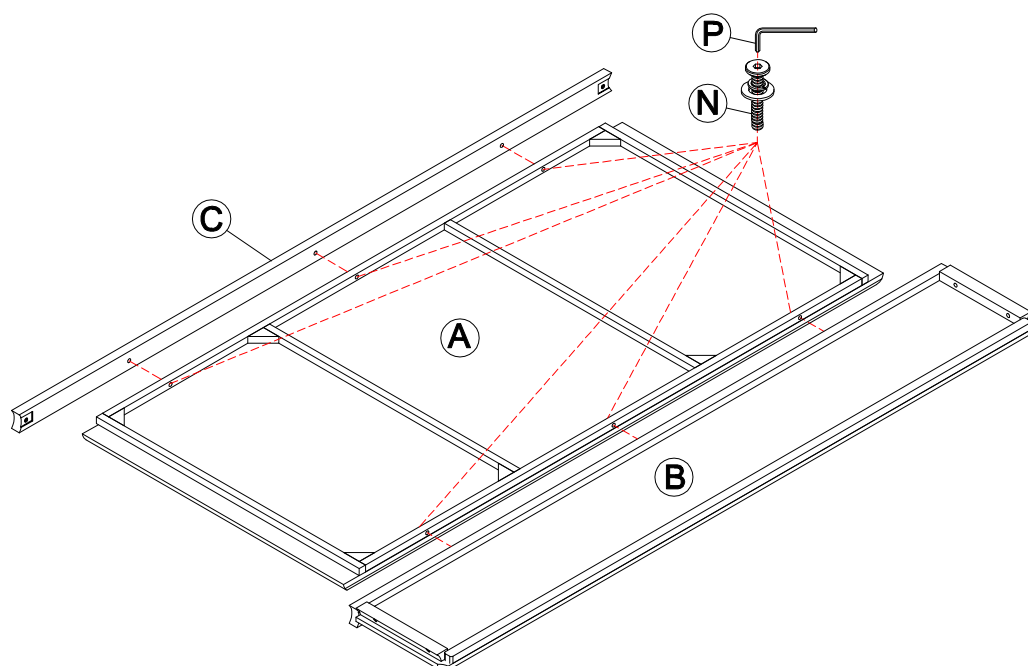

Attach Under HB Panel (B) and Cross Bar (C) to Headboard Panel (A) by using Bolt (N) and tighten with Allen Key (P).


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-QB-HB/FB/SR/POST

Description : Queen Bed


Thank you for purchasing this quality product. Be sure to check all pacQueen materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 3:

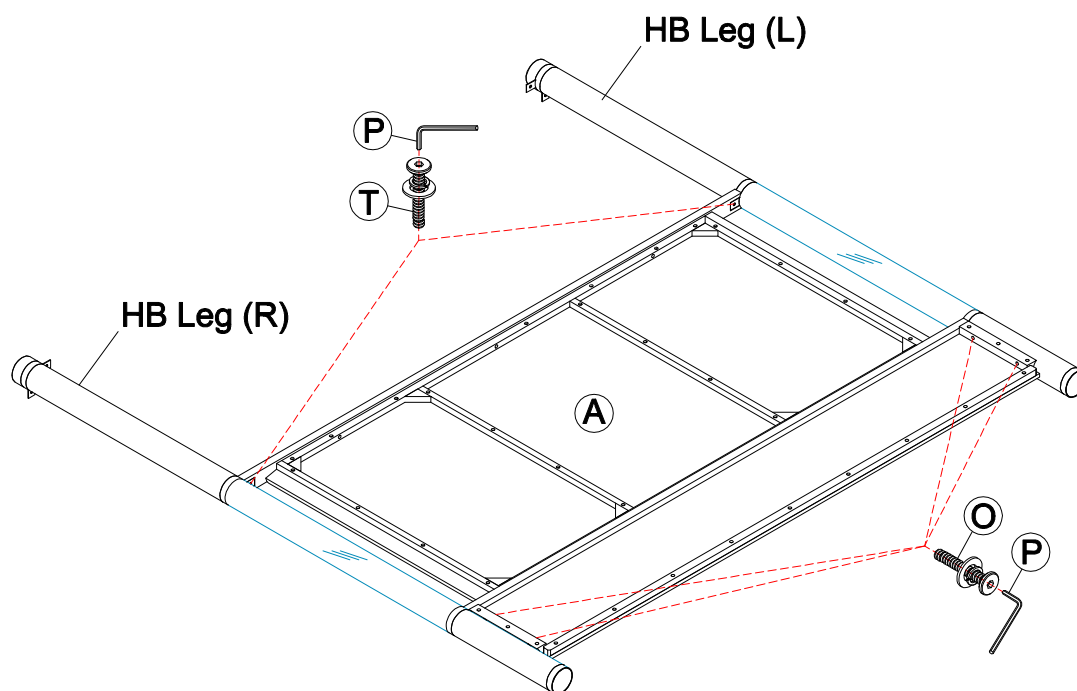

Attach HB Leg (L/R) to the Headboard by using Bolt (O,T) and tighten with Allen Key (P)..

Step 4:

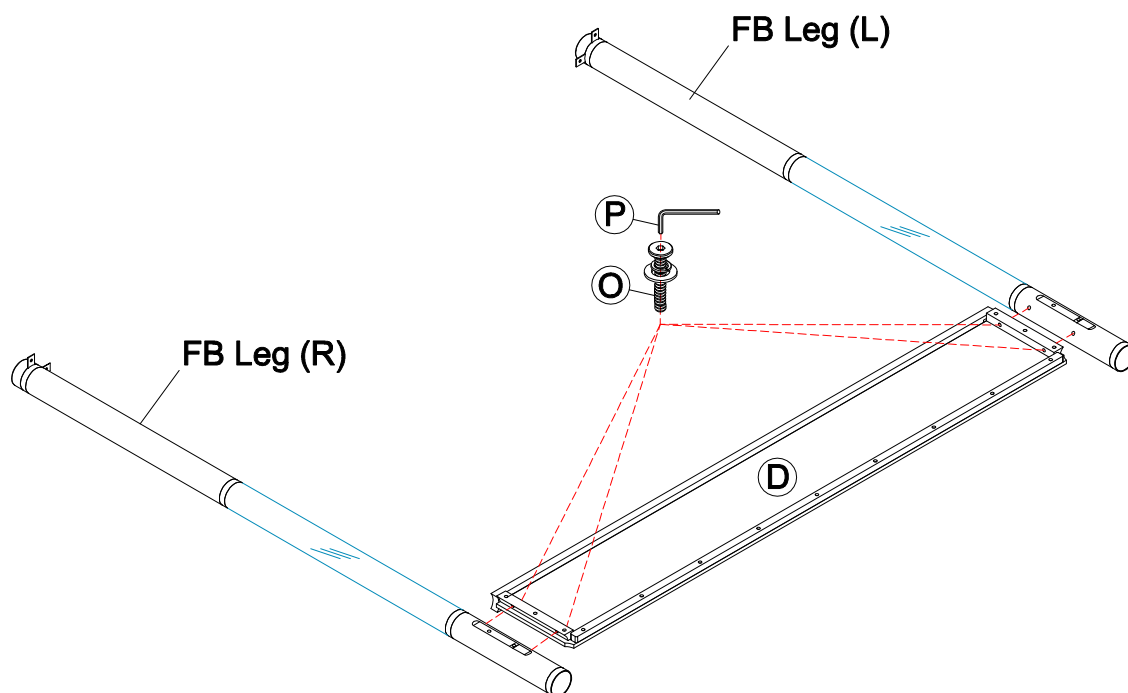

Attach FB Leg (L/R) to the Footboard Panel (D) by using Bolt (O) and tighten with Allen Key (P).


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-QB-HB/FB/SR/POST

Description : Queen Bed


Thank you for purchasing this quality product. Be sure to check all pacQueen materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 5:

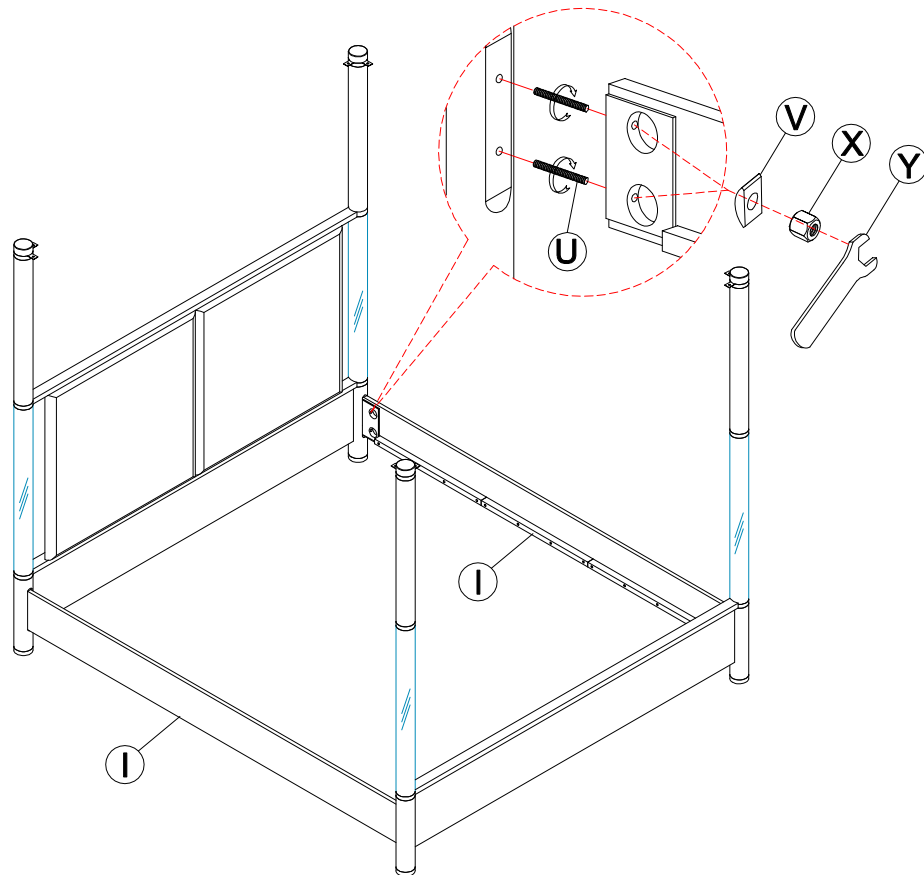

Attach Threaded Rods (U) to the Headboard and Footboard, then align side rail (I) to the Threaded Rods (U). Secure by using Nuts (X) with Half Moon Nut (V).

Step 6:

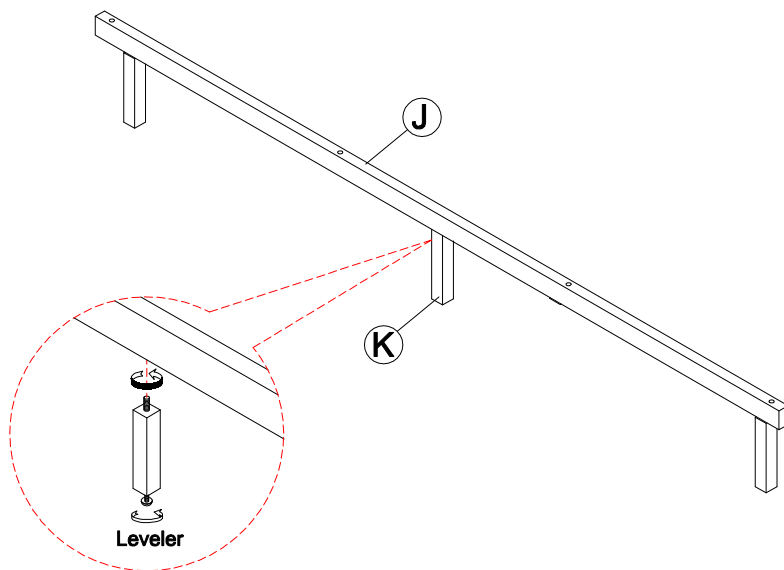

Attach Support Leg (K) to Center Support (J) by turning as clockwise direction.


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-QB-HB/FB/SR/POST


Description : Queen Bed

Thank you for purchasing this quality product. Be sure to check all pacQueen materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 7:

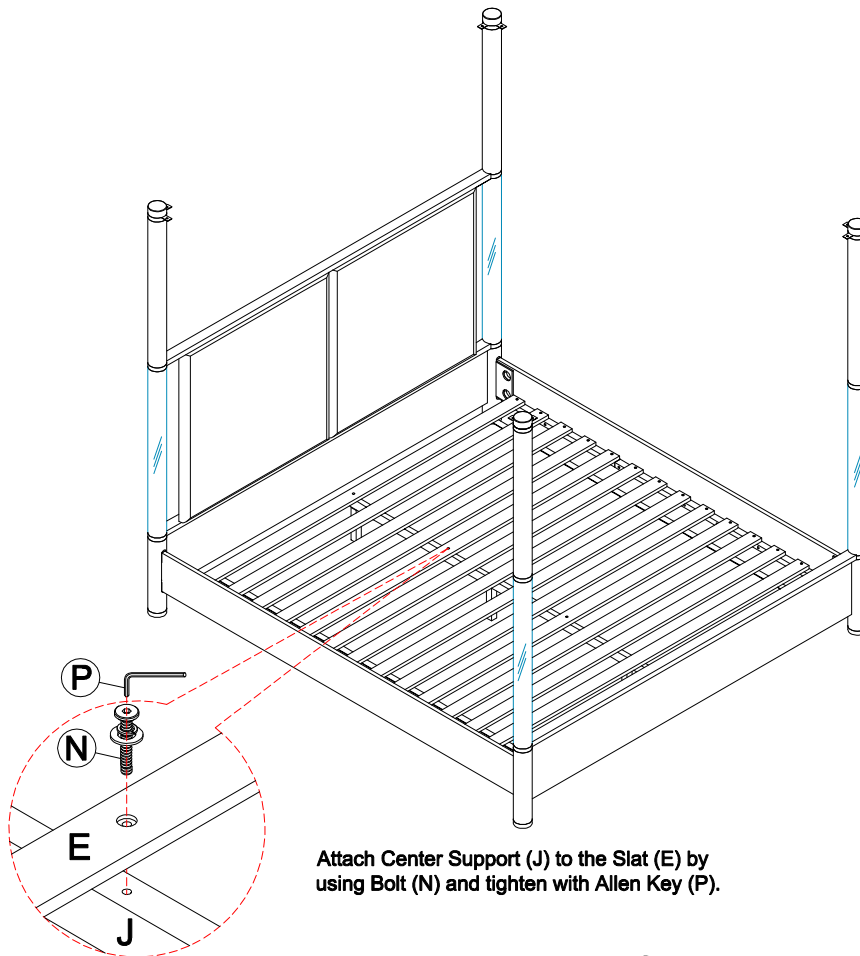

Step 8:

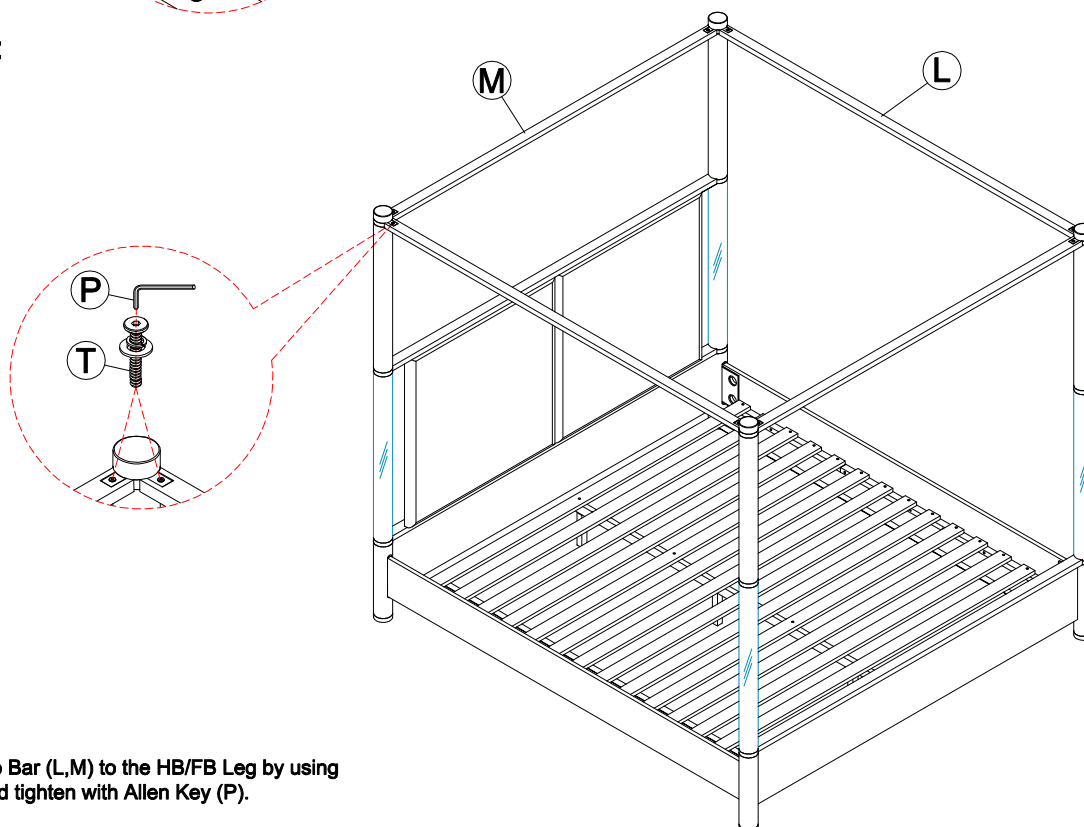


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-QB-HB/FB/SR/POST

Description : Queen Bed


Thank you for purchasing this quality product. Be sure to check all pacQueen materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 9:

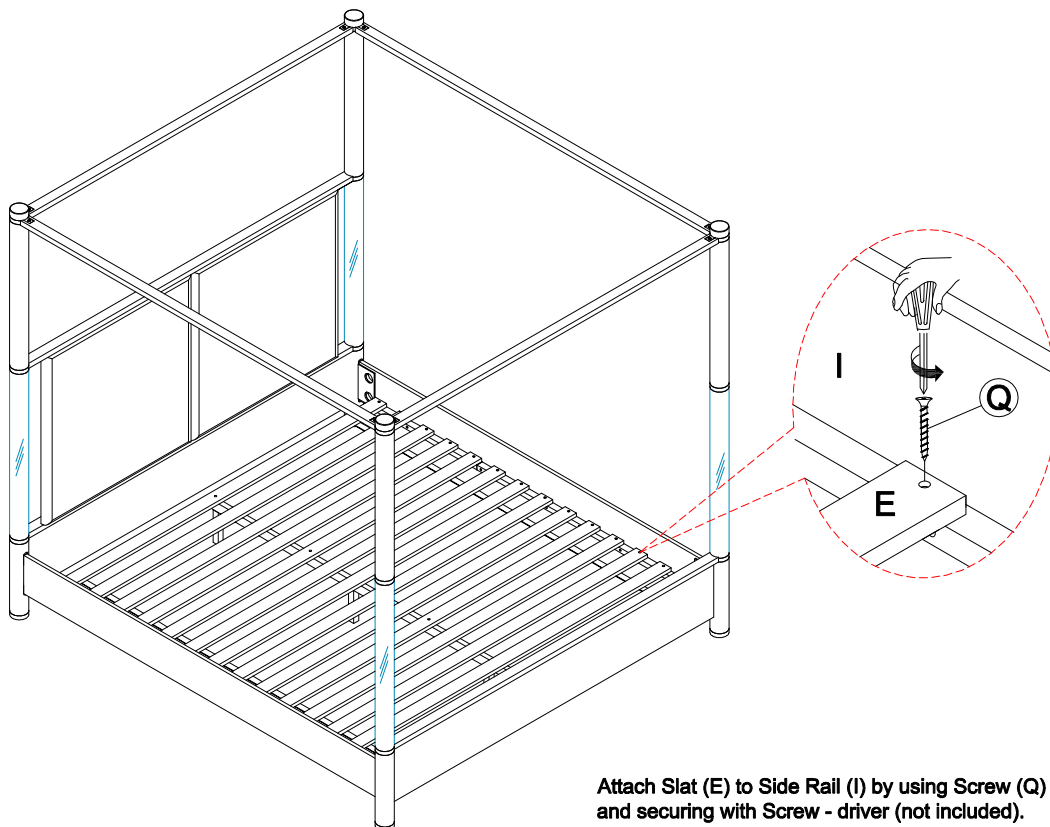

Attach Slat (E) to Side Rail (I) by using Screw (Q) and securing with Screw - driver (not included).

Complete

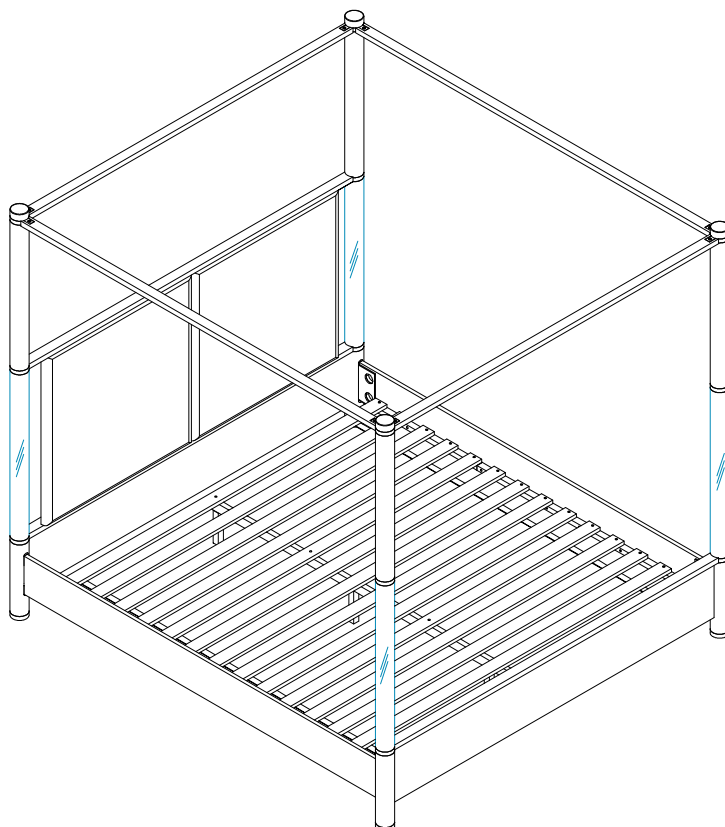


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-KB-HB/FB/SR/POST

Description : King Bed

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

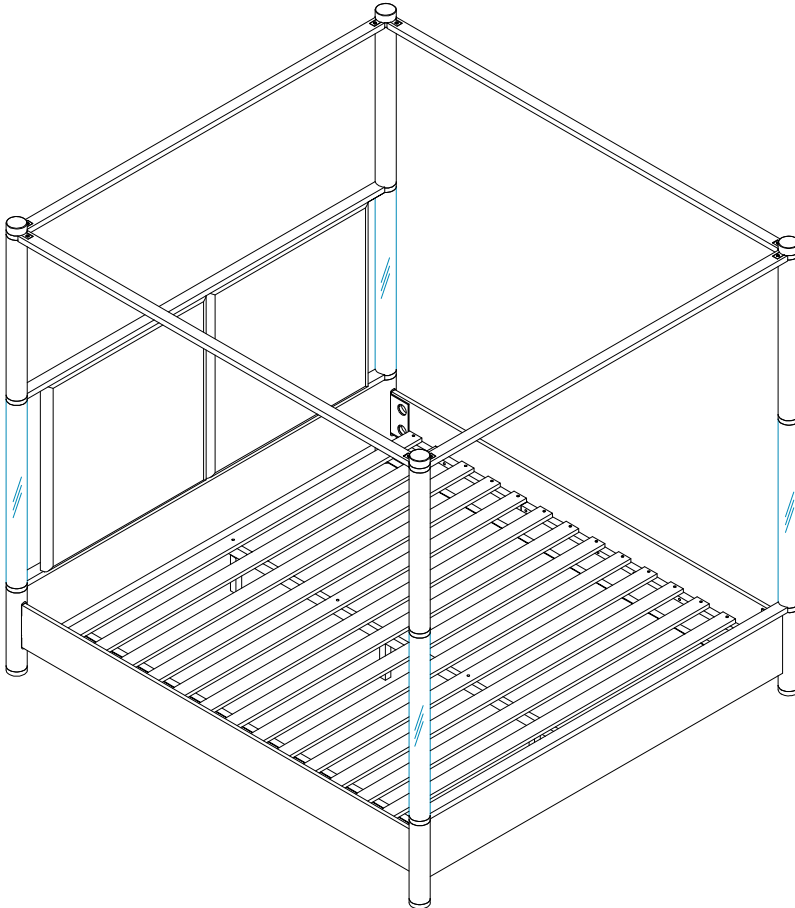

PART LIST:

No.	Description	Diagram	Quantity
A	Headboard Panel		1
B	Under HB Panel		1
C	Cross Bar		1
D	Footboard Panel		1
E	Slats		14
F	Bottom Bed Leg (L/R)		4
G	Lower Middle Bed Leg		4
H	Upper Middle Bed Leg		4
I	Siderail		2
J	Center Support		1
K	Center Support Leg		3
L	Vertical Top Bar		2
M	Horizontal Top Bar		2

HARDWARE LIST:

No.	Description	Diagram	Size	Quantity
Headboard and Footboard	N		Ø1/4"x35mm	10
	O		Ø1/4"x40mm	8
	P		M4	1
	Q		Ø4x30mm	28
HB & FB Post	R		Ø80x20x2mm	2
	S		Ø80x55mm	4
	T		Ø1/4"x15mm	10
Siderails	U		Ø5/16"x90mm	8
	V		Ø5/16"	8
	X		Ø5/16"	8
	Y		12mm	1


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-KB-HB/FB/SR/POST

Description : King Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 1:

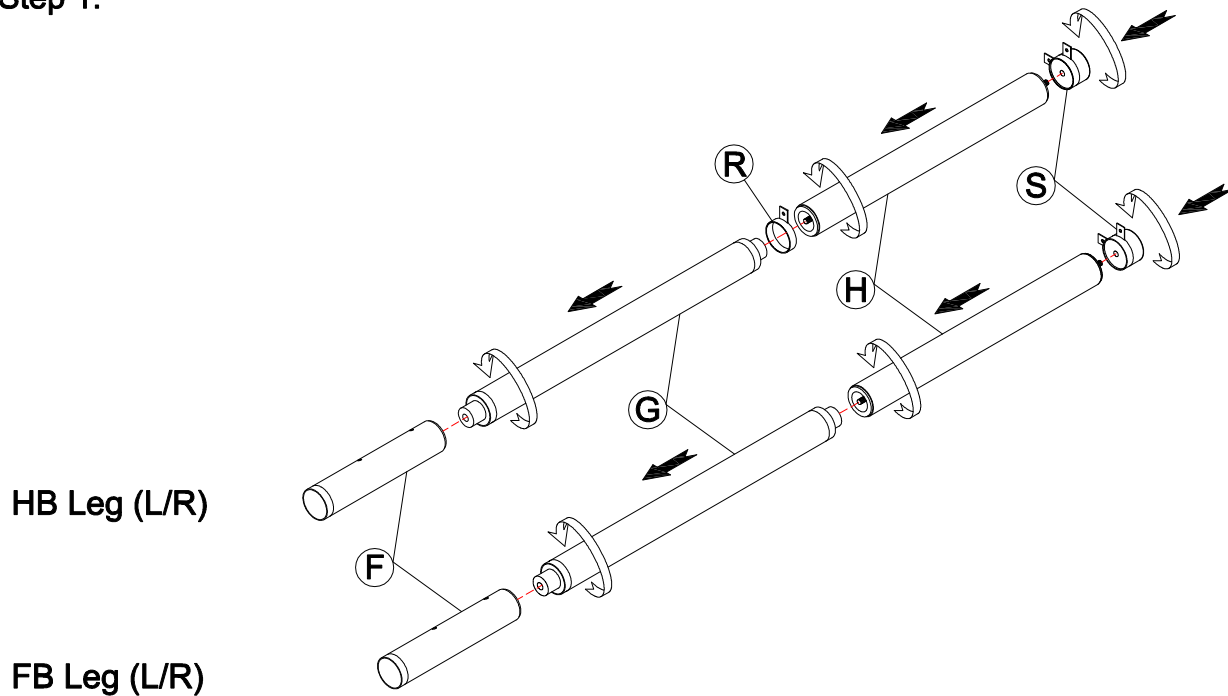

Insert Iron rings (R,S) into the connectors and gradually assemble the parts of the bed leg (F,G,H) together to form a complete leg.

Step 2:

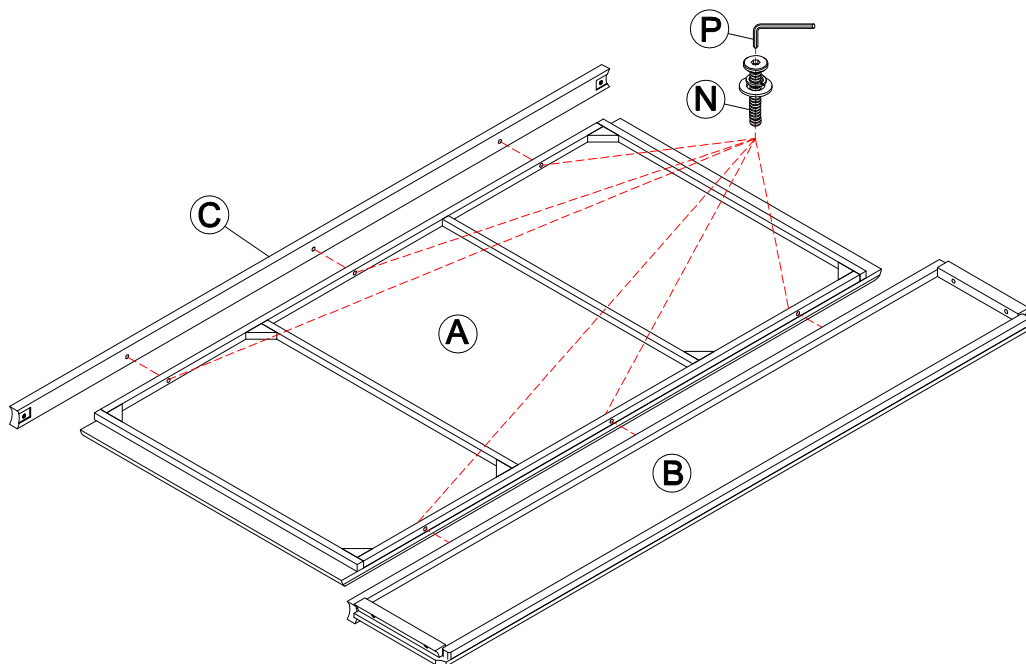

Attach Under HB Panel (B) and Cross Bar (C) to Headboard Panel (A) by using Bolt (N) and tighten with Allen Key (P).


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-KB-HB/FB/SR/POST

Description : King Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 3:

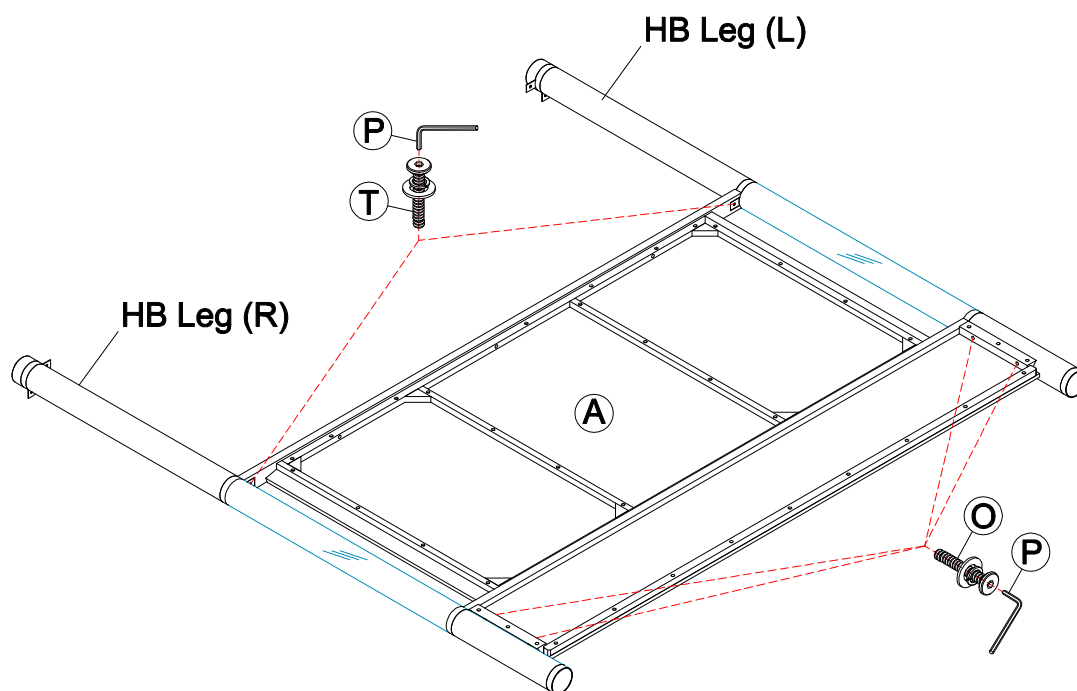

Attach HB Leg (L/R) to the Headboard by using Bolt (O,T) and tighten with Allen Key (P)..

Step 4:

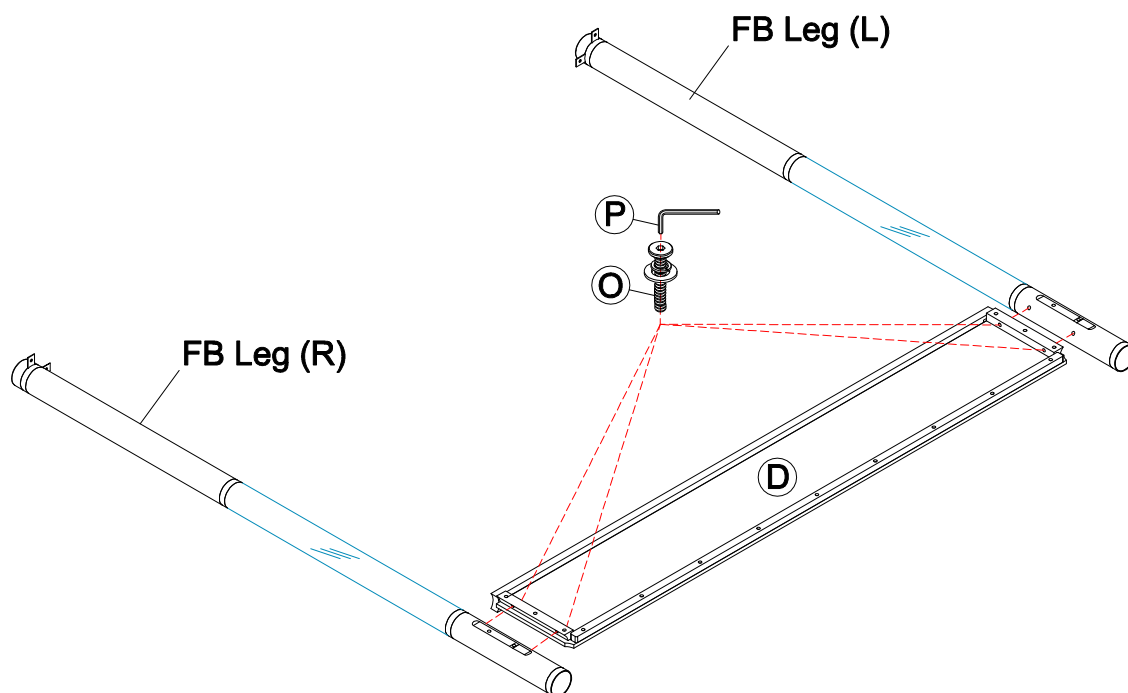

Attach FB Leg (L/R) to the Footboard Panel (D) by using Bolt (O) and tighten with Allen Key (P).


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-KB-HB/FB/SR/POST

Description : King Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 5:

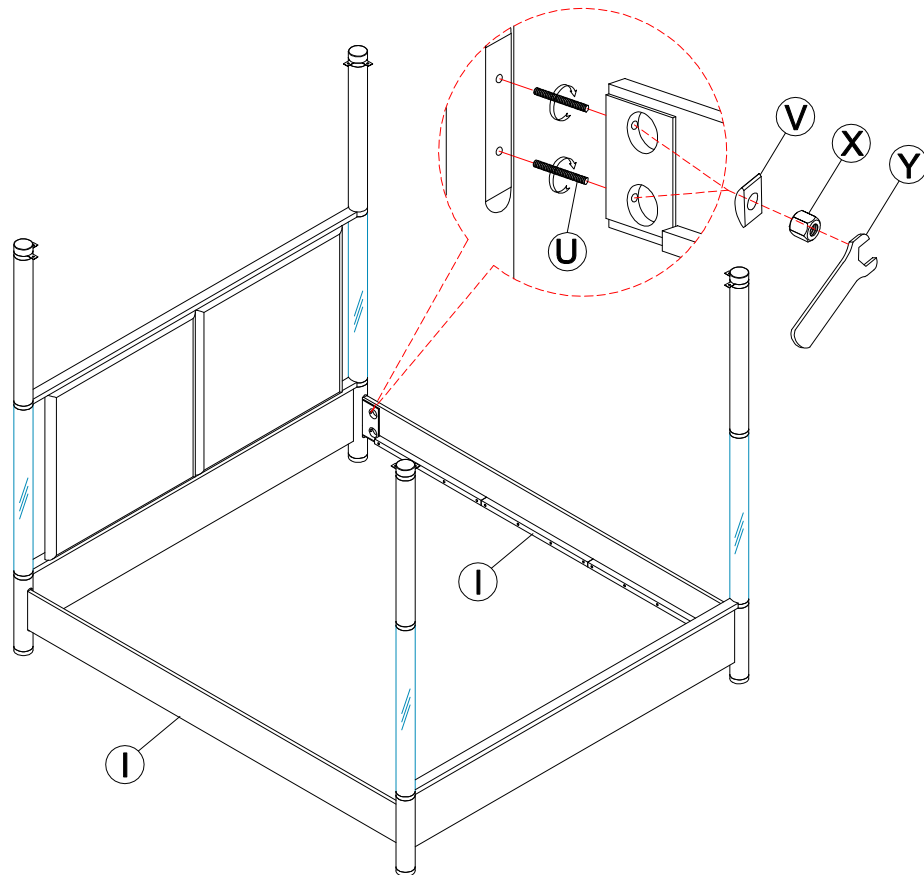

Attach Threaded Rods (U) to the Headboard and Footboard, then align side rail (I) to the Threaded Rods (U). Secure by using Nuts (X) with Half Moon Nut (V).

Step 6:

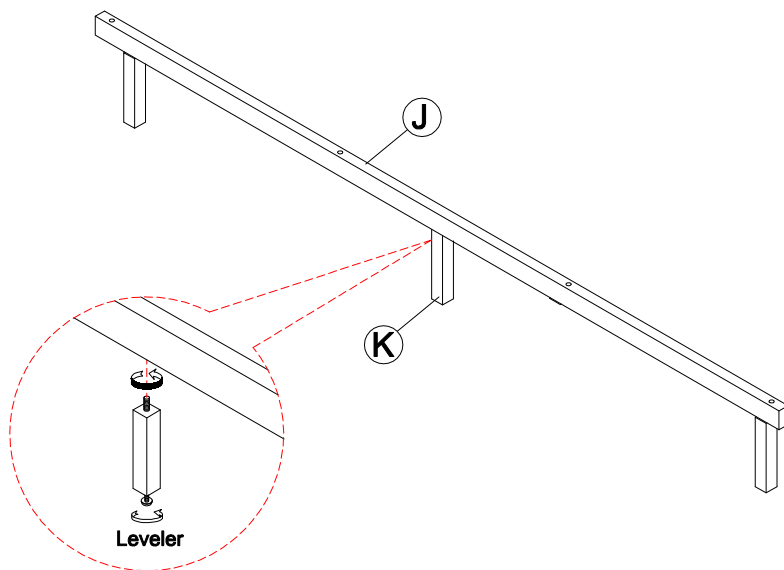

Attach Support Leg (K) to Center Support (J) by turning as clockwise direction.


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-KB-HB/FB/SR/POST


Description : King Bed

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 7:

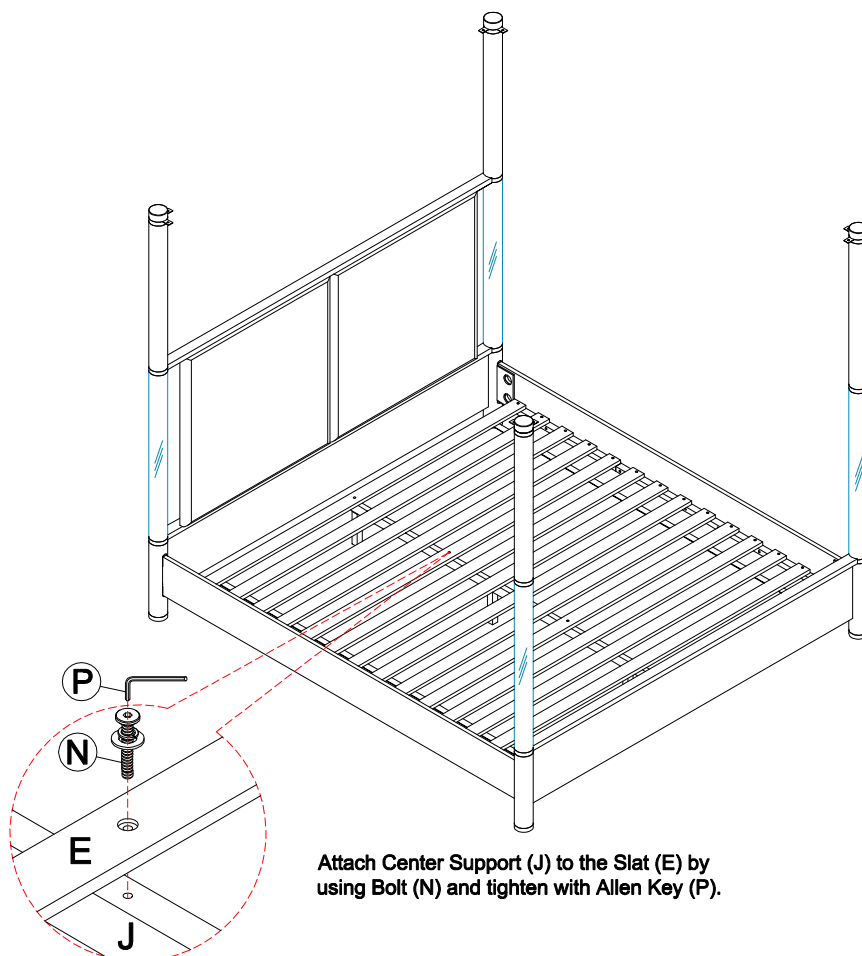

Step 8:

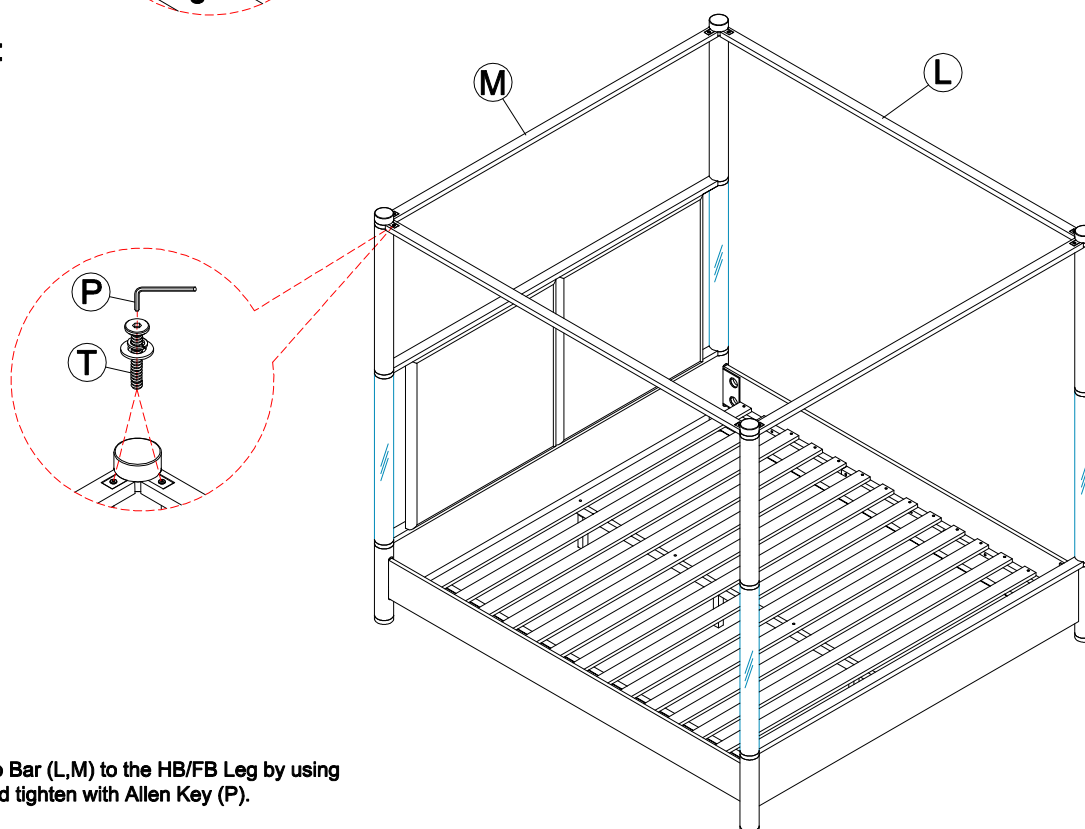


ASSEMBLY INSTRUCTION

Model : MALMO-OAK-KB-HB/FB/SR/POST

Description : King Bed

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 9:

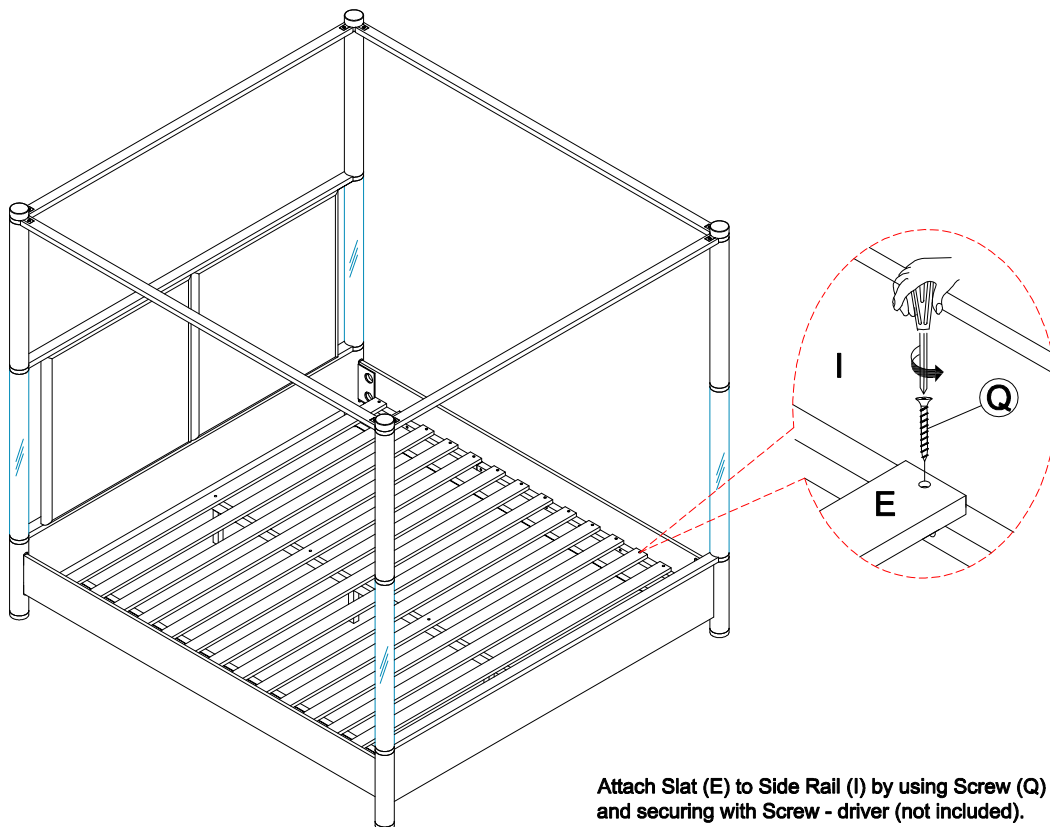

Attach Slat (E) to Side Rail (I) by using Screw (Q) and securing with Screw - driver (not included).

Complete

