

ASSEMBLY INSTRUCTION

Page: 1 of 1


GLOBAL FURNITURE USA

MODEL : 9828 ROMO

DESCRIPTION : ROMO-WHITE-QB-HB W/LED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.


PART LIST#

NO	NAME	PART	QTY
A	Headboard		1pc
B	Headboard Post - (L/R)		2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key 4mm		1pc
2	JCBC M6 x 40mm		6pcs
3	M6 Spring washer		6pcs
4	M6 Flat washer		6pcs
5	AC/DC Adapter		1pc

HARDWARE LOCATED IN HEADBOARD BOX

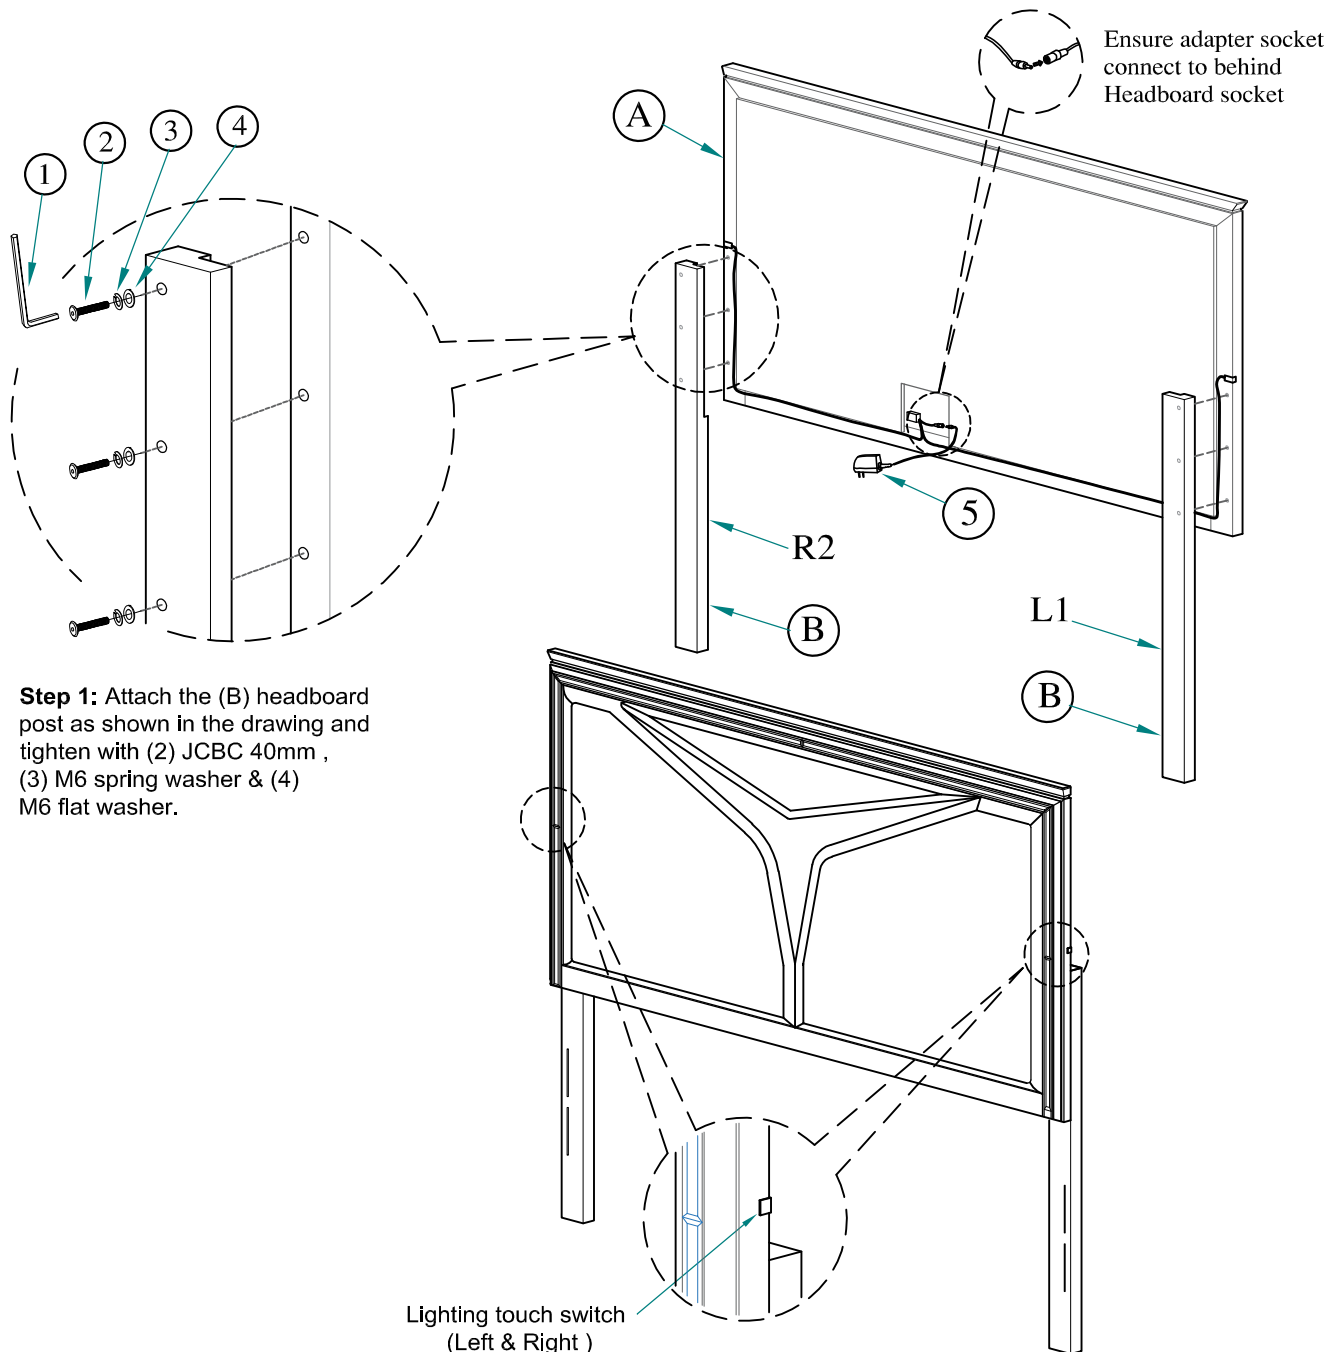

Step 1: Attach the (B) headboard post as shown in the drawing and tighten with (2) JCBC 40mm , (3) M6 spring washer & (4) M6 flat washer.

ASSEMBLY INSTRUCTION

GLOBAL FURNITURE USA





Page: 1 of 5

MODEL : 9828 ROMO

**DESCRIPTION : ROMO-WHITE-QB-HB W/LED / ROMO-WHITE-QB-FB W/SLATS /
ROMO-WHITE-QB-DWR / ROMO-WHITE-QB/KB-SR**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.


PART LIST#

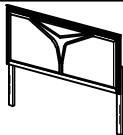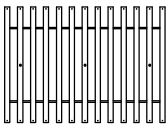NO	NAME	PART	QTY
A	Headboard		1pc
B	Footboard		1pc
C	Side Rail		2pcs
D	Drawer		2pcs
E	Drawer Base Panel		2pcs
F	Roll Slat		13pcs
G	Slat Support Leg		3pcs
H	Drawer Support Leg		1pc
I	Slat Cover Panel		1pc
J	Center Vertical Slat		1pc
K	Drawer Support Rail		1pc
L	Acrylic Leg		2pcs


HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key 5mm		1pc
2	JCBC $\frac{5}{16}$ " x 35mm		4pcs
3	$\frac{5}{16}$ " Spring washer		4pcs
4	$\frac{5}{16}$ " x 19mm Flat washer		4pcs
HARDWARE LOCATED IN ACRYLIC LEG BOX			

5	Allen key 4mm		1pc
6	JCBC M6 x 16mm		2pcs
7	JCBC M6 x 35mm		9pcs
8	JCBC M6 x 60mm		3pcs
9	M6 Spring washer		14pcs
10	M6 Flat washer		7pcs
11	1/4" x 19mm Flat washer		4pcs
12	Screw 32mm		26pcs
13	Screw 16mm		2pcs
14	Adjustable Leveler		4pcs
HARDWARE LOCATED IN FOOTBOARD BOX			


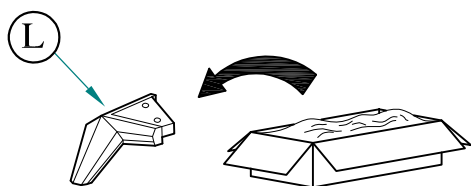


Step 1 : Secure the (L) Acrylic Leg to the bottom of (B) Footboard tighten using (2) JCBC $\frac{5}{16}$ " x 35mm, (3) $\frac{5}{16}$ " Spring Washer & (4) $\frac{5}{16}$ " Flat Washer as a diagram shown.

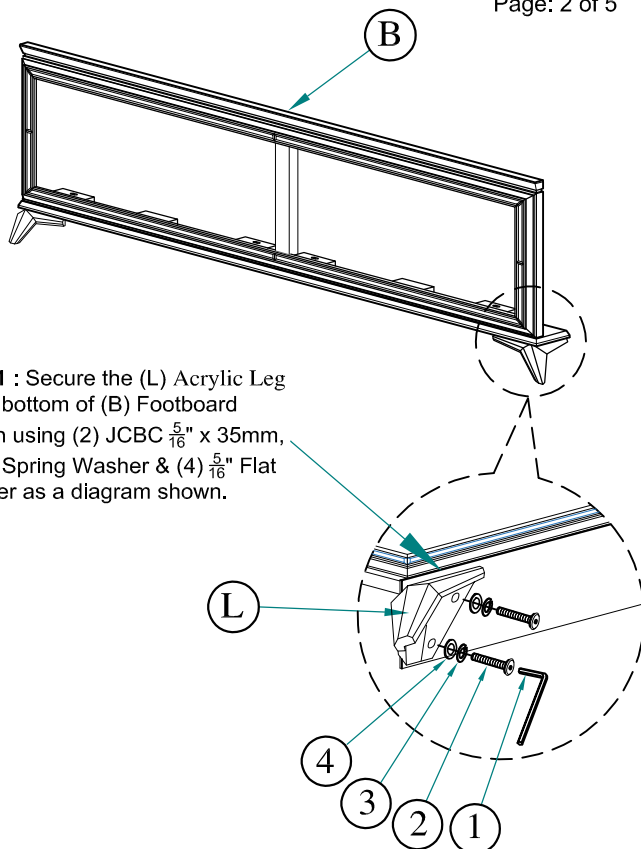


Step 2 :

Attach the (C) Side Rail to the (A) Headboard & (B) Footboard.

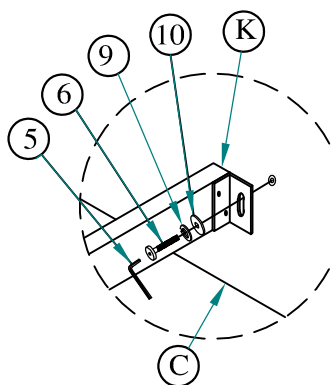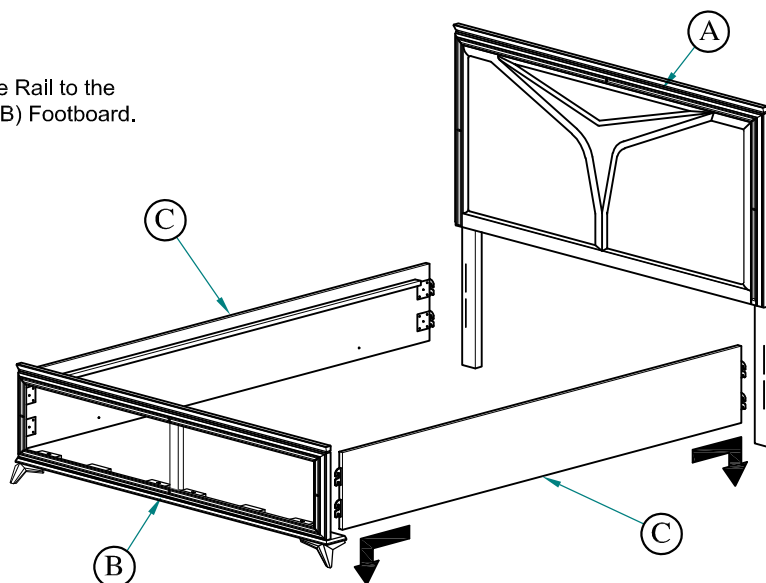


Step 3 :

Attach the (K) Drawer Support Rail to the (C) Side Rail as a diagram shown tighten with (6) JCBC 16mm,(9) M6 Spring Washer & (10) M6 Flat Washer.

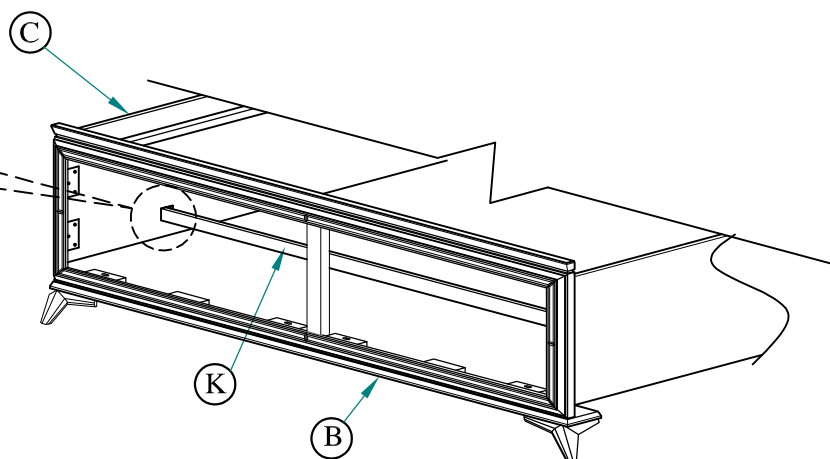

Step to remove the drawer :


1. Pull the drawer
2. Using both hands,
 - Left hands side - pull up switch
 - Right hands side - pull down switch
3. Then remove the drawer from the drawer base panel

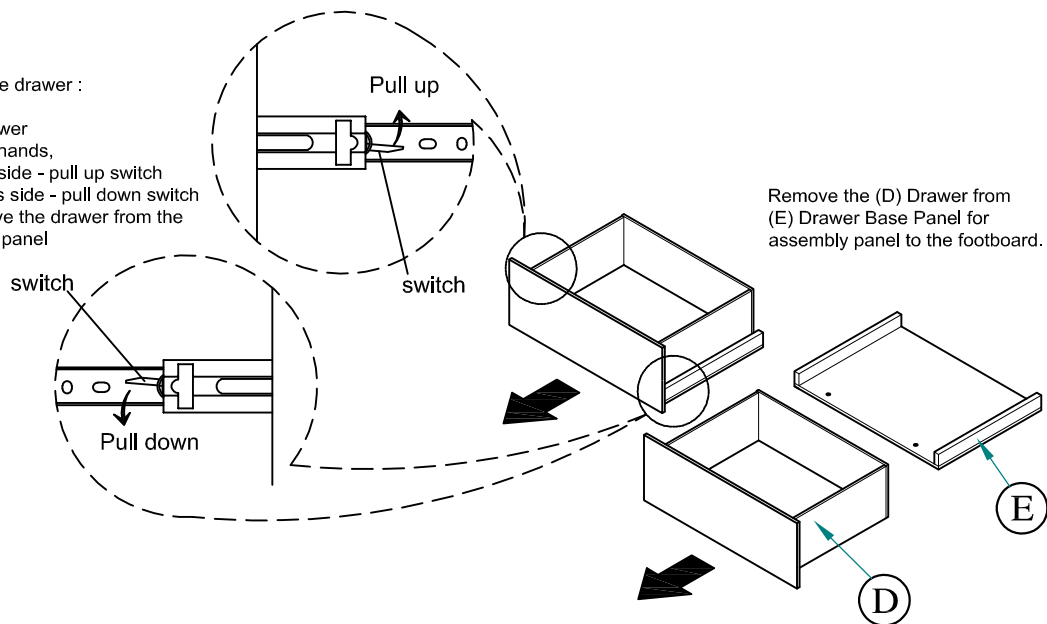

Remove the (D) Drawer from (E) Drawer Base Panel for assembly panel to the footboard.


Step 4 :

Attach (E) Drawer Base Panel to the (B) Footboard as diagram shown and tighten using (7) JCBC 35mm, (9) M6 Spring Washer & (11) 1/4" Flat Washer.

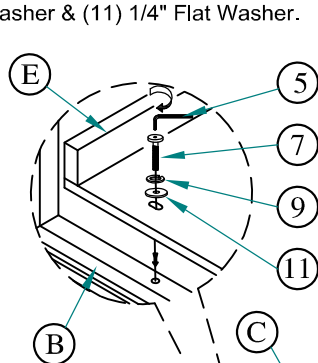



Step 5 :

Tighten the (E) Drawer Base Panel to the (K) Drawer Support Rail as diagram shown using the (7) JCBC 35mm, (9) M6 Spring Washer & (10) M6 Flat Washer.

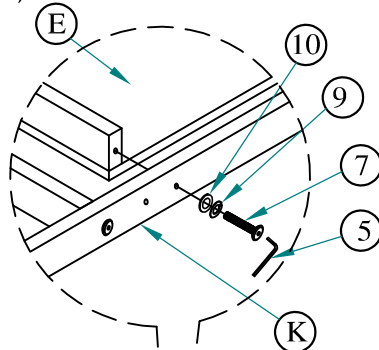

Step 6 :


Attach (H) Drawer Support Leg to the (K) Drawer Support Rail using (7) JCBC 35mm, (9) M6 Spring Washer & (10) M6 Flat Washer. Attach the (14) Adjustable Leveler and adjust it to level the bed with the floor.

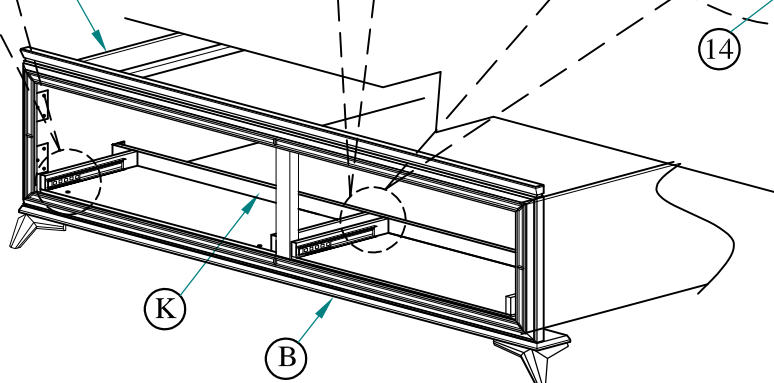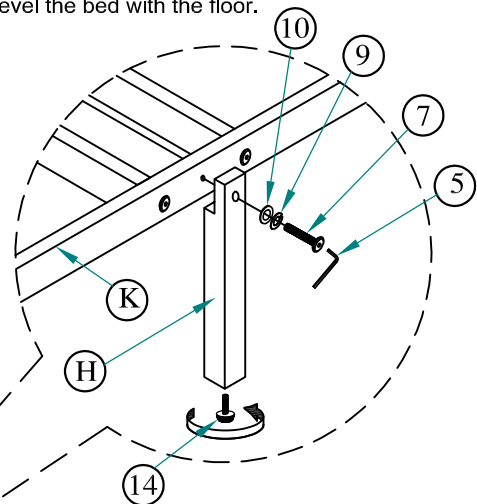

Step to install the drawer on the drawer base panel :

***Prefer 2 person to install the drawer

1. Adjust the ball bearing plate to the front as a diagram shows.
2. Then attach the drawer to the drawer base panel and install with carefully.

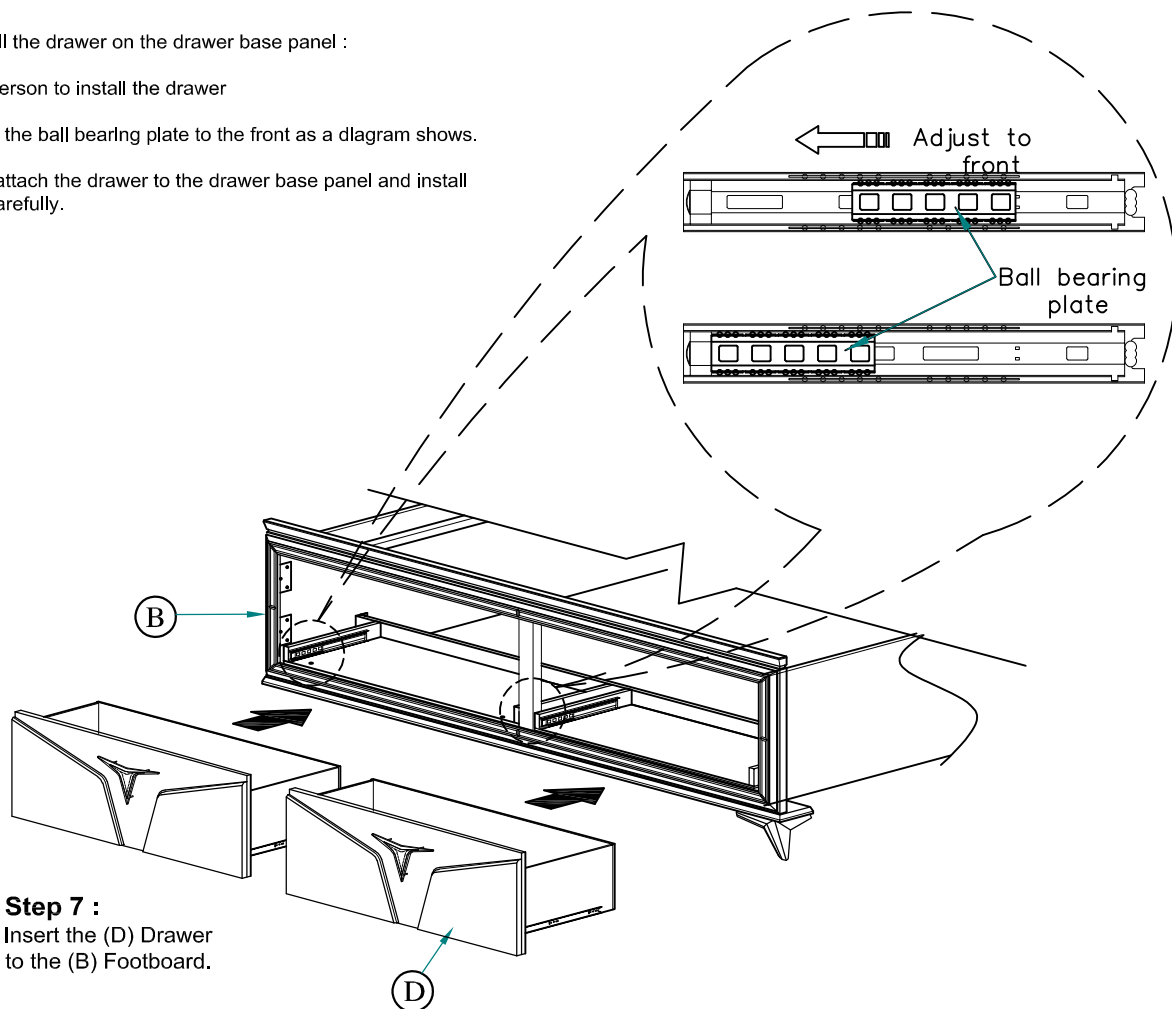


Step 7 :
Insert the (D) Drawer
to the (B) Footboard.

Step 9 :

Attach (G) Slat Support Leg & (J) Center Vertical Slat
to the bottom of (F) Roll Slat using (8) JCBC 60mm &
(9) M6 Spring Washer. Attach the (14) Adjustable leveler
and adjust it to level the bed with the floor.



Step 8 :

Secure the (F) Roll Slat using the
(12) Screw 32mm provided.

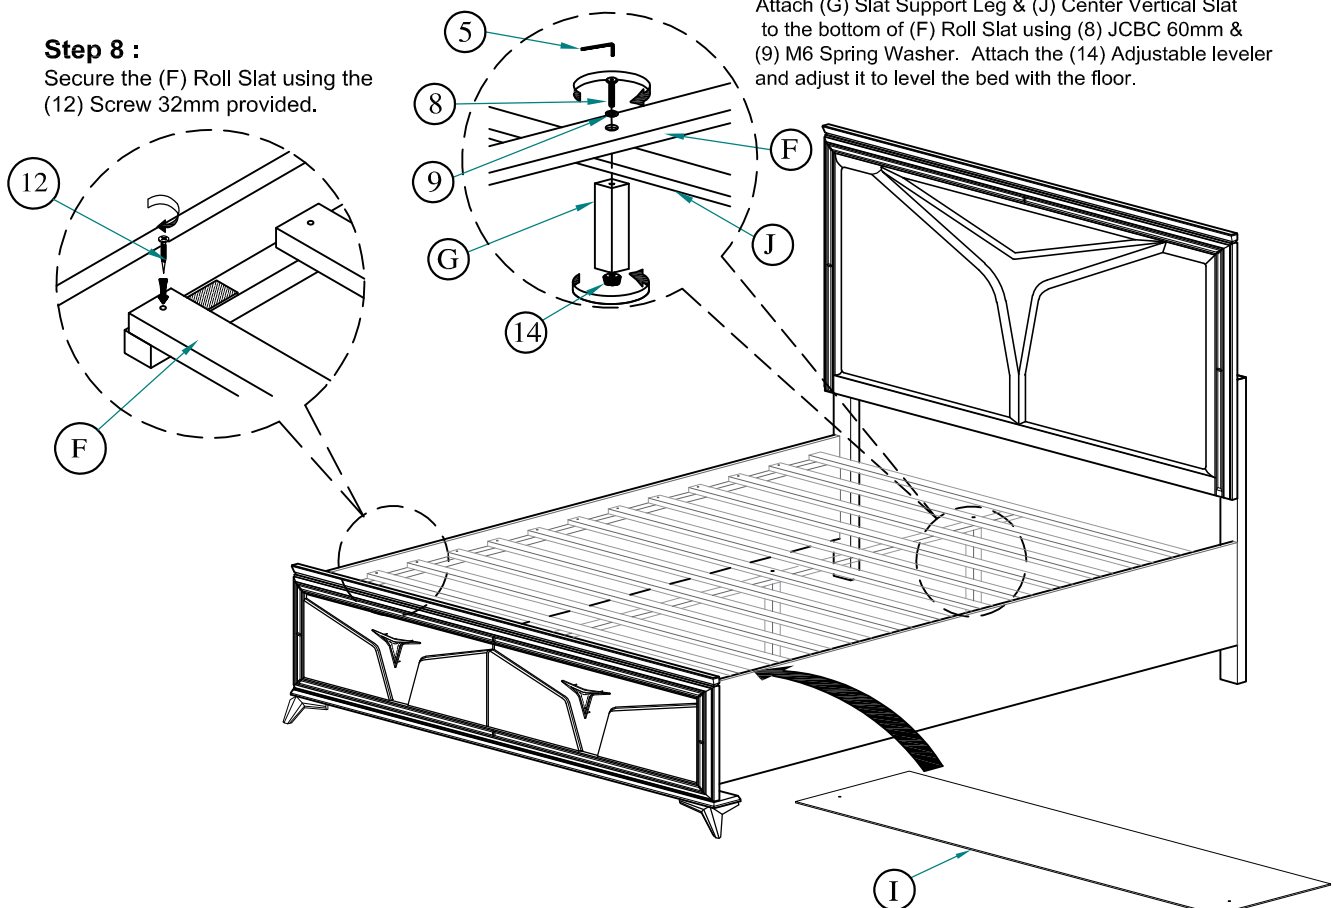

Step 10 :

Attach the (I) Slat Cover Panel to the top of slat close to the footboard and screw using the (13) Screw 16mm provided.

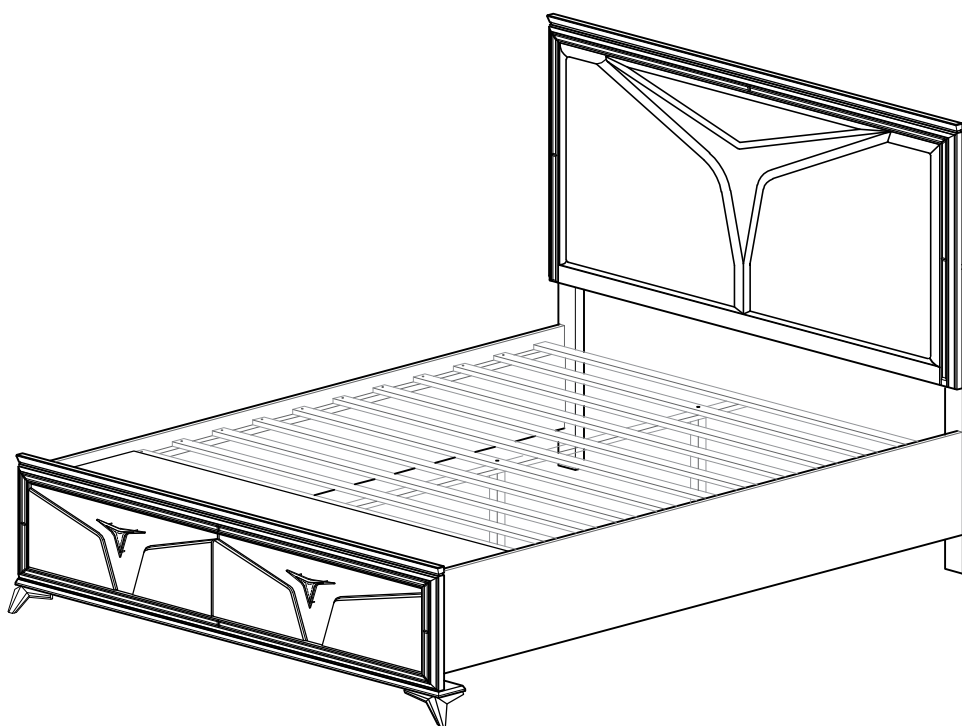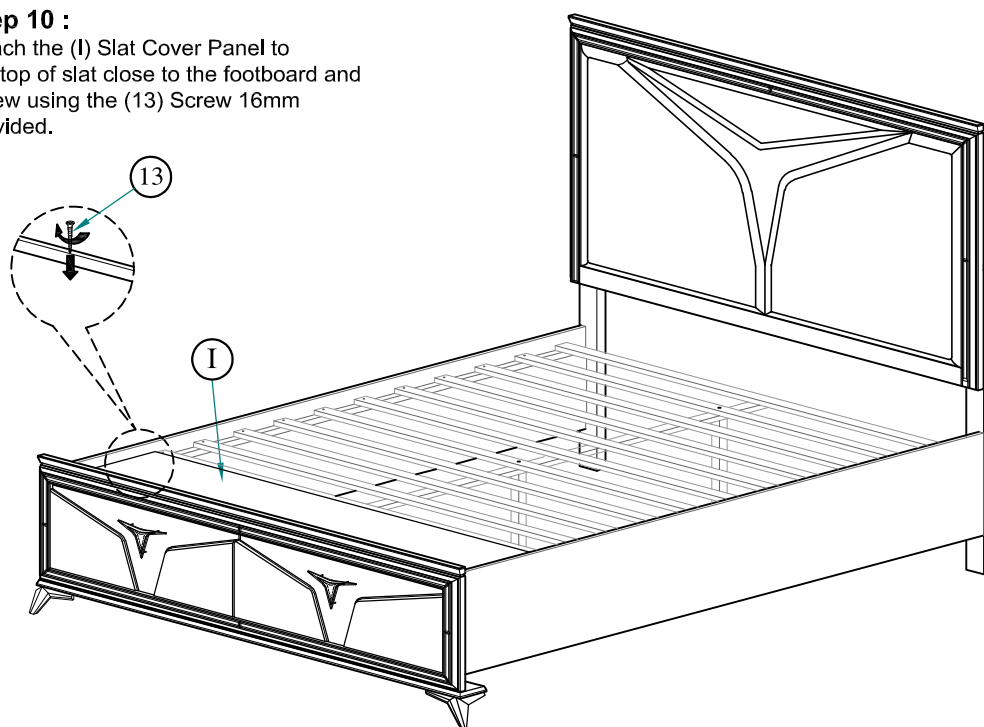

Assembly completed

ASSEMBLY INSTRUCTION


GLOBAL FURNITURE USA

Page: 1 of 2

MODEL : 9828 ROMO
DESCRIPTION : ROMO-WHITE-NS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#


NO	DRAWING	DESCRIPTION	QTY
A		Night Stand	1pc
B		Acrylic Leg	2pcs
C		Metal Leg	2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 5mm		1pc
2	JCBC - $\frac{5}{16}$ " x 35mm		4pcs
3	$\frac{5}{16}$ " Spring Washer		4pcs
4	$\frac{5}{16}$ " Flat Washer		4pcs
HARDWARE LOCATED IN ACRYLIC LEG BOX			


5	Allen Key 4mm		1pc
6	JCBC - M6 x 20mm		4pcs
7	M6 Spring Washer		4pcs
8	M6 Flat Washer		4pcs
HARDWARE LOCATED IN METAL LEG BOX			

Remove Leg carton located in the drawer of the casegood. Remove and unwrap each Leg.

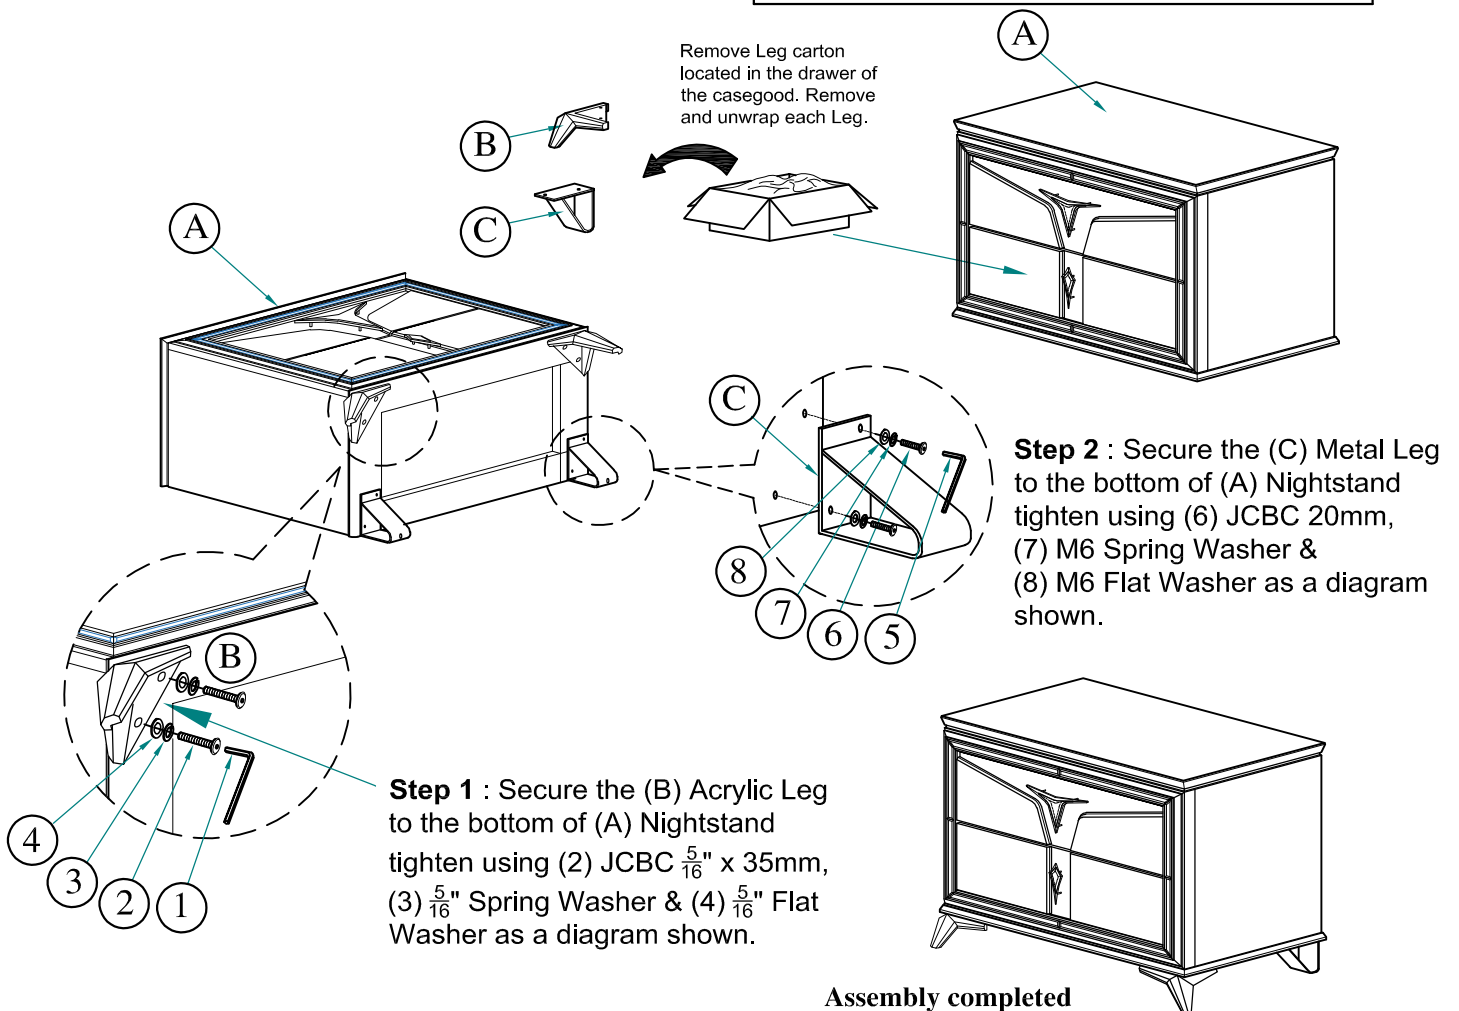

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

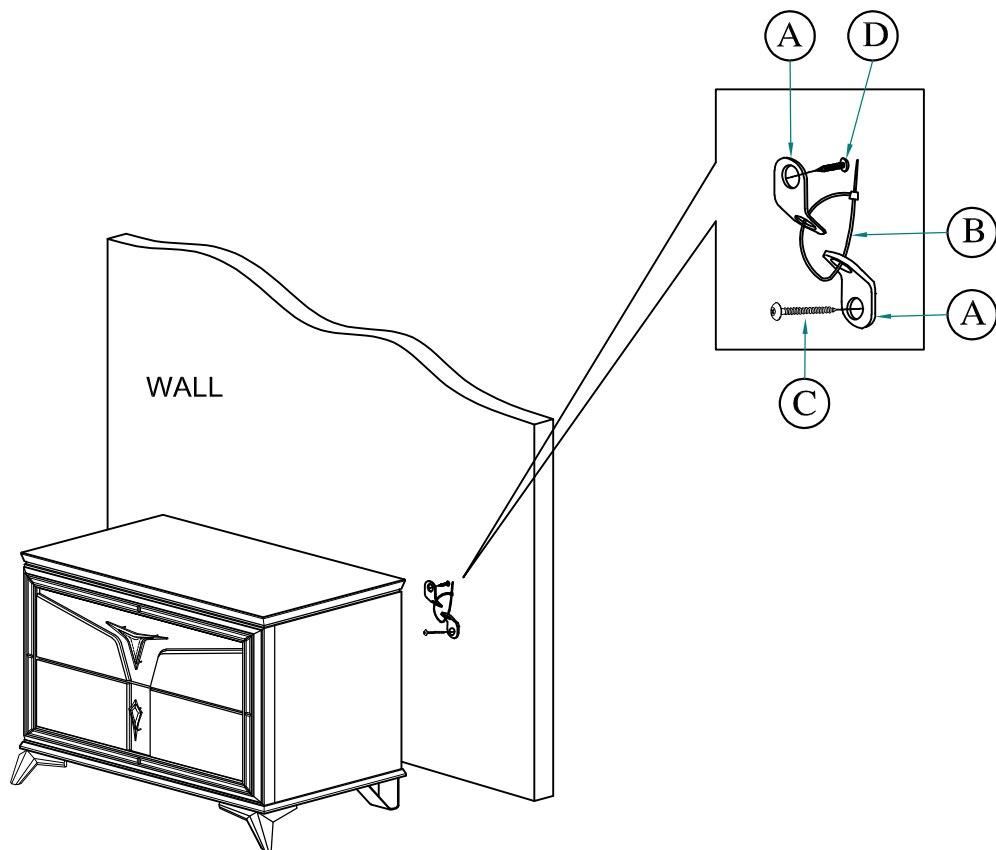

ASSEMBLY INSTRUCTION

GLOBAL FURNITURE USA

Page: 1 of 2

MODEL : 9828 ROMO

DESCRIPTION : ROMO-WHITE-CH

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.


PART LIST#

NO	DRAWING	DESCRIPTION	QTY
A		Chest	1pc
B		Acrylic Leg	2pcs
C		Metal Leg	2pcs




HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 5mm		1pc
2	JCBC - $\frac{5}{16}$ " x 35mm		4pcs
3	$\frac{5}{16}$ " Spring Washer		4pcs
4	$\frac{5}{16}$ " Flat Washer		4pcs
HARDWARE LOCATED IN ACRYLIC LEG BOX			


5	Allen Key 4mm		1pc
6	JCBC - M6 x 20mm		4pcs
7	M6 Spring Washer		4pcs
8	M6 Flat Washer		4pcs
HARDWARE LOCATED IN METAL LEG BOX			

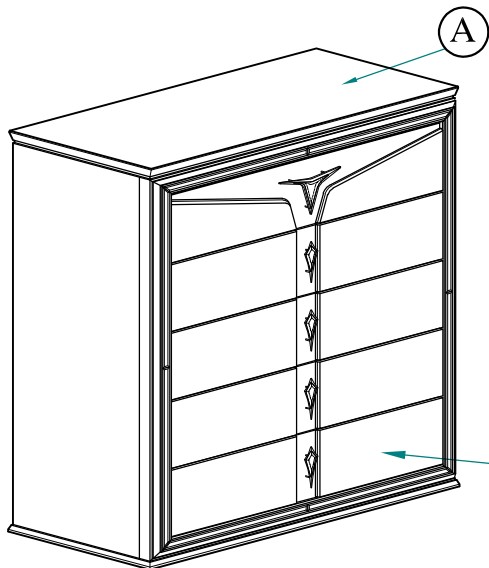


Remove Leg carton located in the drawer of the casegood. Remove and unwrap each Leg.

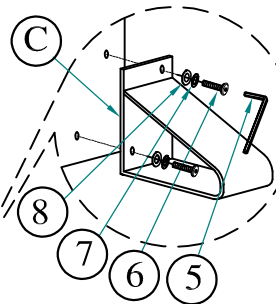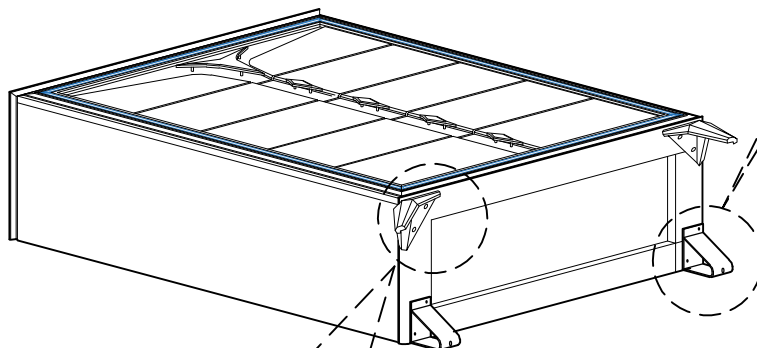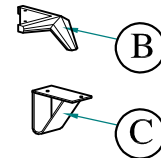

Step 2 : Secure the (C) Metal Leg to the bottom of (A) Chest tighten using (6) JCBC 20mm, (7) M6 Spring Washer & (8) M6 Flat Washer as a diagram shown.

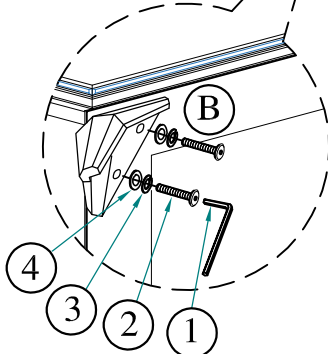


Step 1 : Secure the (B) Acrylic Leg to the bottom of (A) Chest tighten using (2) JCBC $\frac{5}{16}$ " x 35mm, (3) $\frac{5}{16}$ " Spring Washer & (4) $\frac{5}{16}$ " Flat Washer as a diagram shown.

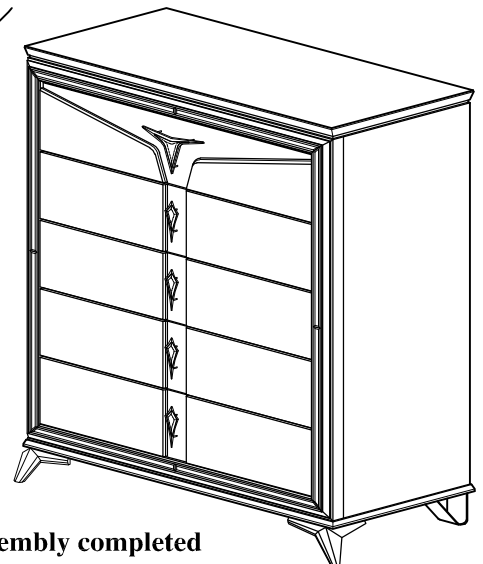

Assembly completed

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

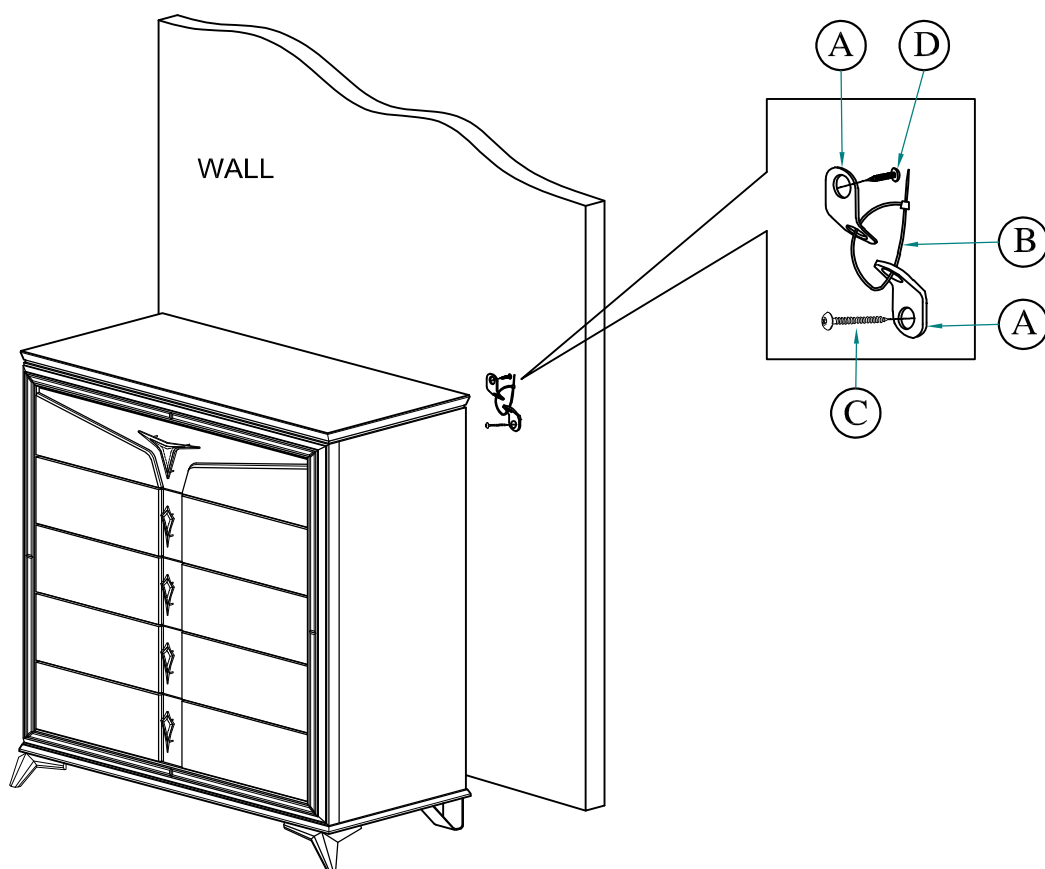

Assembly completed

ASSEMBLY INSTRUCTION

Page: 1 of 2

GLOBAL FURNITURE USA

MODEL : 9828 ROMO
DESCRIPTION : ROMO-WHITE-DR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#



NO	DRAWING	DESCRIPTION	QTY
A		Dresser	1pc
B		Acrylic Leg	2pcs
C		Metal Leg	2pcs
D		Center Leg	1pc

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 5mm		1pc
2	JCBC - $\frac{5}{16}$ " x 35mm		4pcs
3	$\frac{5}{16}$ " Spring Washer		4pcs
4	$\frac{5}{16}$ " Flat Washer		4pcs
HARDWARE LOCATED IN ACRYLIC LEG BOX			


5	Allen Key 4mm		1pc
6	JCBC - M6 x 20mm		4pcs
7	M6 Spring Washer		4pcs
8	M6 Flat Washer		4pcs
HARDWARE LOCATED IN METAL LEG BOX			

Remove Leg carton located in the drawer of the casegood. Remove and unwrap each Leg.

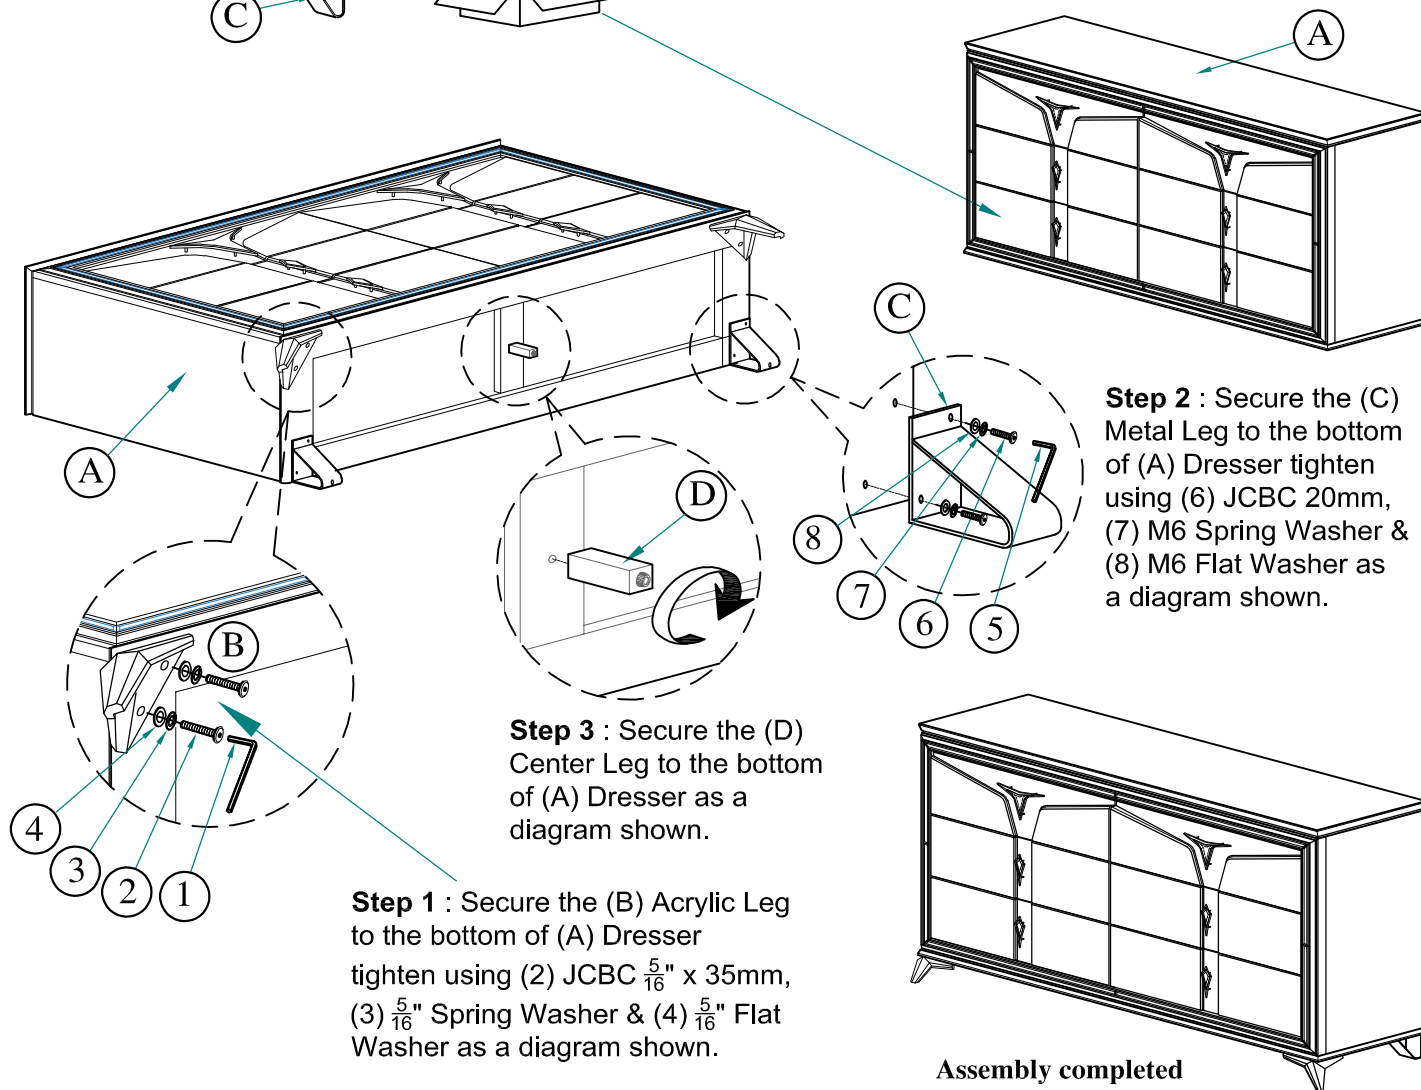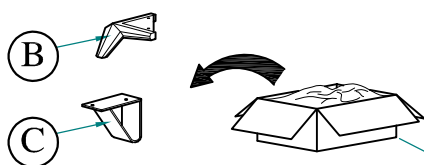

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

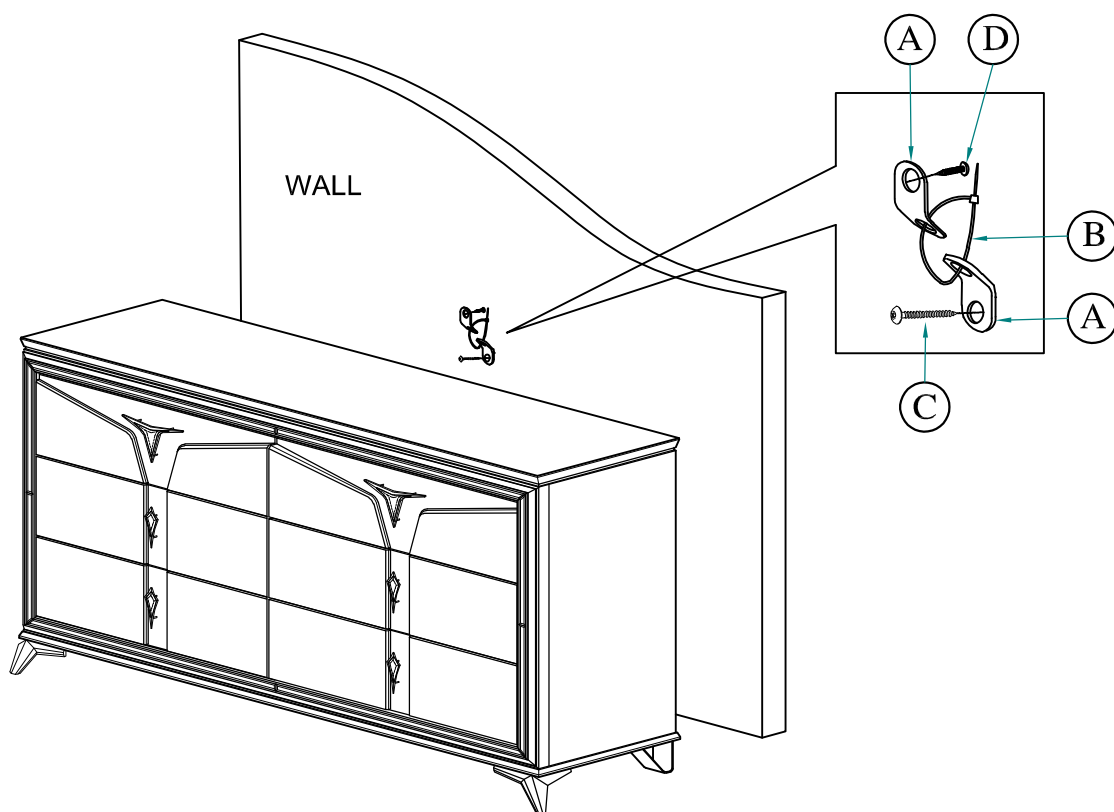

ASSEMBLY INSTRUCTION

Page: 1 of 1

GLOBAL FURNITURE USA

MODEL : 9828 ROMO

DESCRIPTION : ROMO-WHITE-DR / ROMO-WHITE-MR W/LED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	NAME	PART	QTY
A	Dresser		1pc
B	Mirror		1pc
C	Mirror Support		2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key 4mm		1pc
2	JCBC M6 x 35mm		8pcs
3	M6 Spring washer		8pcs
4	1/4" Flat washer		8pcs
5	AC/DC Adapter		1pc
HARDWARE LOCATED IN MIRROR BOX			

