

ASSEMBLY INSTRUCTIONS

DESCRIPTION : TIFFANY-SILVER-KB-HB /
TIFFANY-SILVER-KB-STORAGE FB/2 LAMPS/SLATS /
TIFFANY-SILVER-QB/KB-SR

MODEL : FBQHBR-198A + FBQFBR-198A
+ FBQSRR-198A

NOTE :

MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL
BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

REVISION : A


Component List		
Headboard		
No	Descriptions	Qty
A	Headboard Set	1

Component List		
Side Rail		
No	Descriptions	Qty
B	Side Rail	2

Component List		
Side Rail		
No	Descriptions	Qty
C	Footboard Drawer	1
D	Bed Slat (With Stopper)	2
E	Bed Slat	2
F	Bed Slat Support	4
G	Center Slat With 4 Holes	1
H	Support Rail	1
I	Slat Cover Panel	1
J	Slat Panel	5
K	Lamp Set	2

Hardware List In Footboard		
No	Descriptions	Qty
1	CSK M4 x 16mm 	38
2	CSK M4 x 32mm 	10
3	JCBC Screw M6 x 50mm 	4
4	L Key M5 	1



Hardware List In Headboard		
No	Descriptions	Qty
5	L Key M4 	1

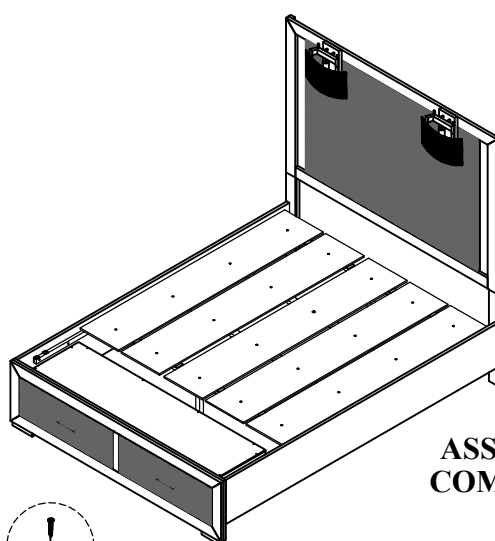


ASSEMBLY
COMPLETED

STEP 1

Take out the Lamp Box from the drawer by slowly,
to not damage the condition of the Lamp Set.

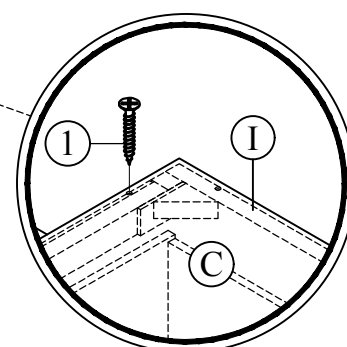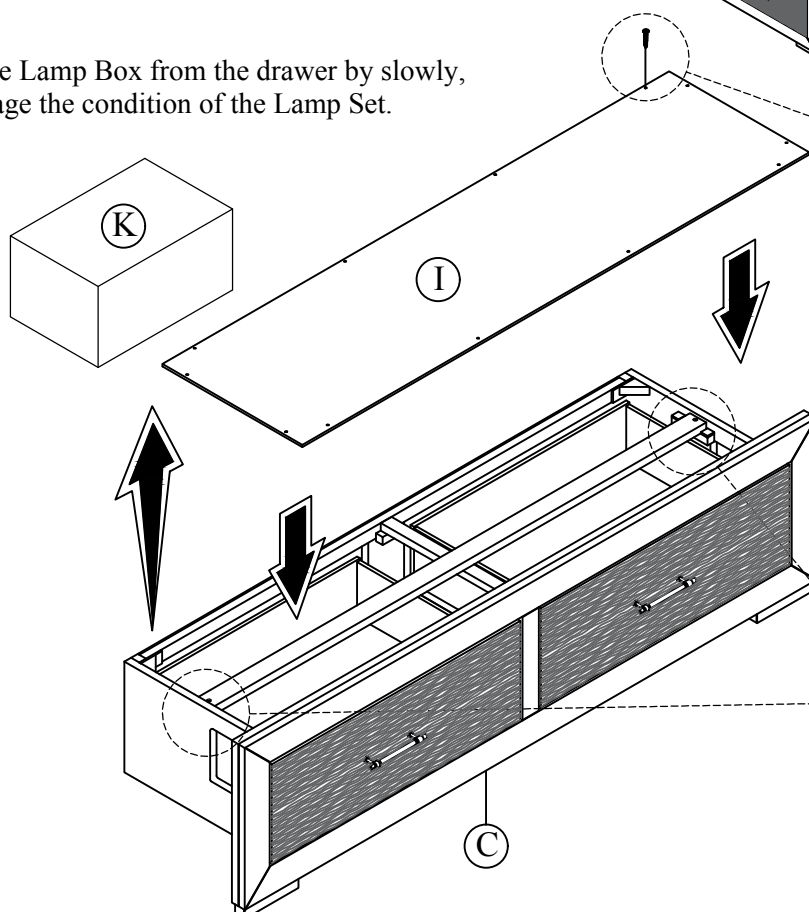


STEP 3

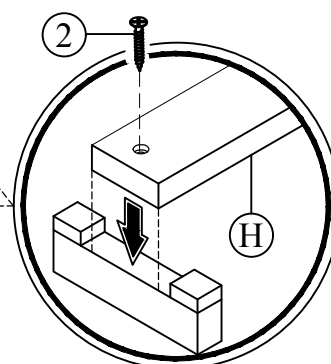


STEP 2

ASSEMBLY INSTRUCTIONS

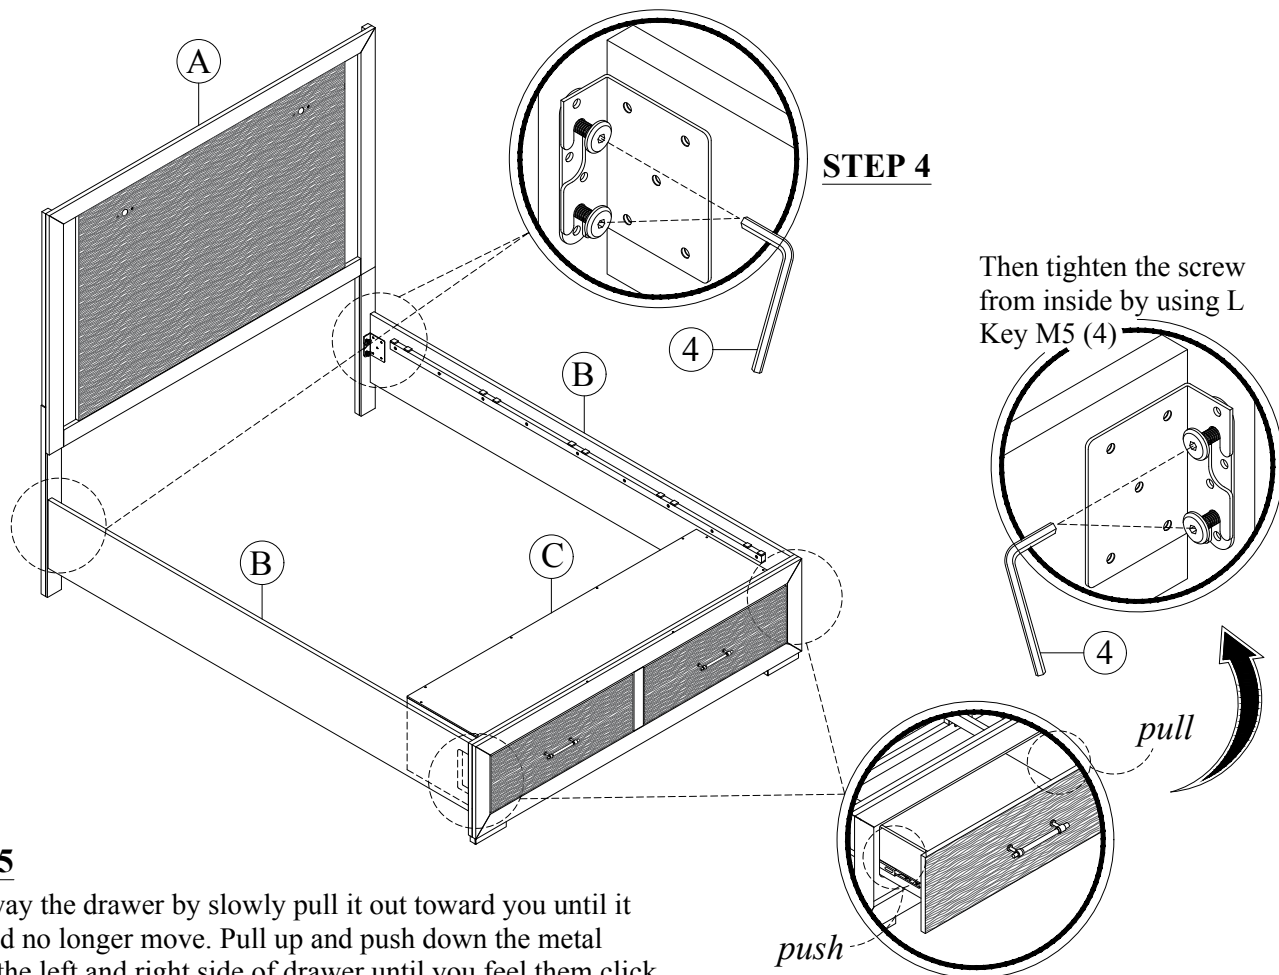


STEP 5

Take away the drawer by slowly pull it out toward you until it stops and no longer move. Pull up and push down the metal slide at the left and right side of drawer until you feel them click.

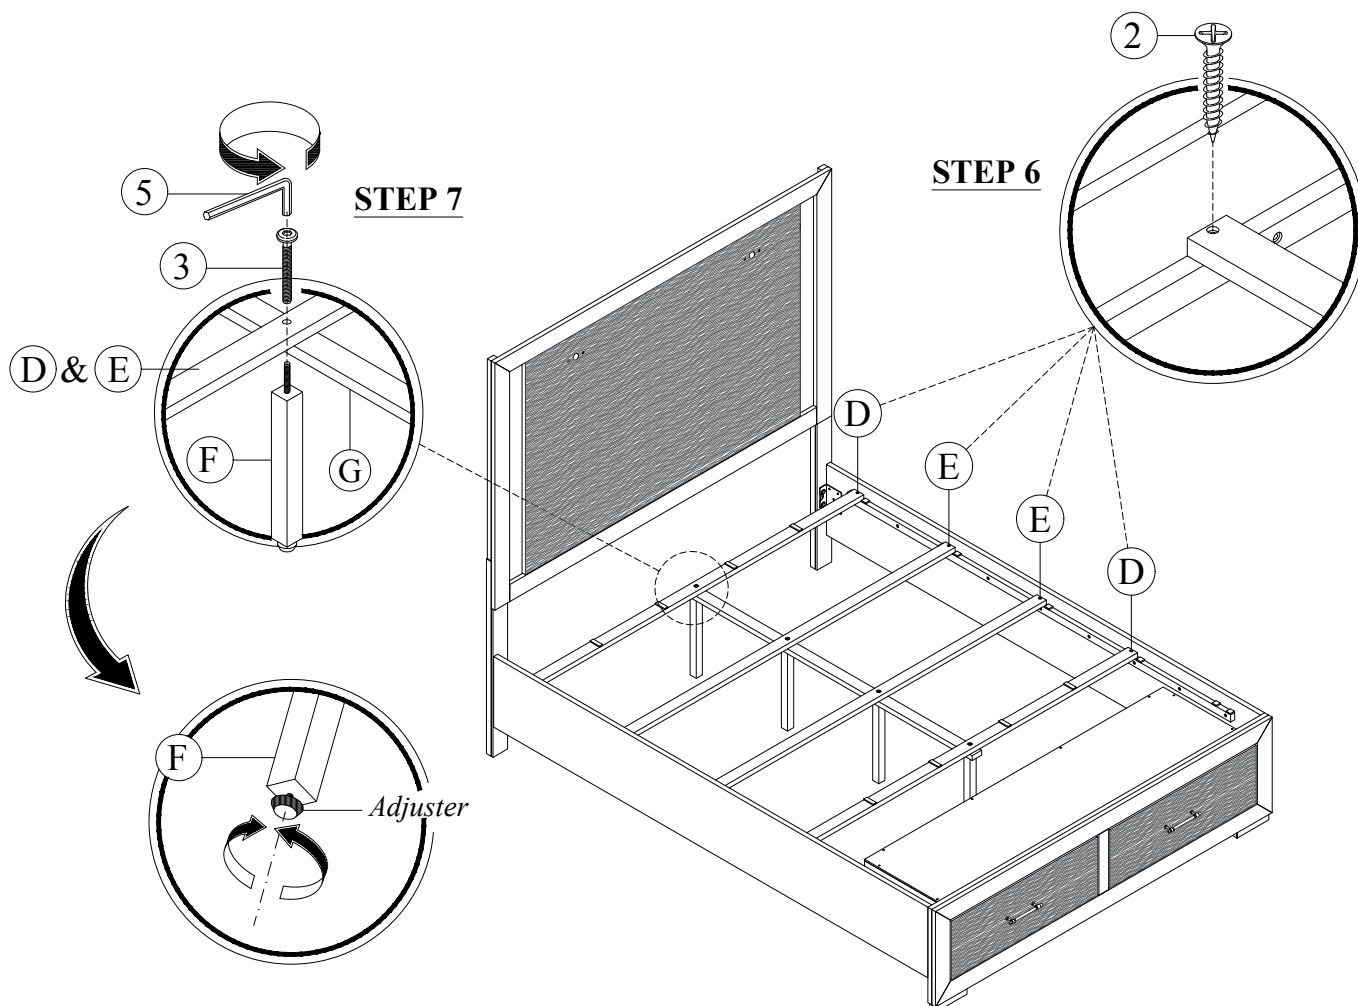


ASSEMBLY INSTRUCTIONS

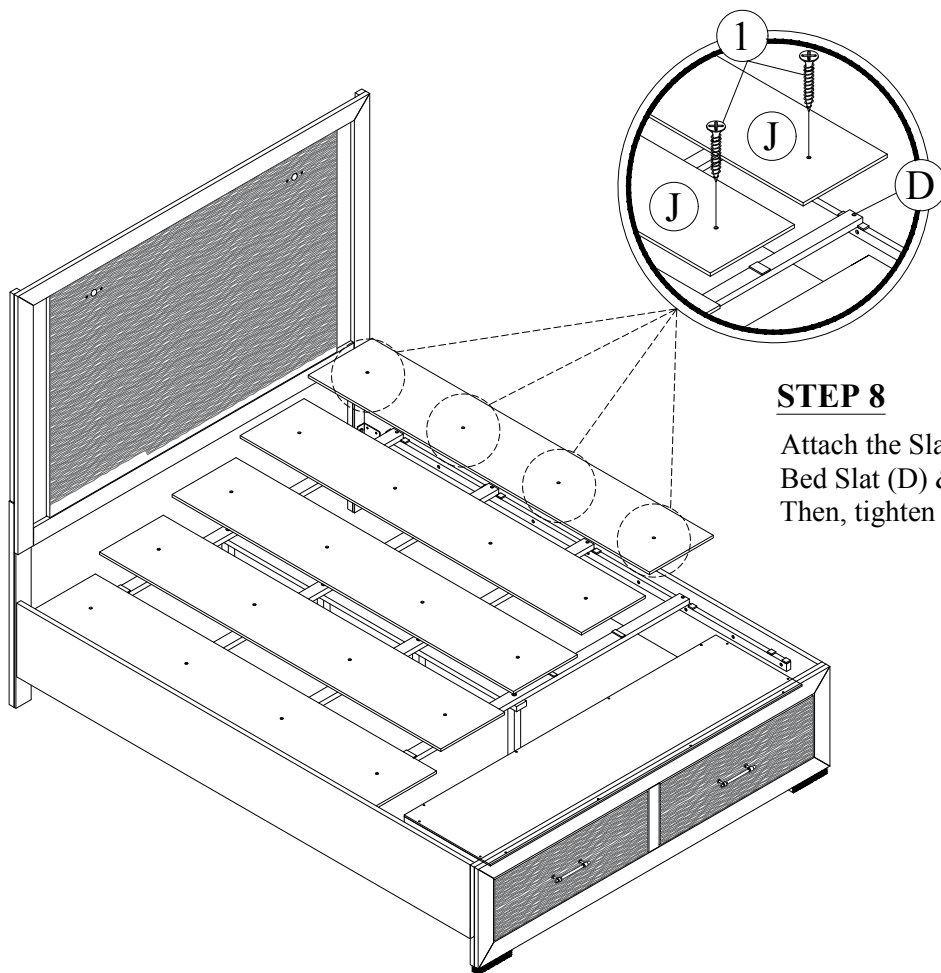

STEP 8

Attach the Slat Panel (J) to top Bed Slat (D) & (E).
Then, tighten using CSK M4 x 16mm (1).

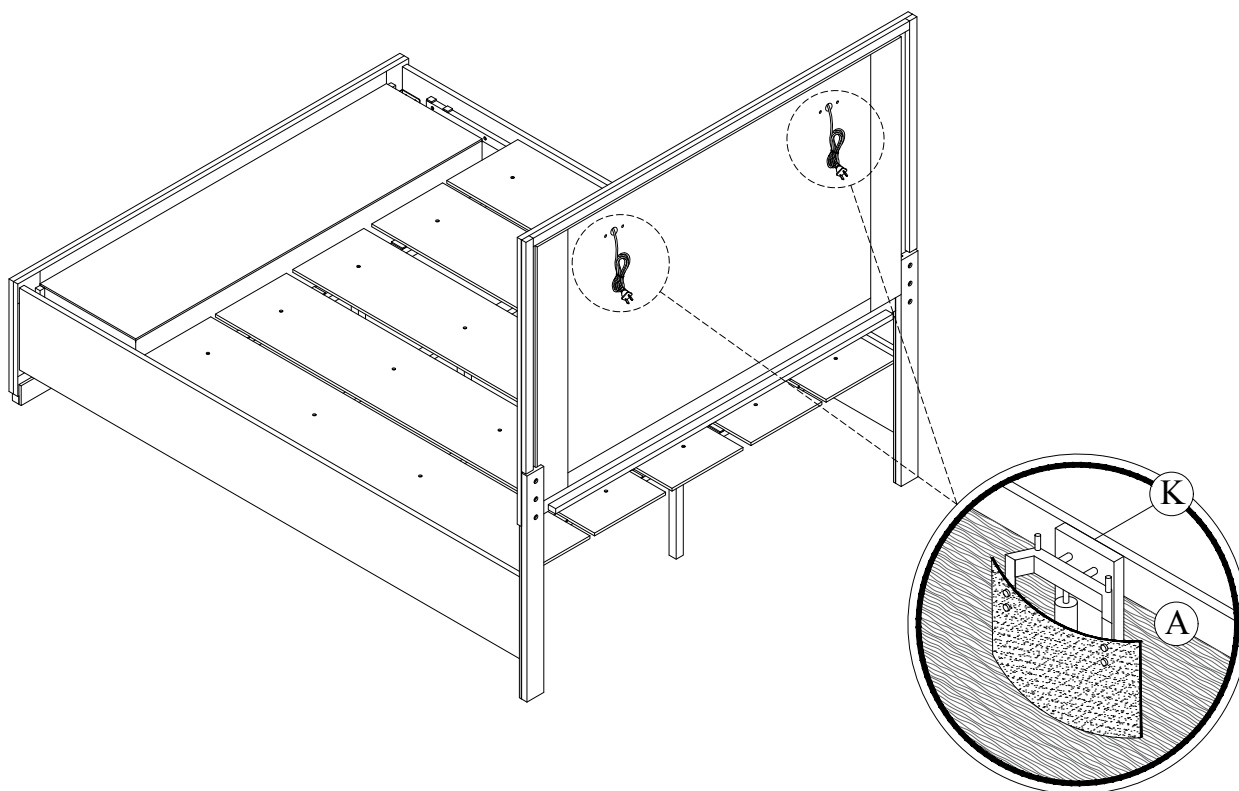

STEP 9



Install the Lamp Set according to the assembly instruction inside the Lamp Box.
Then, align and attach the Lamp at the top of Headboard (A).


MODEL : FBKHBR-198A /
FBQHBR-198A /
FBFHBR-198A

REVISION : A

NOTE :

MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL
BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

Component List			Hardware List In Headboard			
Headboard			No	Descriptions		Qty
No	Descriptions	Qty	1	JCBC Screw M6 x 30mm		6
A	Headboard Panel	1	2	Spring Washer Ø1/4"		6
B	Headboard Leg (L)	1	3	Flat Washer Ø1/4" x 13mm		6
C	Headboard Leg (R)	1	4	L Key M4		1

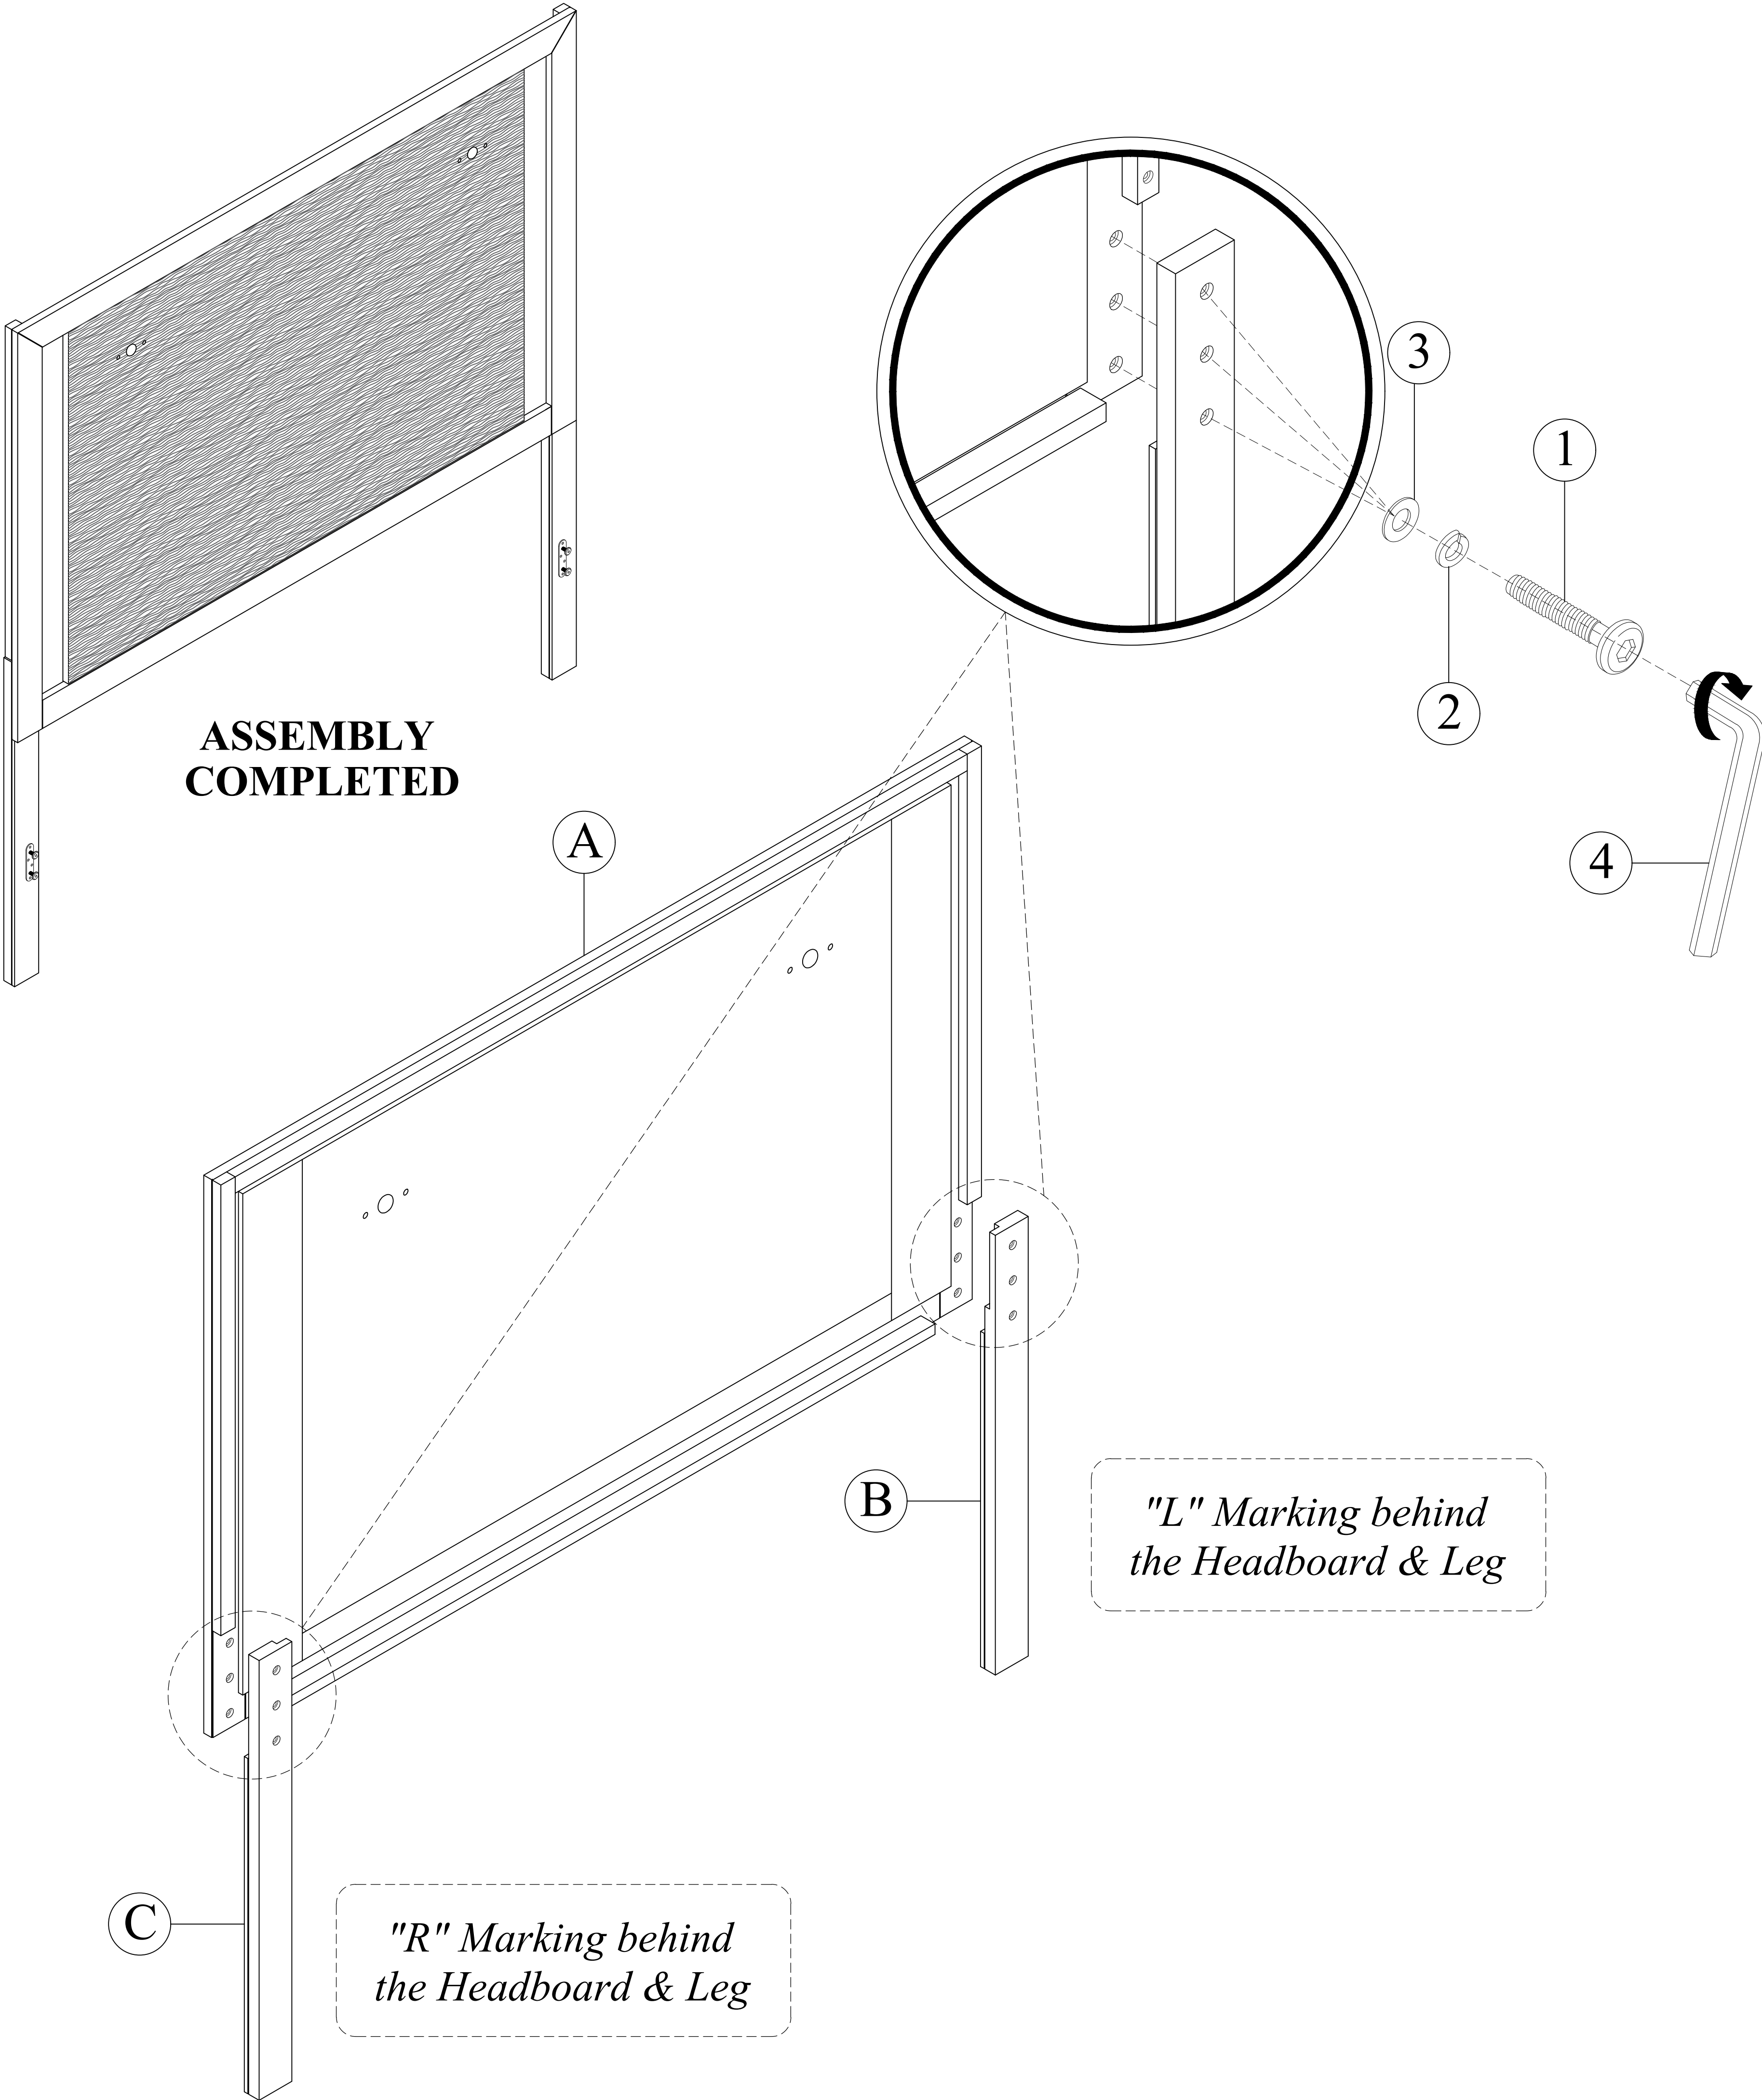

ASSEMBLY INSTRUCTIONS

DESCRIPTION : TIFFANY-SILVER-NS /
TIFFANY-SILVER-CH / TIFFANY-SILVER-DR




MODEL : FBNSTA-198A
FBCHTA-198A
FBDSRA-198A

REVISION : A


ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.


Component List

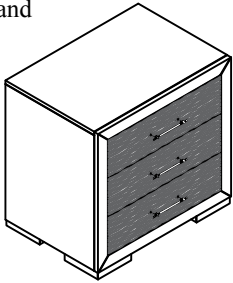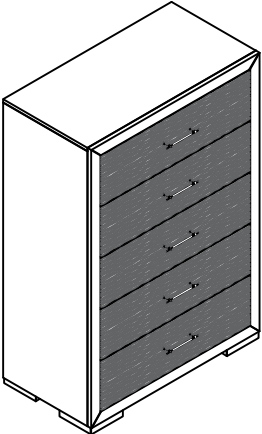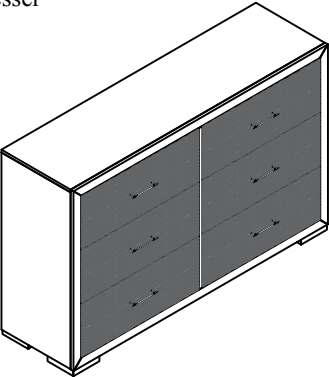No	Descriptions	Qty
A	Night Stand 	1
A	Chest 	1
A	Dresser 	1


STEP 1: Pull out the **Drawer** of casegoods.

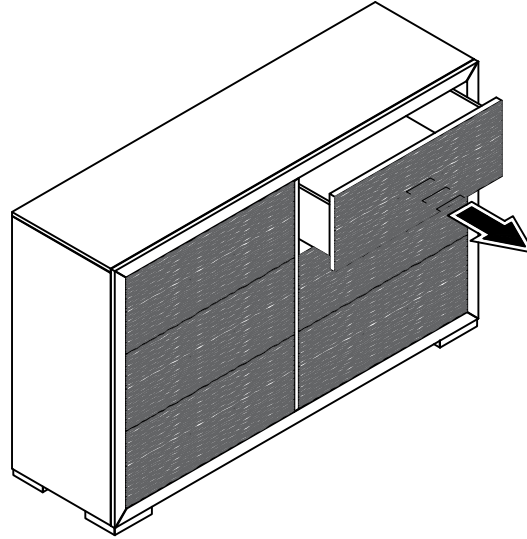


STEP 2: Use Screwdriver to remove the screws & handle.

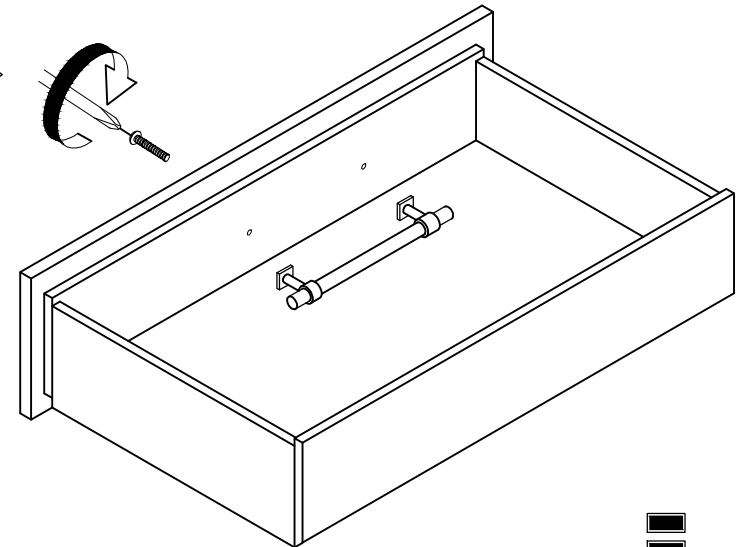

STEP 4: Repeat the step 1 - 3 for the other drawers.

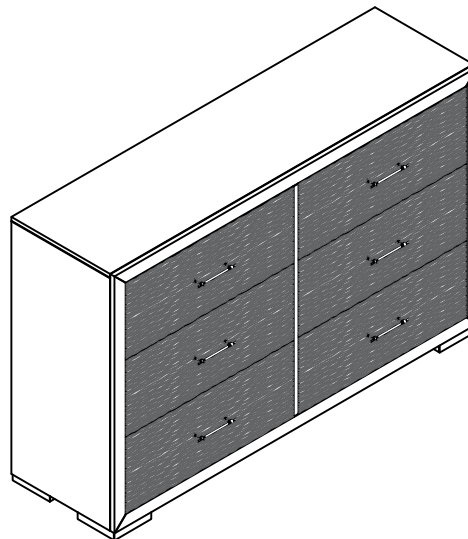

STEP 3: Position the handle in front of drawer panel and screw it tightly with the same screw.

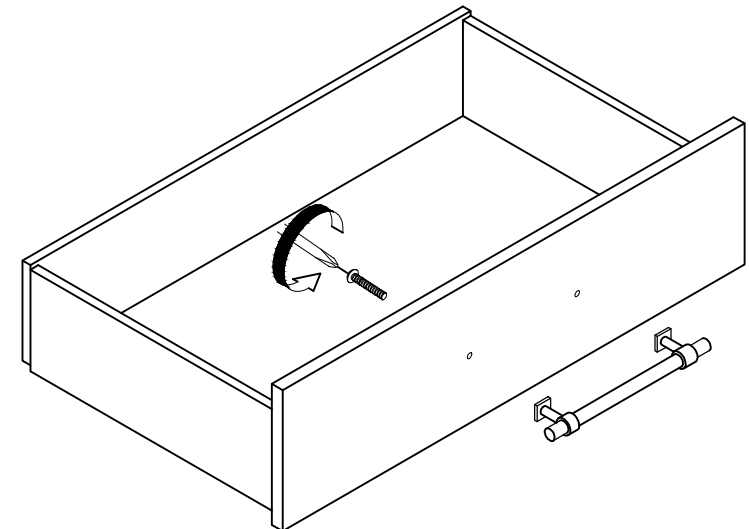

ASSEMBLY INSTRUCTIONS


DESCRIPTION : TIFFANY-SILVER-DR /
TIFFANY-SILVER-MR

MODEL : FBDSRA-198A + FBMIRR-198A

REVISION : A

Component List		
No	Description	Qty
A	Mirror	1
B	Dresser	1
C	Mirror Support	2
D	Dresser Support	1


Hardware List		
No	Description	Qty
1	JCBC M6 x 35mm	8
2	Spring Washer Ø1/4 "	8
3	Flat Washer Ø1/4" x 20mm	8
4	L Key M4	1
5	Dc Adapter	1

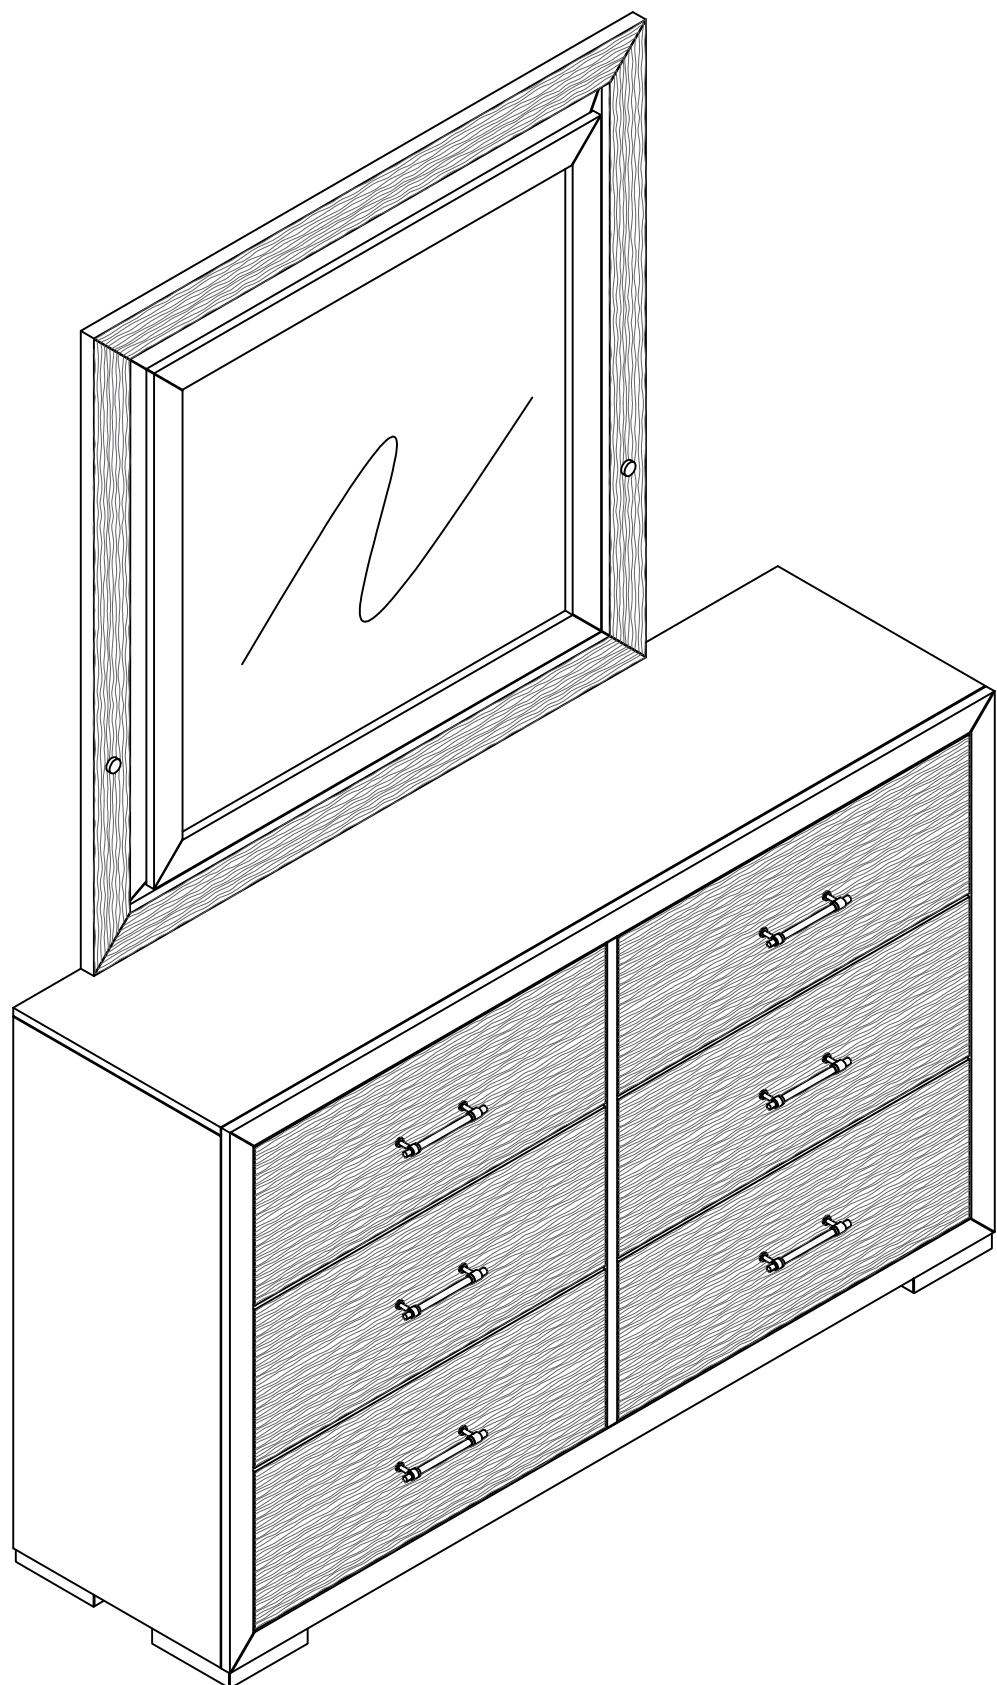

ASSEMBLY COMPLETED


STEP 1

Attach Mirror Support (C) to the Mirror (A) back, then tighten with JCBC screw (1), Spring WasherØ 1/4" (2), Flat Washer Ø 1/4" x 20mm (3) and fully tighten with L key M4 (4).

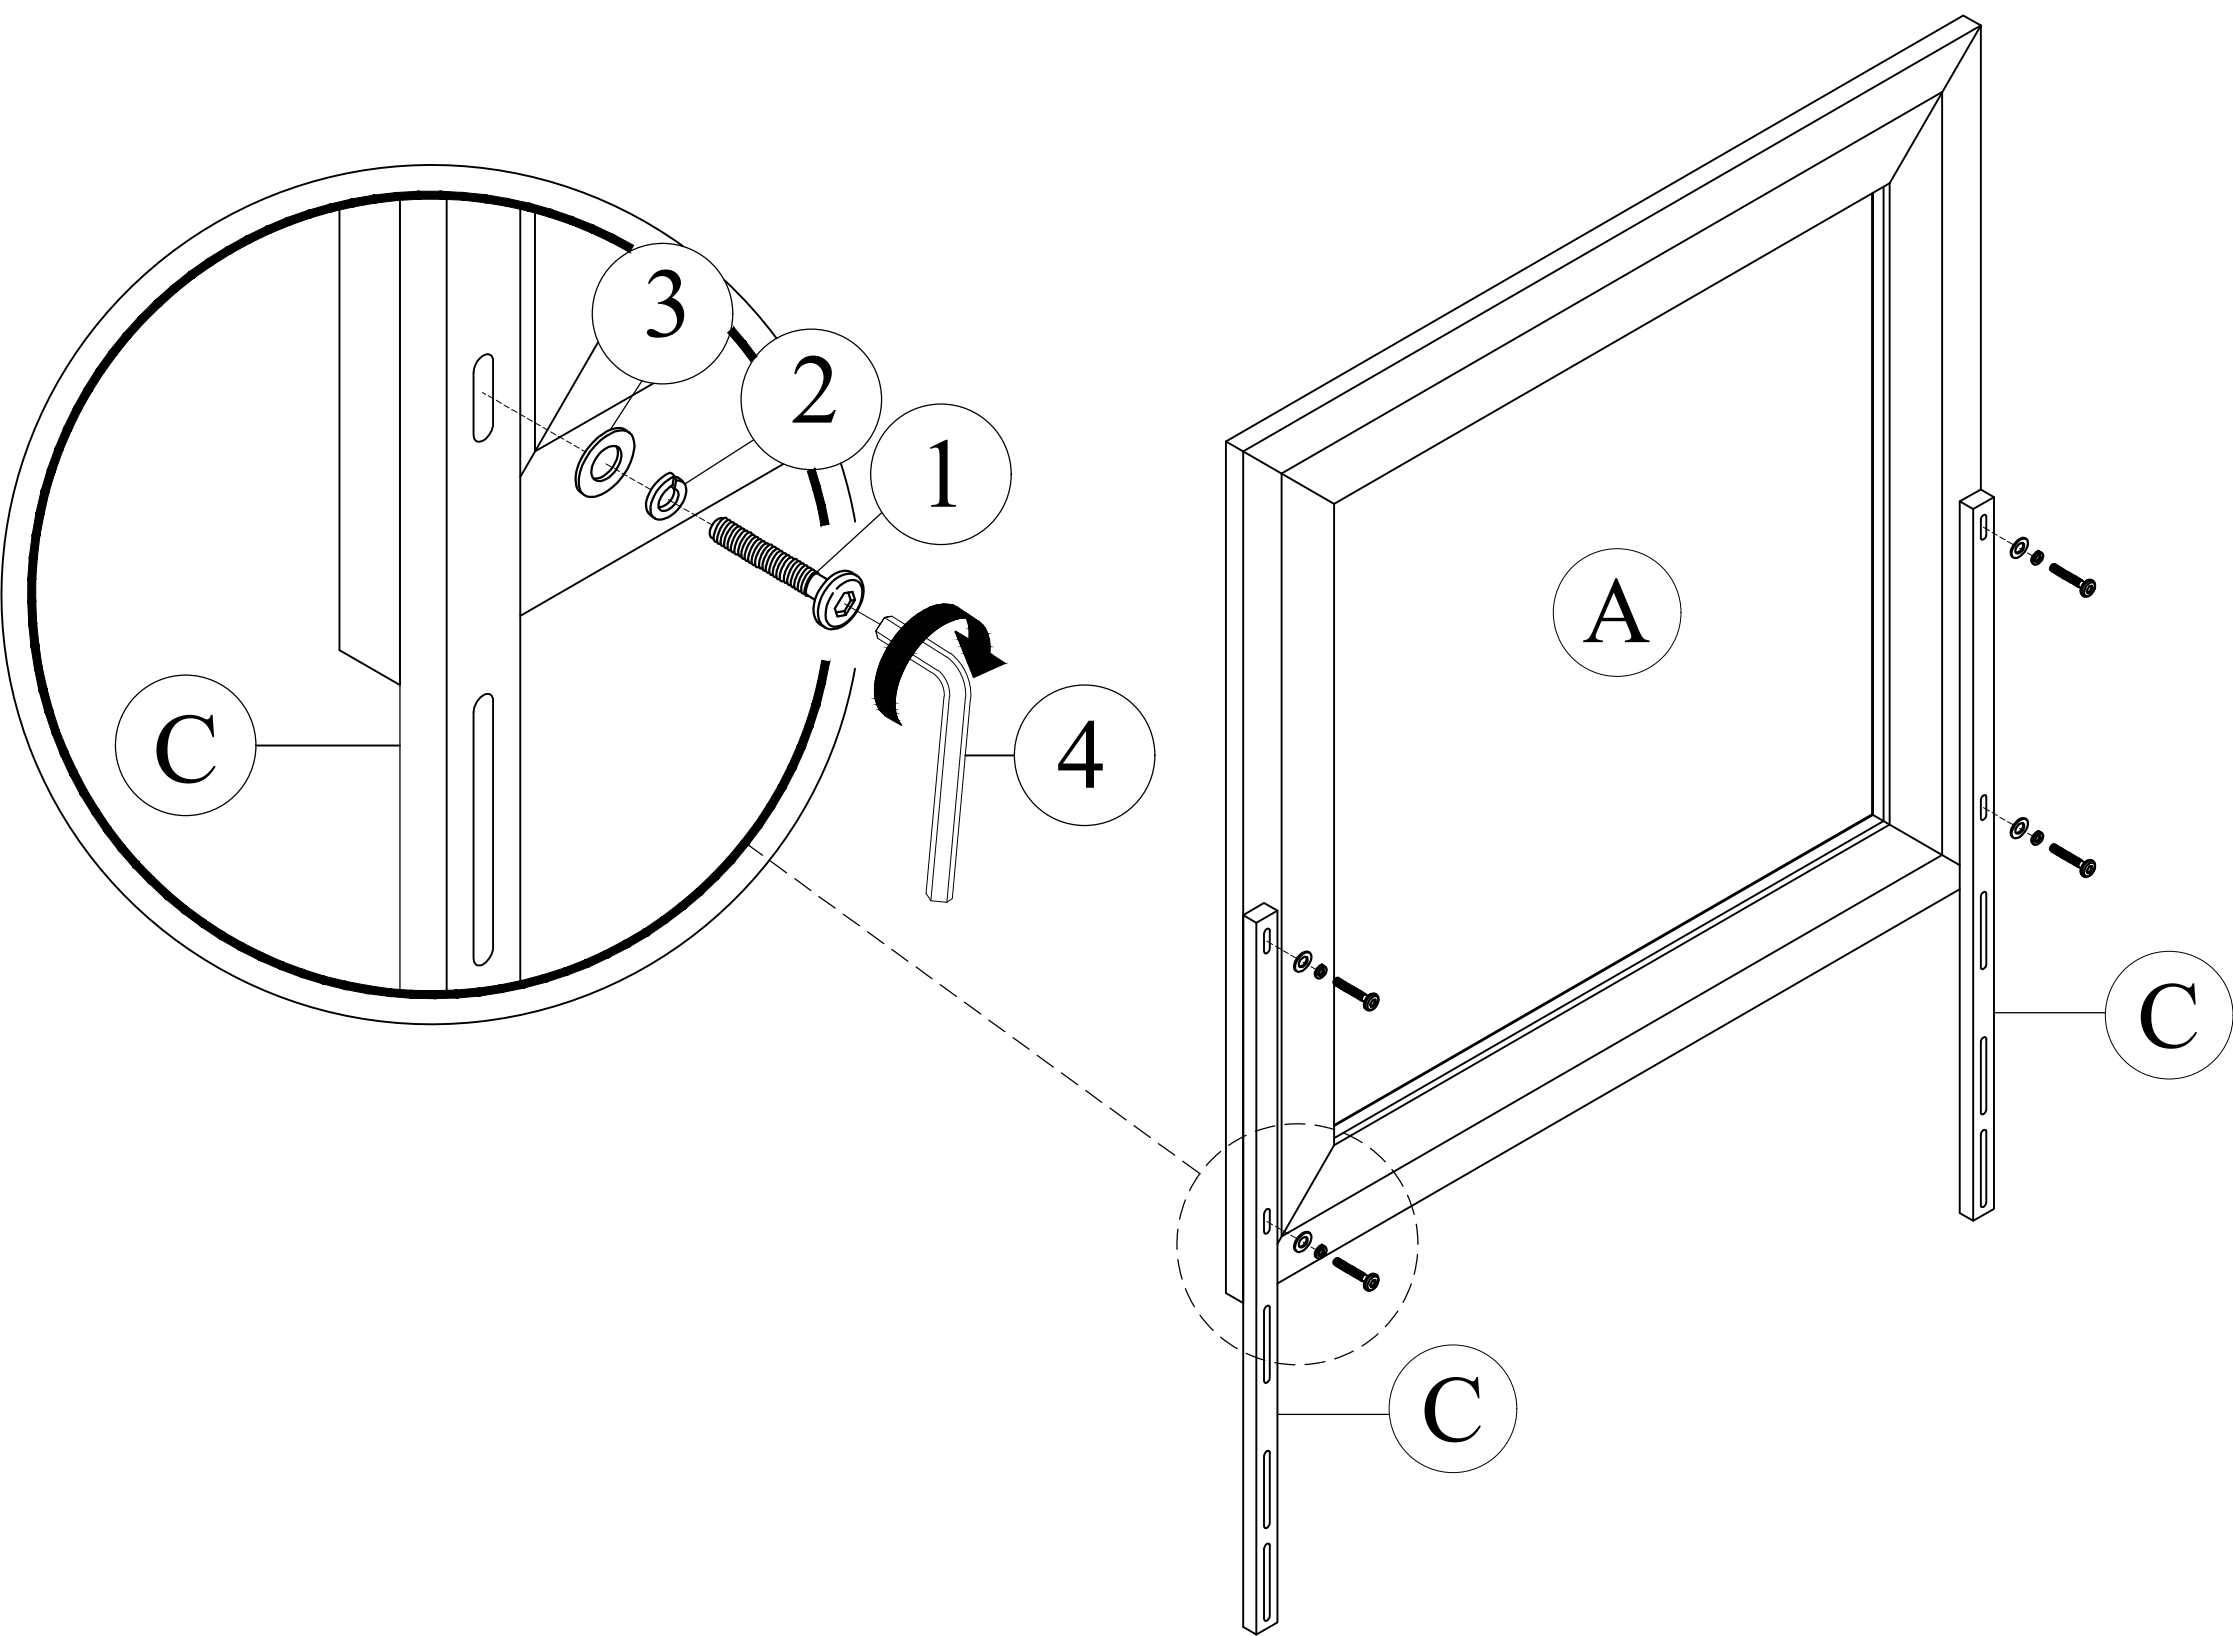

STEP 2

Place the mirror with support on the top of Dresser (B). Then align center as shown and tighten with JCBC screw M6 x 35mm (1), Spring Washer Ø 1/4" (2), Flat Washer Ø 1/4" x 20mm (3).Tighten using L Key M4 (4).

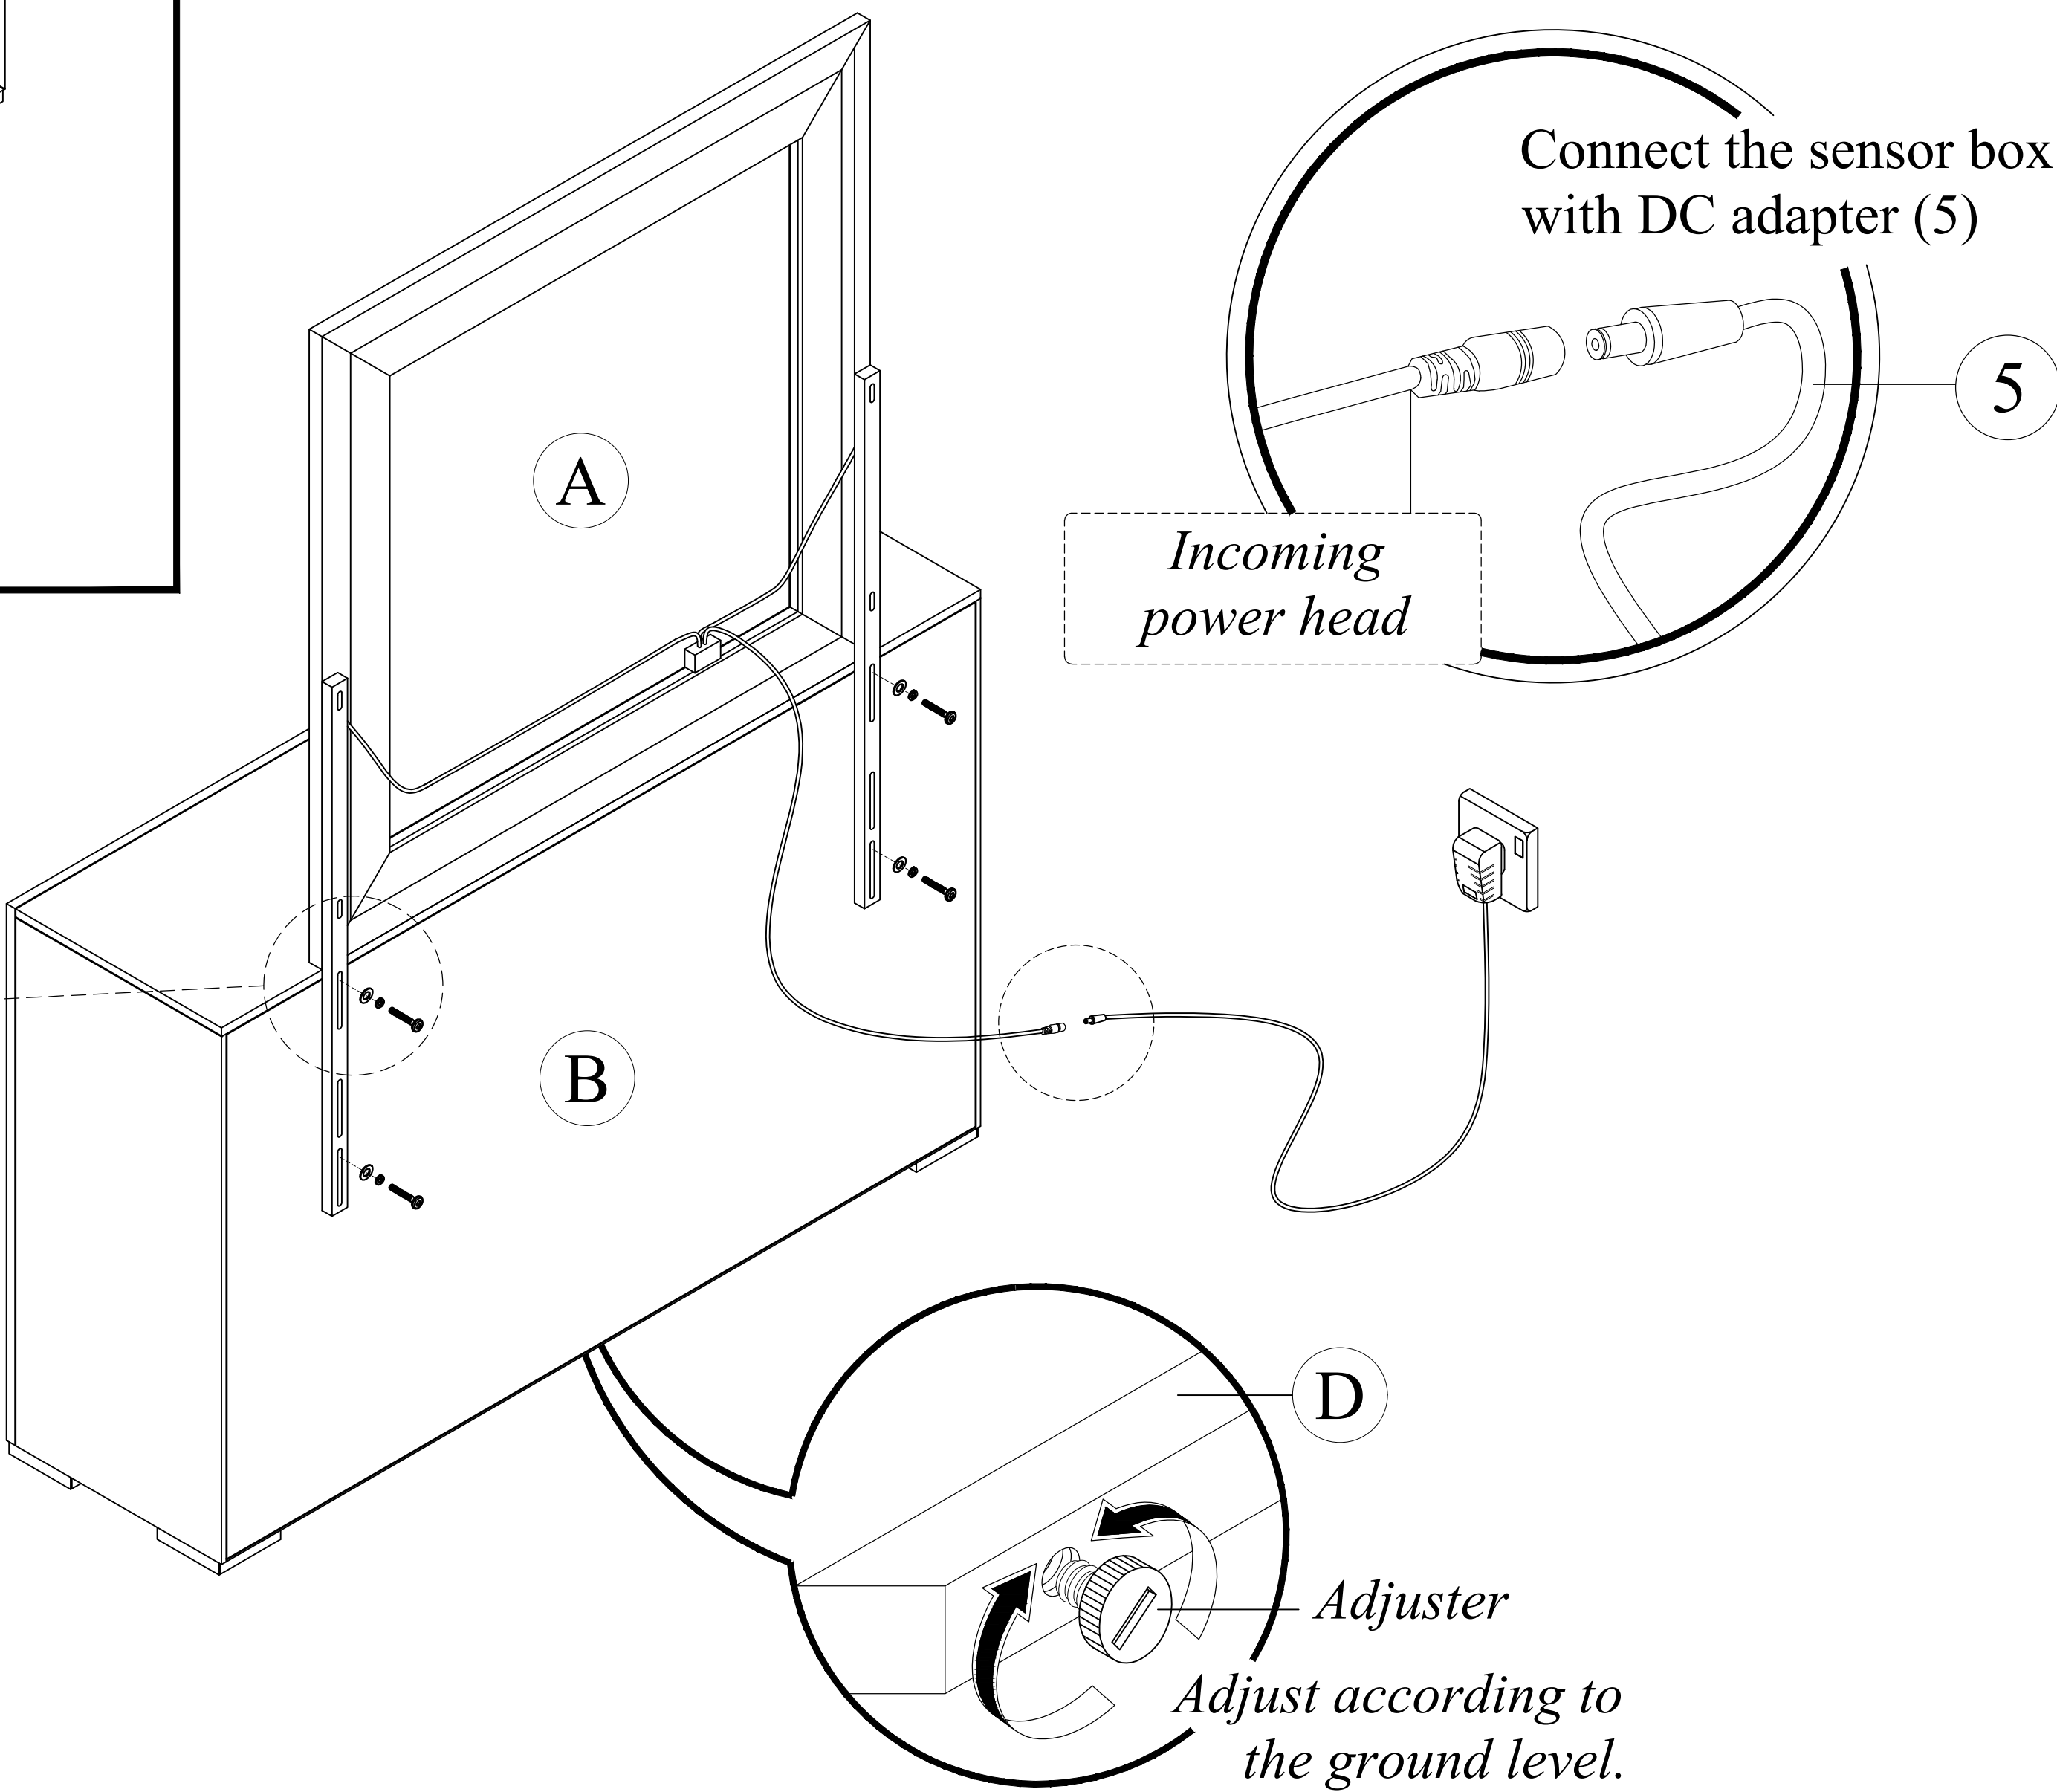

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.