

ASSEMBLY INSTRUCTION

Item: 6050-90951/90852/90853 5-0 Upholstered bed

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment. Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST


N0.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Bolts	Ø5/16"*4"	8 PCS
B		Curved Washers	Ø5/16"	8 PCS
C		Nut	Ø5/16"	8 PCS
D		Open Wrench	13mm	1 PCS
E		Screw	Ø8*1-1/4"	8 PCS

STEP 1. Attach the threaded bolts (A) into the two threaded holes that are at the bottom of the posts of Bolt the Headboard and the Footboard. Slide the Bed Rail onto the two Bolts (A) on one of the bed posts until the Bolts (A) are visible through the holes on the inside of the Bed Rail.

STEP 2. Slide a Curved Washer (B) and a Nut (C) onto the Bolts (A) through the holes in the bed rail. Tighten all the Nuts (C), using the Open Wrench (D).

STEP 3. Assemble the leg supports to the bed slats.

STEP 4. Mount the assembled support slats onto the side rail with screws (E), use a Phillips head screwdriver to tighten screws

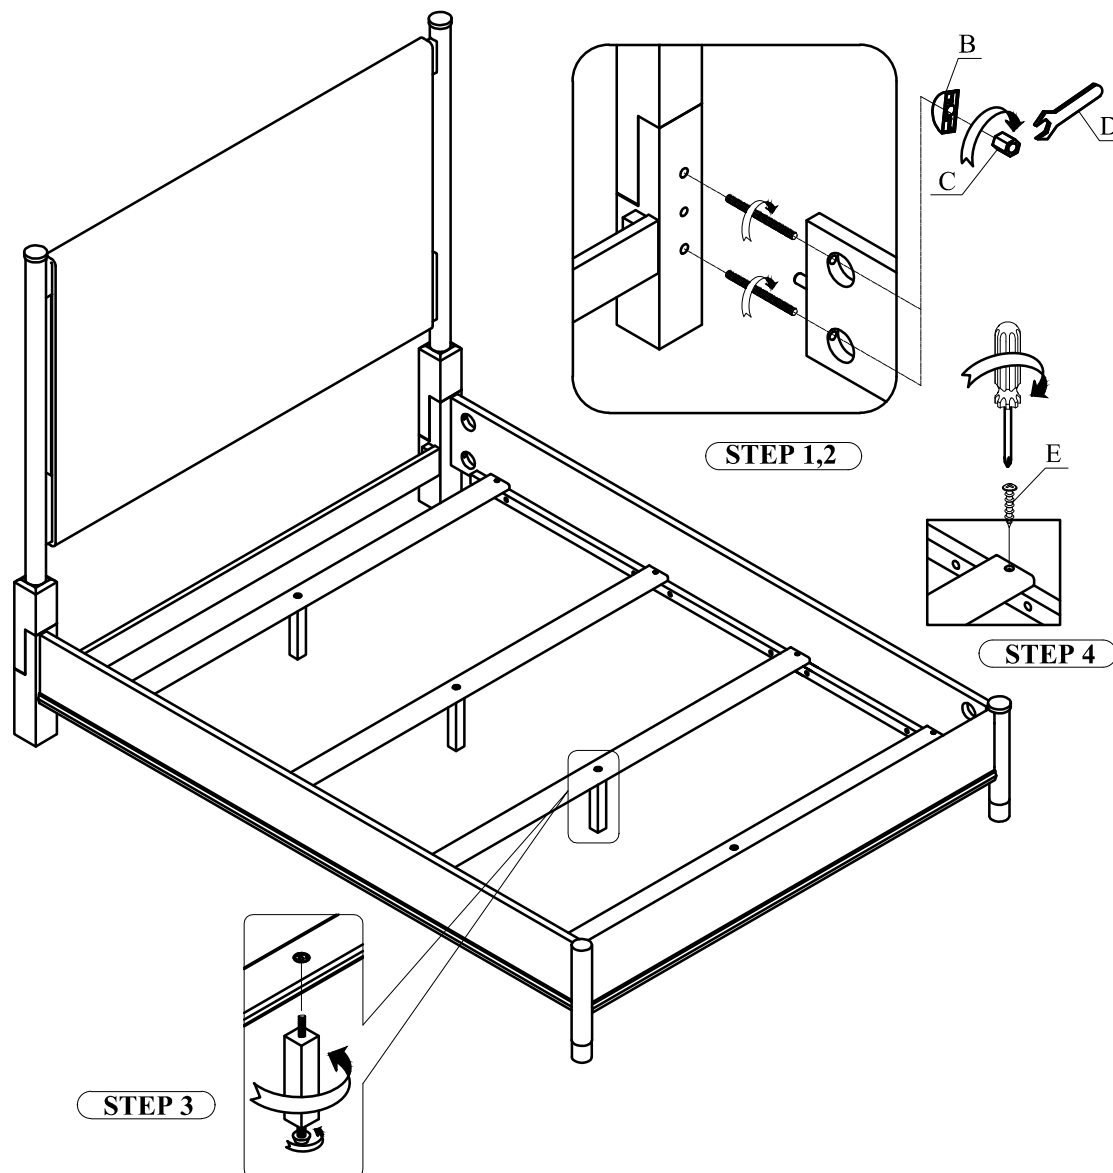

ASSEMBLY INSTRUCTION

Item: 6050-90967/90868/90863 6-0 Upholstered Bed


6050-90967/90868/90853 6-6 Upholstered Bed

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment. Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST

N0.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Bolts	Ø5/16"*4"	8 PCS
B		Curved Washers	Ø5/16"	8 PCS
C		Nut	Ø5/16"	8 PCS
D		Open Wrench	13mm	1 PCS
E		Screw	Ø8*1-1/4"	10 PCS

- STEP 1. Attach the threaded bolts (A) into the two threaded holes that are at the bottom of the posts of Bolt the Headboard and the Footboard. Slide the Bed Rail onto the two Bolts (A) on one of the bed posts until the Bolts (A) are visible through the holes on the inside of the Bed Rail.
- STEP 2. Slide a Curved Washer (B) and a Nut (C) onto the Bolts (A) through the holes in the Bed rail. Tighten all the Nuts (C), using the Open Wrench (D).
- STEP 3. Assemble the leg supports to the bed slats.
- STEP 4. Mount the assembled support slats onto the side rail with screws (E), use a Phillips head screwdriver to tighten screws

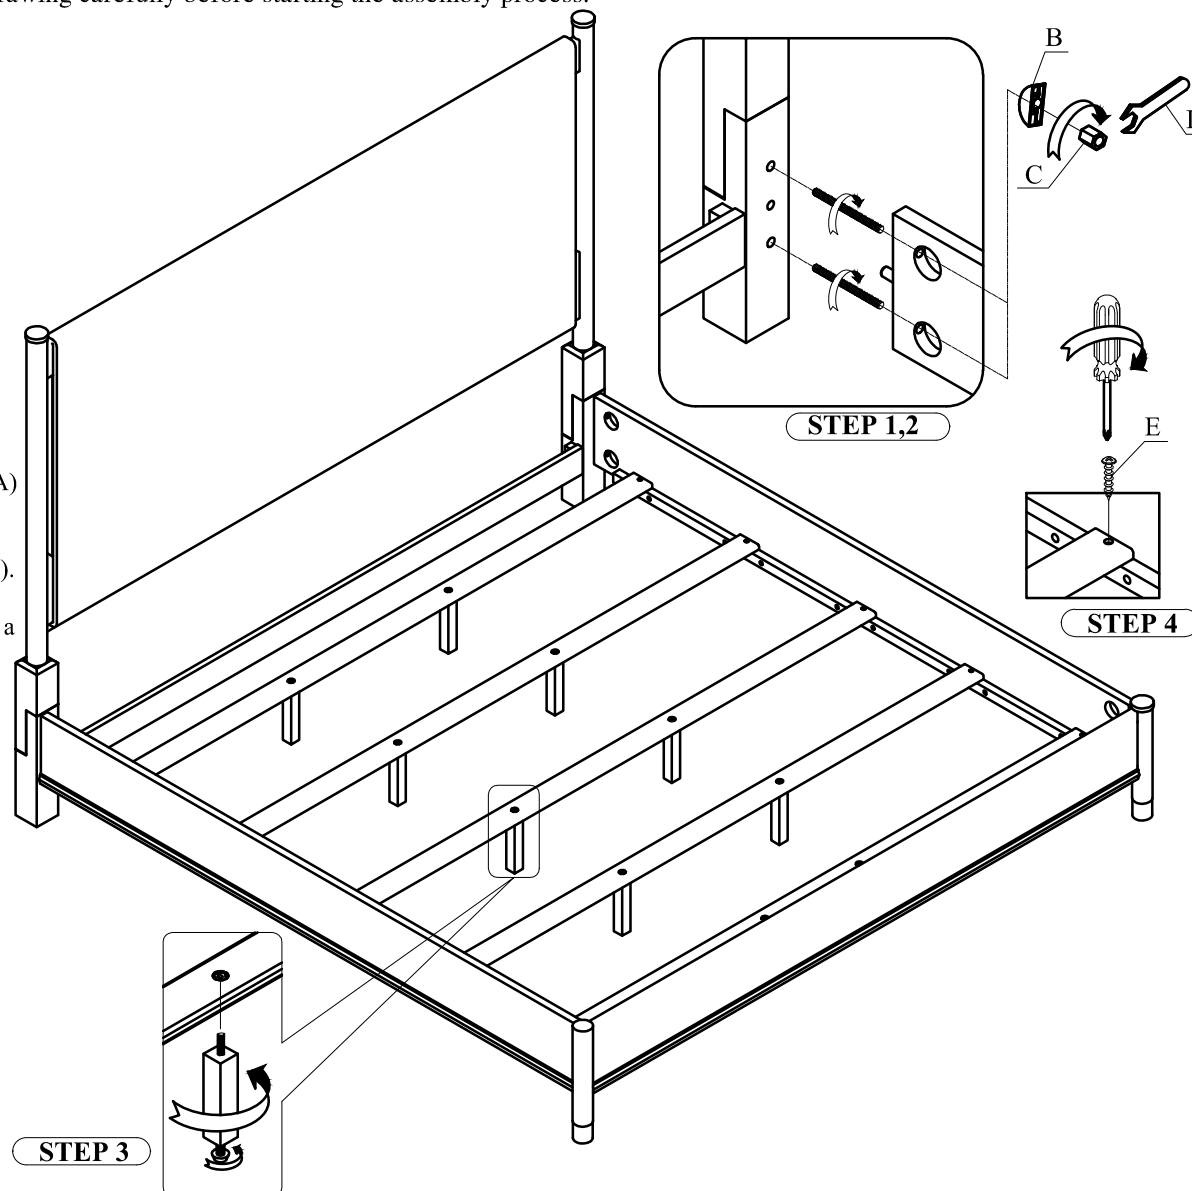


ASSEMBLY INSTRUCTION

Item: 6050-90015 Leg Nightstand




Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


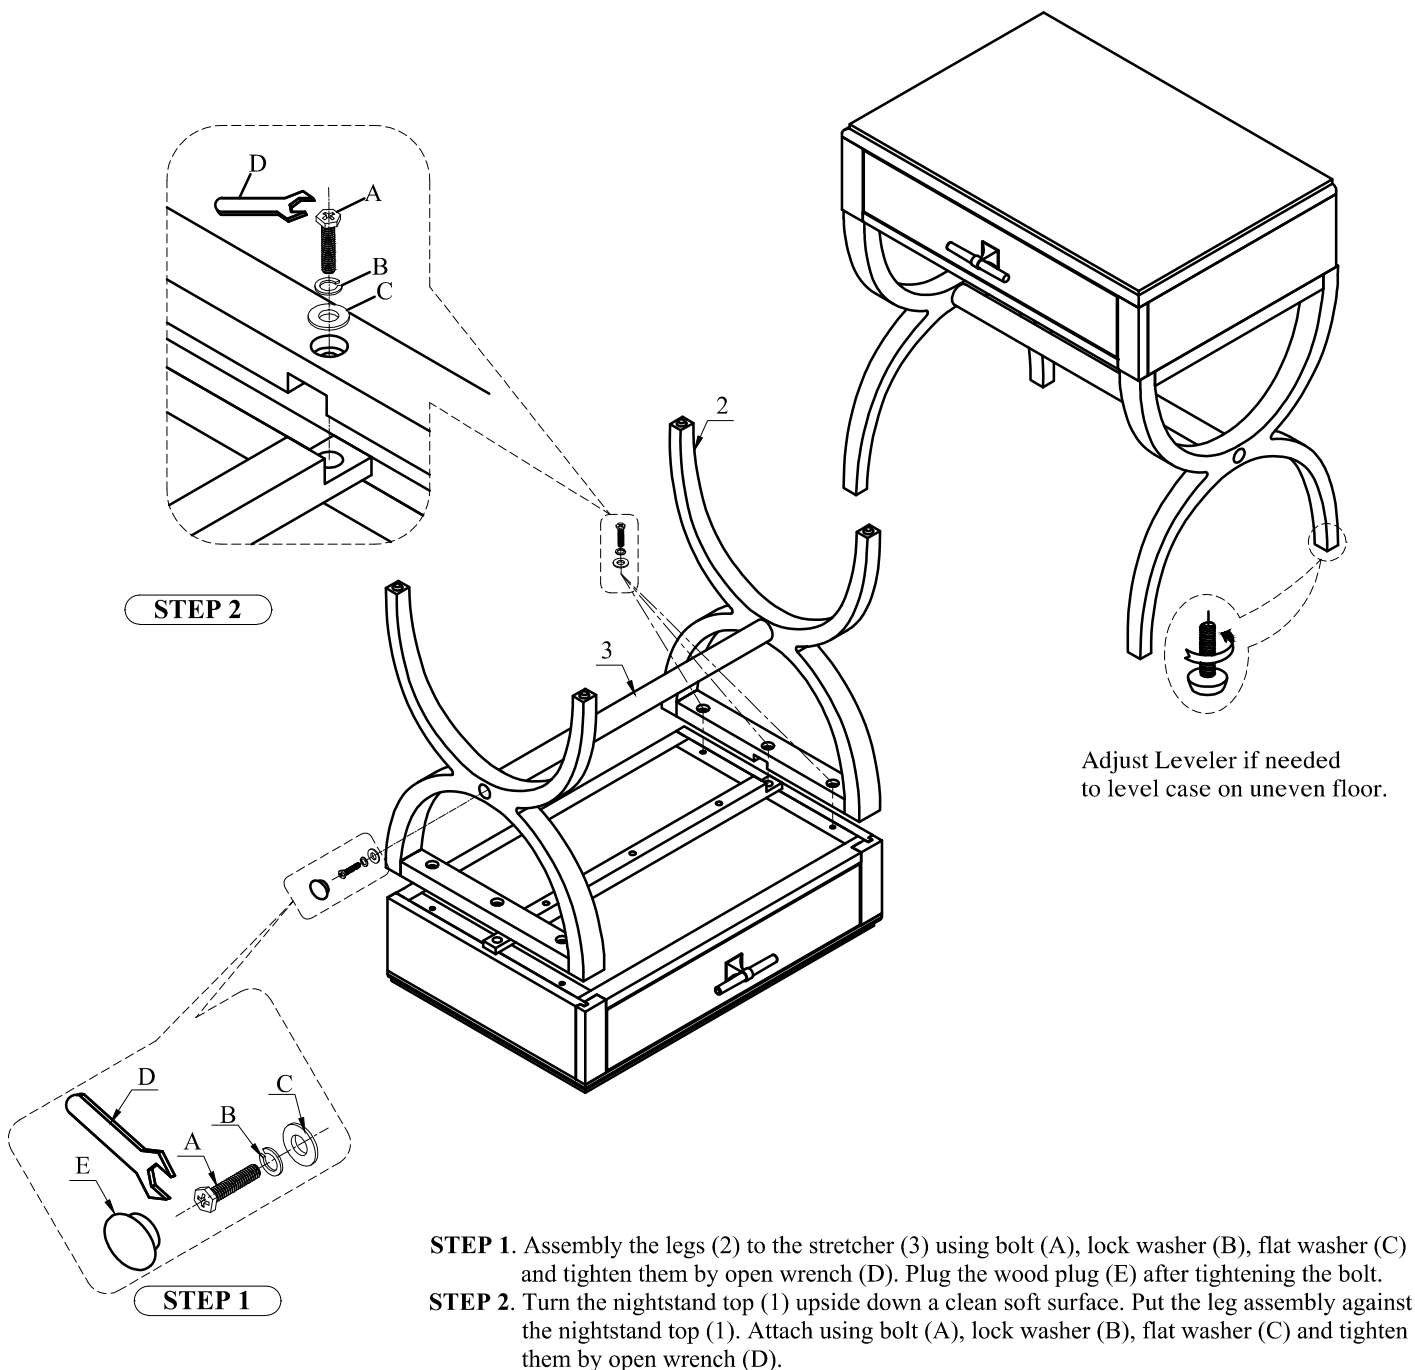


Item: 6050-90015 Leg Nightstand

PARTS LIST

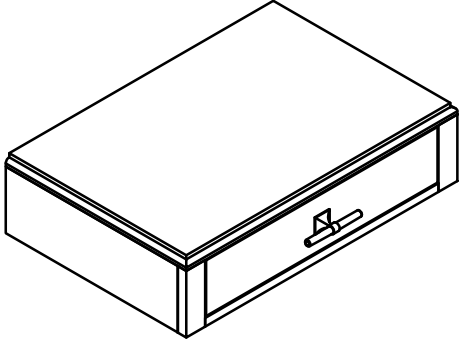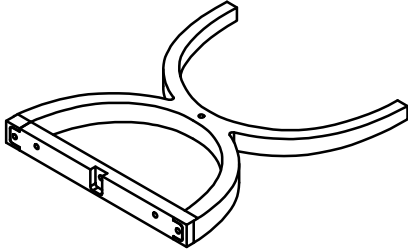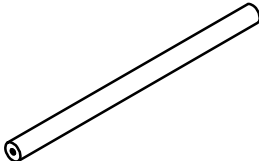Item No	Drawing	Description	Qty
1		Nightstand Top	1 pc
2		Leg	2 pcs
3		Stretcher	1 pc

HARDWARE LIST

NO	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Hexagonal Bolt	ø1/4"*1-1/2"	8pcs
B		Lock Washer	ø1/4"	8pcs
C		Flat Washer	ø1/4"*19D	8pcs
D		Open Wrench	11mm	1pc
E		Wood Plug Ø41*18mm	ø34*16	2pc




ASSEMBLY INSTRUCTION

Item: 6050-90016 Three-Drawer Nightstand

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

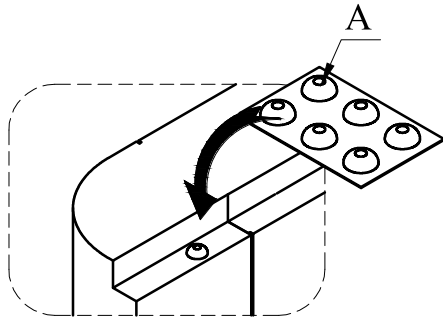

STEP 1

STEP 1. Install the glass shelf into the nightstand. Glass pads (A) are provided to be attached to the nightstand before installing the glass shelf to prevent glass shelf from rocking

HARDWARE PACK			
NO	DRAWING	DESCRIPTION	Q'ty
A		Glass Pad	6pcs

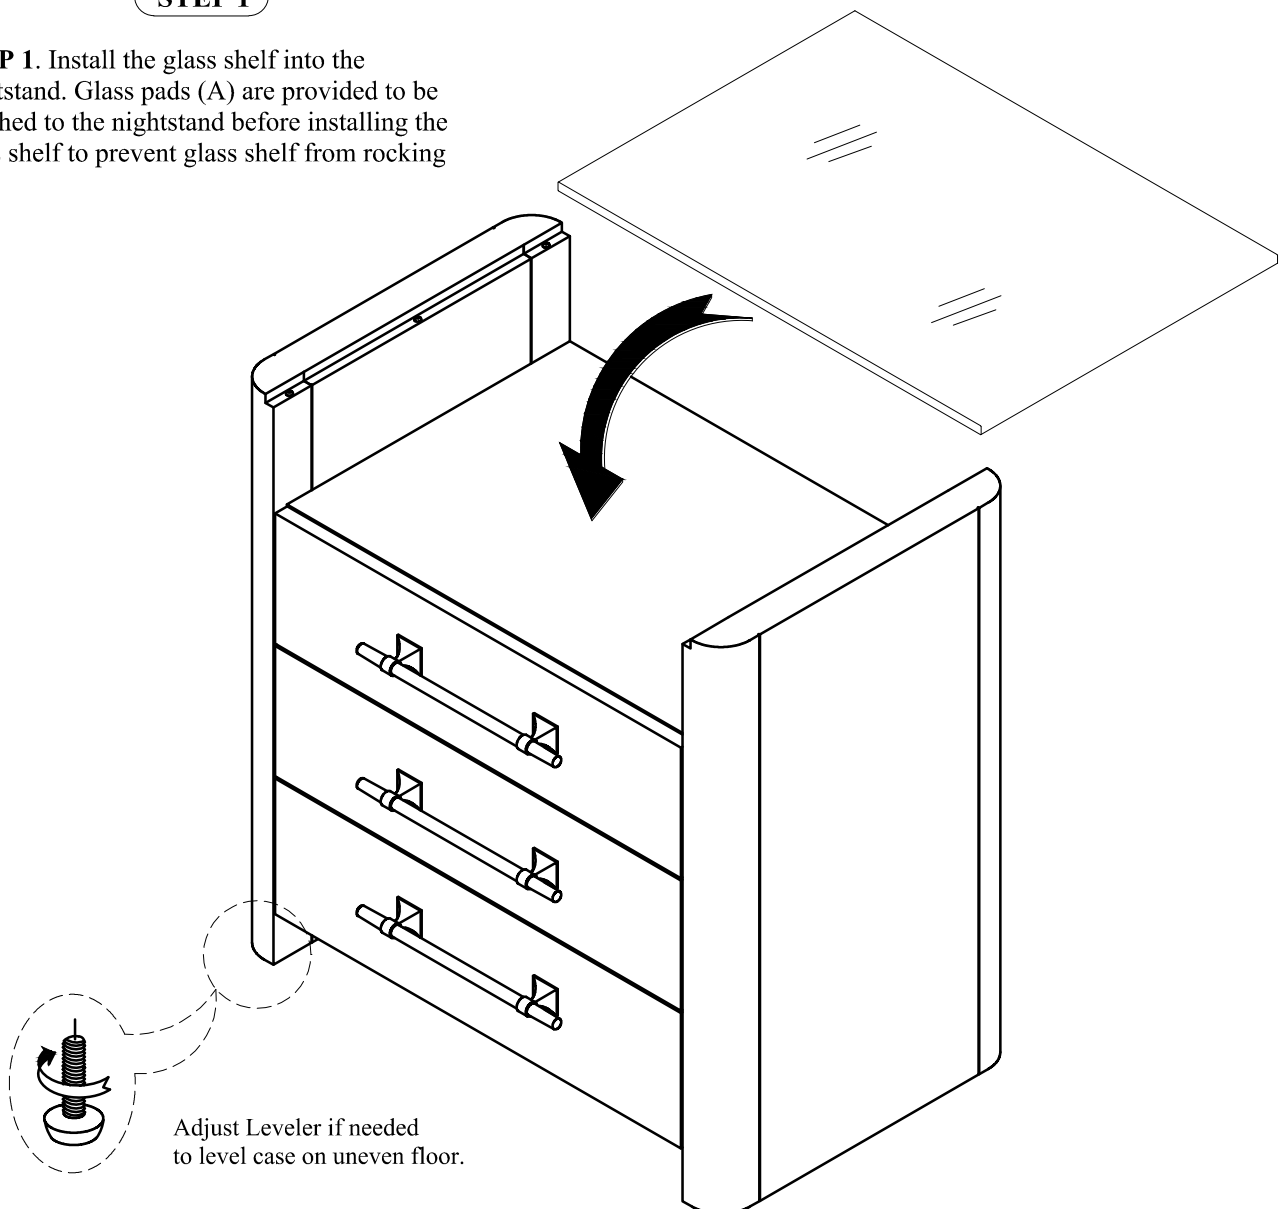




ASSEMBLY INSTRUCTION

Item: 6050-90002 Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

Anti-tip kit is included for use.
We recommend installing for safety reason

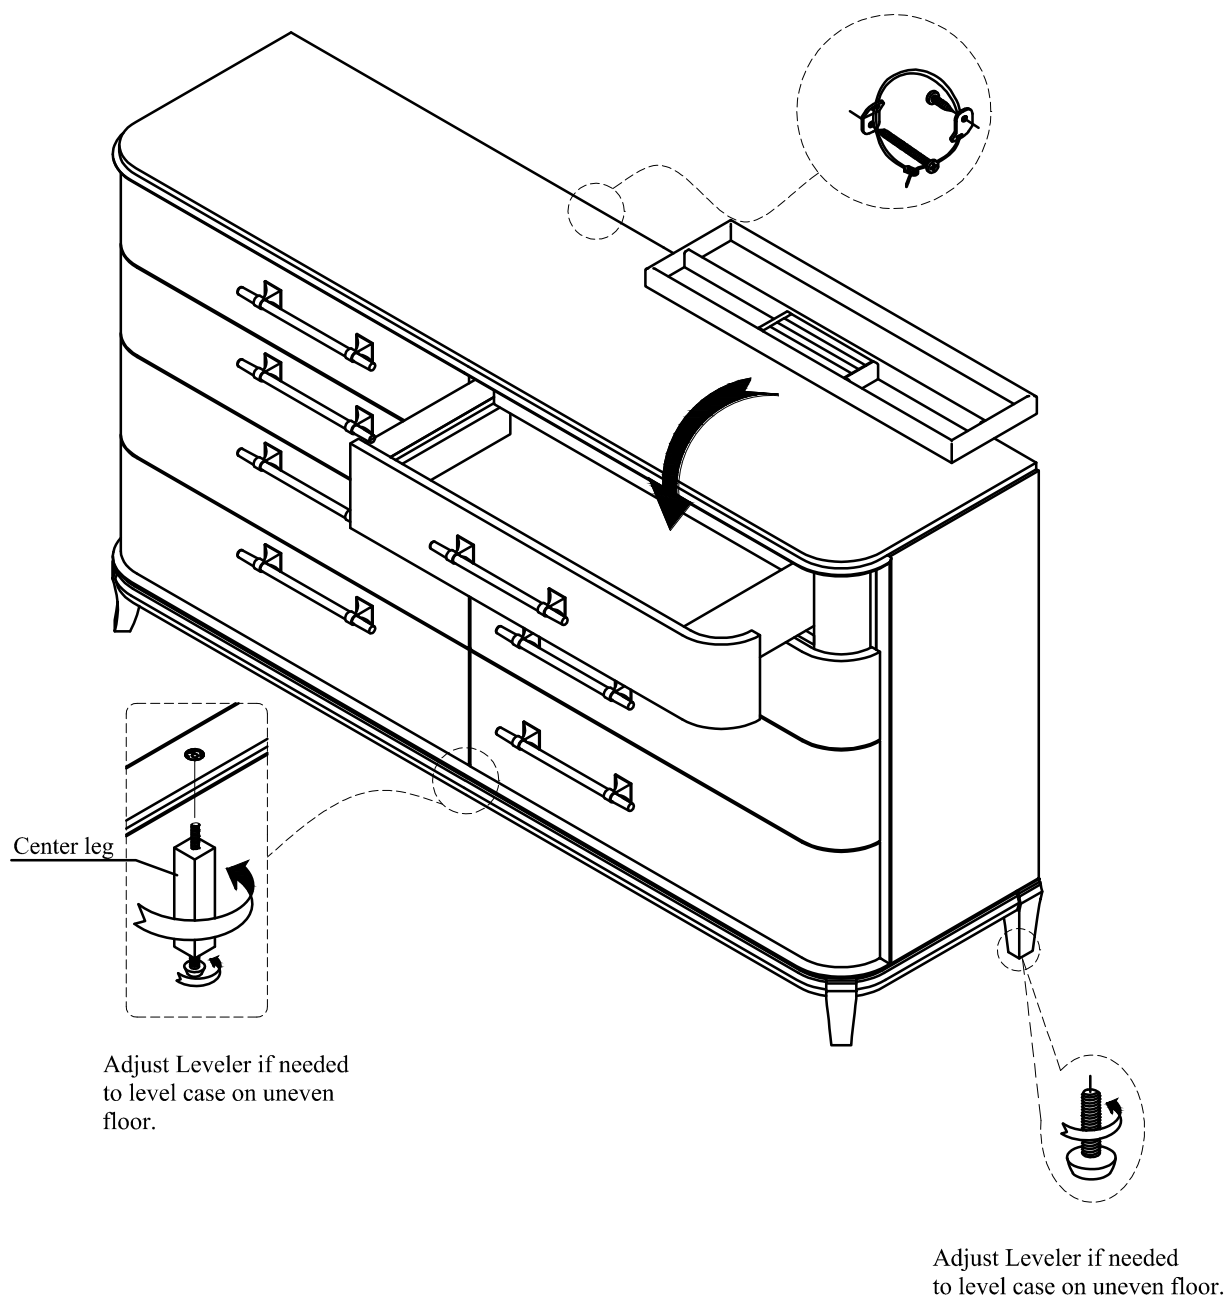

Note: Anti-tip kit restraint instructions enclosed with the pack.






ASSEMBLY INSTRUCTION

Item: 6050-90004 Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Hexagonal Bolt	Ø1/4"*1-1/4"	8pcs
B		Lock Washer	Ø1/4"	8pcs
C		Flat Washer	Ø1/4"*19D	8pcs
D		Open Wrench	11mm	1pc

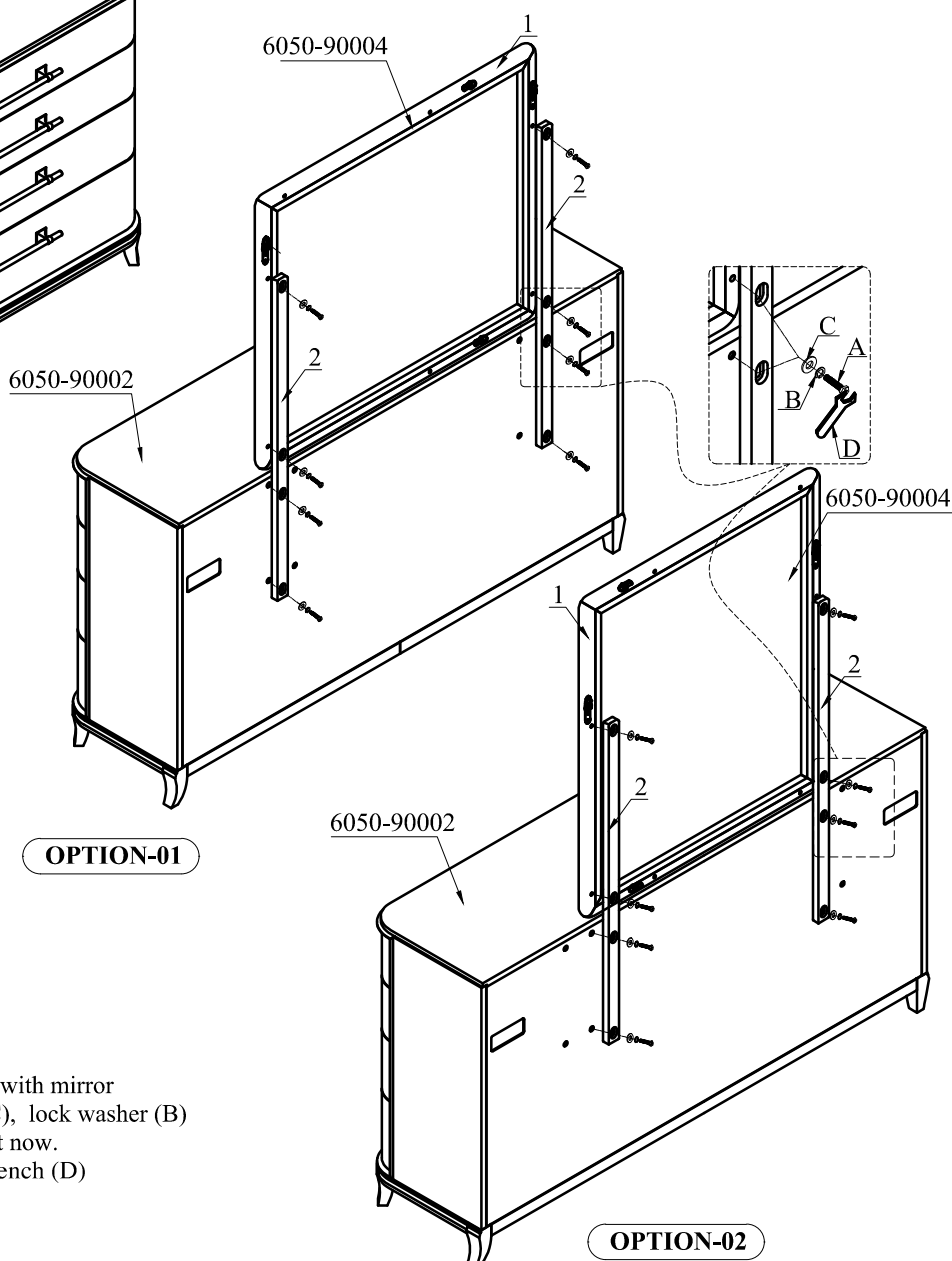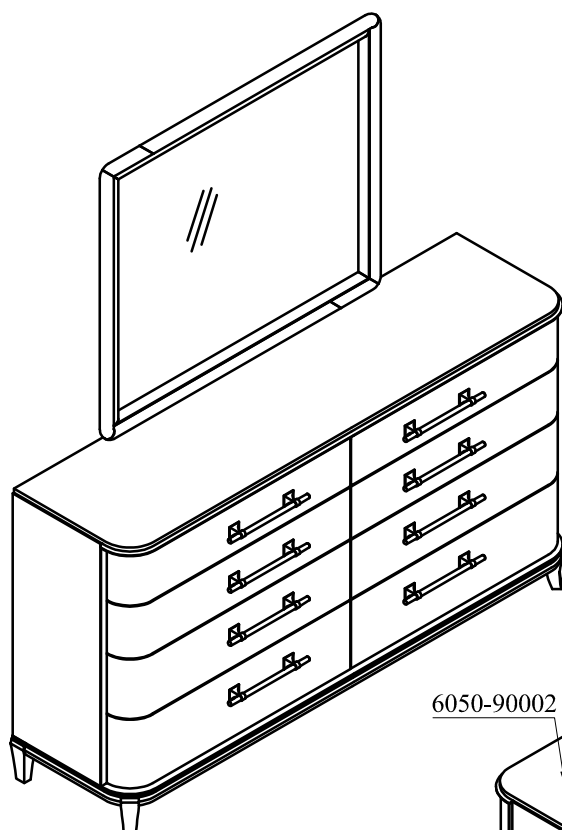

Step 1: Assemble mirror (1) to the dresser with mirror supports (2) by using flat washer (C), lock washer (B) and bolt (A). Do not tighten the bolt now.

Step 2: Tighten the bolts (A) with open wrench (D)



ASSEMBLY INSTRUCTION


Item: 6050-90017 Bachelors Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

Anti-tip kit is included for use.

We recommend installing for safety reason

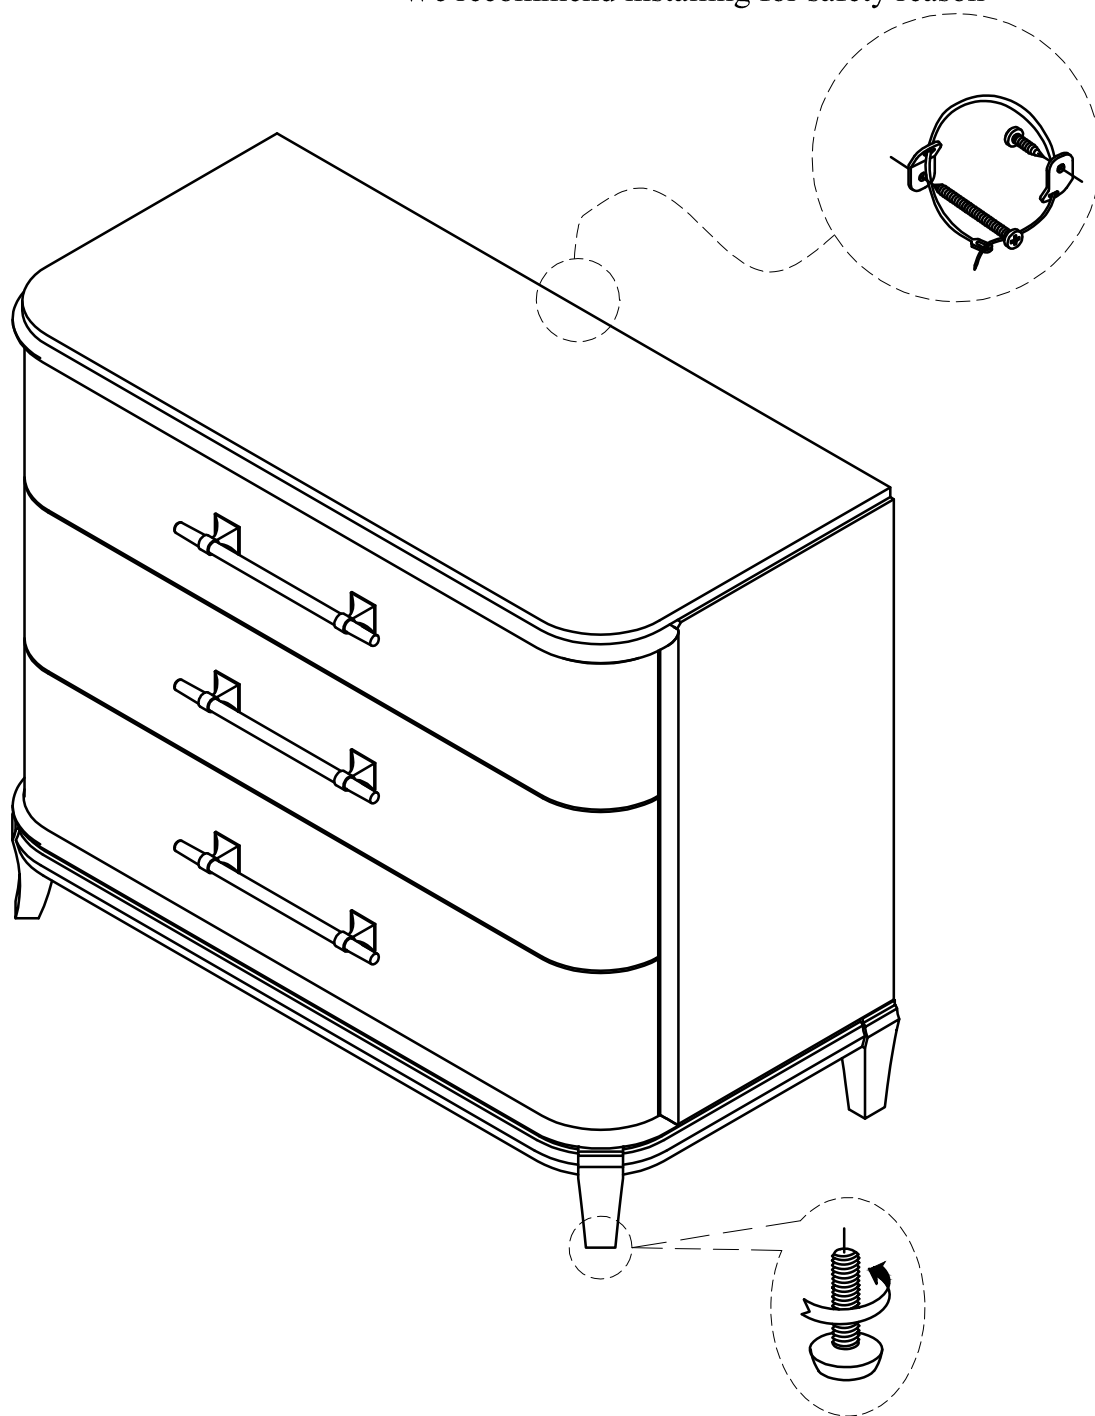

Adjust Leveler if needed
to level case on uneven floor.

Note: Anti-tip kit restraint instructions enclosed with the pack.