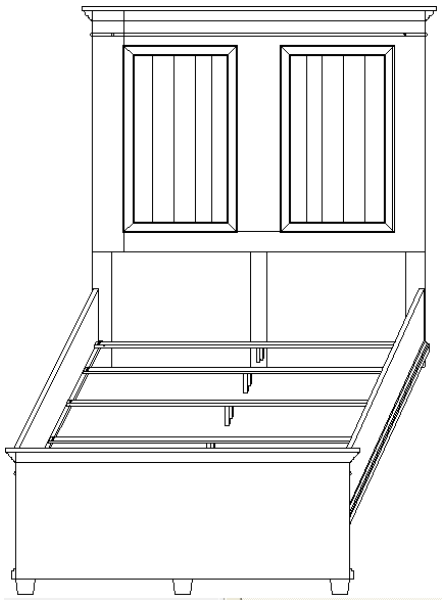
ASSEMBLY INSTRUCTION

ITEM# 5750-90251-MWD 5/0 Panel Headboard
5750-90252-MWD 5/0 Panel Footboard
5750-90267-MWD 6/0 & 6/6 Panel Headboard
5750-90268-MWD 6/0 & 6/6 Panel Footboard
5750-90253-MWD 5/0 & 6/6 Rails
5750-90263-MWD 6/0 Rails

Caution: Please make sure you have all parts indicated below prior to assembly.
This bed is heavy and can best be assembled with the help of two or more people.

NO.	HARDWARE LIST		Q'TY
E		NUT	8
F		SPANNER WRENCH	1
G		CURVED WASHER	8
H		FULL THREADED BOLT	8
K		SCREW	20 (for 6/6&6/0 bed) 16 (for 5/0 bed)
R		4MM ALLEN WRENCH	1
Q		BOLT	10 (for 6/6&6/0 bed) 8 (for 5/0 bed)
V		LOCK WASHER	10 (for 6/6&6/0 bed) 8 (for 5/0 bed)
U		FLAT WASHER	10 (for 6/6&6/0 bed) 8 (for 5/0 bed)
M		5MM ALLEN WRENCH	1



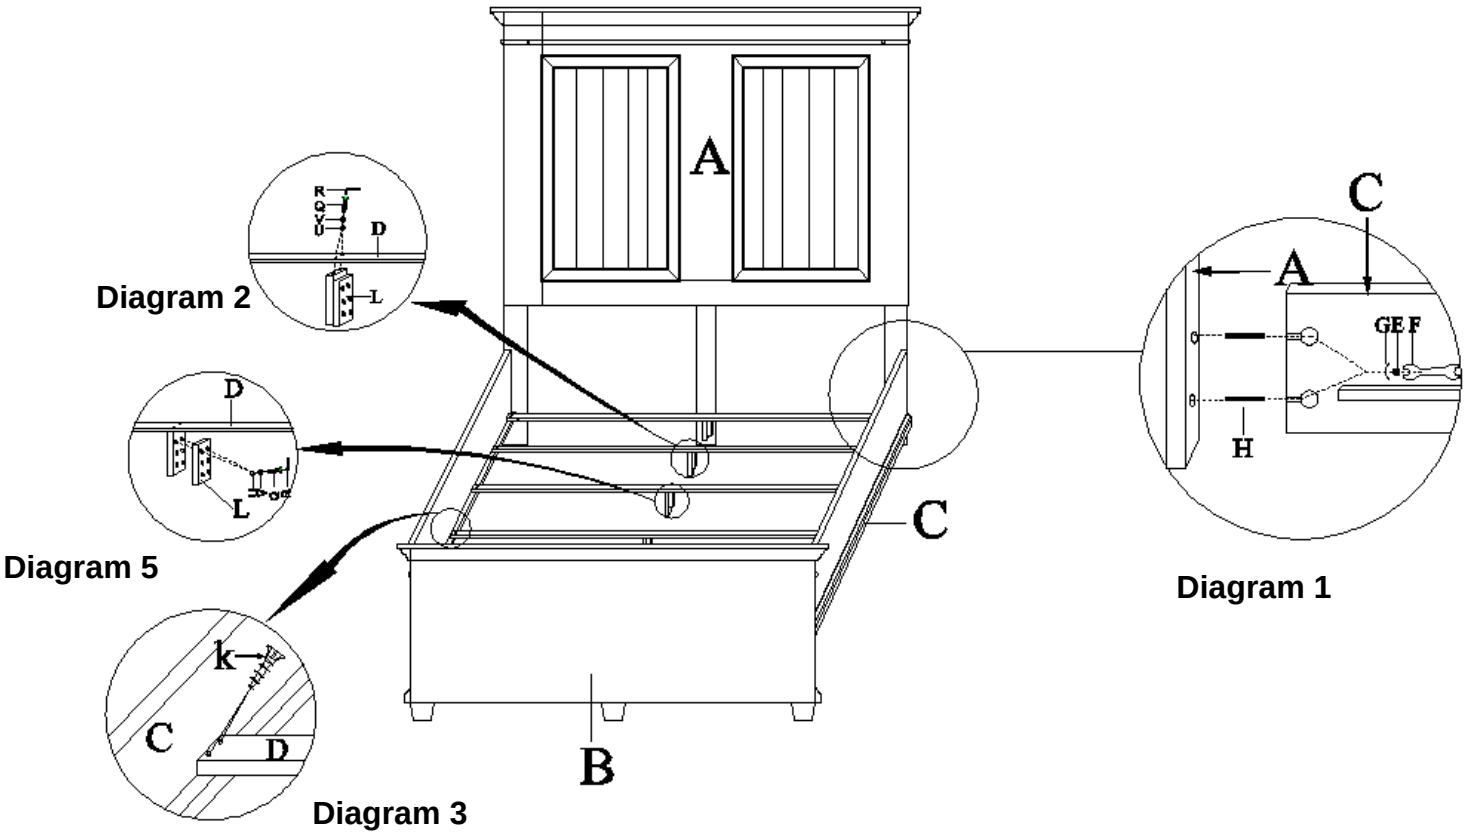


Diagram 2

Diagram 5

Diagram 1

Diagram 3

Please note the hardware bag to assemble side rails to HB&FB is in the box of side rails.

Assembly steps:

1. Insert 2 bolts (H) into holes of each side post on Headboard (A) and Footboard (B), attach the ends of side rails (C) to bolts (H) on posts by using 2 curved washers (G) and 2 nuts (E), tighten nuts (E) securely with spanner wrench (F). (See diagram 1)

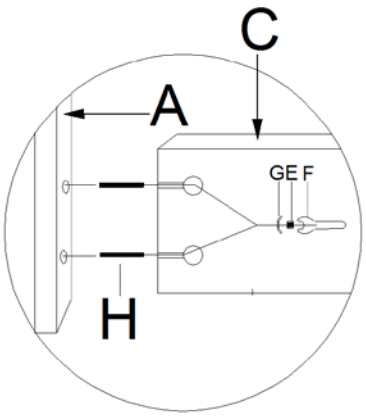


Diagram 1

2. Take out center supports (L) from the rail box, attach center supports (L) to slats (D) by using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using allen wrench (R). (See diagram 2)

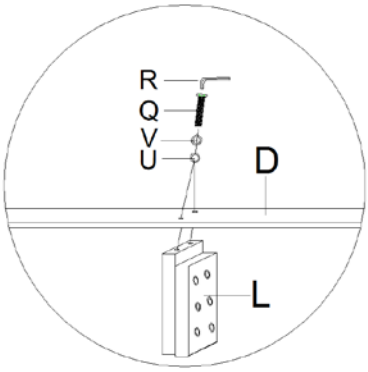


Diagram 2

3. Attach slats (D) to side rails (C), and tighten screws(K) on both ends of slats(D) to side rails(C). (See diagram 3)

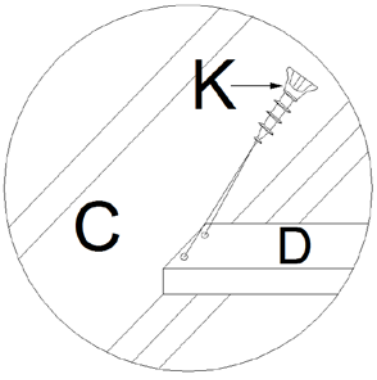


Diagram 3

Note: You can change the height of slats by adjusting the height of cleats on side rail as shown in diagram 4. Remove bolts (I), lock washers (O) and flat washers (J) from the cleats by turning the bolts (I) with allen wrench (M) in anti-clockwise direction. Adjust the cleats to a desired

position, and then secure lock washers, flat washers, bolts in clockwise direction by turning with allen wrench.

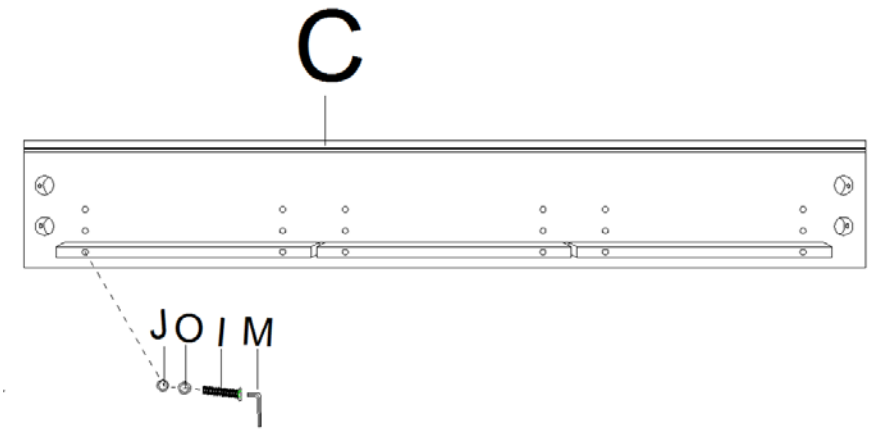


Diagram 4

You can adjust the height of center supports (L) as shown in diagram 5 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).
2. Adjust the height of center supports, align holes on 2pcs of woods and tighten them together with 2 bolts (Q), 2 lock washers (V) and 2 flat washer (U) by turning with wrench (R) in clockwise direction.

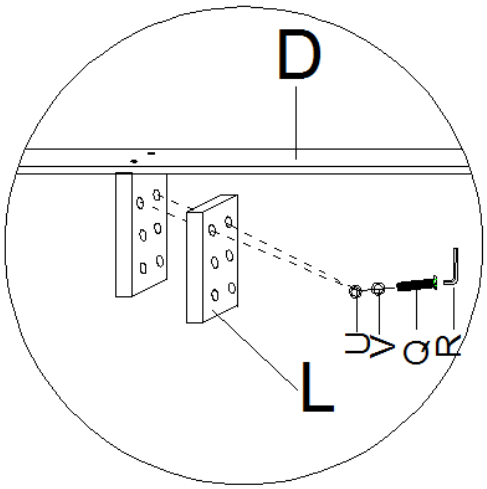


Diagram 5


Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION

Item#: 5750-90019-MWD Bed Bench

** Please make sure you have all parts indicated below prior to assembly.

NO	HARDWARD LIST		Q'ty
A		Bolt	12
B		Lock washer	12
C		Flat washer	12
D		Allen wrench	1

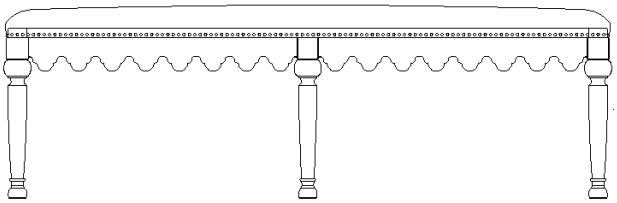

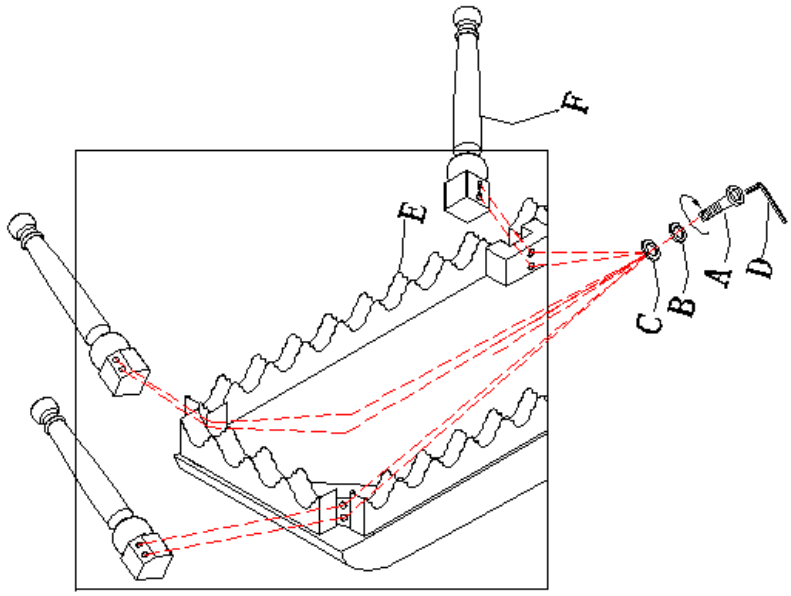


Diagram 1

Assembly Steps:

1. Put seat frame (E) upside down on a soft surface to prevent it from being scratched. (See Diagram 1).

2. Attach bench leg (F) to corner block of seat frame (E) by using bolts (A), lock washers (B) and flat washers (C), tighten with allen wrench (D) in clockwise direction (See Diagram 1).

3. Assemble other legs in the same way.

4. Turn bench upright.


Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION

ITEM# 5750-90008-GRY Linen Wrapped Mirror
5750-90002-MWD Dresser

** Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more people

NO	Hardware List		Q'ty
C		Mending Plate	2
D		Screw	18

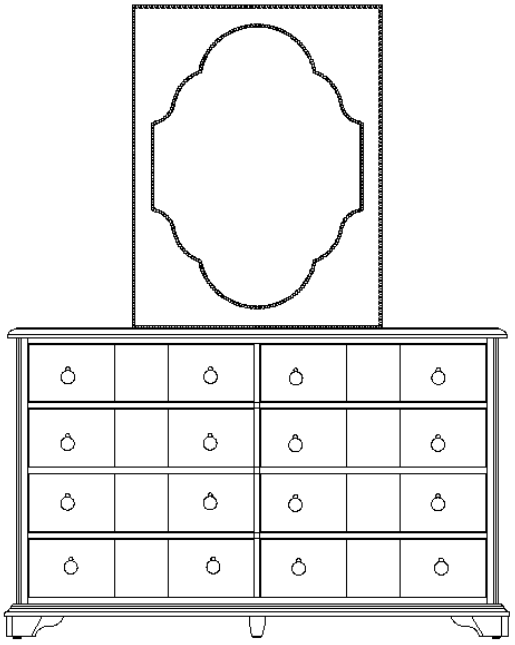

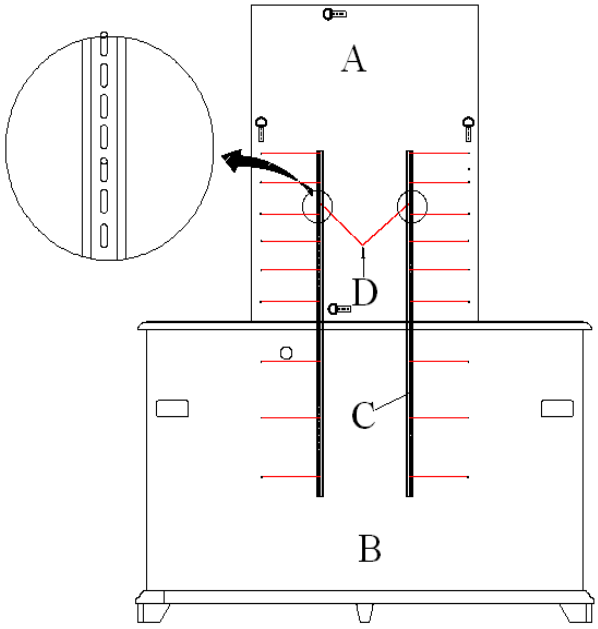


Diagram 1

Assembly steps :

1. Place mirror (A) on top of dresser(B). Be sure to position the mirror in the middle of top. The back bottom edge of the mirror and the back edge of the top should be flushed.

2. Attach a mending plate (C) at back of mirror and back of dresser. Align holes on mending plate to the pre-drilled holes at the back of dresser and tighten 3 pcs of screws (D). Tighten another 6 screws at random location through mending plate to mirror frame with care. (See Diagram 1)

3. Repeat step 2 for another mending plate (C).

Caution: Do not over tighten.


Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION

ITEM# 5750-90008-GRY Linen Wrapped Mirror
5750-90002-MWD Dresser

** Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more people

NO	Hardware List		Q'ty
C		Mending Plate	2
D		Screw	18

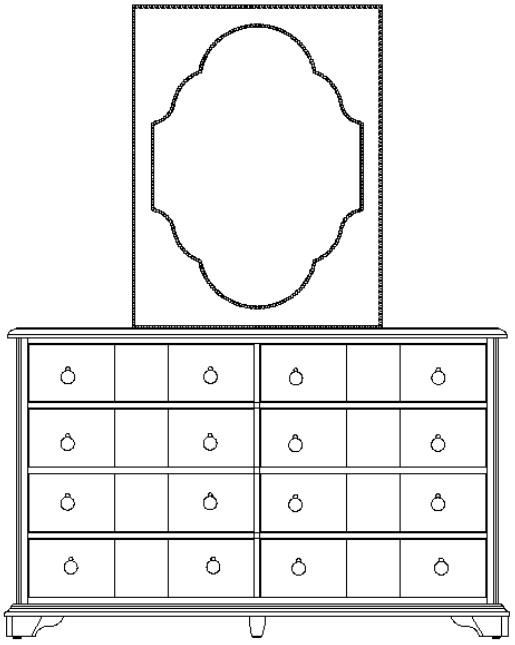

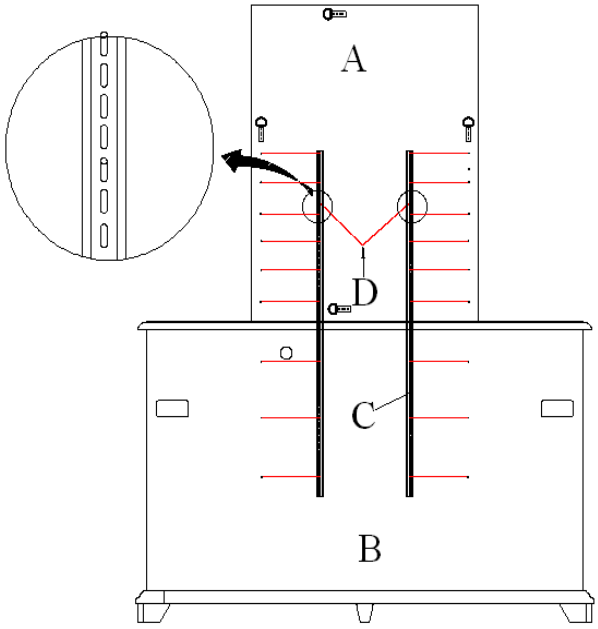


Diagram 1

Assembly steps :

1. Place mirror (A) on top of dresser(B). Be sure to position the mirror in the middle of top. The back bottom edge of the mirror and the back edge of the top should be flushed.

2. Attach a mending plate (C) at back of mirror and back of dresser. Align holes on mending plate to the pre-drilled holes at the back of dresser and tighten 3 pcs of screws (D). Tighten another 6 screws at random location through mending plate to mirror frame with care. (See Diagram 1)

3. Repeat step 2 for another mending plate (C).

Caution: Do not over tighten.

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.

HOOKER® FURNITURE

ASSEMBLY INSTRUCTION

ITEM: 5750-90016-MWD Bastogne Three-Drawer Nightstand


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

Tipping Restraint


Anti-tip kit is included for use. We recommend installing for safety reason.

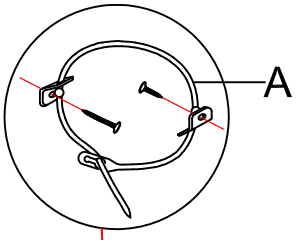

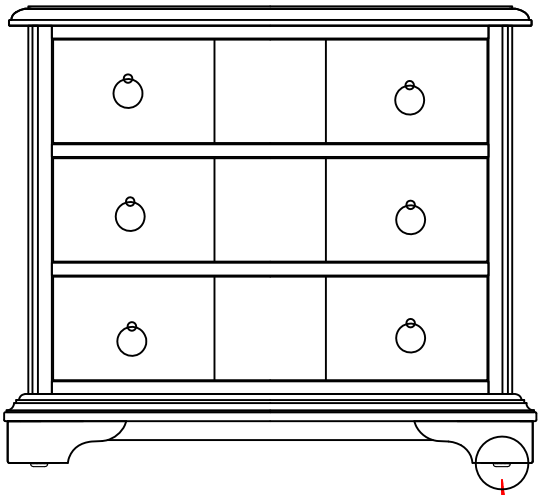

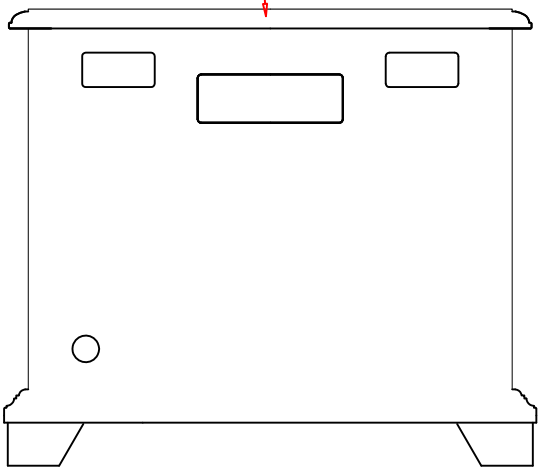

STEP 1

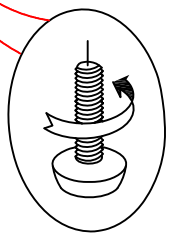

Adjust Leveler if needed to level case on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

HOOKER® FURNITURE


ASSEMBLY INSTRUCTION

ITEM: 5750-90013-LTWD Bilzen Wardrobe

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

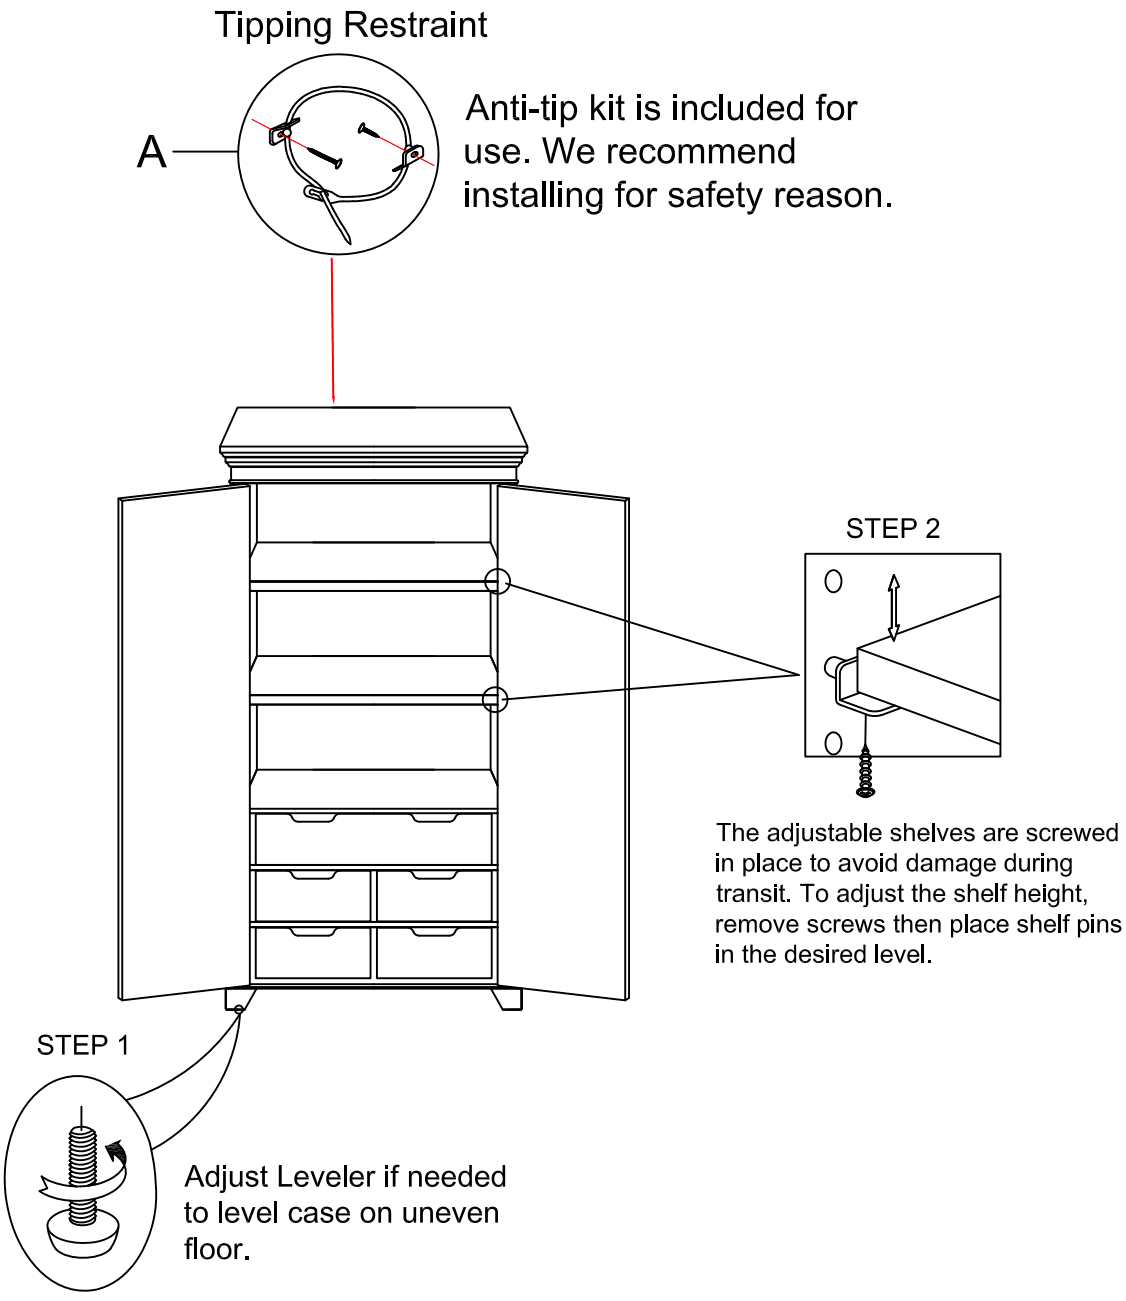

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.