

ASSEMBLY INSTRUCTION

ITEM: 5878-90551-80 5/0 Tufted Headboard
 5878-90567-80 6/0-6/6 Tufted Headboard
 5878-90552-80 5/0 Tufted Footboard
 5878-90568-80 6/0-6/6 Tufted Footboard
 5878-90553-80 5/0 Rails (C)
 5878-90569-80 6/6 Rails (C)
 5878-90563-80 6/0 Rails (C)

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Threaded rod	Ø3/8"*4"	8PCS	1		Headboard	1PC
B		Curved Washer	Ø3/8"	8PCS	2		Rail	2PCS
C		Nut	Ø3/8"	8PCS	3		Footboard	1PC
D		Open Wrench	Ø3/8"	1PC	4		Slat	5PCS (FOR 6/6 & 6/0 BED) 4PCS (FOR 5/0 BED)
E		Screw	8*32MM	20PCS (FOR 6/6 & 6/0 BED) 16PCS (FOR 5/0 BED)	5		Support Leg	5PCS (FOR 6/6 & 6/0 BED) 4PCS (FOR 5/0 BED)
F		Allen Wrench	4MM	1PC				
G		Bolt	Ø1/4"	10PCS (FOR 6/6 & 6/0 BED) 8PCS (FOR 5/0 BED)				
H		Lock Washer	Ø1/4"	10PCS (FOR 6/6 & 6/0 BED) 8PCS (FOR 5/0 BED)				
I		Flat Washer	Ø1/4"	10PCS (FOR 6/6 & 6/0 BED) 8PCS (FOR 5/0 BED)				
J		Allen Wrench	5MM	1PC				

Please note the hardware bag to assemble side rails to HB & FB is in the box of side rails.

Step 1: Insert 2 threaded rods (A) into holes of each side post on Headboard (1) and Footboard (3), attach the end of side rails (2) to threaded rods (A) on posts by using curved washers (B) and nuts (C), tighten nuts (C) securely with the open wrench (D).

Note: Please make sure the end of side rail with a cap rail must be placed on top when assemble 6/0 rails.

Step 2: Take out the support legs (5) from the rail box, attach support legs (5) to slats (4) by using bolts (G), lock washers (H) and flat washers (I). Secure bolts (G) with allen wrench (F).


Step 3: Attach slats (4) to side rails (2), use screws (E) to tighten both.

ASSEMBLY INSTRUCTION

ITEM: 5878-90551-80 5/0 Tufted Headboard
 5878-90567-80 6/0-6/6 Tufted Headboard
 5878-90552-80 5/0 Tufted Footboard
 5878-90568-80 6/0-6/6 Tufted Footboard
 5878-90553-80 5/0 Rails (C)
 5878-90569-80 6/6 Rails (C)
 5878-90563-80 6/0 Rails (C)

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

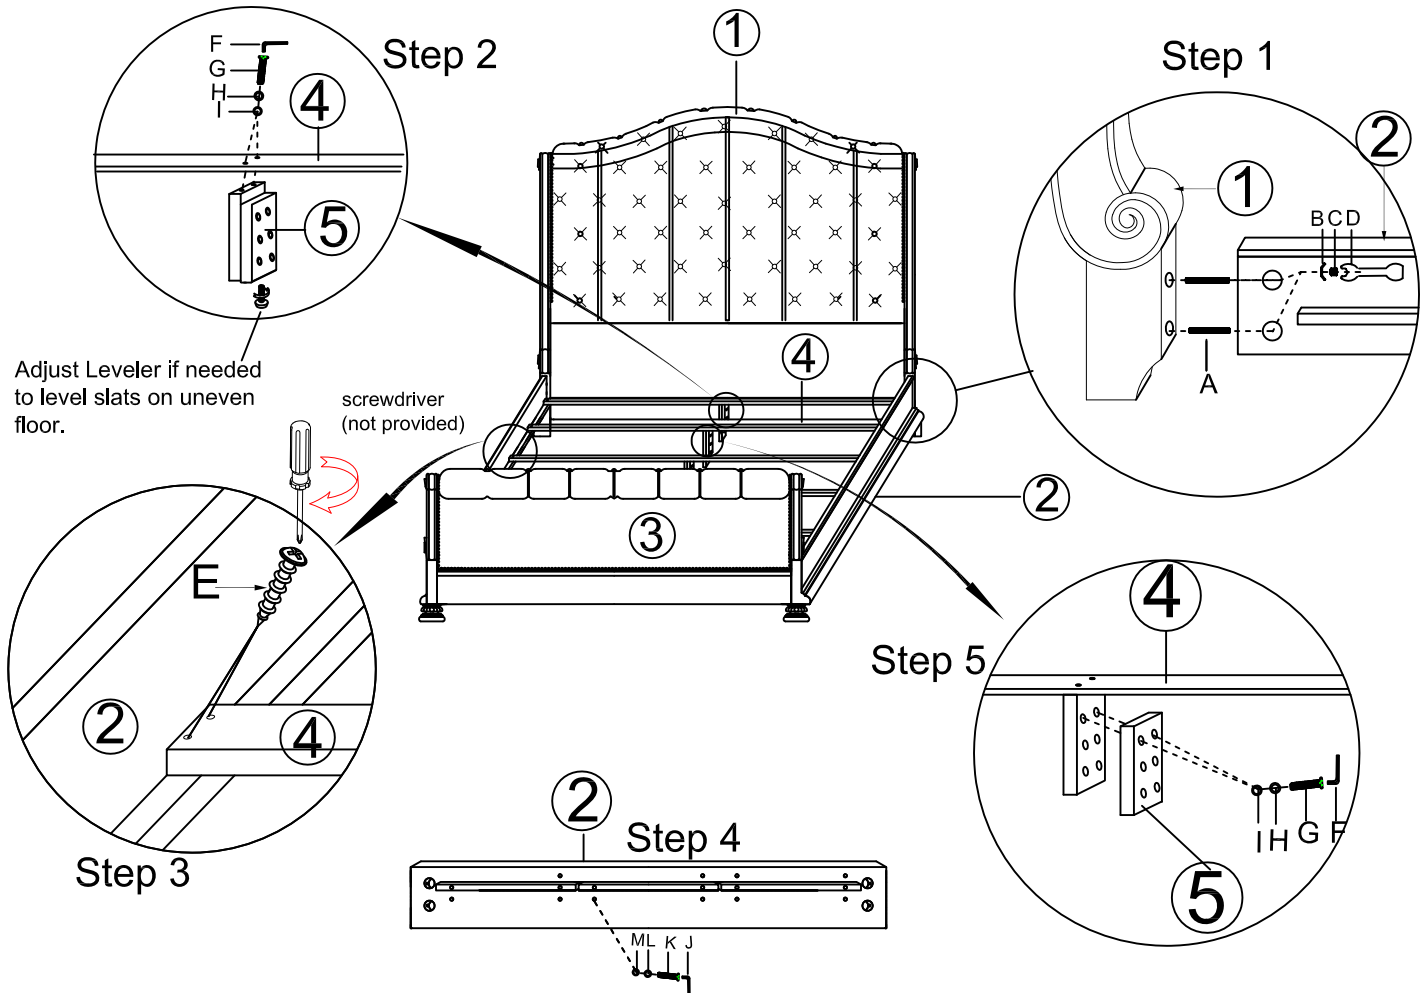

Note 1: You can change the height of slats (4) by adjusting the height of cleat on side rails (2) as shown in step 4.

Remove bolts (K), lock washers (L) and flat washers (M) from the cleat with allen wrench (J), adjust the cleat to a desired position, and then secure lock washers, flat washers, bolts by turning with allen wrench (J).

Note 2: You can adjust the height of support legs (5) as shown in step 5.

Unscrew bolts on support legs (5) with allen wrench (F). Adjust the height of support legs, align the holes on 2pcs of woods and tighten them together with bolts (G), lock washers (H) and flat washers (I) by turning with allen wrench (F).

ASSEMBLY INSTRUCTION

ITEM: 5878-90010-80 Five Drawer Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.



Hardware Pack

Part List


NO.	DRAWING	DESCRIPTION	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Anti - Tip Kit	1PC	1		Bun Foot	4PCS

Tipping Restraint


Anti-tip kit is included for use. We recommend installing for safety reason.

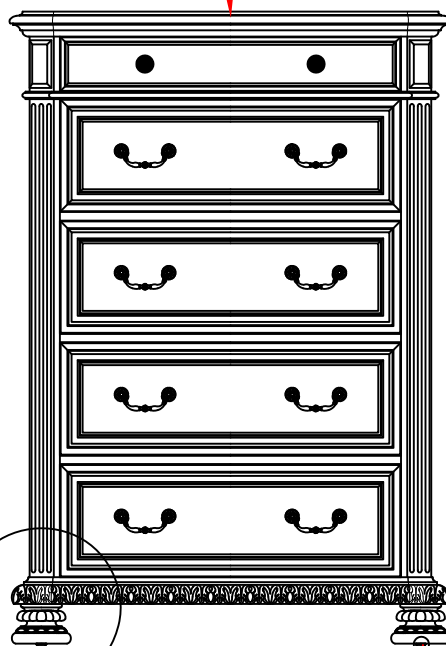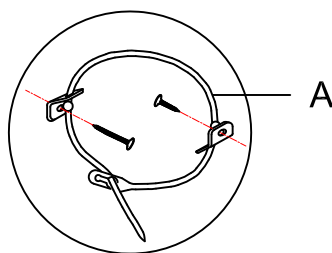

Step 1

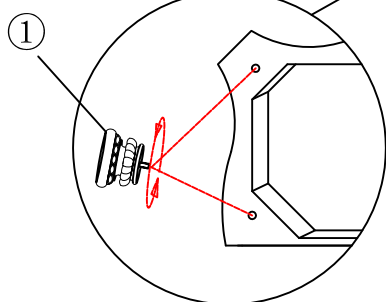

Step 2



Adjust Leveler if needed to level case on uneven floor.

ASSEMBLY INSTRUCTION

ITEM: 5878-90017-80 Bachelors Chest


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


Hardware Pack

Part List


NO.	DRAWING	DESCRIPTION	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Anti - Tip Kit	1PC	1		Bun Foot	4PCS

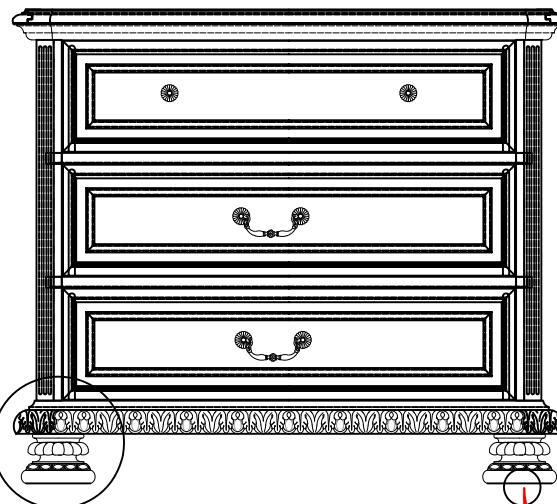


Step 2: Adjust Leveler if needed to level case on uneven floor.

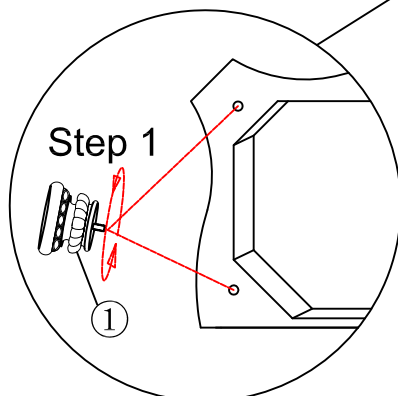

Tipping Restraint

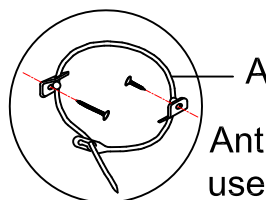

Anti-tip kit is included for use. We recommend installing for safety reason.

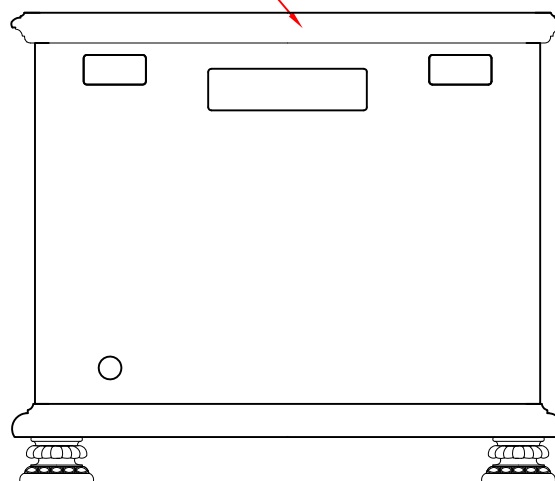

ASSEMBLY INSTRUCTION

ITEM: 5878-90002-80 Twelve Drawer Dresser
5878-90008-80 Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK




NO.	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Anti - Tip Kit		1PC
B		Screw	7/8"	18PCS
C		Hook	4*53mm	2PCS
D		Plastic Anchor	Ø 9*30mm	2PCS

PART LIST

NO.	DRAWING	DESCRIPTION	Q'TY
1		Bun Foot	6PCS
2		Center Support Leg	2PCS
3		Mending Plate	2PCS

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

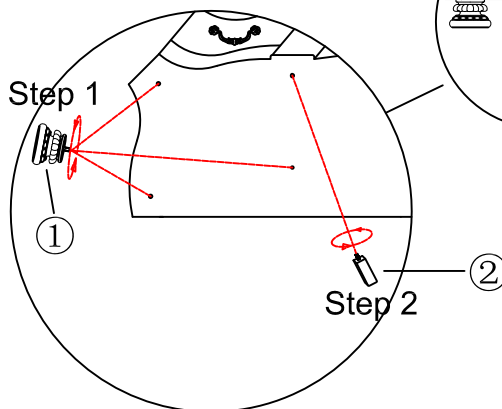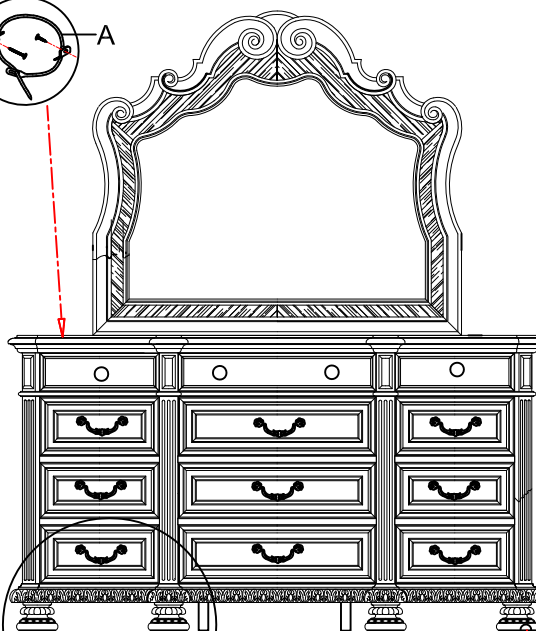

Step 3



Adjust Leveler if needed to level case on uneven floor.

ASSEMBLY INSTRUCTION


ITEM: 5878-90002-80 Twelve Drawer Dresser
5878-90008-80 Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

screwdriver
(not provided)

Step 4

When using mirror only,
hang the metal ring (E) onto
the hook (C)

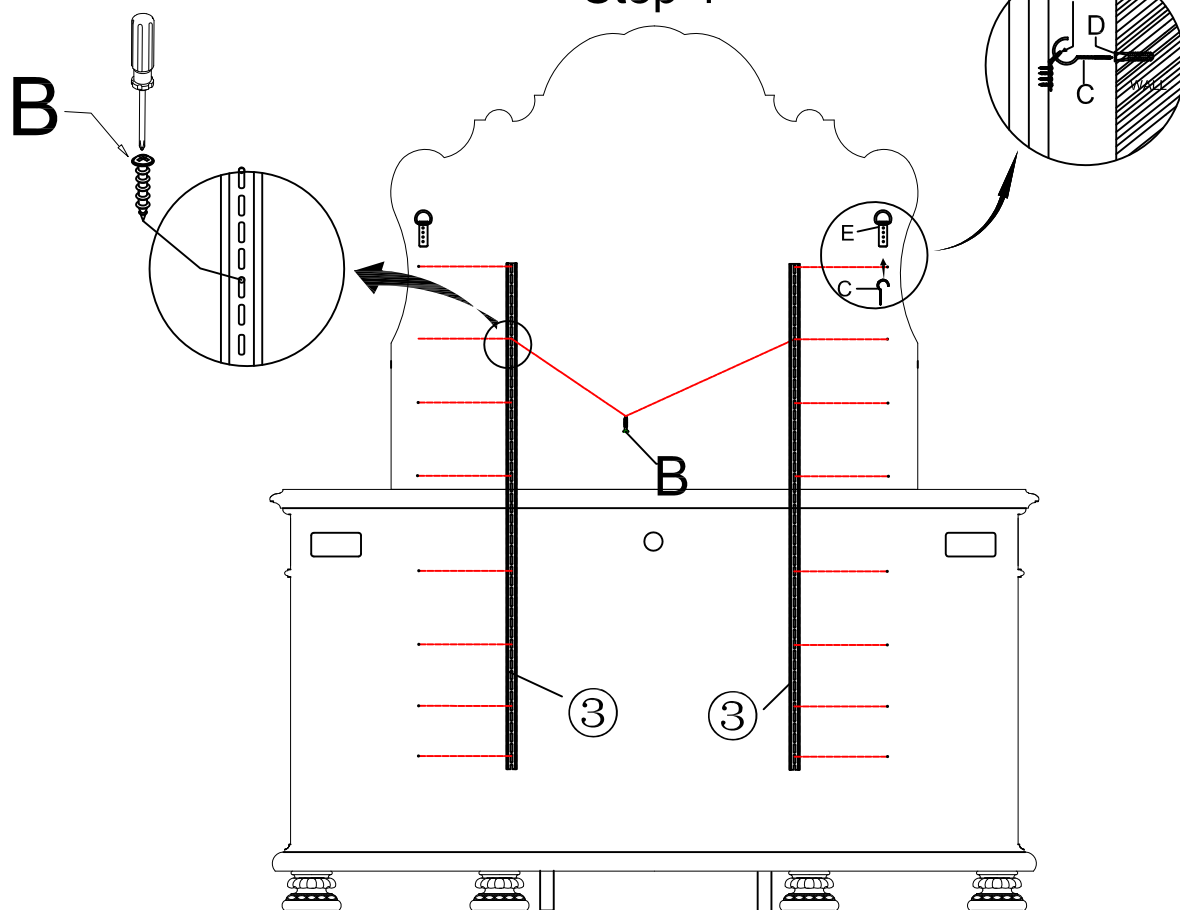

ASSEMBLY INSTRUCTION

ITEM: 5878-90002-80 Twelve Drawer Dresser
5878-90008-80 Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK




NO.	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Anti - Tip Kit		1PC
B		Screw	7/8"	18PCS
C		Hook	4*53mm	2PCS
D		Plastic Anchor	Ø 9*30mm	2PCS

PART LIST


NO.	DRAWING	DESCRIPTION	Q'TY
1		Bun Foot	6PCS
2		Center Support Leg	2PCS
3		Mending Plate	2PCS

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

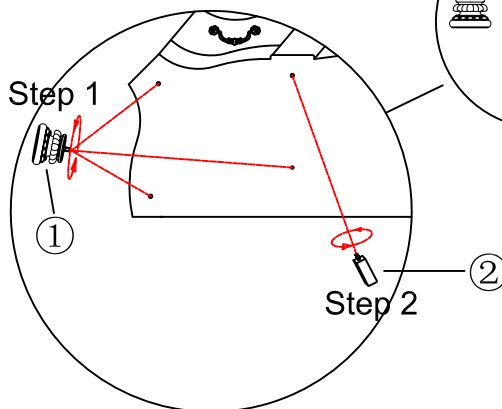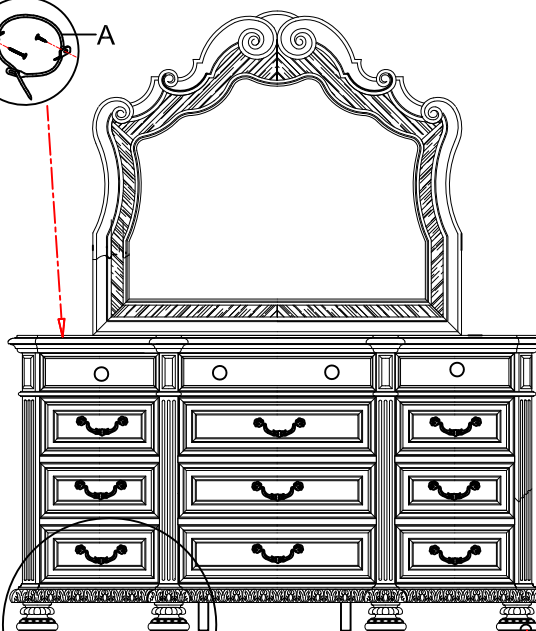

Step 3




Adjust Leveler if needed to level case on uneven floor.

ASSEMBLY INSTRUCTION

ITEM: 5878-90002-80 Twelve Drawer Dresser
5878-90008-80 Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

screwdriver
(not provided)

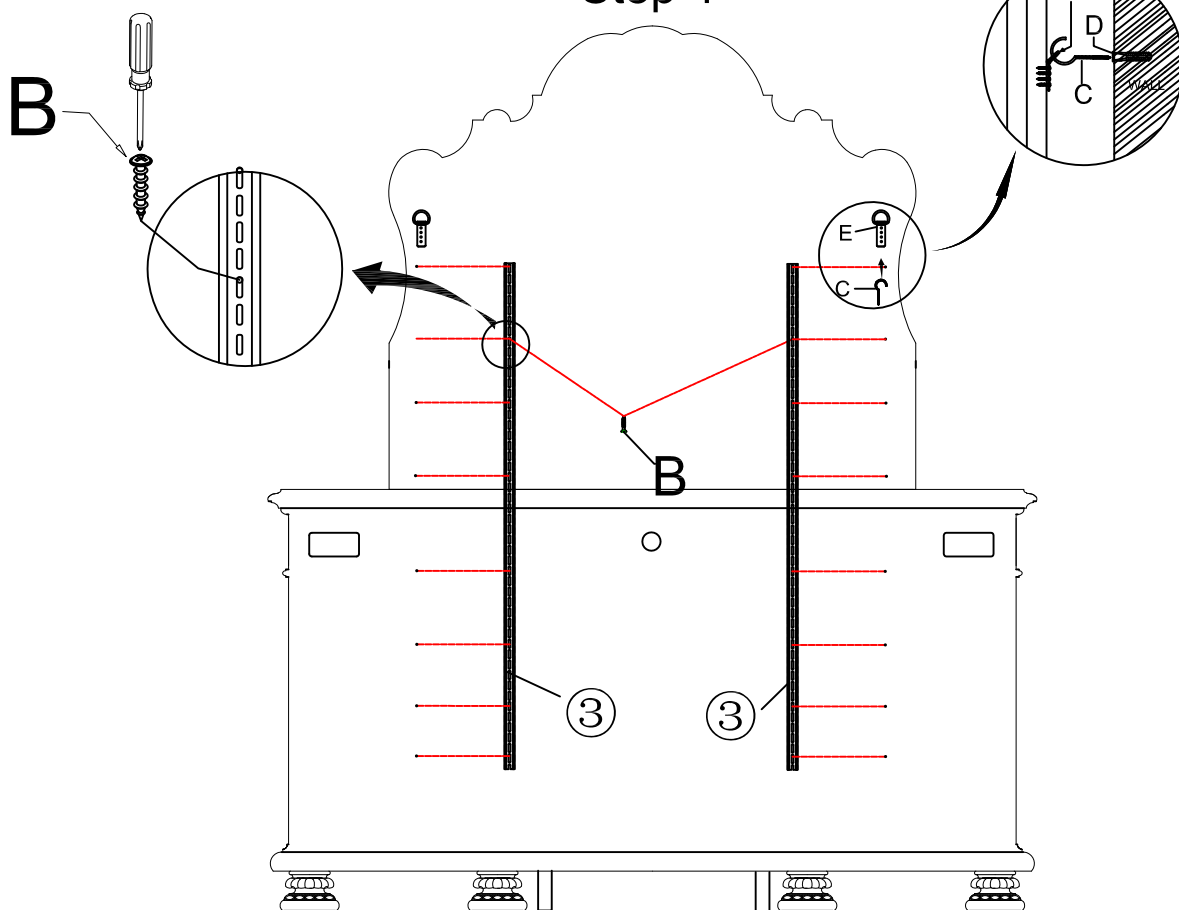

ASSEMBLY INSTRUCTION

ITEM: 5878-90016-80 Three Drawer Nightstand

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

Hardware Pack

Part List

NO.	DRAWING	DESCRIPTION	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Anti - Tip Kit	1PC	1		Bun Foot	4PCS

