

HOOKER[®]

FURNITURE

ASSEMBLY INSTRUCTION

ITEM#	5805-90851-96 & 5805-90851-99	5/0 Upholstered Headboard
	5805-90852-96 & 5805-90852-99	5/0 Upholstered Footboard
	5805-90867-96 & 5805-90867-99	6/0-6/6 Upholstered Headboard
	5805-90868-96 & 5805-90868-99	6/0-6/6 Upholstered Footboard
	5805-90853-96 & 5805-90853-99	5/0-6/6 Rail
	5805-90863-96 & 5805-90863-99	6/0 Rail

Caution: Please make sure you have all parts indicated below prior to assembly.
This bed is heavy and can best be assembled with the help of two or more people.

NO.	HARDWARE LIST		Q'TY
E		NUT	8
F		SPANNER WRENCH	1
G		CURVED WASHER	8
H		FULL THREADED BOLT	8
K		SCREW	20 (for 6/6&6/0 bed) 16 (for 5/0 bed)
R		4MM ALLEN WRENCH	1
Q		BOLT	10 (for 6/6&6/0 bed) 8 (for 5/0 bed)
V		LOCK WASHER	10 (for 6/6&6/0 bed) 8 (for 5/0 bed)
U		FLAT WASHER	10 (for 6/6&6/0 bed) 8 (for 5/0 bed)
M		5MM ALLEN WRENCH	1

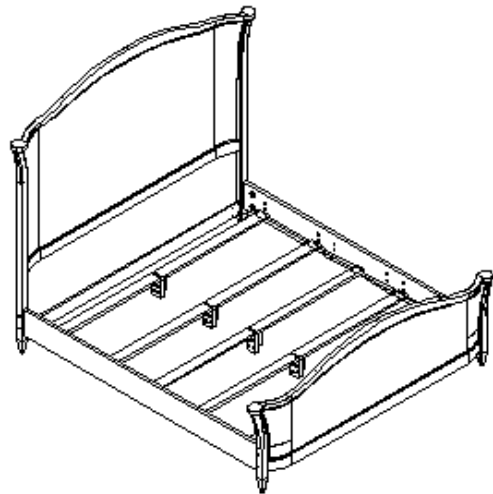


Diagram 2

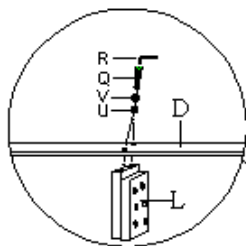


Diagram 1

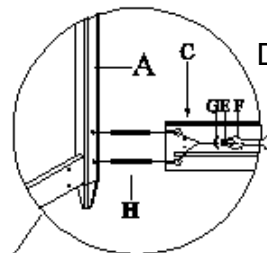


Diagram 3


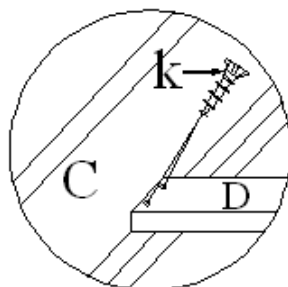


Diagram 5

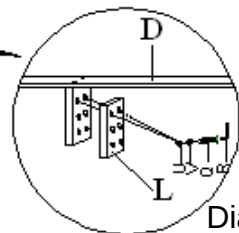

Please note the hardware bag to assemble side rails to HB&FB is in the box of side rails.

Assembly steps:

1. Insert 2 bolts (H) into holes of each side post on Headboard (A) and Footboard (B), attach the ends of side rails (C) to bolts (H) on posts by using 2 curved washers (G) and 2 nuts (E), tighten nuts (E) securely with spanner wrench (F). (See diagram 1)

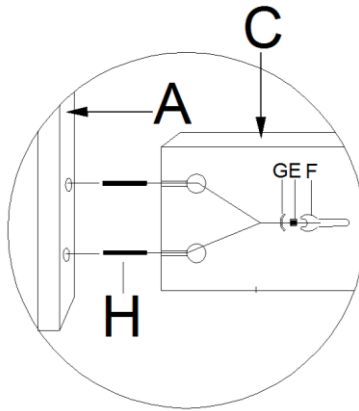


Diagram 1

2. Take out center supports (L) from the rail box, attach center supports (L) to slats (D) by using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using allen wrench (R). (See diagram 2)

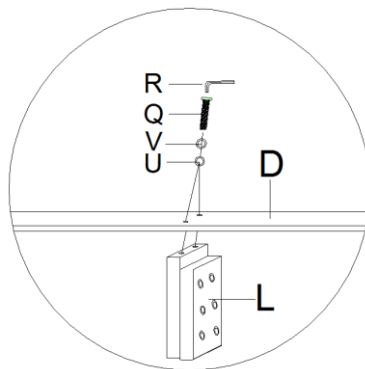


Diagram 2

3. Attach slats (D) to side rails (C), and tighten screws (K) on both ends of slats (D) to side rails (C). (See diagram 3)

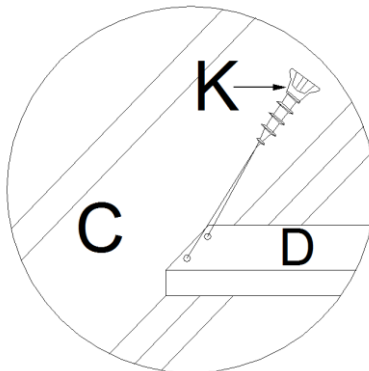


Diagram 3

Note: You can change the height of slats by adjusting the height of cleats on side rail as shown in diagram 4. Remove bolts (I), lock washers (O) and flat washers (J) from the cleats by turning the bolts (I) with allen wrench (M) in anti-clockwise direction. Adjust the cleats to a desired position, and then secure lock washers, flat washers, bolts in clockwise direction by turning with allen wrench.

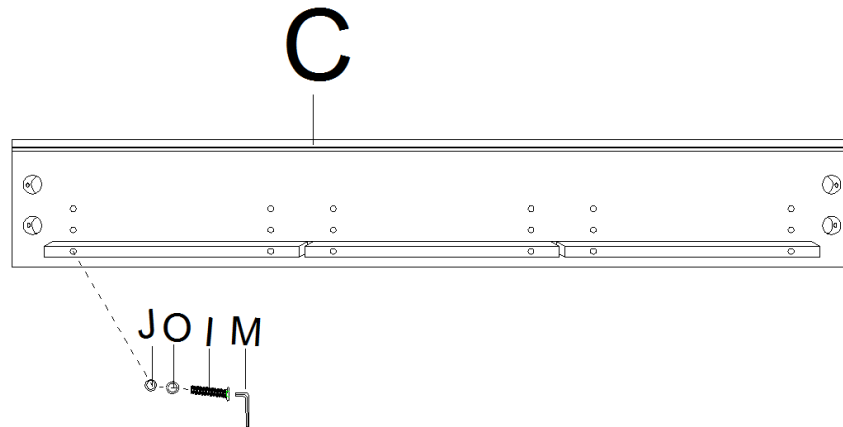


Diagram 4

You can adjust the height of center supports (L) as shown in diagram 5 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).
2. Adjust the height of center supports, align holes on 2pcs of woods and tighten them together with 2 bolts (Q), 2 lock washers (V) and 2 flat washer (U) by turning with wrench (R) in clockwise direction.

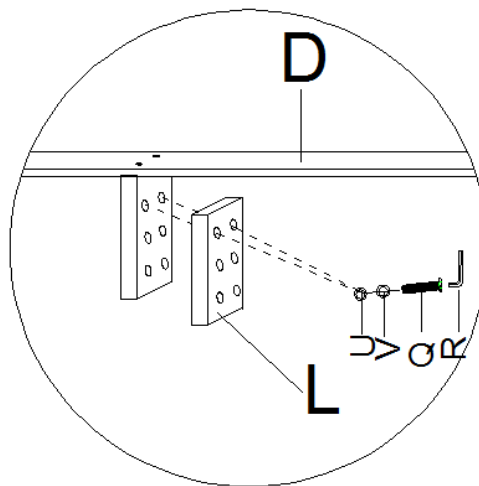


Diagram 5

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.

HOOKER[®]

— FURNITURE —

ASSEMBLY INSTRUCTION

Item#: 5805-90019-99 Bench

**** Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more people**

NO	HARDWARE LIST		Q' TY
A		5/16" * 35mm ALLEN BOLT	12
B		5/16" LOCK WASHER	12
C		5/16" FLAT WASHER	12
D		ALLEN WRENCH	1
E		FULL THREADED ROD	1
F		ALLEN BOLT	2
G		SPANNER	2

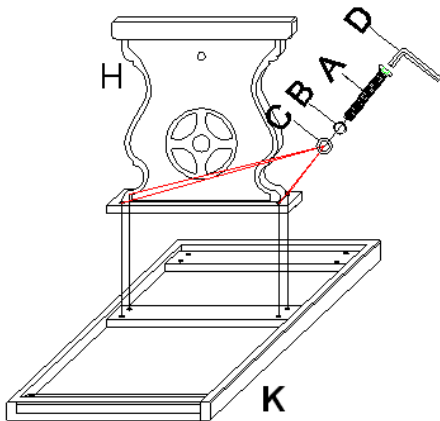
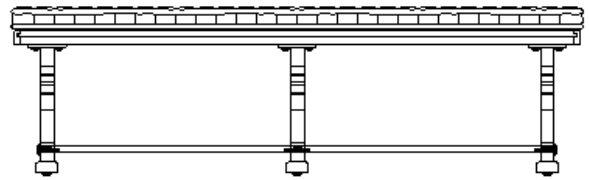


Diagram 1

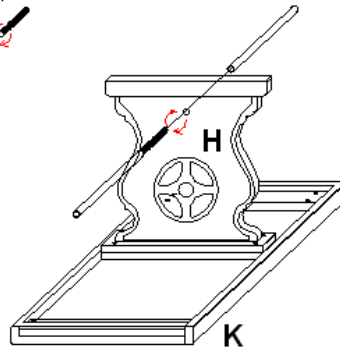


Diagram 2

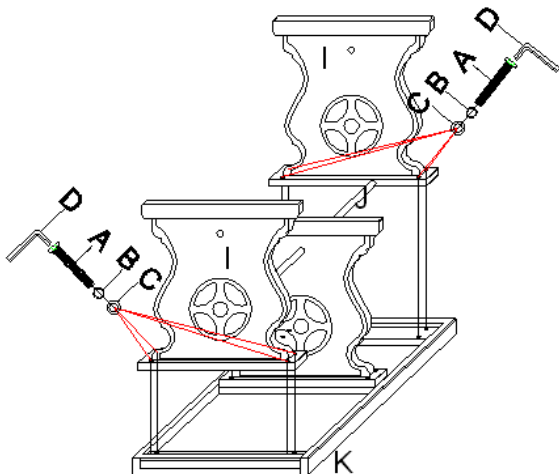
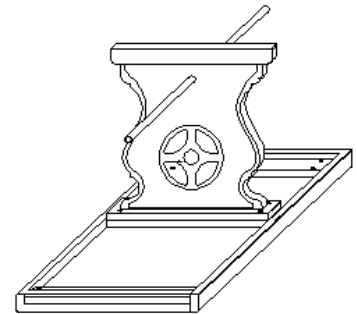


Diagram 3

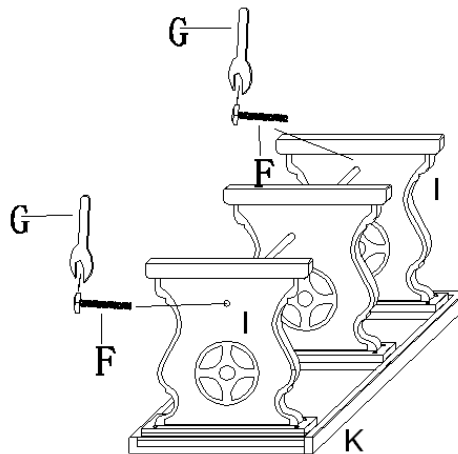


Diagram 4

Assembly Steps:

1. Put seat frame (K) upside down on a soft surface to prevent it from being scratched. Attach center leg frame(H) to seat frame (K) by using bolts (A), lock washers (B) and flat washers (C), tighten with allen wrench (D) in clockwise direction. Do not over tighten (See Diagram 1).
2. Screw full threaded rod (E) into metal stretcher (J) in clockwise direction. Then align one end of full threaded rod (E) to the pre-drilled hole on center leg frame and through it. Screw full threaded rod into another metal stretcher in clockwise direction (See Diagram 2).
3. Attach two side leg frames (I) to seat frame (K), align holes on two side leg frames to the pre-drilled holes on seat frame (No need to tighten them). Make sure all three leg frames are on the same level, place two ends of metal stretcher (J) into two side leg frames, align two ends of metal stretcher to the pre-drilled holes on two side leg frames (See Diagram 3).

Then tighten two side leg frames by using bolts (A), lock washers (B) and flat washers (C), tighten with allen wrench (D) in clockwise direction (See Diagram 3).

4. Insert 2 allen bolts (F) into two ends of metal stretcher, screw it with spanner at one end of metal stretcher, meanwhile lock it at another end of metal stretcher. (Need two people to do this step on both ends at the same time).
5. Tighten all bolts.
6. Turn bench upright.

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.



ASSEMBLY INSTRUCTION

ITEM: 5805-90011-99 Five-Drawer Bureau


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

NO.	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Anti - Tip Kit		1PC


Anti-tip kit is included for use. We recommend installing for safety reason

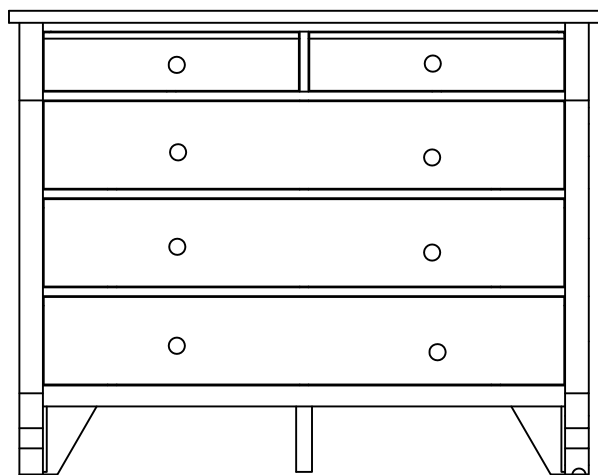

Adjust Leveler if needed to level case on uneven floor.



Step 1

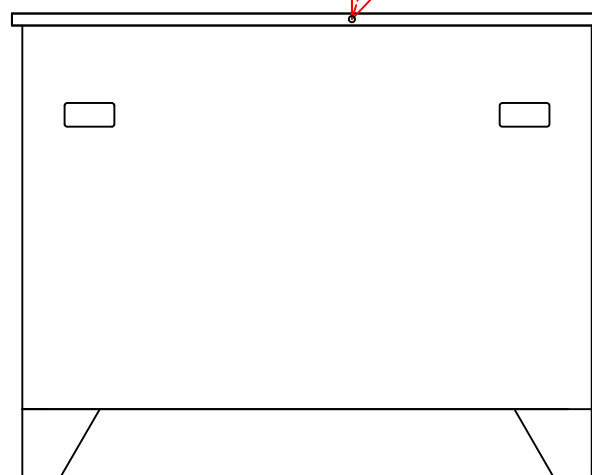


ASSEMBLY INSTRUCTION


ITEM: 5805-90010-95 Six-Drawer Chest-Speckled Gray
5805-90010-99 Six-Drawer Chest-Black

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

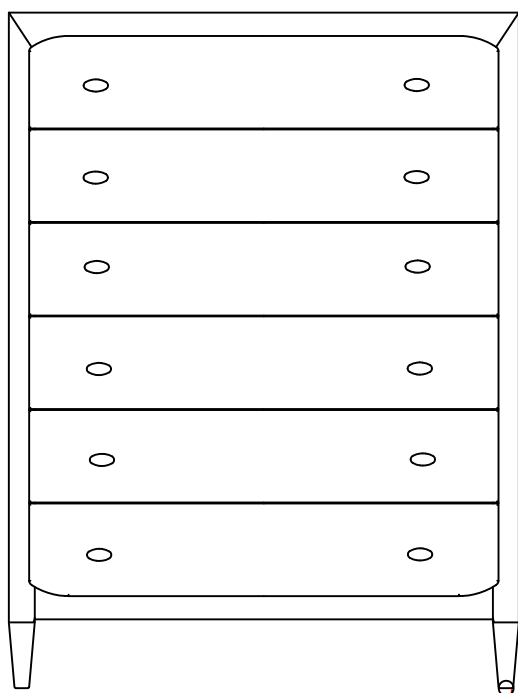

Adjust Leveler if needed to level case on uneven floor.

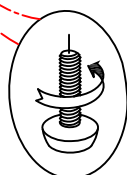

Step 1

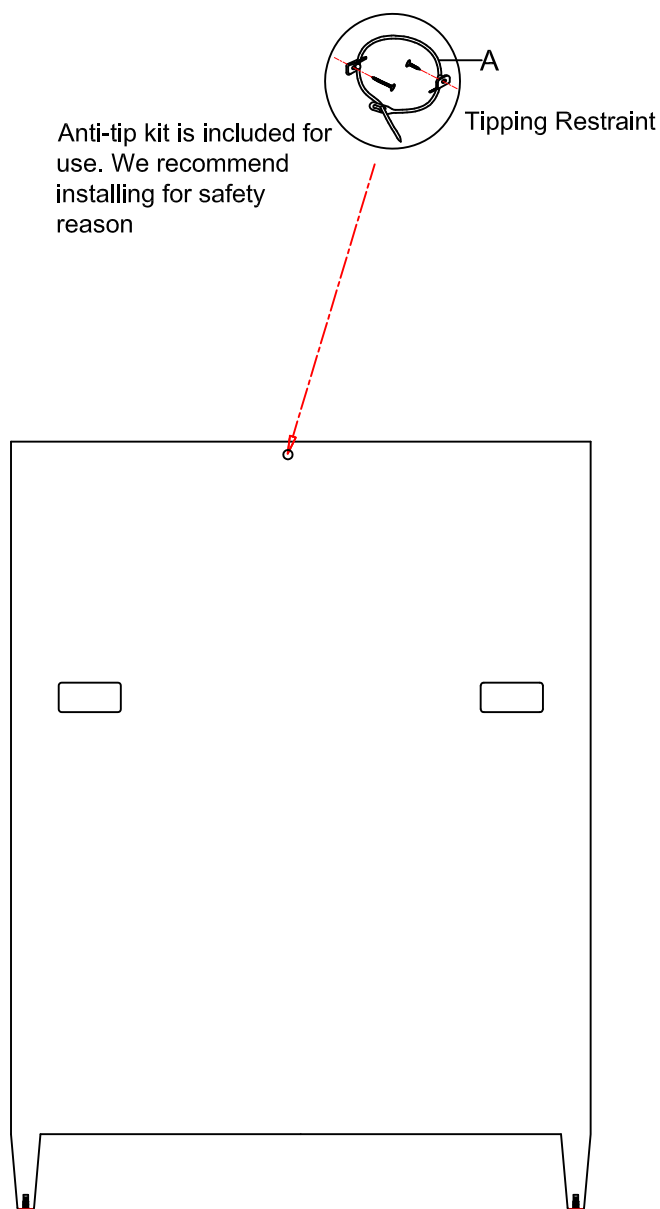


Anti-tip kit is included for use. We recommend installing for safety reason

ITEM: 5805-90017-87 Bachelors Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

NO.	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Anti - Tip Kit		1PC

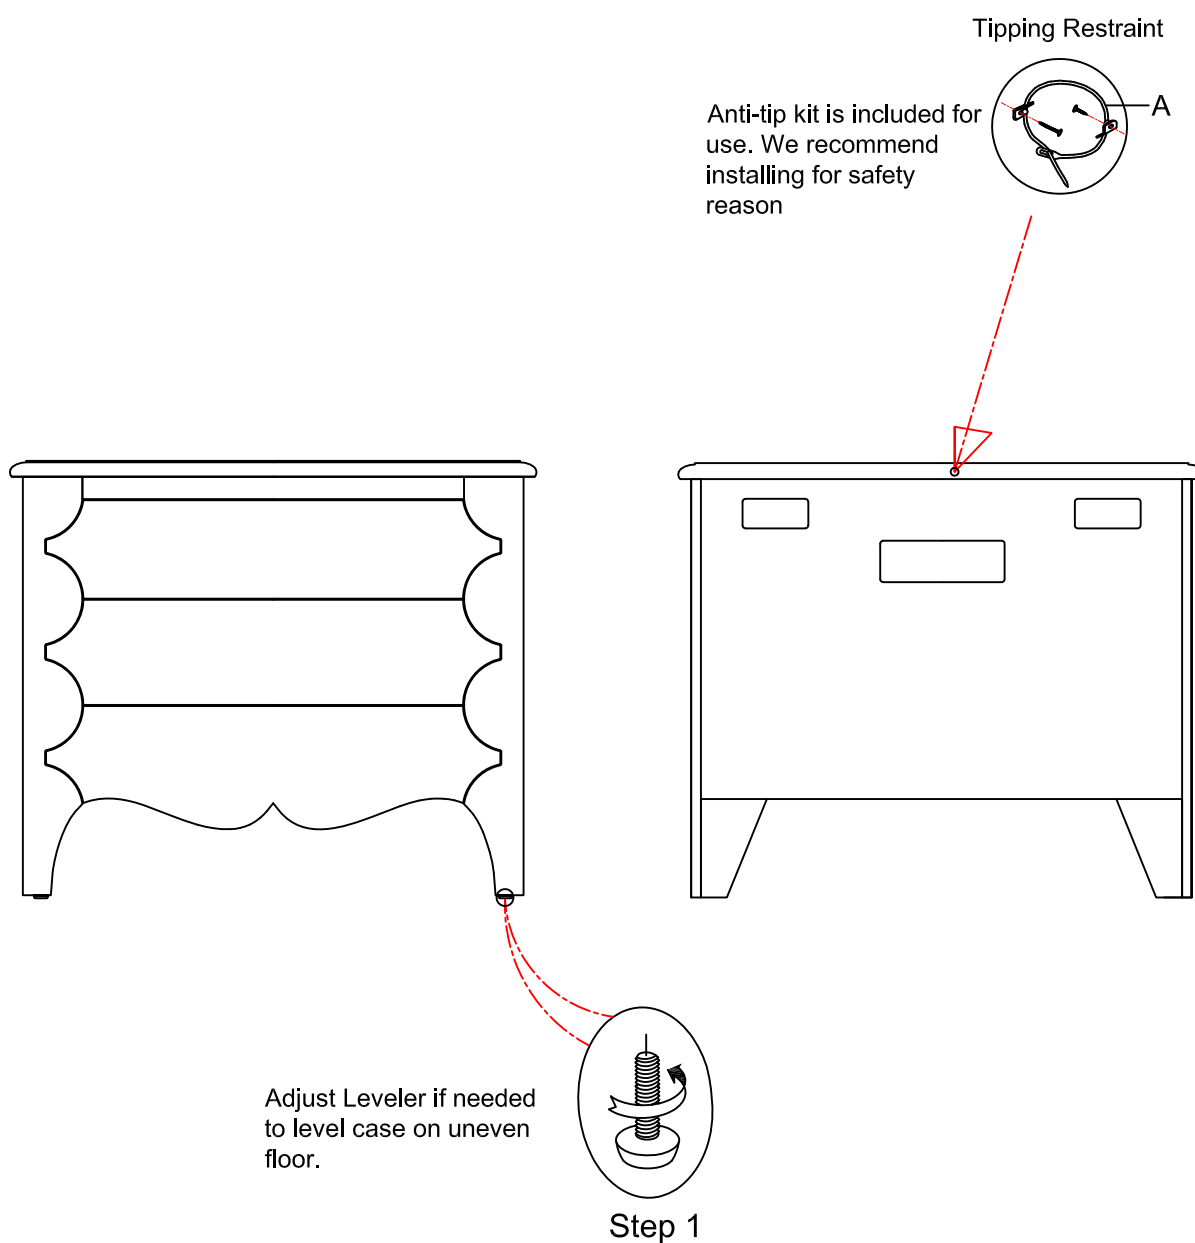

HOOKER[®]

— FURNITURE —

ASSEMBLY INSTRUCTION

ITEM# 5805-90004-00 Accent Mirror
 5805-90002-95 Six-Drawer Dresser- Speckled Gray
 5805-90002-99 - Six-Drawer Dresser- Black

**** Please make sure you have all parts indicated below prior to assembly.
 This unit is heavy and can best be assembled with the help of two or more people**

NO		Hardware List	Q'ty
E		Mending Plate	2
F		Screw	18

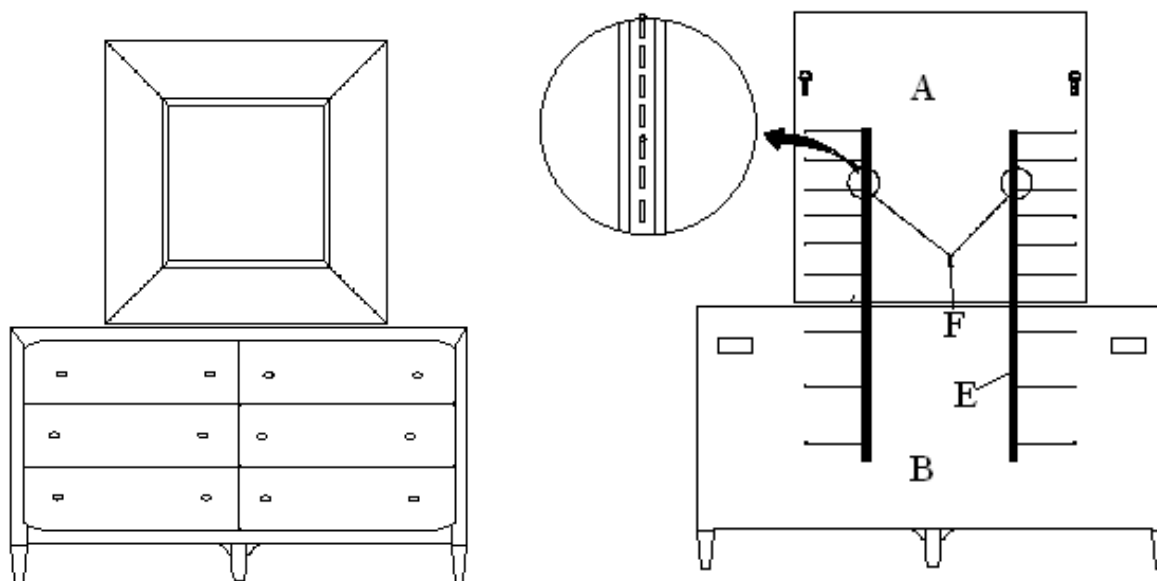


Diagram 1

Assembly steps :

1. Place mirror(A) on top of dresser (B). Be sure to position the mirror in the middle of top. The back bottom edge of the mirror and the back edge of the top should be flushed.
2. Attach a mending plate (E) at back of mirror and back of dresser. Align holes on mending plate to the pre-drilled holes at the back of dresser and tighten 3 pcs of screws (F). Tighten another 6 screws at random location through mending plate to mirror frame with care. (See Diagram 1)
3. Repeat step 2 for another mending plate .

Caution: Do not over tighten.

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION




ITEM: 5805-90016-95 Two-Drawer Nightstand-Speckled Gray
5805-90016-99 Two-Drawer Nightstand-Black

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.


NO.	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Anti - Tip Kit		1PC

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

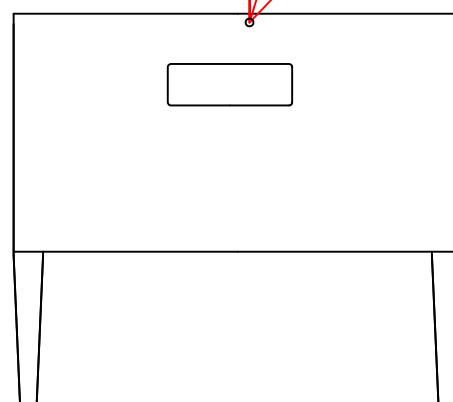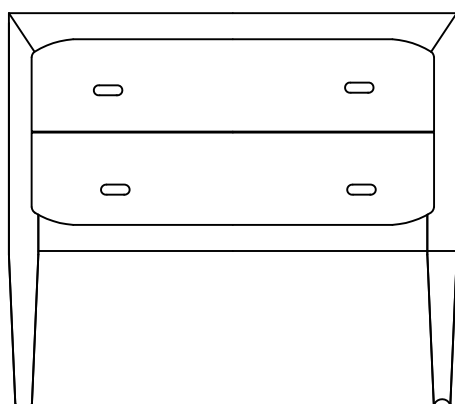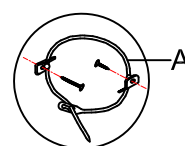

Adjust Leveler if needed to level case on uneven floor.

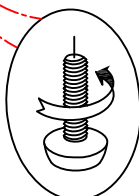

Step 1

ASSEMBLY INSTRUCTION

ITEM: 5805-90115-99 Telephone Table

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

