





ASSEMBLY INSTRUCTION

ITEM: # 5381-80114 CHAIRSIDE CHEST

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

PARTS LIST		
1	LEGS	4 PCS.

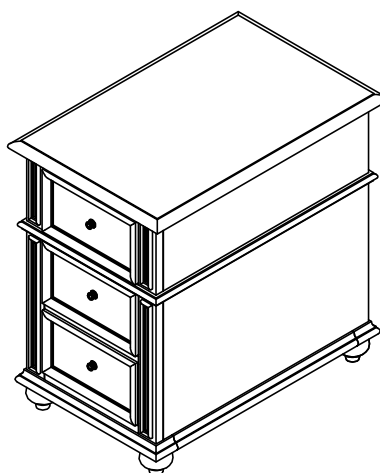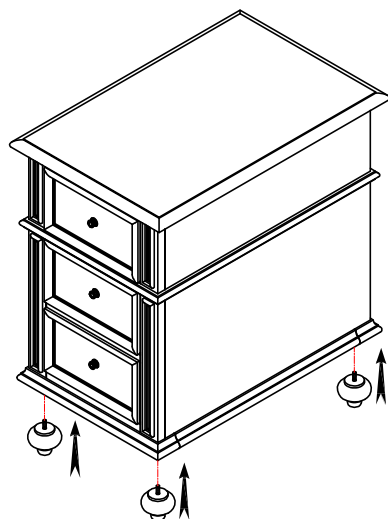


ASSEMBLY INSTRUCTION


ITEM: # 5381-90008 Landscape Mirror
5381-90002 Ten Drawer Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

NO.	DRAWING	Q'TY	DESCRIPTION
A		1 Set	TIPPING RESTRAINT
B		8 Pcs	Φ1/4"*1-1/4" BOLT
C		8 Pcs	Φ1/4" LOCK WASHER
D		8 Pcs	Φ1/4"*19MM FLAT WASHER
E		1 Pc	4mm ALLEN WRENCH

NO.	DRAWING	Q'TY	DESCRIPTION
1		4	LEGS
2		2	CENTER SUPPORT LEG
3		2	MIRROR SUPPORT

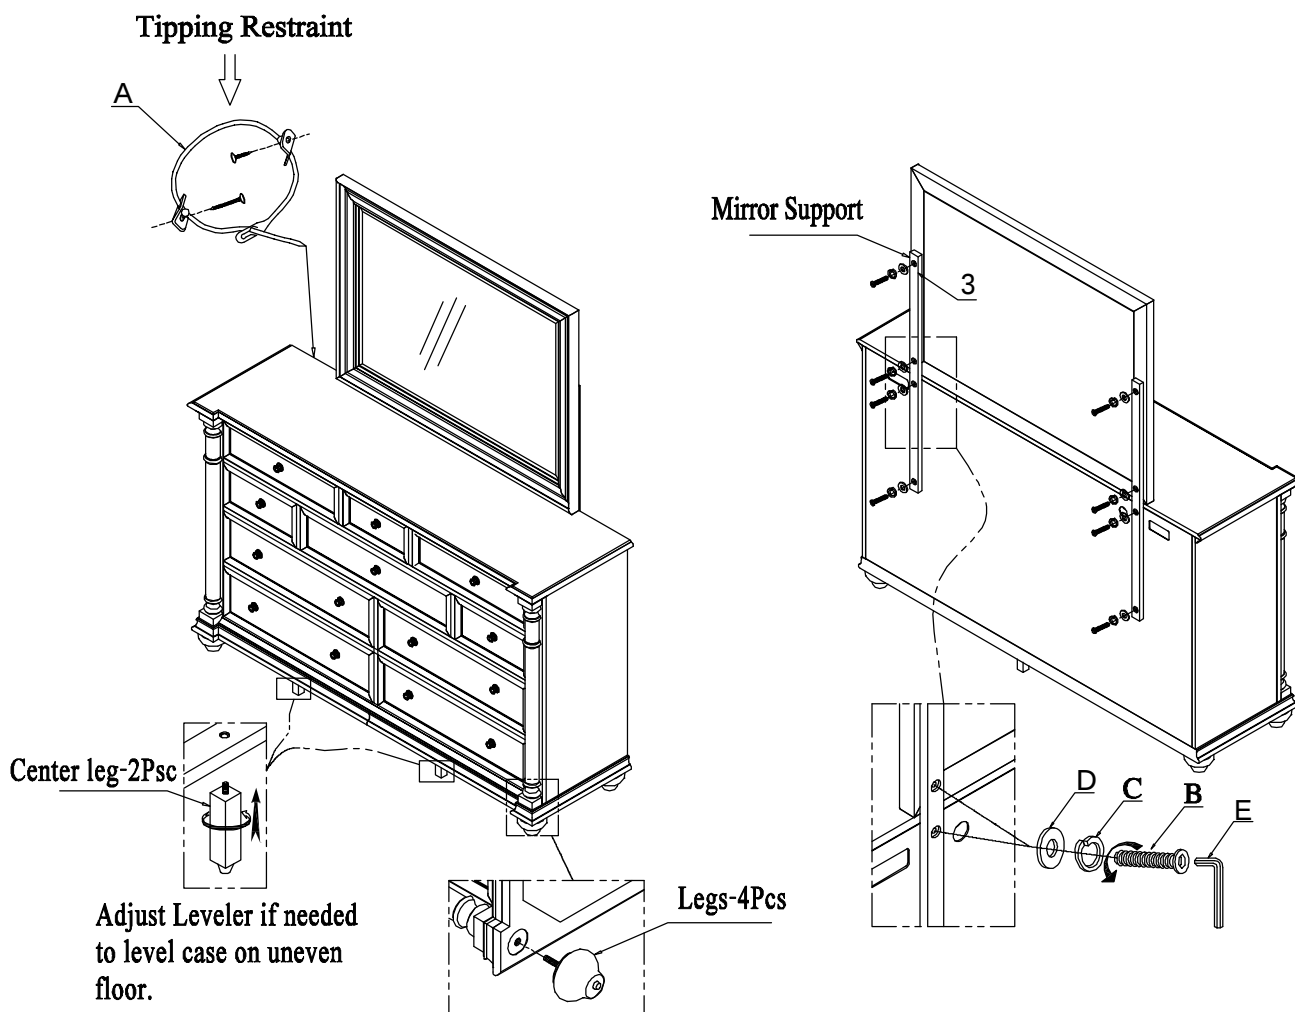


ASSEMBLY INSTRUCTION


ITEM: # 5381-90008 Landscape Mirror
5381-90002 Ten Drawer Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

NO.	DRAWING	Q'TY	DESCRIPTION
A		1 Set	TIPPING RESTRAINT
B		8 Pcs	Φ1/4"*1-1/4" BOLT
C		8 Pcs	Φ1/4" LOCK WASHER
D		8 Pcs	Φ1/4"*19MM FLAT WASHER
E		1 Pc	4mm ALLEN WRENCH

NO.	DRAWING	Q'TY	DESCRIPTION
1		4	LEGS
2		2	CENTER SUPPORT LEG
3		2	MIRROR SUPPORT

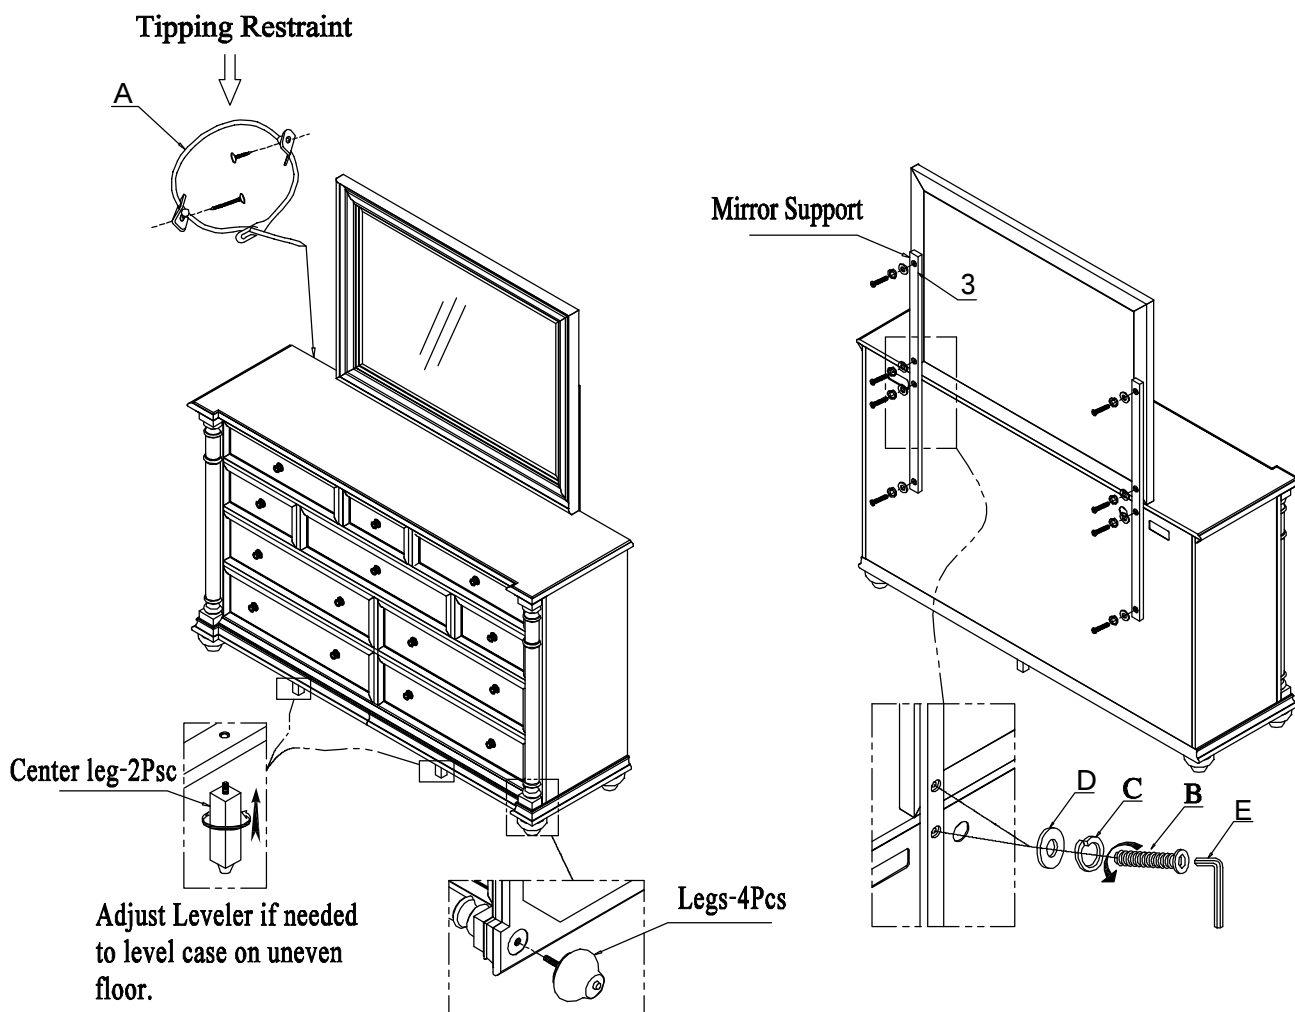

ASSEMBLY INSTRUCTION


ITEM: # 5381-90010 FIVE-DRAWER CHEST

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST

NO.	DRAWING	DESCRIPTION	Q' TY
A		TIPPING RESTRAINT	1 SET

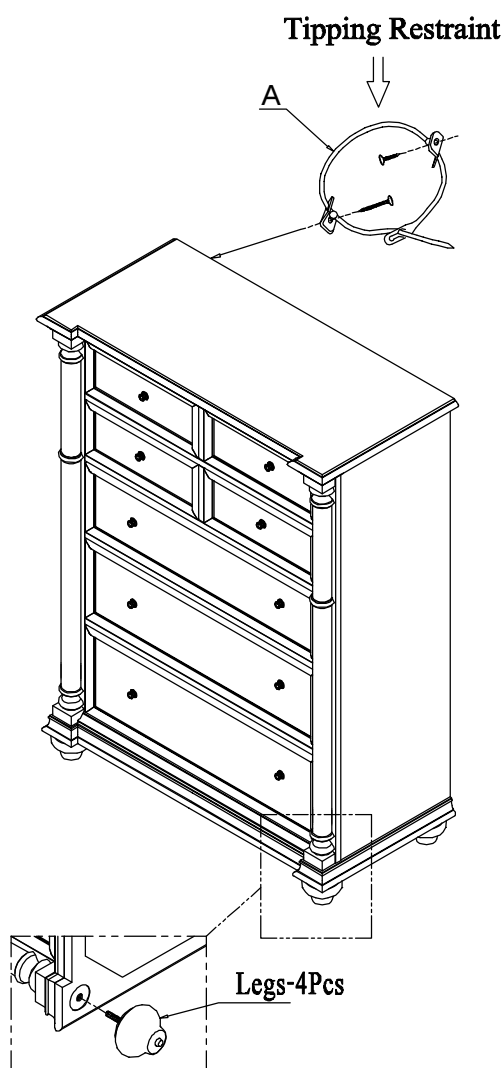

Adjust Leveler if needed
to level case on uneven
floor.

ASSEMBLY INSTRUCTION


ITEM: # 5381-90009 Accent Mirror


5381-90011 Seven-Drawer Bureau

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

NO.	DRAWING	Q'TY	DESCRIPTION
A		1 Set	TIPPING RESTRAINT
B		8 Pcs	Φ1/4"*1-1/4" BOLT
C		8 Pcs	Φ1/4" LOCK WASHER
D		8 Pcs	Φ1/4"*19MM FLAT WASHER
E		1 Pc	4mm ALLEN WRENCH

NO.	DRAWING	Q'TY	DESCRIPTION
1		4	LEGS
2		1	CENTER SUPPORT LEG
3		1	MIRROR SUPPORT

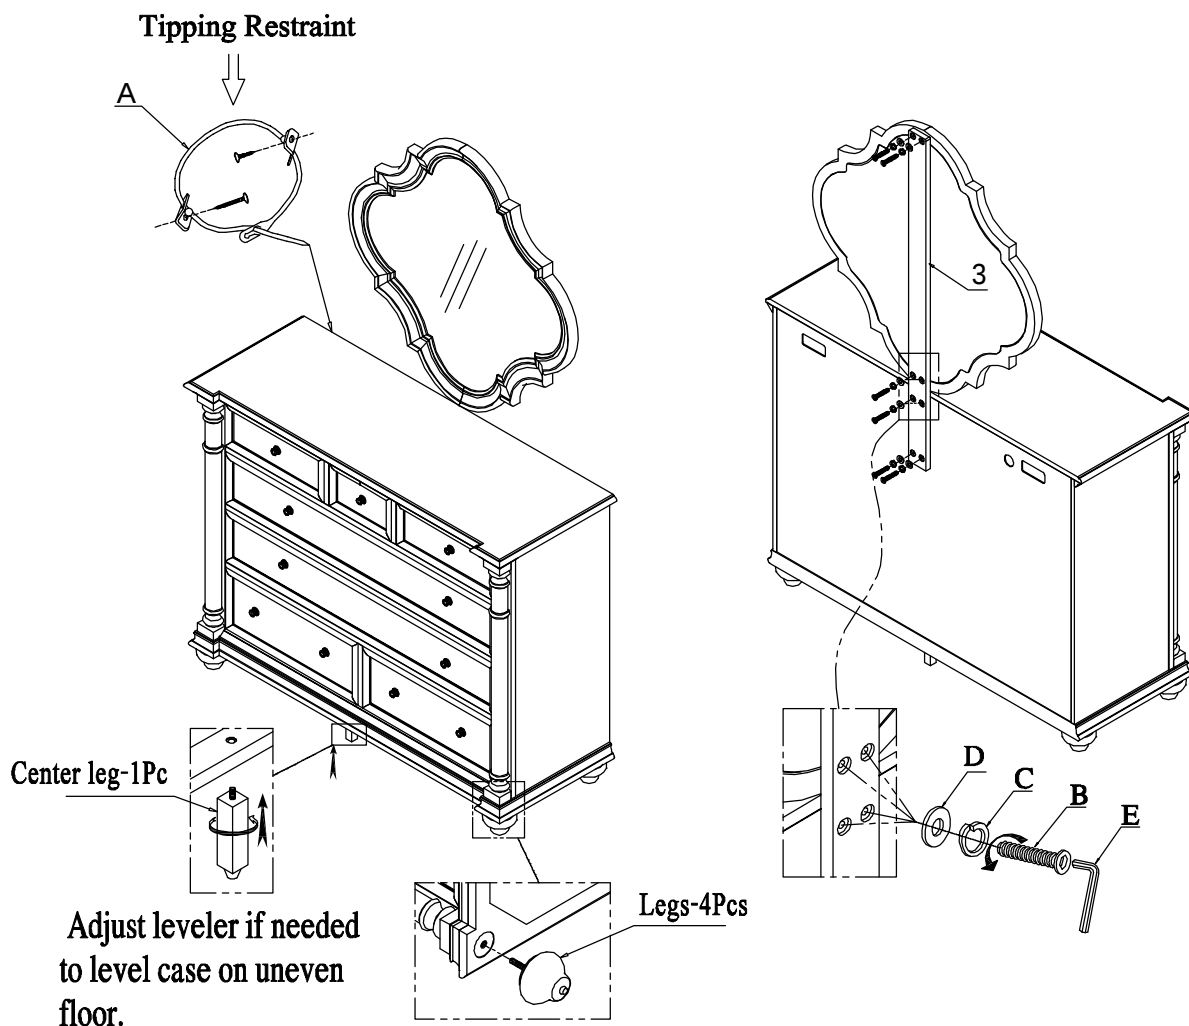

ASSEMBLY INSTRUCTION


ITEM: # 5381-90016 Three-Drawer Nightstand

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST

NO.	DRAWING	DESCRIPTION	Q' TY
A		TIPPING RESTRAINT	1 SET

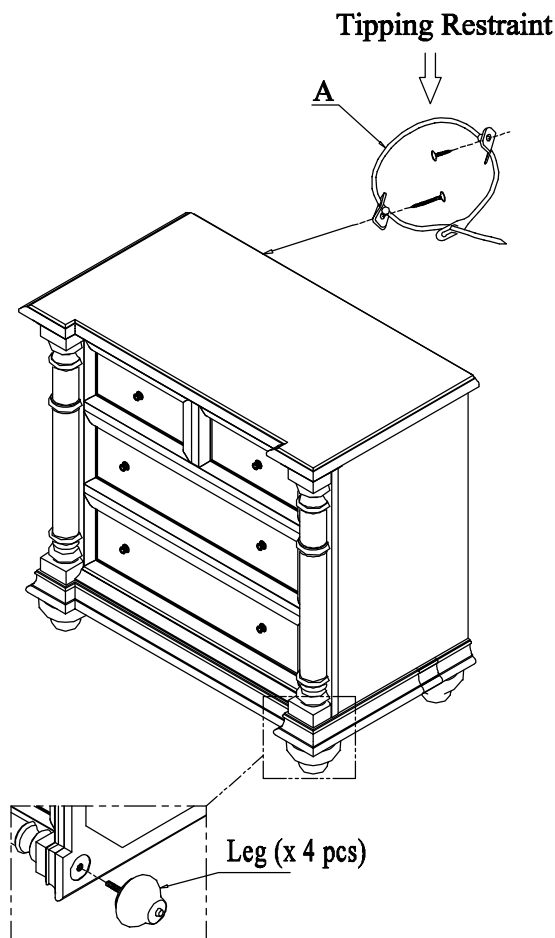

Adjust Leveler if needed
to level case on uneven
floor.

ASSEMBLY INSTRUCTION


ITEM: # 5381-90017 Three-Drawer Bachelors Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST

NO.	DRAWING	DESCRIPTION	Q' TY
A		TIPPING RESTRAINT	1 SET

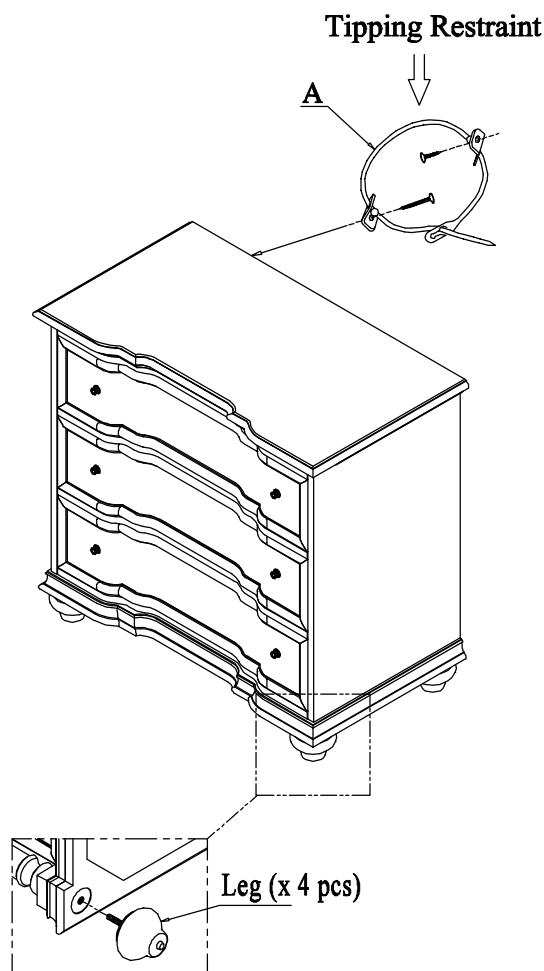

Adjust Leveler if needed
to level case on uneven
floor.

ASSEMBLY INSTRUCTION

ITEM: #5381 - 90651 Poster Bed Headboard 5/0

5381 - 90652 Poster Bed Footboard 5/0

5381 - 90653 Side Rail 5/0-6/6


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST OF HEADBOARD - 91251				
NO.	DESCRIPTION	SIDE	DRAWING	QTY
A	HANGER BOLT	Φ5/16" *3-1/2"		4PCS
B	BOLT	Φ5/16" *1-3/4"		2PCS
C	CURVED WASHER	Φ5/16"		4PCS
D	FLAT WASHER	Φ5/16"* 16MM		6PCS
E	LOCK WASHER	Φ5/16"		6PCS
F	NUT	Φ5/16"		4PCS
G	OPEN WRENCH	Φ5/16"		1PCS


HARDWARE LIST OF BED RAILS - 91263				
NO.	DESCRIPTION	SIDE	DRAWING	QTY
H	HANGER BOLT	Φ5/16"*3-1/4"		8 PCS
I	NUT	Φ5/16"		8 PCS
J	LOCK WASHER	Φ5/16"		8 PCS
K	FLAT WASHER	Φ5/16"*16MM		8 PC
M	CURVED WASHER	Φ5/16"		8 PCS
N	OPEN WRENCH	Φ5/16"		1PC

HARDWARE LIST OF FOOTBOARD - 91252				
NO.	DESCRIPTION	SIDE	DRAWING	QTY
L	SCREW	#8*1"		8 PCS

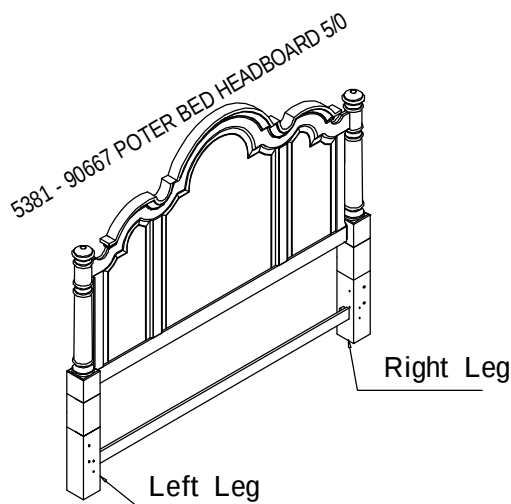

STEP 1: Attach legs to headboard using bolts(A), lock washer(E) , flat washer(D), and attach bottom rail to the legs using bolt (B) as shown in step 1. Using an open wrench (G) to tighten all the bolts.

STEP 1

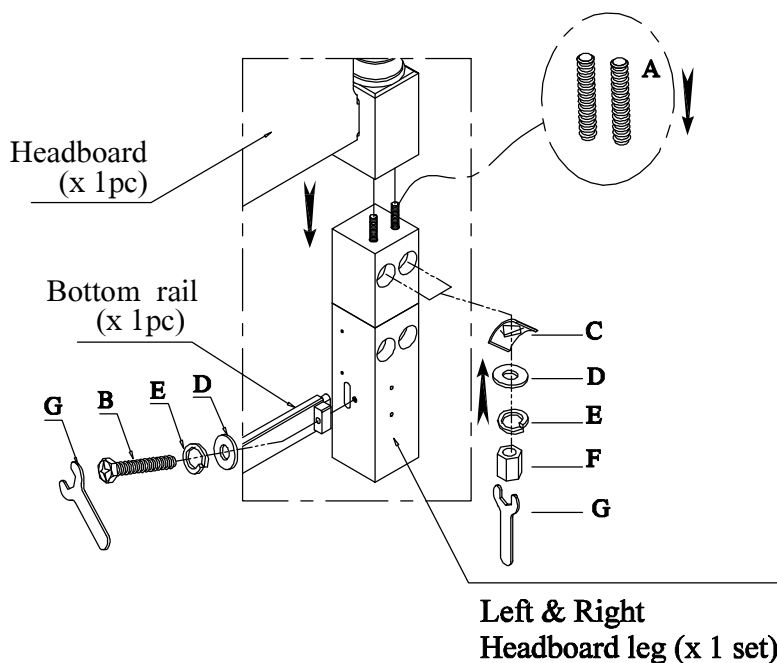

ASSEMBLY INSTRUCTION


ITEM: #5381 - 90651 Poster Bed Headboard 5/0

5381 - 90652 Poster Bed Footboard 5/0

5381 - 90653 Side Rail 5/0-6/6

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

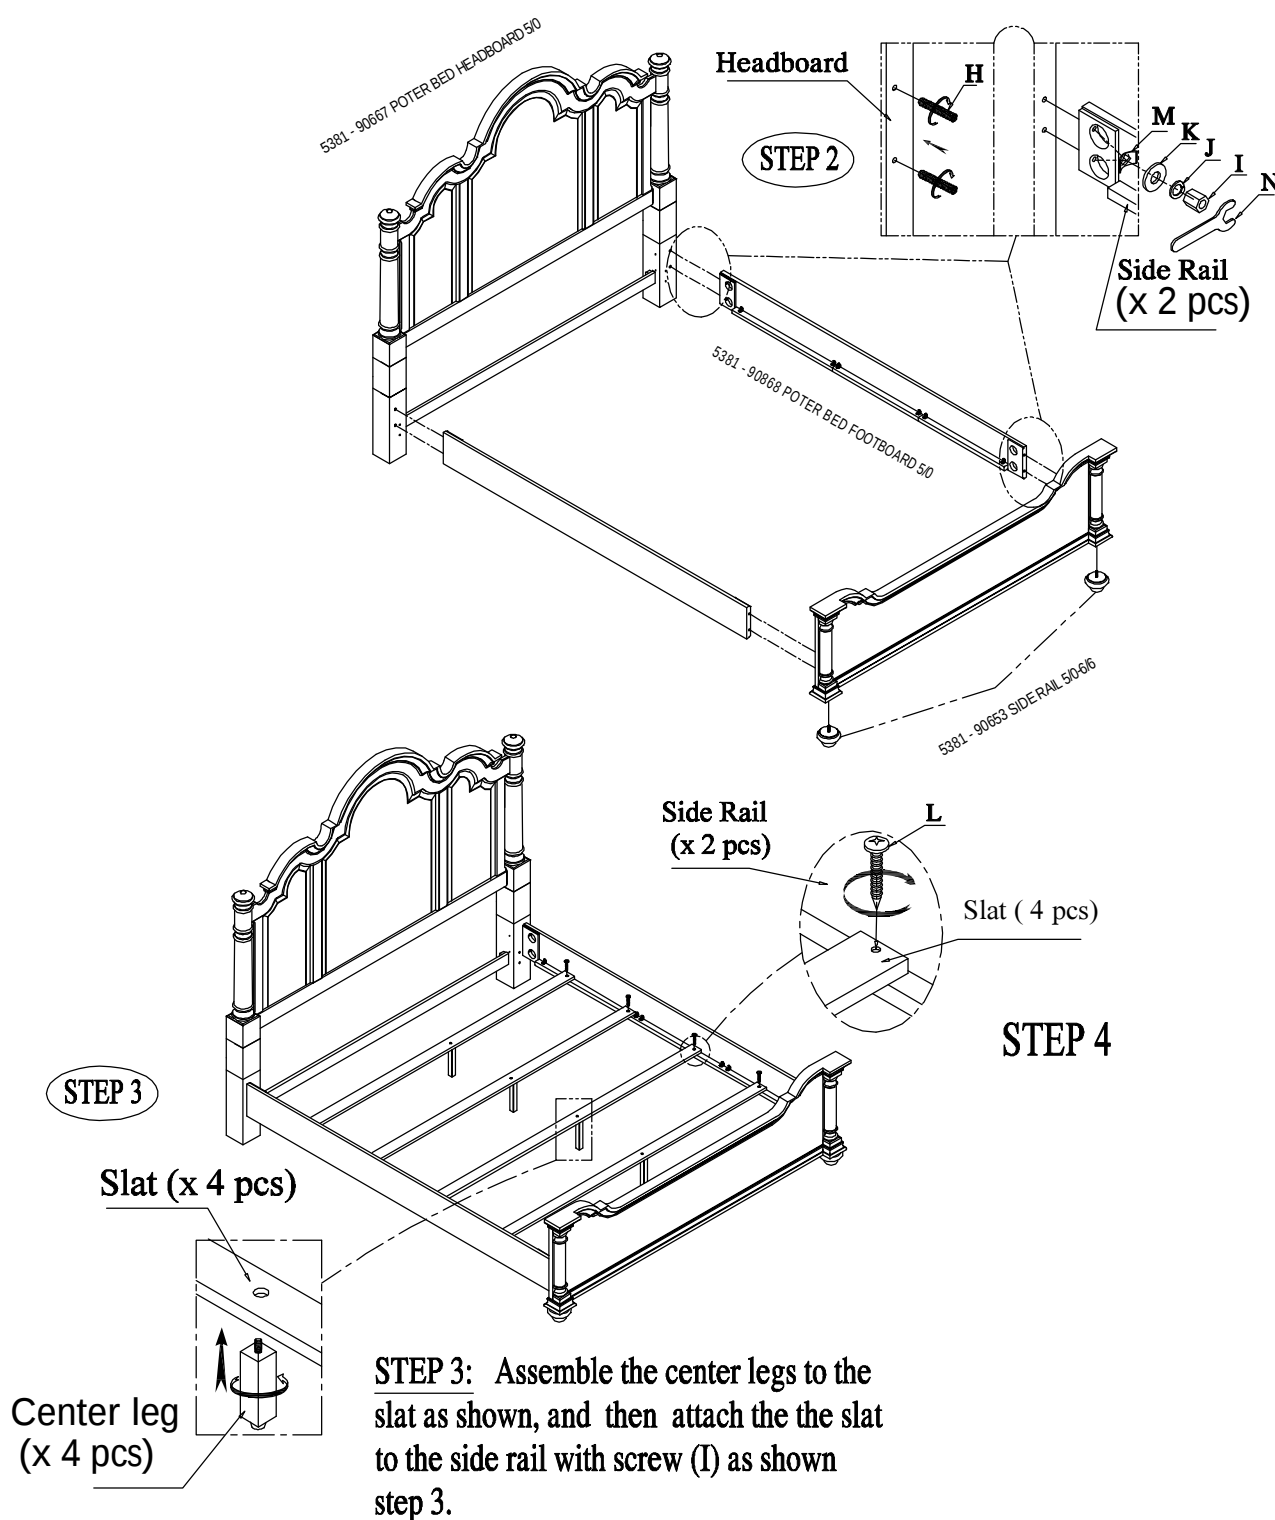

ASSEMBLY INSTRUCTION

ITEM: #5381 - 90667 Poster Bed Headboard 6/6-6/0
5381 - 90668 Poster Bed Footboard 6/6-6/0
5381 - 90663 Bed Side Rail 6/0
5381 - 90653 Side Rail 5/0-6/6


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST OF HEADBOARD - 90667				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
A				
B	BOLT	Φ5/16" *1-3/4"		2PCS
C				
D	FLAT WASHER	Φ5/16"* 16MM		
E				
F				
G				

HARDWARE LIST OF BED RAILS - 90663/90653				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
H	HANGER BOLT	Φ5/16"*3-1/4"		8 PCS
I	NUT	Φ5/16"		8 PCS
J	LOCK WASHER	Φ5/16"		8 PCS
K	FLAT WASHER	Φ5/16"*16MM		8 PC
M	CURVED WASHER	Φ5/16"		8 PCS
N	OPEN WRENCH	Φ5/16"		1PC

HARDWARE LIST OF FOOTBOARD - 90668				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
L	SCREW	#8*1"		10 PCS

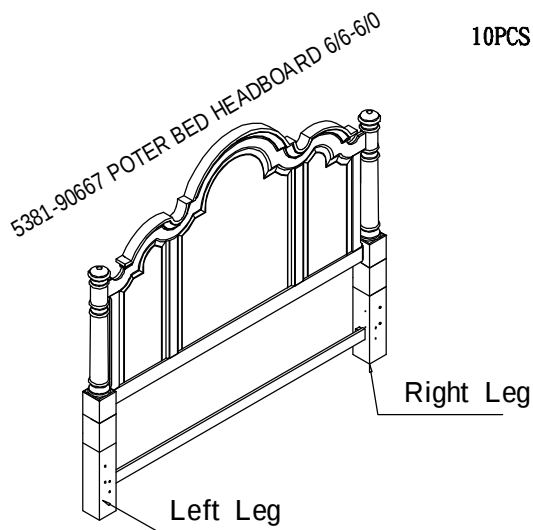

STEP 1: Attach legs to headboard using bolts(A), lock washer(E) , flat washer(D), and attach bottom rail to the legs using bolt (B) as shown in step 1. Using an open wrench (G) to tighten all the bolts.

STEP 1

ASSEMBLY INSTRUCTION

ITEM: #5381 - 90667 Poster Bed Headboard 6/6-6/0
5381 - 90668 Poster Bed Footboard 6/6-6/0
5381 - 90663 Bed Side Rail 6/0
5381 - 90653 Side Rail 5/0-6/6


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST OF HEADBOARD - 90667				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
A				
B	BOLT	Φ5/16" *1-3/4"		2PCS
C				
D	FLAT WASHER	Φ5/16"* 16MM		
E				
F				
G				

HARDWARE LIST OF BED RAILS - 90663/90653				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
H	HANGER BOLT	Φ5/16"*3-1/4"		8 PCS
I	NUT	Φ5/16"		8 PCS
J	LOCK WASHER	Φ5/16"		8 PCS
K	FLAT WASHER	Φ5/16"*16MM		8 PC
M	CURVED WASHER	Φ5/16"		8 PCS
N	OPEN WRENCH	Φ5/16"		1PC

HARDWARE LIST OF FOOTBOARD - 90668				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
L	SCREW	#8*1"		10 PCS

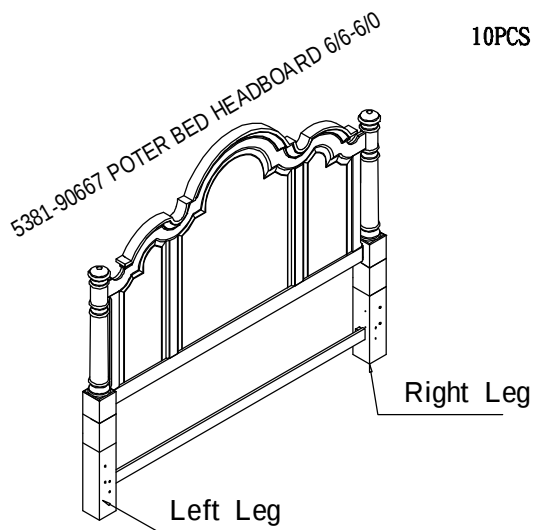

STEP 1: Attach legs to headboard using bolts(A), lock washer(E) , flat washer(D), and attach bottom rail to the legs using bolt (B) as shown in step 1. Using an open wrench (G) to tighten all the bolts.

STEP 1

ASSEMBLY INSTRUCTION

ITEM: #5381 - 90851 Upholstered Bed Headboard 5/0
5381 - 90852 Upholstered Bed Footboard 5/0
5381 - 90853 Upholstered Bed Side Rail 5/0-6/6


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

HARDWARE LIST OF HEADBOARD - 90851				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
A	BOLT	Φ5/16" *1-3/4"		8PCS
B	LOCK WASHER	Φ5/16"		8PCS
C	FLAT WASHER	Φ5/16"* 19MM		8PCS
D	OPEN WRENCH	Φ5/16"		1PC


HARDWARE LIST OF BED RAILS - 90853				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
E	HANGER BOLT	Φ5/16"*3-1/2"		8 PCS
F	NUT	Φ5/16"		8 PCS
G	LOCK WASHER	Φ5/16"		8 PCS
H	FLAT WASHER	Φ5/16"*16MM		8 PC
I	CURVED WASHER	Φ5/16"		8 PCS
D	OPEN WRENCH	Φ5/16"		1PC

HARDWARE LIST OF FOOTBOARD - 90852				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
J	SCREW	#8*1"		8 PCS

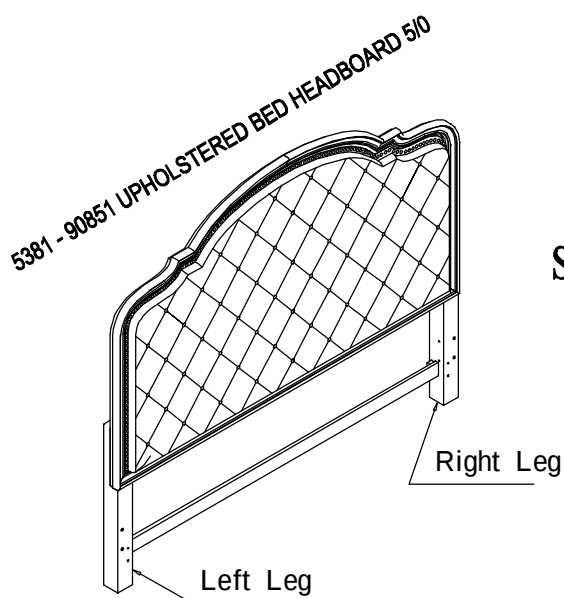

STEP 1: Attach legs to headboard using bolts(A), lock washer(B), flat washer(C), and attach bottom rail to the legs using bolt (A) as shown in step 1. Using an open wrench (D) to tighten all the bolts.

STEP 1

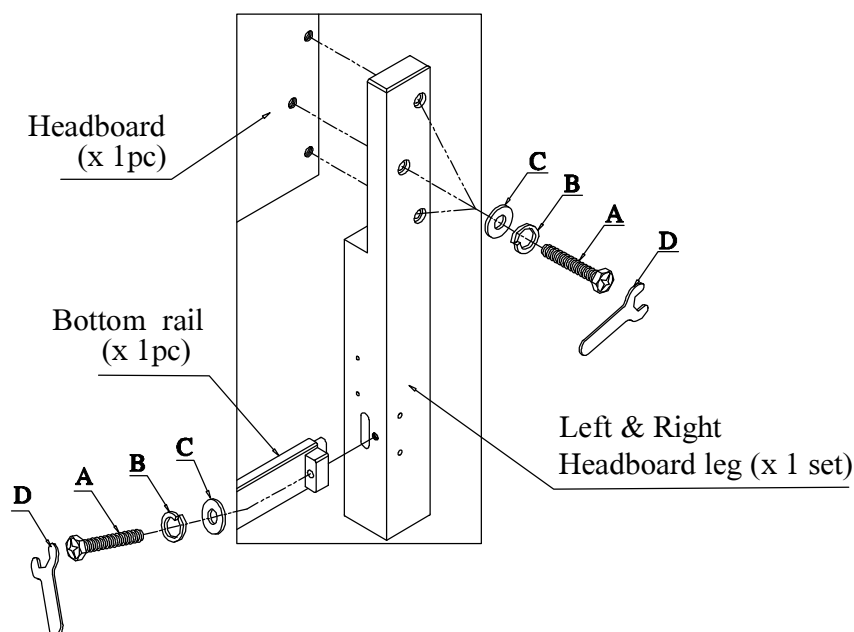


ASSEMBLY INSTRUCTION

ITEM: #5381 - 90851 Upholstered Bed Headboard 5/0
5381 - 90852 Upholstered Bed Footboard 5/0
5381 - 90853 Upholstered Bed Side Rail 5/0-6/6


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process:

STEP 2

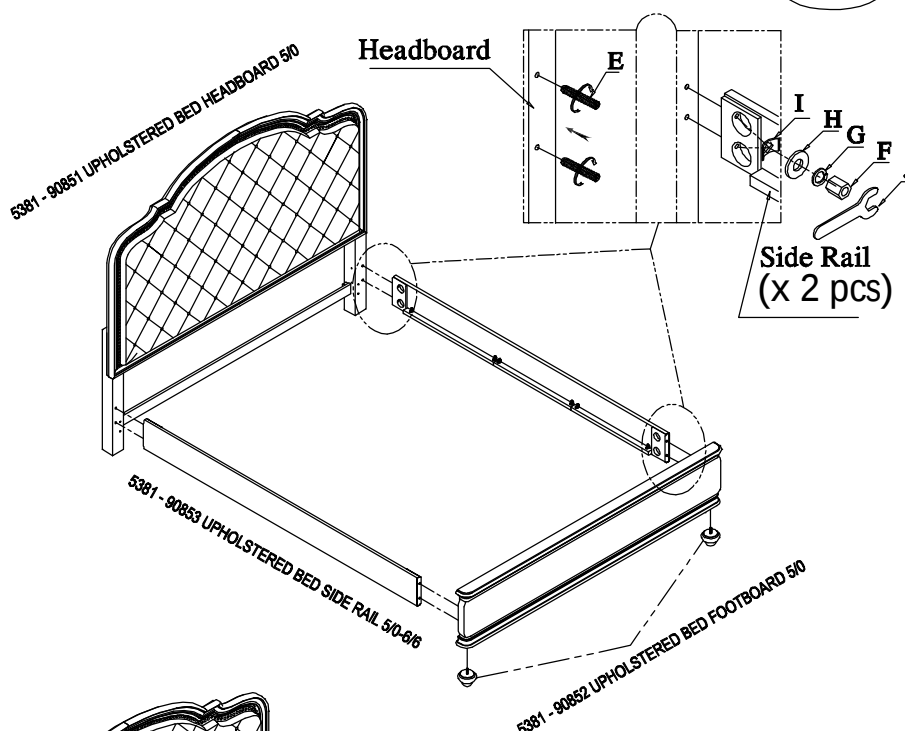


STEP 3

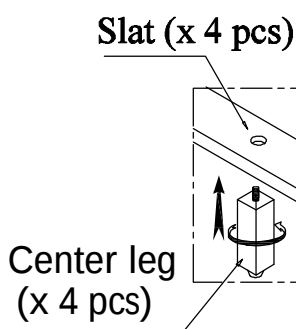

STEP 3: Assemble the center legs to the slat as shown, and then attach the the slat to the side rail with screw (I) as shown step 3.

STEP 4

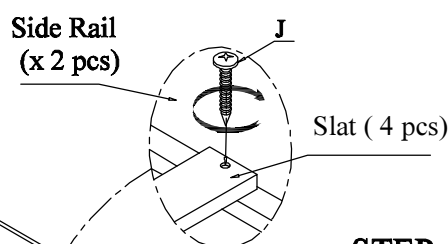


ASSEMBLY INSTRUCTION


ITEM: #5381 - 90867 Upholstered Bed Headboard 6/6-6/0
 5381 - 90868 Upholstered Bed Footboard 6/6-6/0
 5381 - 90853 Upholstered Bed Side Rail 5/0-6/6
 5381 - 90863 Optional Uph Side Rail 6/0

Thank you for purchasing this quality pr

HARDWARE LIST OF HEADBOARD - 90867				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
A	BOLT	Φ5/16" *1-3/4"		8PCS
B	LOCK WASHER	Φ5/16"		8PCS
C	FLAT WASHER	Φ5/16"* 19MM		8PCS
D	OPEN WRENCH	Φ5/16"		1PC


HARDWARE LIST OF BED RAILS - 90853 / 90863				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
E	HANGER BOLT	Φ5/16"*3-1/2"		8 PCS
F	NUT	Φ5/16"		8 PCS
G	LOCK WASHER	Φ5/16"		8 PCS
H	FLAT WASHER	Φ5/16"*16MM		8 PC
I	CURVED WASHER	Φ5/16"		8 PCS
D	OPEN WRENCH	Φ5/16"		1PC

HARDWARE LIST OF FOOTBOARD - 90868				
NO.	DESCRIPTION	SIDE	DRAWING	Q'TY
J	SCREW	#8*1"		10 PCS

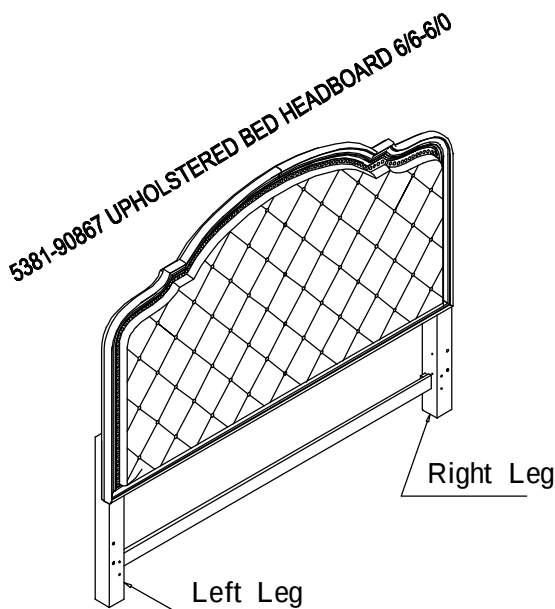

STEP 1: Attach legs to headboard using bolts(A), lock washer(B) , flat washer(C), and attach bottom rail to the legs using bolt (A) as shown in step 1. Using an open wrench (D) to tighten all the bolts.

STEP 1

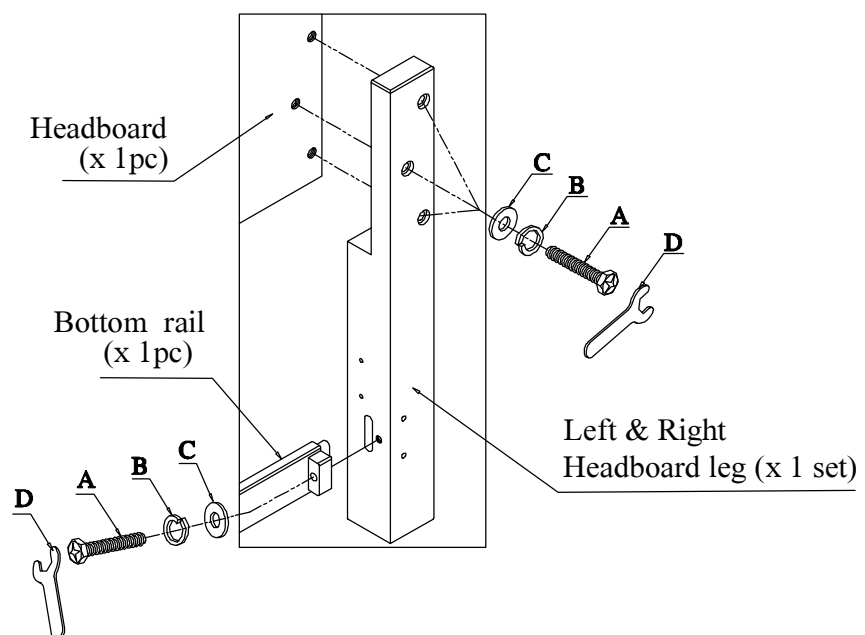

ASSEMBLY INSTRUCTION

Item: 5381-90851 Upholstered Bed Headboard 5/0
 5381-90852 Upholstered Bed Footboard 5/0
 5381-90853 Upholstered Bed side rail 5/0-6/6

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST OF HEADBOARD - 90851


NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
A	HEXAGONAL BOLT	Ø5/16"*1-3/4"		8PCS
B	LOCK WASHER	Ø5/16"		8PCS
C	FLAT WASHER	Ø5/16"*19MM		8PCS
D	OPEN WRENCH	Ø5/16"		1PC

HARDWARE LIST OF BED RAILS - 90853 / 90863

NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
H	THREADED BOLTS	Ø5/16"*4"		8PCS
I	HEXAGONAL NUT	Ø5/16"		8PCS
J	CURVED WASHER	Ø5/16"		8PCS
K	OPEN WRENCH	Ø5/16"		1PC


HARDWARE LIST OF FOOTBOARD - 90852

NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
L	SCREW	8*1-1/4"		8PCS

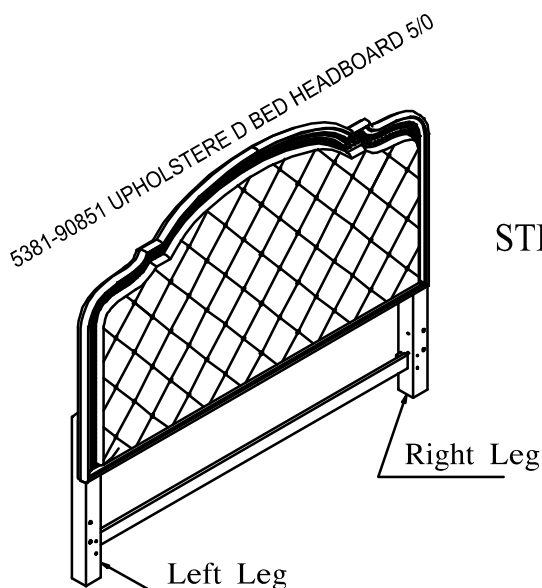

STEP 1: Attach legs to headboard using hexagonal bolts(A), lock washer(B), flat washer(C), and attach bottom rail to the legs using hexagonal bolt (A) as show in step 1. Using an open wrench (D) to tighten all the bolts.

STEP 1

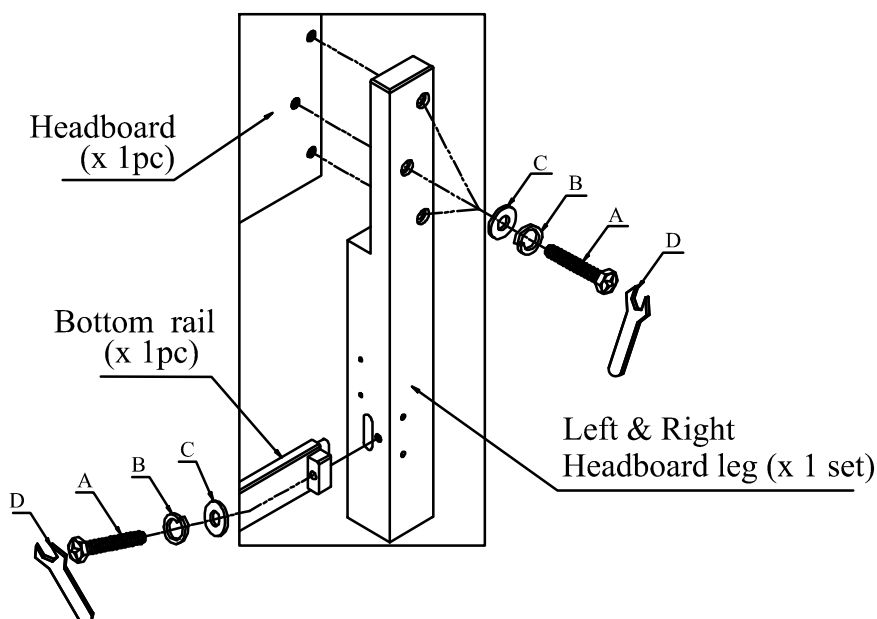


ASSEMBLY INSTRUCTION

Item: 5381-90851 Upholstered Bed Headboard 5/0
 5381-90852 Upholstered Bed Footboard 5/0
 5381-90853 Upholstered Bed side rail 5/0-6/6

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

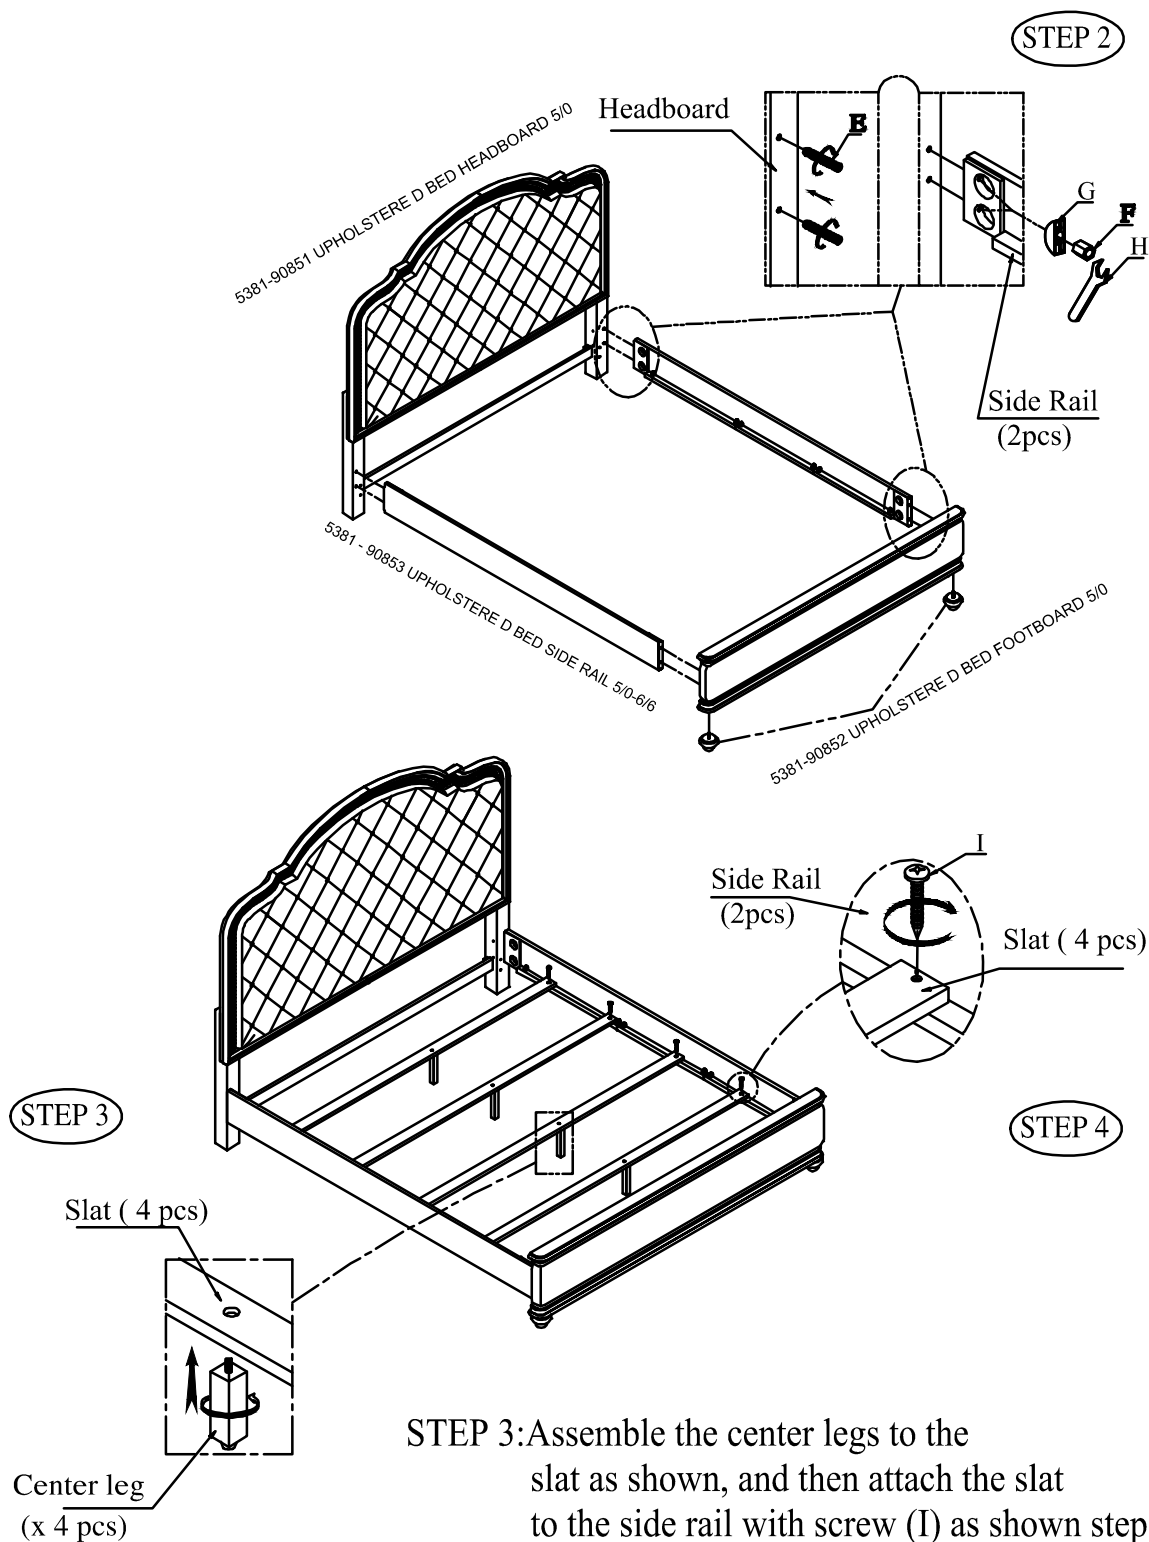

ASSEMBLY INSTRUCTION

Item: 5381-90867 Upholstered Bed Headboard 6/6-6/0
 5381-90868 Upholstered Bed Footboard 6/6-6/0
 5381-90853 Upholstered Bed side rail 5/0-6/6
 5381-90863 Optional Uph Side rail 6/0

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST OF HEADBOARD - 90867				
NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
A	HEXAGONAL BOLT	Ø5/16"*1-3/4"		8PCS
B	LOCK WASHER	Ø5/16"		8PCS
C	FLAT WASHER	Ø5/16"*19MM		8PCS
D	OPEN WRENCH	Ø5/16"		1PC

HARDWARE LIST OF BED RAILS - 90853 / 90863				
NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
H	THREADED BOLTS	Ø5/16"*4"		8PCS
I	HEXAGONAL NUT	Ø5/16"		8PCS
J	CURVED WASHER	Ø5/16"		8PCS
K	OPEN WRENCH	Ø5/16"		1PC


HARDWARE LIST OF FOOTBOARD - 90868				
NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
L	SCREW	8*1-1/4"		10PCS

5381-90867 UPHOLSTERED BED HEADBOARD 6/6-6/0

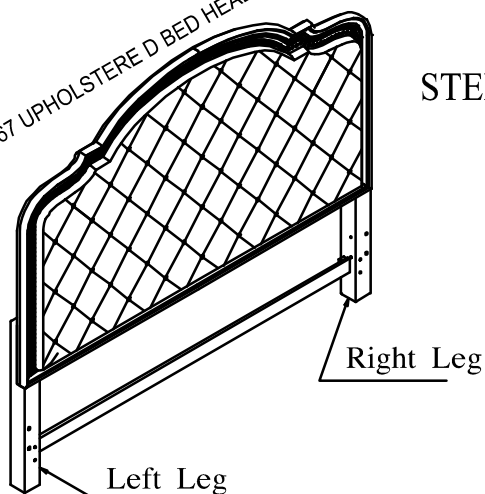

STEP 1: Attach legs to headboard using hexagonal bolts(A), lock washer(B), flat washer(C), and attach bottom rail to the legs using hexagonal bolt (A) as show in step 1. Using an open wrench (D) to tighten all the Bolts.

STEP 1

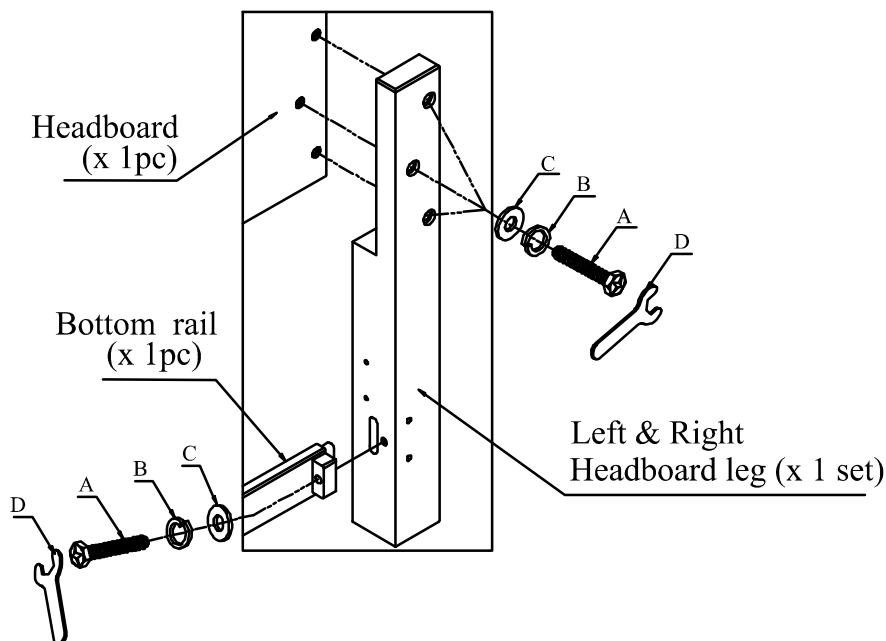

ASSEMBLY INSTRUCTION

Item: 5381-90867 Upholstered Bed Headboard 6/6-6/0
 5381-90868 Upholstered Bed Footboard 6/6-6/0
 5381-90853 Upholstered Bed side rail 5/0-6/6
 5381-90863 Optional Uph Side rail 6/0

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST OF HEADBOARD - 90867				
NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
A	HEXAGONAL BOLT	Ø5/16"*1-3/4"		8PCS
B	LOCK WASHER	Ø5/16"		8PCS
C	FLAT WASHER	Ø5/16"*19MM		8PCS
D	OPEN WRENCH	Ø5/16"		1PC

HARDWARE LIST OF BED RAILS - 90853 / 90863				
NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
H	THREADED BOLTS	Ø5/16"*4"		8PCS
I	HEXAGONAL NUT	Ø5/16"		8PCS
J	CURVED WASHER	Ø5/16"		8PCS
K	OPEN WRENCH	Ø5/16"		1PC

HARDWARE LIST OF FOOTBOARD - 90868				
NO.	DESCRIPTION	SIZE	DRAWING	Q'TY
L	SCREW	8*1-1/4"		10PCS

5381-90867 UPHOLSTERED BED HEADBOARD 6/6-6/0

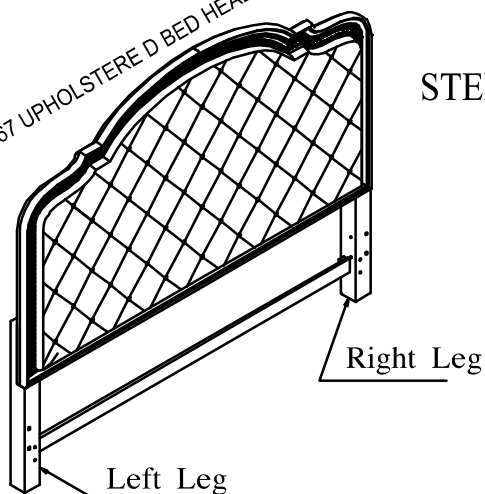

STEP 1: Attach legs to headboard using hexagonal bolts(A), lock washer(B), flat washer(C), and attach bottom rail to the legs using hexagonal bolt (A) as show in step 1. Using an open wrench (D) to tighten all the Bolts.

STEP 1

