

ASSEMBLY INSTRUCTION

ITEM: 6950-90004-80 Landscape Mirror
 6950-90004-99 Landscape Mirror
 6950-90001-80 Seven-Drawer Dresser
 6950-90202-80 Pole Rattan Dresser
 6950-90202-99 Pole Rattan Dresser



Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Screw	8mm* $\frac{3}{4}$ "	18 PCS
B		Hook	4*53mm	4 PCS
C		Plastic Anchor	ϕ 9*30mm	4 PCS



PARTS LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Mirror Support	1220*25*14mm	2 PCS

Note:

- 6950-90004-80/-99 mirror can be mounted horizontally or vertically.
- 6950-90004-80/-99 mirror can be assembled with 6950-90001-80 or 6950-90202-80/-99 dresser.

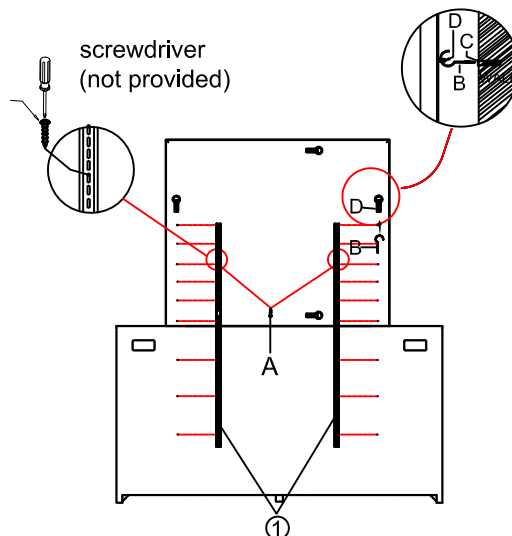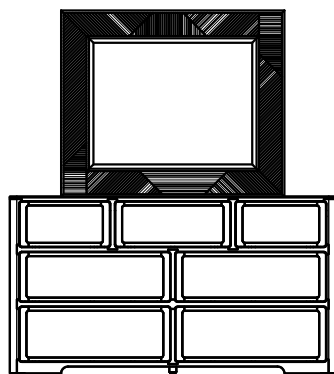

When using mirror only,
 hang the metal ring (D)
 onto the hook (B).

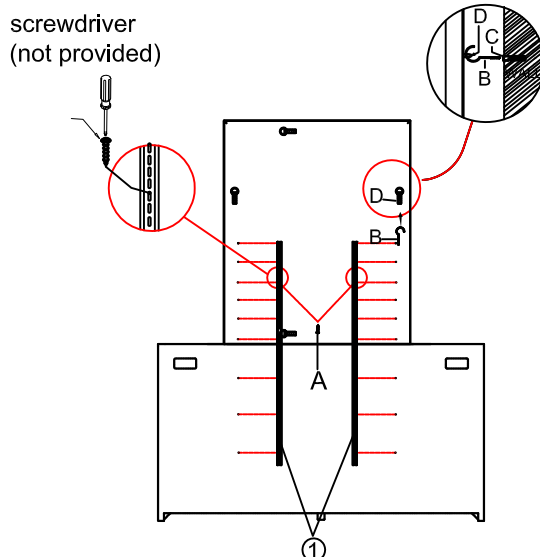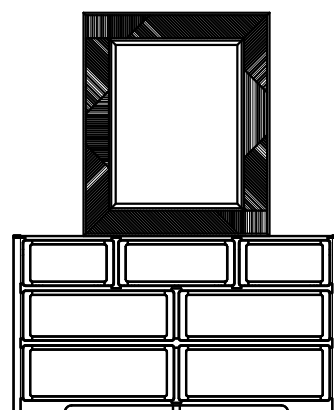

When using mirror only,
 hang the metal ring (D)
 onto the hook (B).

ASSEMBLY INSTRUCTION

ITEM: 6950-90004-80 Landscape Mirror
 6950-90004-99 Landscape Mirror
 6950-90001-80 Seven-Drawer Dresser
 6950-90202-80 Pole Rattan Dresser
 6950-90202-99 Pole Rattan Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Screw	8mm* $\frac{3}{4}$ "	18 PCS
B		Hook	4*53mm	4 PCS
C		Plastic Anchor	∅ 9*30mm	4 PCS

PARTS LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Mirror Support	1220*25*14mm	2 PCS

Note:

- 6950-90004-80/-99 mirror can be mounted horizontally or vertically.
- 6950-90004-80/-99 mirror can be assembled with 6950-90001-80 or 6950-90202-80/-99 dresser.

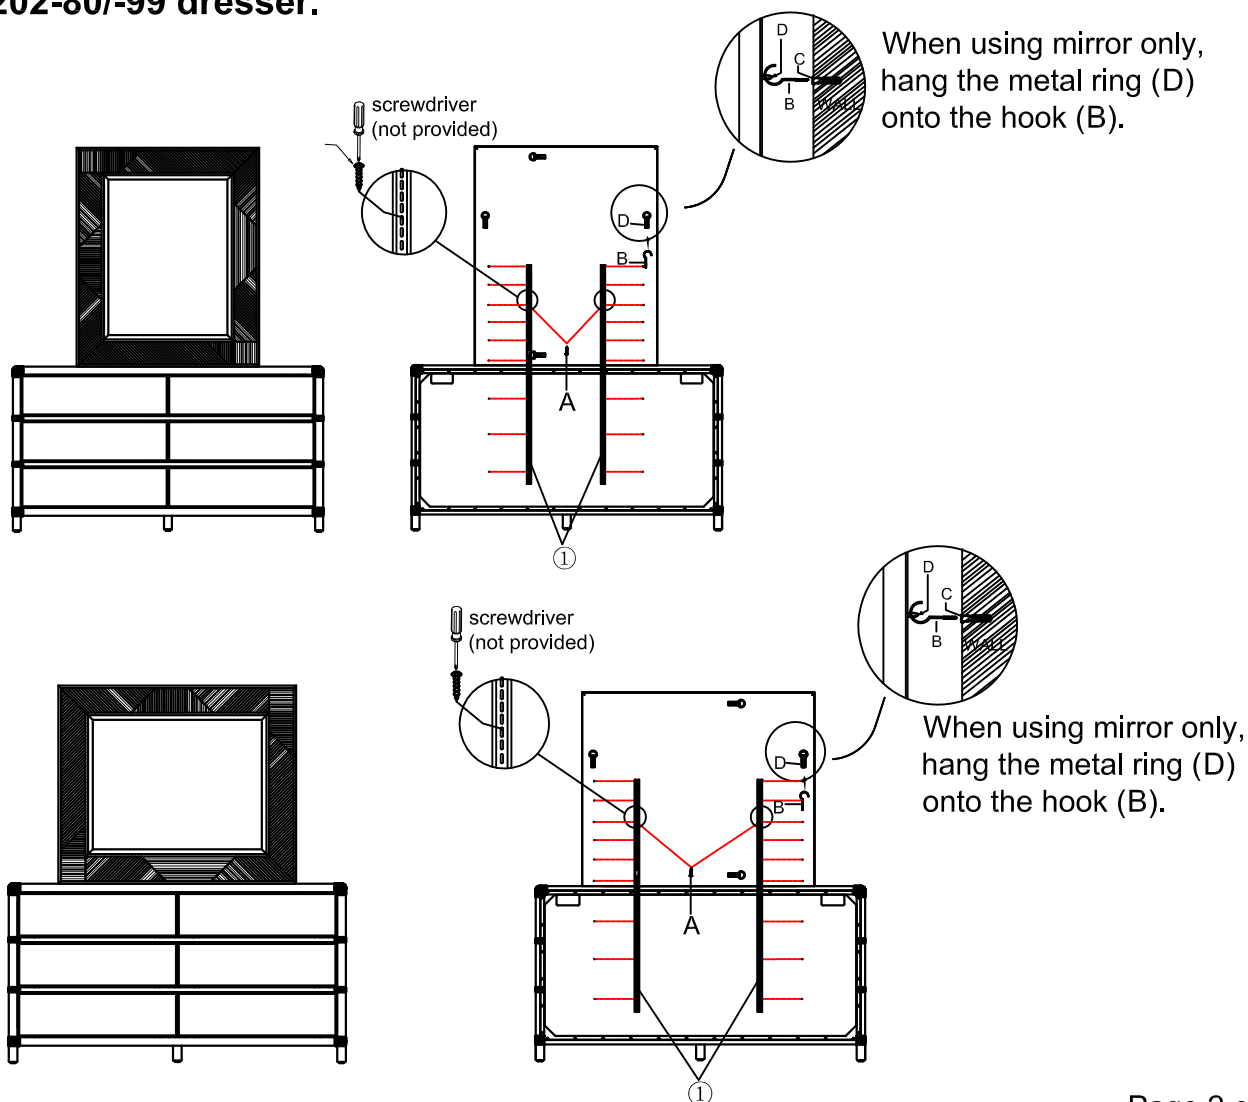


ASSEMBLY INSTRUCTION

ITEM: 6950-90005-80 Pole Rattan Accent Mirror
6950-90005-99 Pole Rattan Accent Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Hook	4*53MM	2 PCS
B		Plastic Anchor	∅ 9*30MM	2 PCS

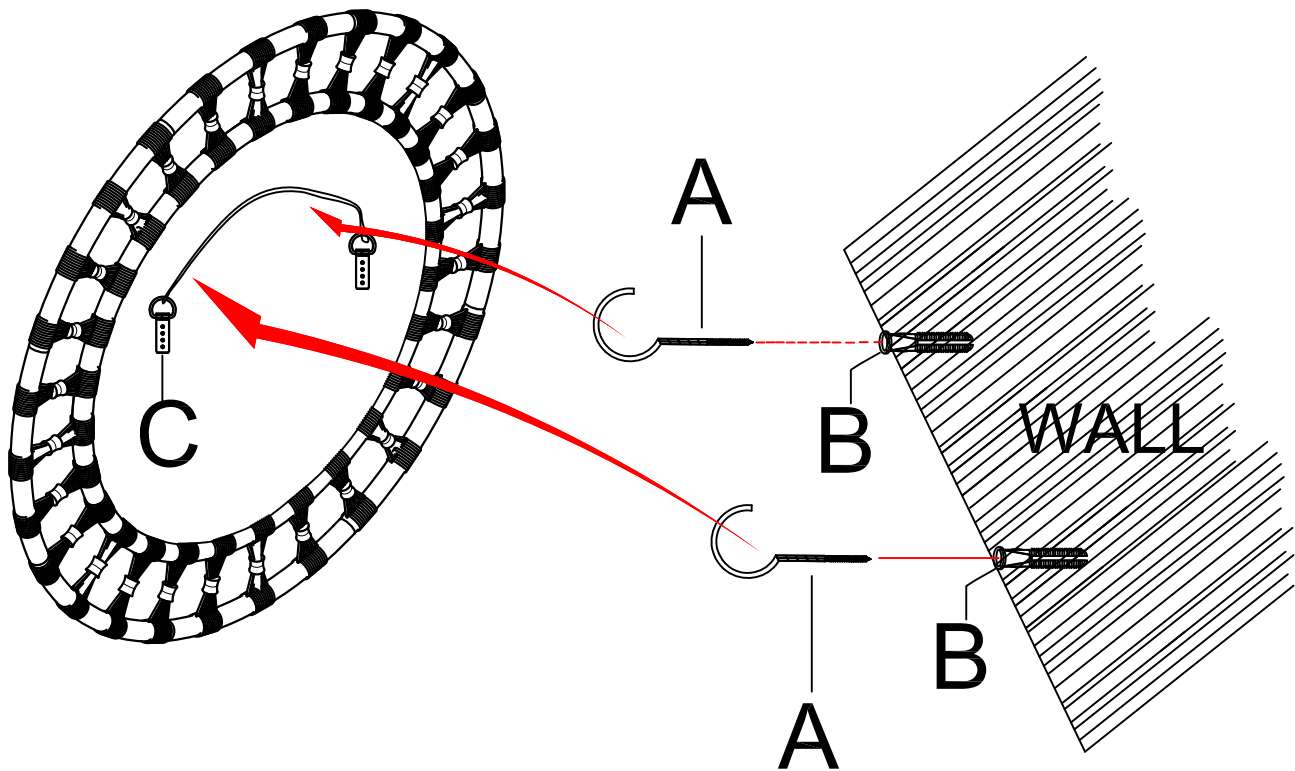



Assembly Steps:

1. Drill two holes into the wall using 1/4" drill bit (not provided) at the desired place you want to set the mirror and insert plastic anchors (B).
2. Screw hooks (A) into the plastic anchors (B). Check and make sure the plastic anchors (B) are securely held in the wall.
3. Hang the metal rings (C) onto the hooks (A) and set the mirror in the angle you want.

ITEM: 6950-90008-80 Landscape Mirror
6950-90001-80 Seven-Drawer Dresser





Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Allen Wrench	69*27.2*4mm	1 PC	1		Mirror Support	2 PCS
B		Bolt	1/4"	10 PCS				
C		Lock Washer	1/4"	10 PCS				
D		Flat Washer	5/16"	10 PCS				
E		Hook	4*53mm	4 PCS				
F		Plastic Anchor	∅ 9*30mm	4 PCS				

Note:

1. 6950-90008-80 mirror can be mounted horizontally or vertically.

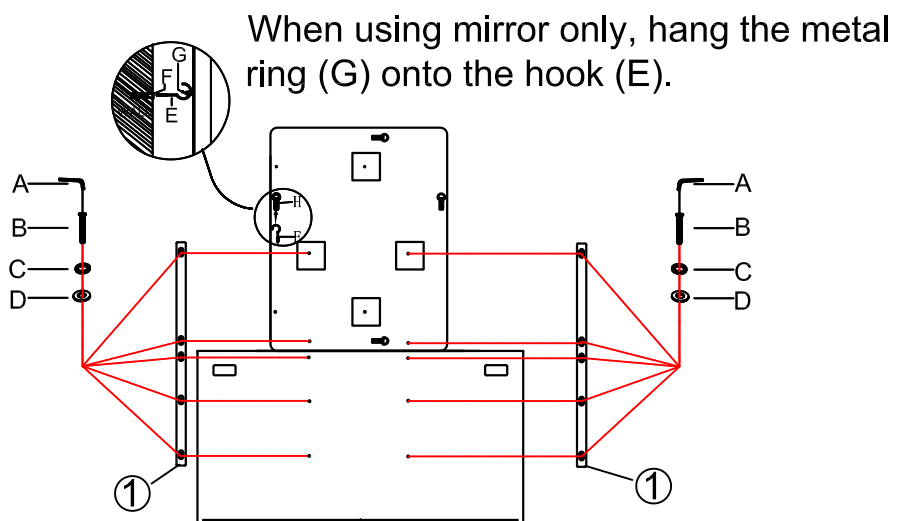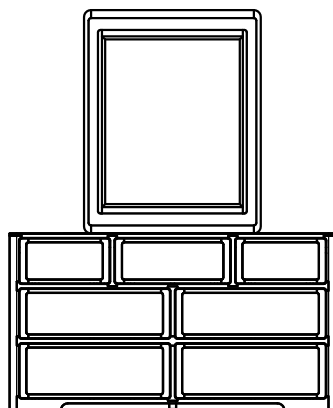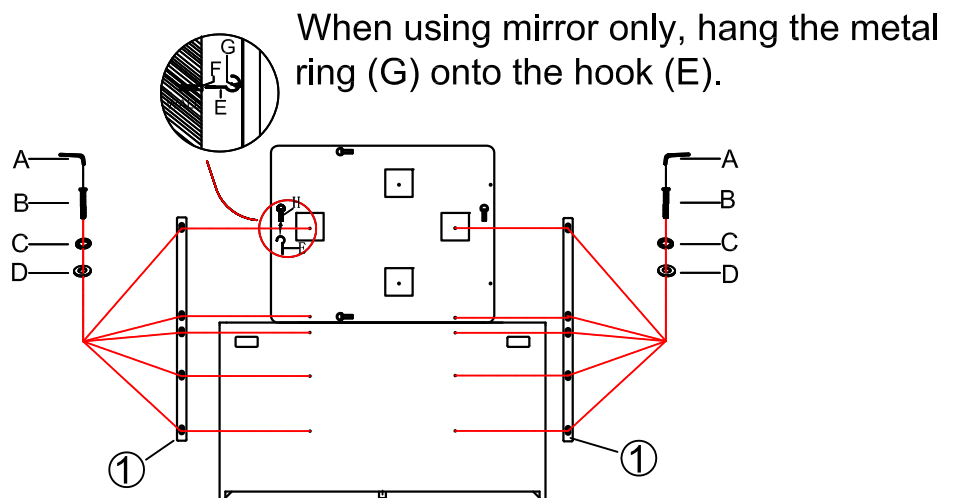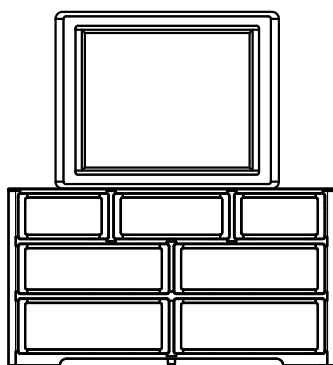

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.



Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

Anti-tip kit is included for use.
We recommend installing for
safety reason.

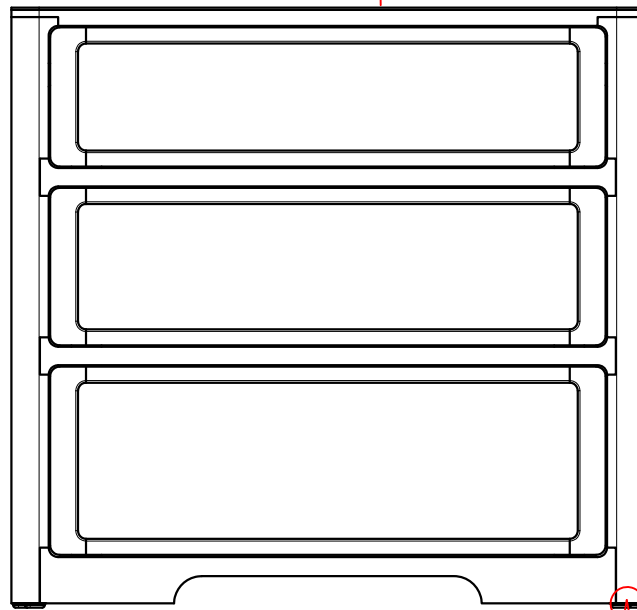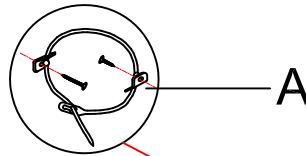

Adjust leveler if needed to level
case on uneven floor.

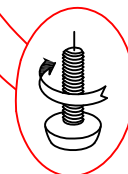

ASSEMBLY INSTRUCTION

ITEM: 6950-90017-35 Pole Rattan Chest
 6950-90017-45 Pole Rattan Chest
 6950-90017-80 Pole Rattan Chest
 6950-90017-99 Pole Rattan Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.



Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

Anti-tip kit is included for use.
 We recommend installing for
 safety reason.

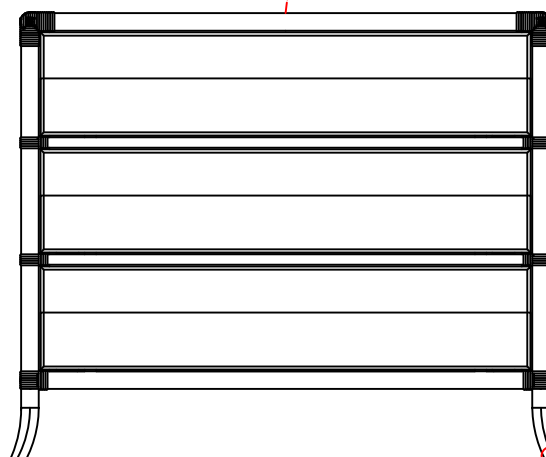

Adjust leveler if needed to level
 case on uneven floor.



ASSEMBLY INSTRUCTION

ITEM: 6950-90004-80 Landscape Mirror
 6950-90004-99 Landscape Mirror
 6950-90001-80 Seven-Drawer Dresser
 6950-90202-80 Pole Rattan Dresser
 6950-90202-99 Pole Rattan Dresser



Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Screw	8mm* $\frac{3}{4}$ "	18 PCS
B		Hook	4*53mm	4 PCS
C		Plastic Anchor	ϕ 9*30mm	4 PCS



PARTS LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Mirror Support	1220*25*14mm	2 PCS

Note:

- 6950-90004-80/-99 mirror can be mounted horizontally or vertically.
- 6950-90004-80/-99 mirror can be assembled with 6950-90001-80 or 6950-90202-80/-99 dresser.

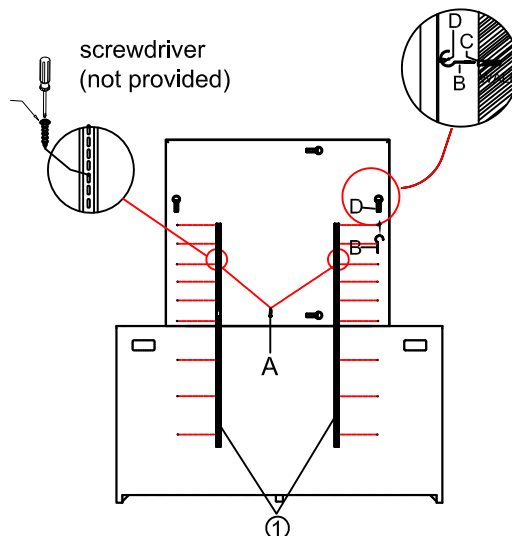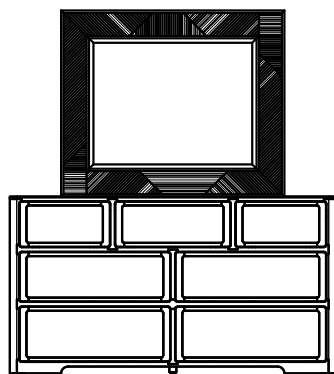

When using mirror only,
 hang the metal ring (D)
 onto the hook (B).

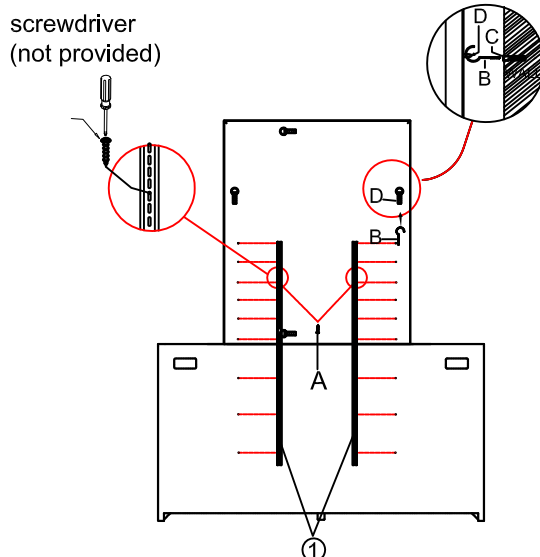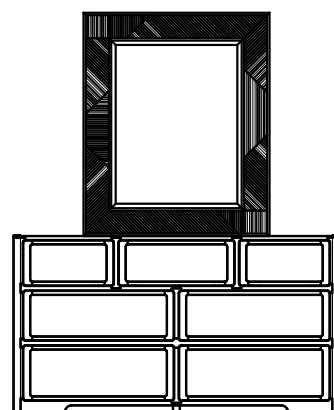

When using mirror only,
 hang the metal ring (D)
 onto the hook (B).

ASSEMBLY INSTRUCTION

ITEM: 6950-90004-80 Landscape Mirror
 6950-90004-99 Landscape Mirror
 6950-90001-80 Seven-Drawer Dresser
 6950-90202-80 Pole Rattan Dresser
 6950-90202-99 Pole Rattan Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Screw	8mm* $\frac{3}{4}$ "	18 PCS
B		Hook	4*53mm	4 PCS
C		Plastic Anchor	$\varnothing$ 9*30mm	4 PCS

PARTS LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Mirror Support	1220*25*14mm	2 PCS

Note:

- 6950-90004-80/-99 mirror can be mounted horizontally or vertically.
- 6950-90004-80/-99 mirror can be assembled with 6950-90001-80 or 6950-90202-80/-99 dresser.

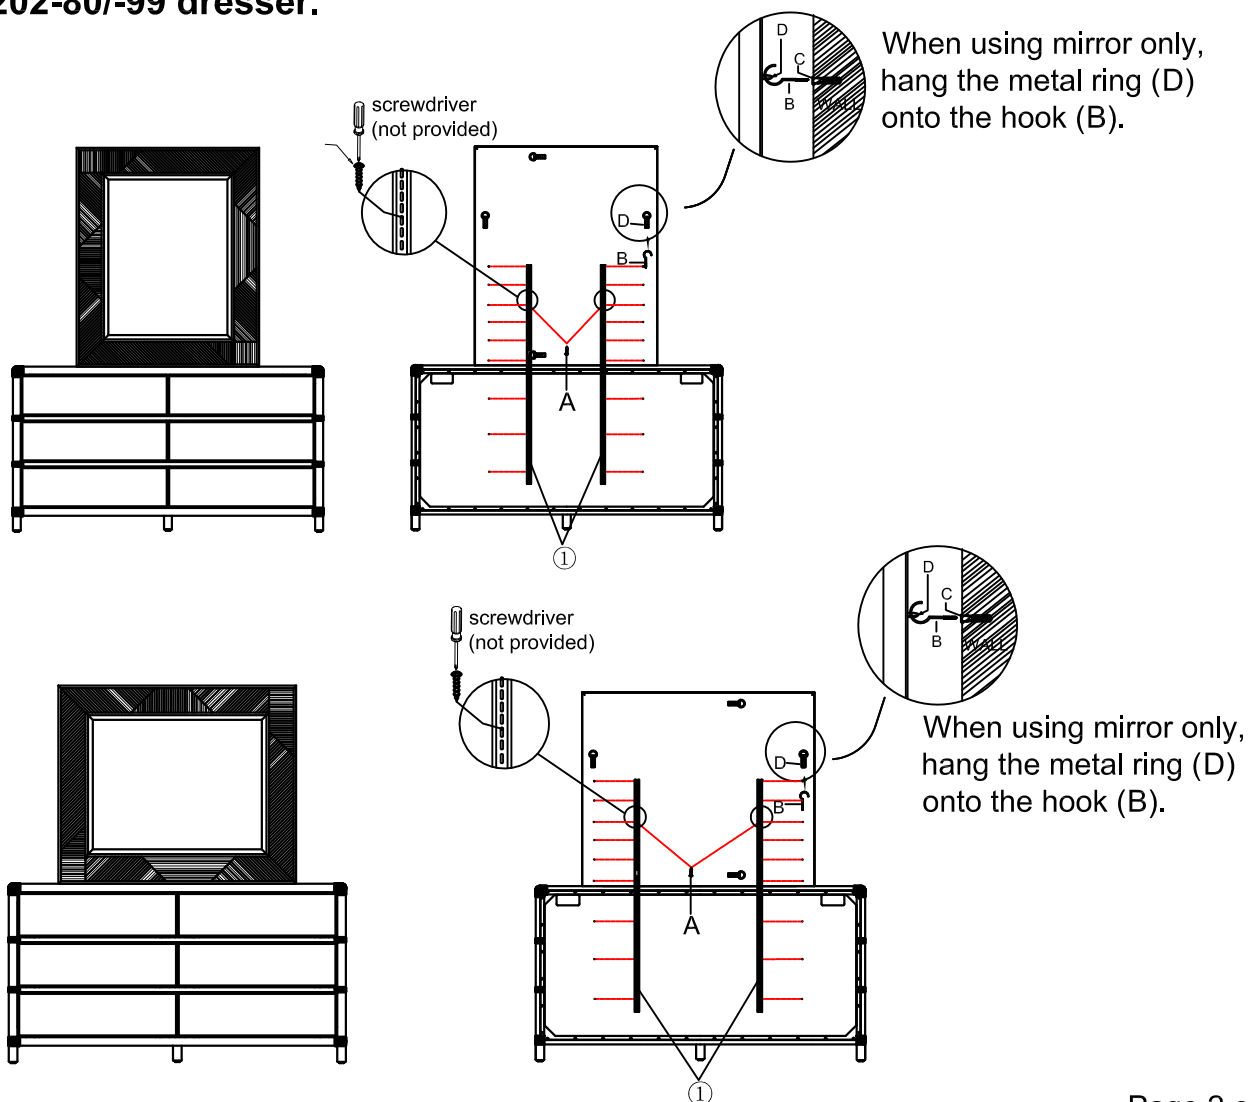

ASSEMBLY INSTRUCTION

ITEM: 6950-90210-80 Pole Rattan Five-Drawer Chest
6950-90210-99 Pole Rattan Five-Drawer Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

Anti-tip kit is included for use.
We recommend installing for
safety reason.

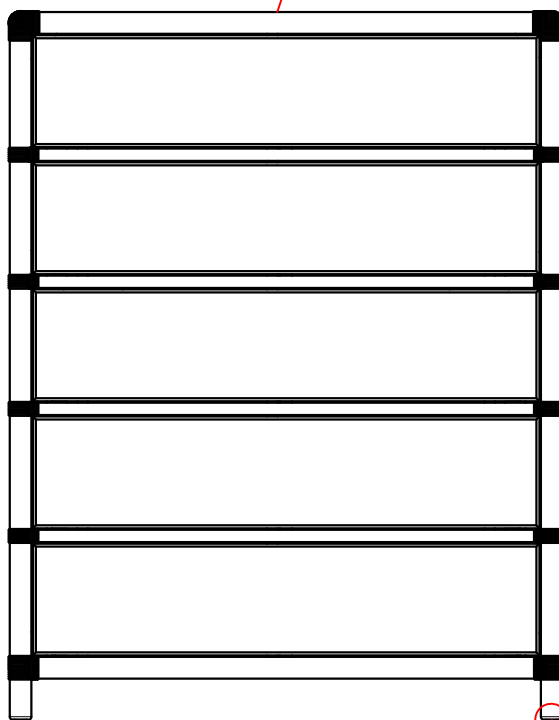

Adjust leveler if needed to level
drawer chest on uneven floor.

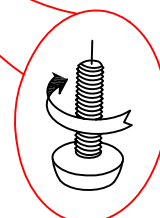

ASSEMBLY INSTRUCTION

ITEM: 6950-90215-80 Carved Nightstand


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC



Tipping Restraint

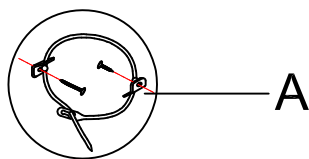

Anti-tip kit is included for use.
We recommend installing for
safety reason.

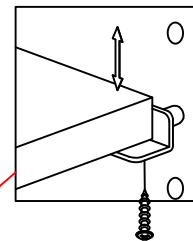

The adjustable shelf is
screwed in place to avoid
damage during transit.
To adjust the shelf height,
remove screws then place
shelf pins in the desired
level.

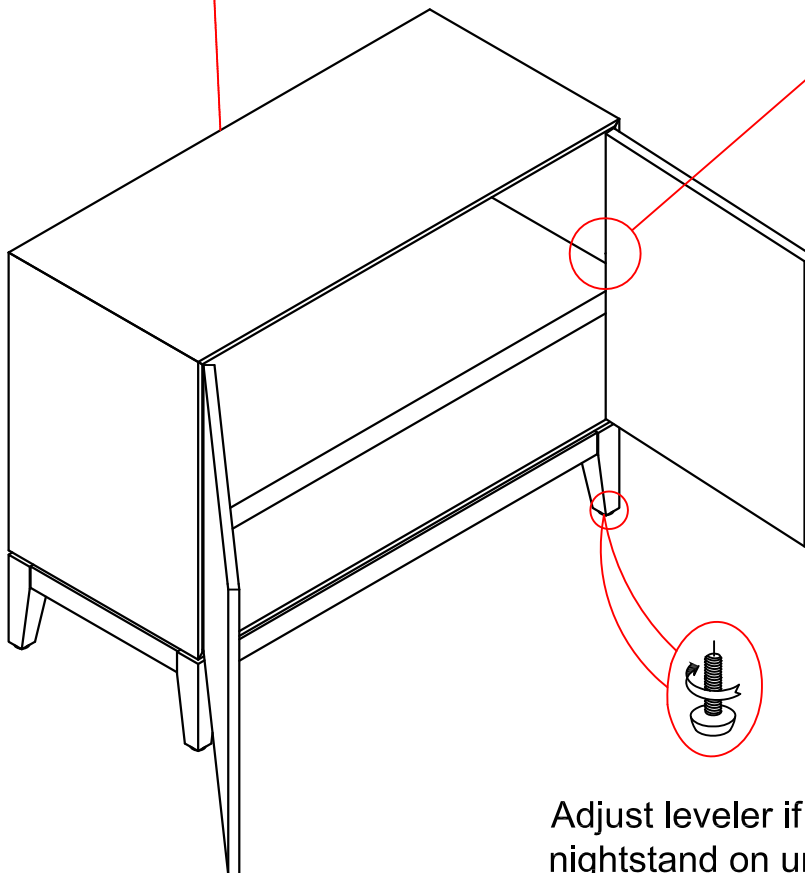

Adjust leveler if needed to level
nightstand on uneven floor.


ASSEMBLY INSTRUCTION

ITEM: 6950-90267-80 6/0-6/6 Cane Panel Headboard
 6950-90268-80 6/0-6/6 Cane Panel Footboard
 6950-90253-80 6/6 Cane Panel Rails
 6950-90263-80 6/0 Cane Panel Rails


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Threaded Rod	Ø3/8"*4"	8 PCS	1		Headboard	1 PC
B		Curved Washer	Ø3/8"	8 PCS	2		Rail	2 PCS
C		Nut	Ø3/8"	8 PCS	3		Footboard	1 PC
D		Open Wrench	Ø3/8"	1 PC	4		Slat	5 PCS
E		Screw	1 1/4"	20 PCS	5		Support Leg	5 PCS

Step 1

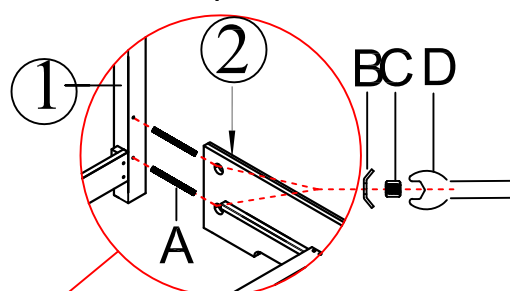


Step 2

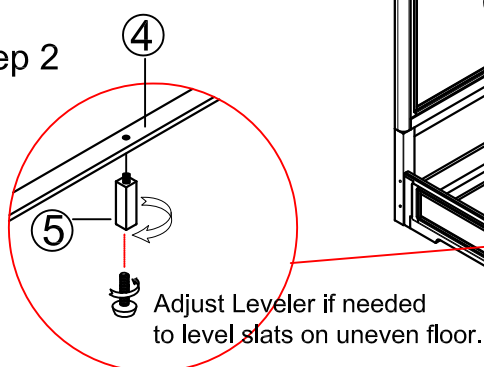

screwdriver
(not provided)

Step 3

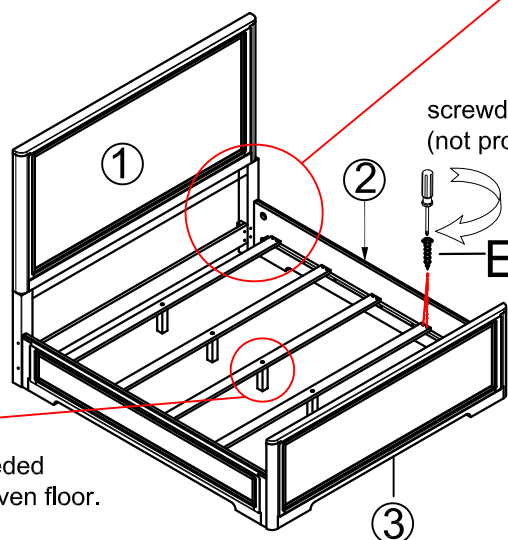

Step 1: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .


Step 2: Attach support legs (5) to slats (4).

Step 3: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION

ITEM: 6950-90351-80 5/0 Upholstered Panel Headboard
 6950-90352-80 5/0 Upholstered Panel Footboard
 6950-90367-80 6/0-6/6 Upholstered Panel Headboard
 6950-90368-80 6/0-6/6 Upholstered Panel Footboard
 6950-90353-80 5/0-6/6 Rails
 6950-90363-80 6/0 Rails
 6950-90351-99 5/0 Upholstered Panel Headboard
 6950-90352-99 5/0 Upholstered Panel Footboard
 6950-90367-99 6/0-6/6 Upholstered Panel Headboard
 6950-90368-99 6/0-6/6 Upholstered Panel Footboard
 6950-90353-99 5/0-6/6 Rails
 6950-90363-99 6/0 Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Threaded Rod	Ø3/8"*4"	8PCS	1		Headboard	1PC
B		Curved Washer	Ø3/8"	8PCS	2		Rail	2PCS
C		Nut	Ø3/8"	8PCS	3		Footboard	1PC
D		Spanner Wrench	Ø3/8"	1PC	4		Slat	4PCS (for 5/0 bed) 5PCS (for 6/6 & 6/0 beds)
E		Screw	8*32MM	16PCS (for 5/0 bed) 20PCS (for 6/6 & 6/0 beds)	5		Support Leg	4PCS (for 5/0 bed) 5PCS (for 6/6 & 6/0 beds)

Step 1: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .

Step 2: Attach support legs (5) to slats (4).


Step 3: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION

ITEM: 6950-90351-80 5/0 Upholstered Panel Headboard
6950-90352-80 5/0 Upholstered Panel Footboard
6950-90367-80 6/0-6/6 Upholstered Panel Headboard
6950-90368-80 6/0-6/6 Upholstered Panel Footboard
6950-90353-80 5/0-6/6 Rails
6950-90363-80 6/0 Rails
6950-90351-99 5/0 Upholstered Panel Headboard
6950-90352-99 5/0 Upholstered Panel Footboard
6950-90367-99 6/0-6/6 Upholstered Panel Headboard
6950-90368-99 6/0-6/6 Upholstered Panel Footboard
6950-90353-99 5/0-6/6 Rails
6950-90363-99 6/0 Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

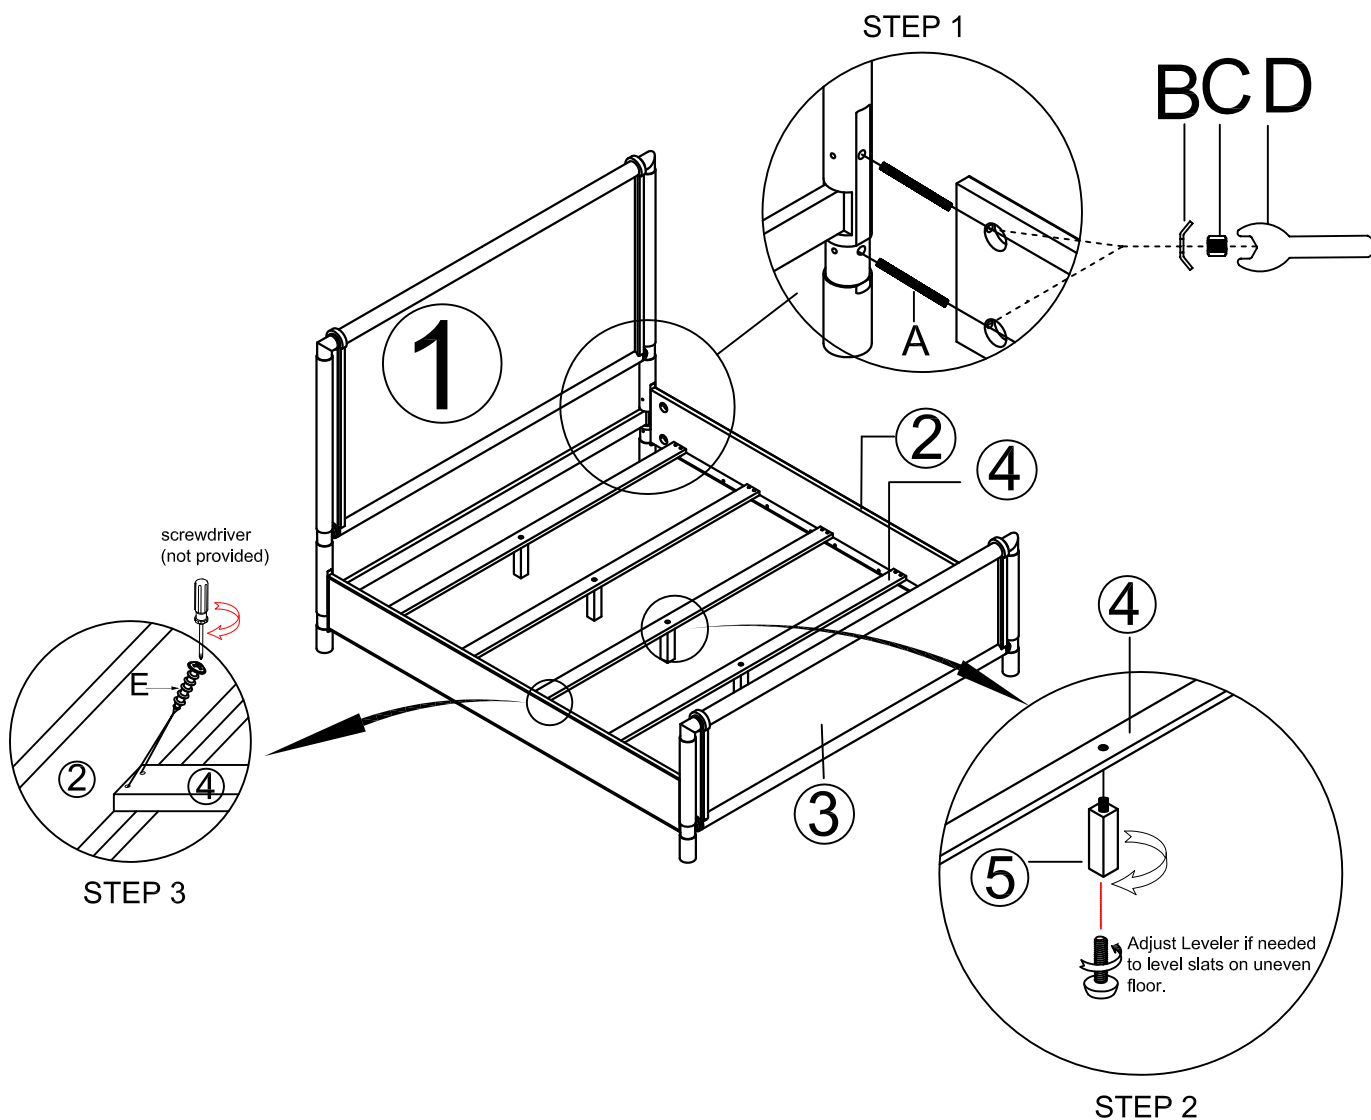

ASSEMBLY INSTRUCTION


ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK OF RAILS				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	8 PCS
B		Curved Washer	Ø3/8"	8 PCS
C		Nut	Ø3/8"	16 PCS
D		Open Wrench	Ø3/8"	1 PC
E		Flat Washer	Ø3/8"	8 PCS
F		Threaded Rod	Ø3/8"*90mm	8 PCS
G		Screw	1 1/4"	8 PCS
H		Lock Washer	Ø3/8"	8 PCS

PART LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Headboard	1 PC
2		Rail	2 PCS
3		Footboard	1 PC
4		Footboard Post	2 PCS
5		Support Leg	5 PCS
6		Slat	5 PCS
7		Short Canopy Rail	2 PCS
8		Long Canopy Rail	2 PCS
9		Wood Cap	8 PCS


HARDWARE PACK OF FOOTBOARD				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	4 PCS
B		Curved Washer	Ø3/8"	4 PCS
C		Nut	Ø3/8"	4 PCS
D		Open Wrench	Ø3/8"	1 PC
G		Screw	1 1/4"	20 PCS

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
6950-90463-80 6/0 Pole Rattan Rails and Canopy
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

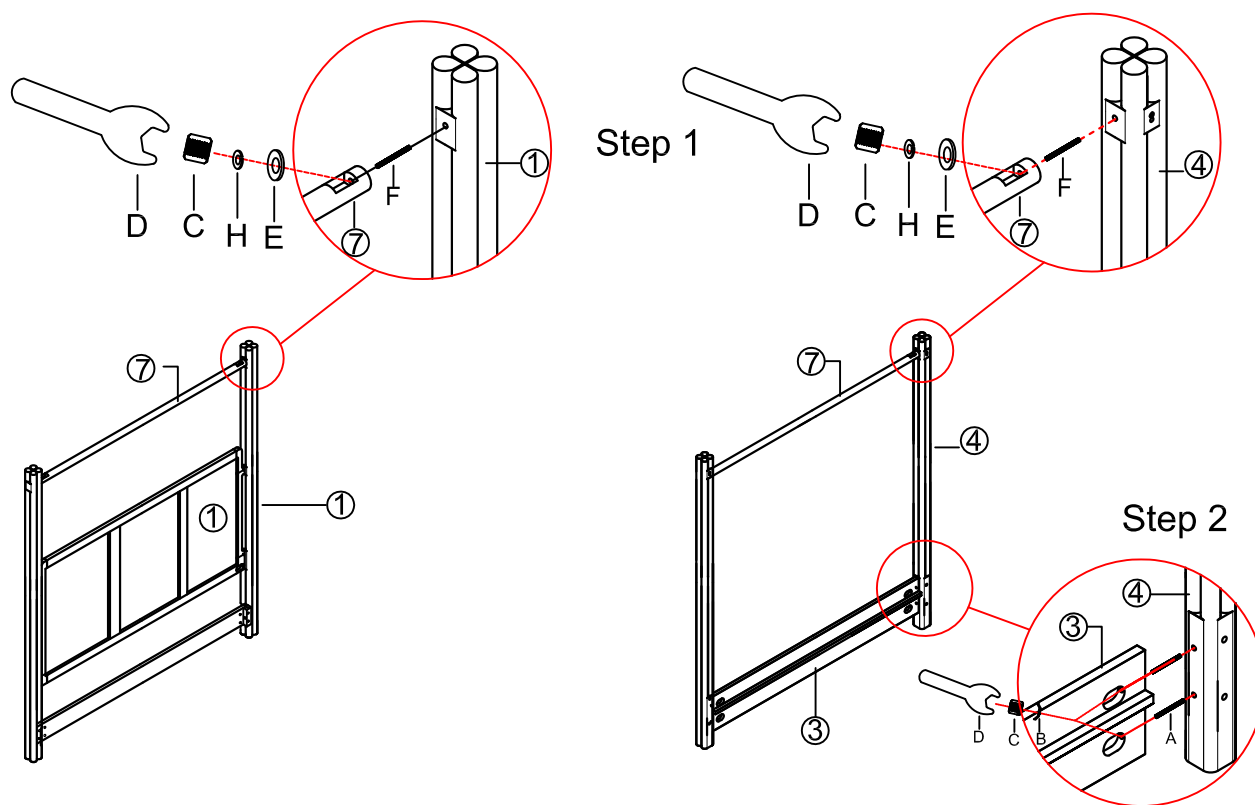

Step 1: Attach Short Canopy Rails (7) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .


Step 2: Attach Footboard (3) to Footboard Posts (4) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten all with Open Wrench (D).

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

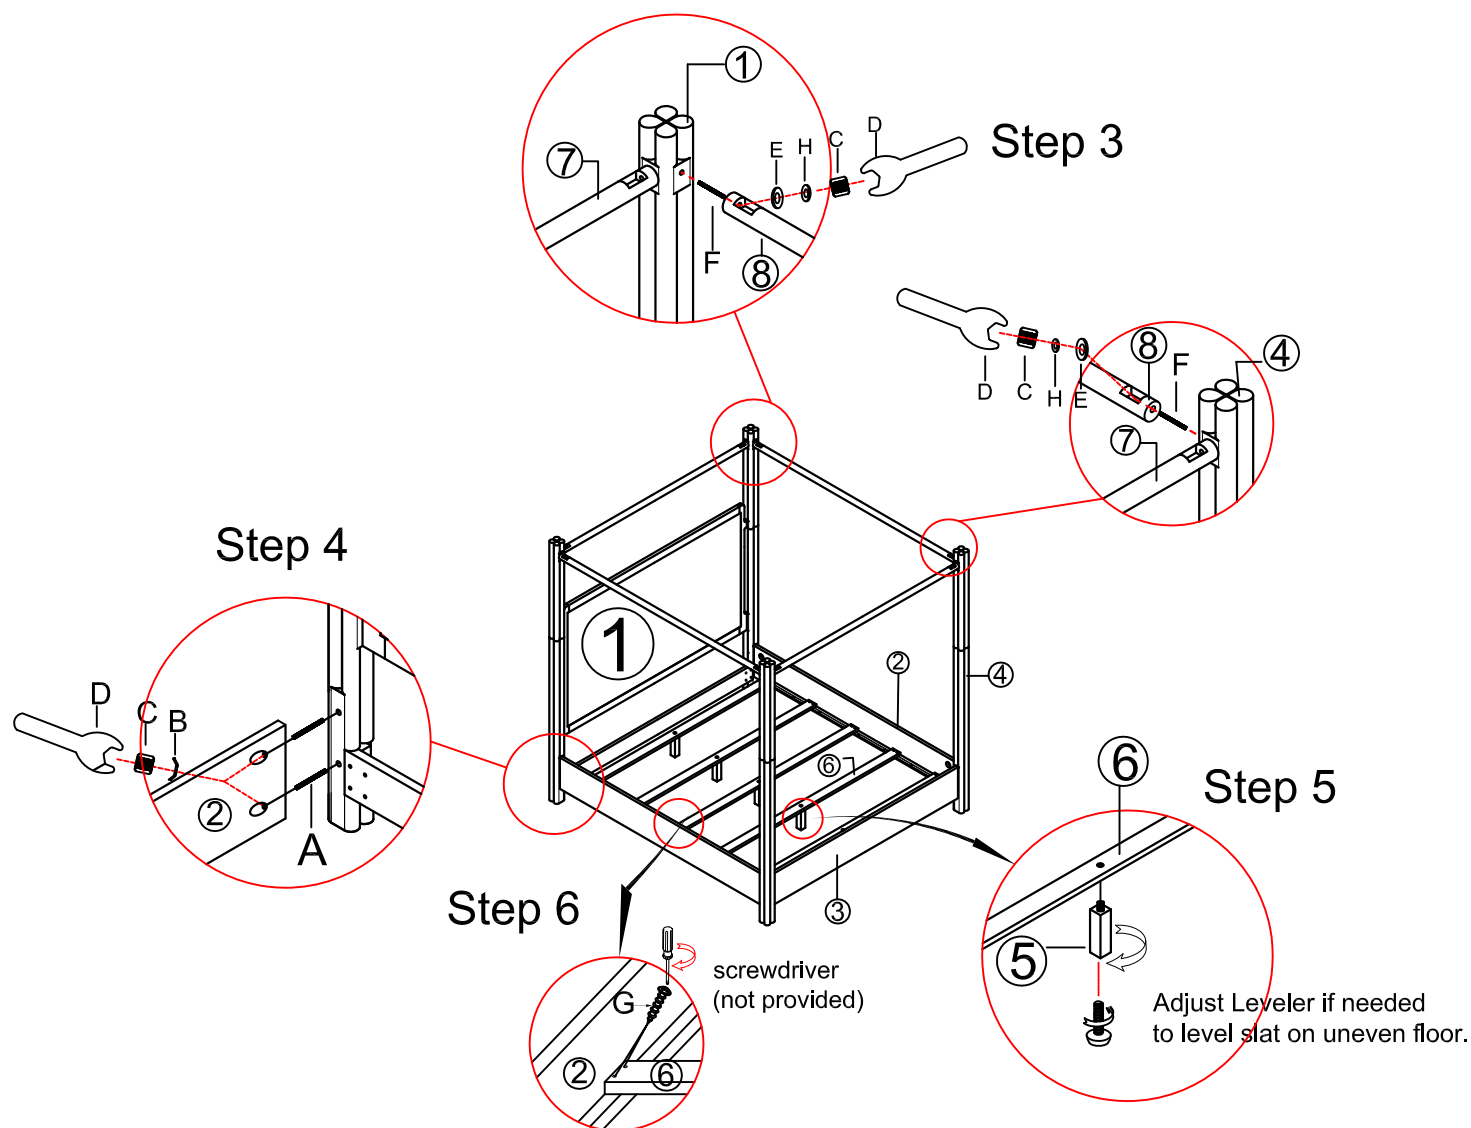

Step 3: Attach Long Canopy Rails (8) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .

Step 4: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .

Step 5: Attach Support Legs (5) to Slats (6).


Step 6: Attach Slats (6) to the Rails (2) and tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
6950-90463-80 6/0 Pole Rattan Rails and Canopy
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

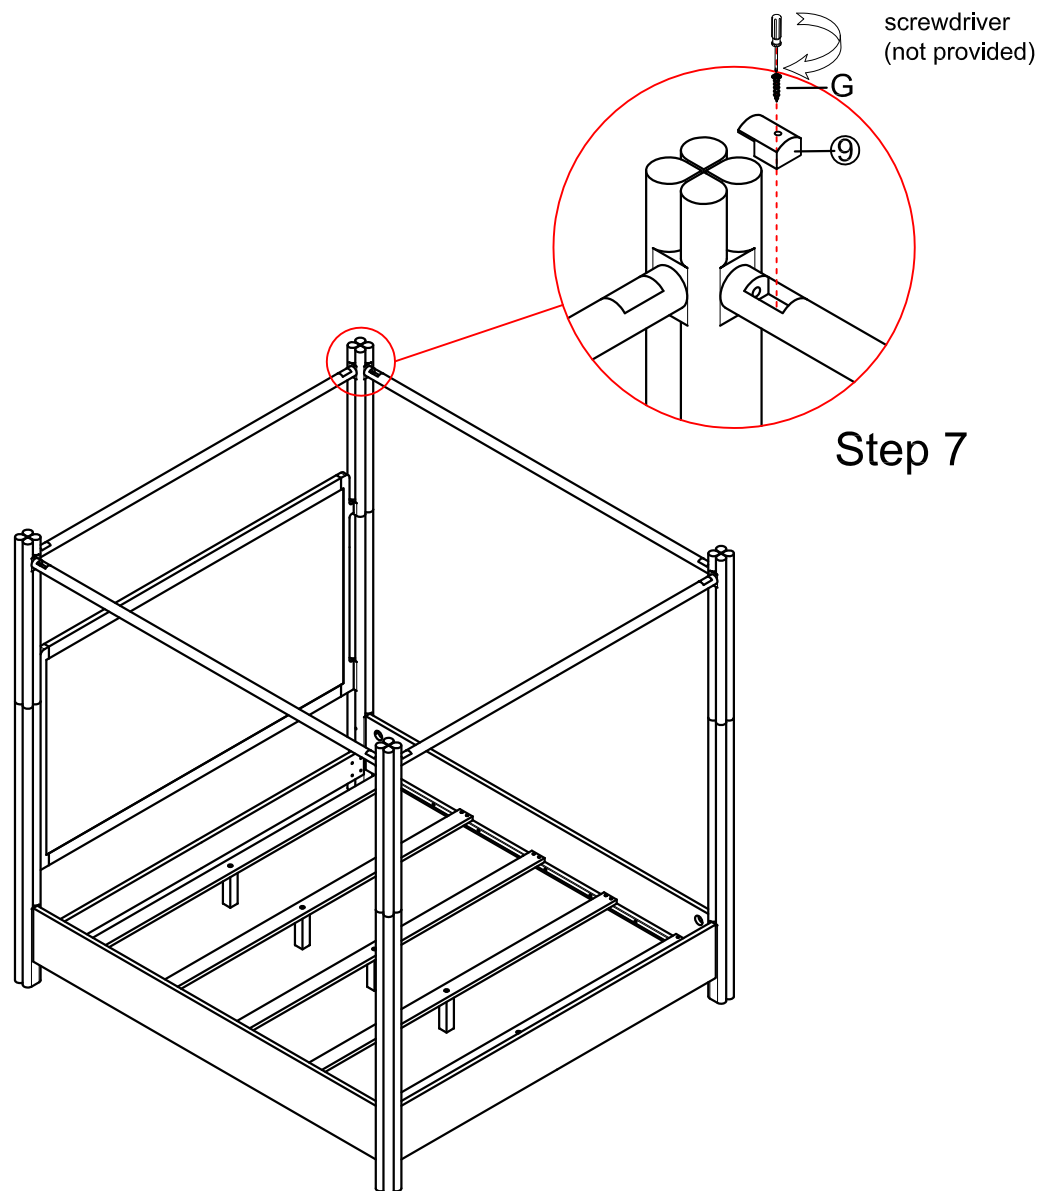


Step 6: Attach Wood Caps (9) to Canopy Rails (7&8) by using Screws (G), tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION


ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK OF RAILS				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	8 PCS
B		Curved Washer	Ø3/8"	8 PCS
C		Nut	Ø3/8"	16 PCS
D		Open Wrench	Ø3/8"	1 PC
E		Flat Washer	Ø3/8"	8 PCS
F		Threaded Rod	Ø3/8"*90mm	8 PCS
G		Screw	1 1/4"	8 PCS
H		Lock Washer	Ø3/8"	8 PCS

PART LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Headboard	1 PC
2		Rail	2 PCS
3		Footboard	1 PC
4		Footboard Post	2 PCS
5		Support Leg	5 PCS
6		Slat	5 PCS
7		Short Canopy Rail	2 PCS
8		Long Canopy Rail	2 PCS
9		Wood Cap	8 PCS


HARDWARE PACK OF FOOTBOARD				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	4 PCS
B		Curved Washer	Ø3/8"	4 PCS
C		Nut	Ø3/8"	4 PCS
D		Open Wrench	Ø3/8"	1 PC
G		Screw	1 1/4"	20 PCS

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

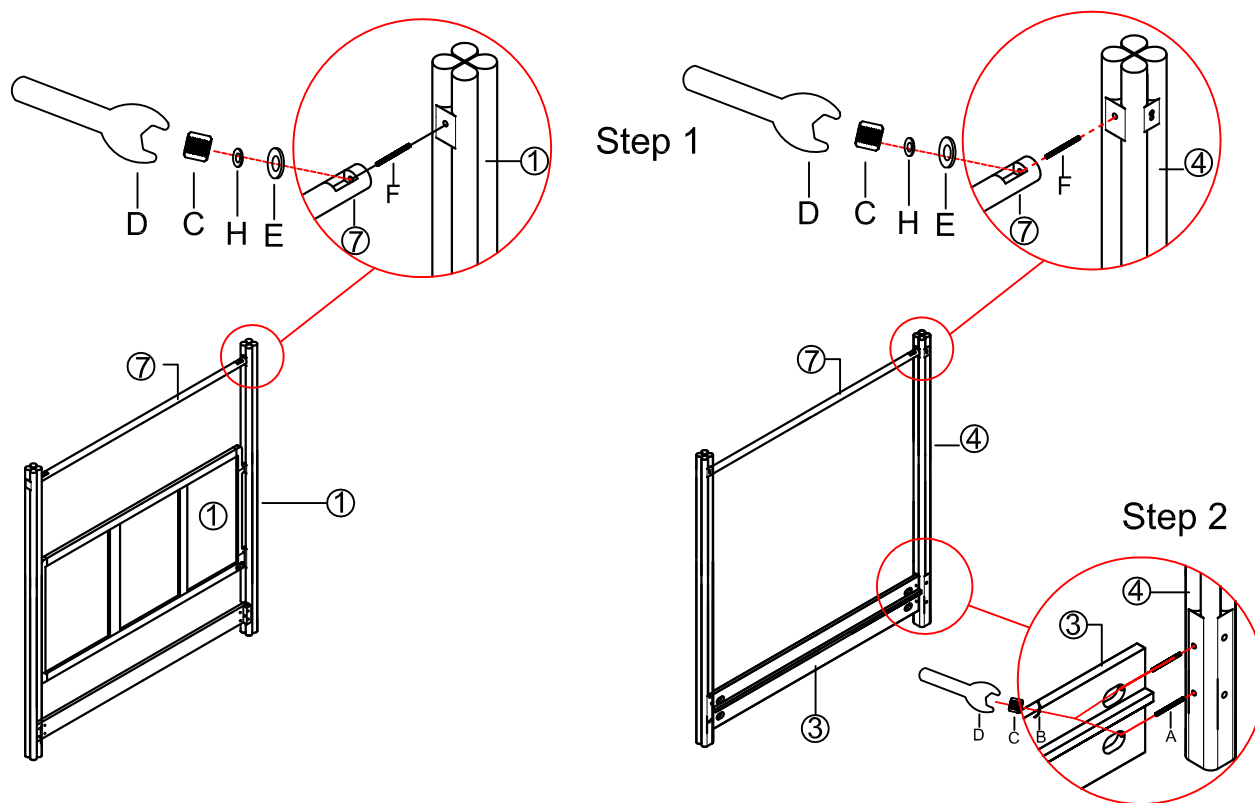

Step 1: Attach Short Canopy Rails (7) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .


Step 2: Attach Footboard (3) to Footboard Posts (4) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten all with Open Wrench (D).

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

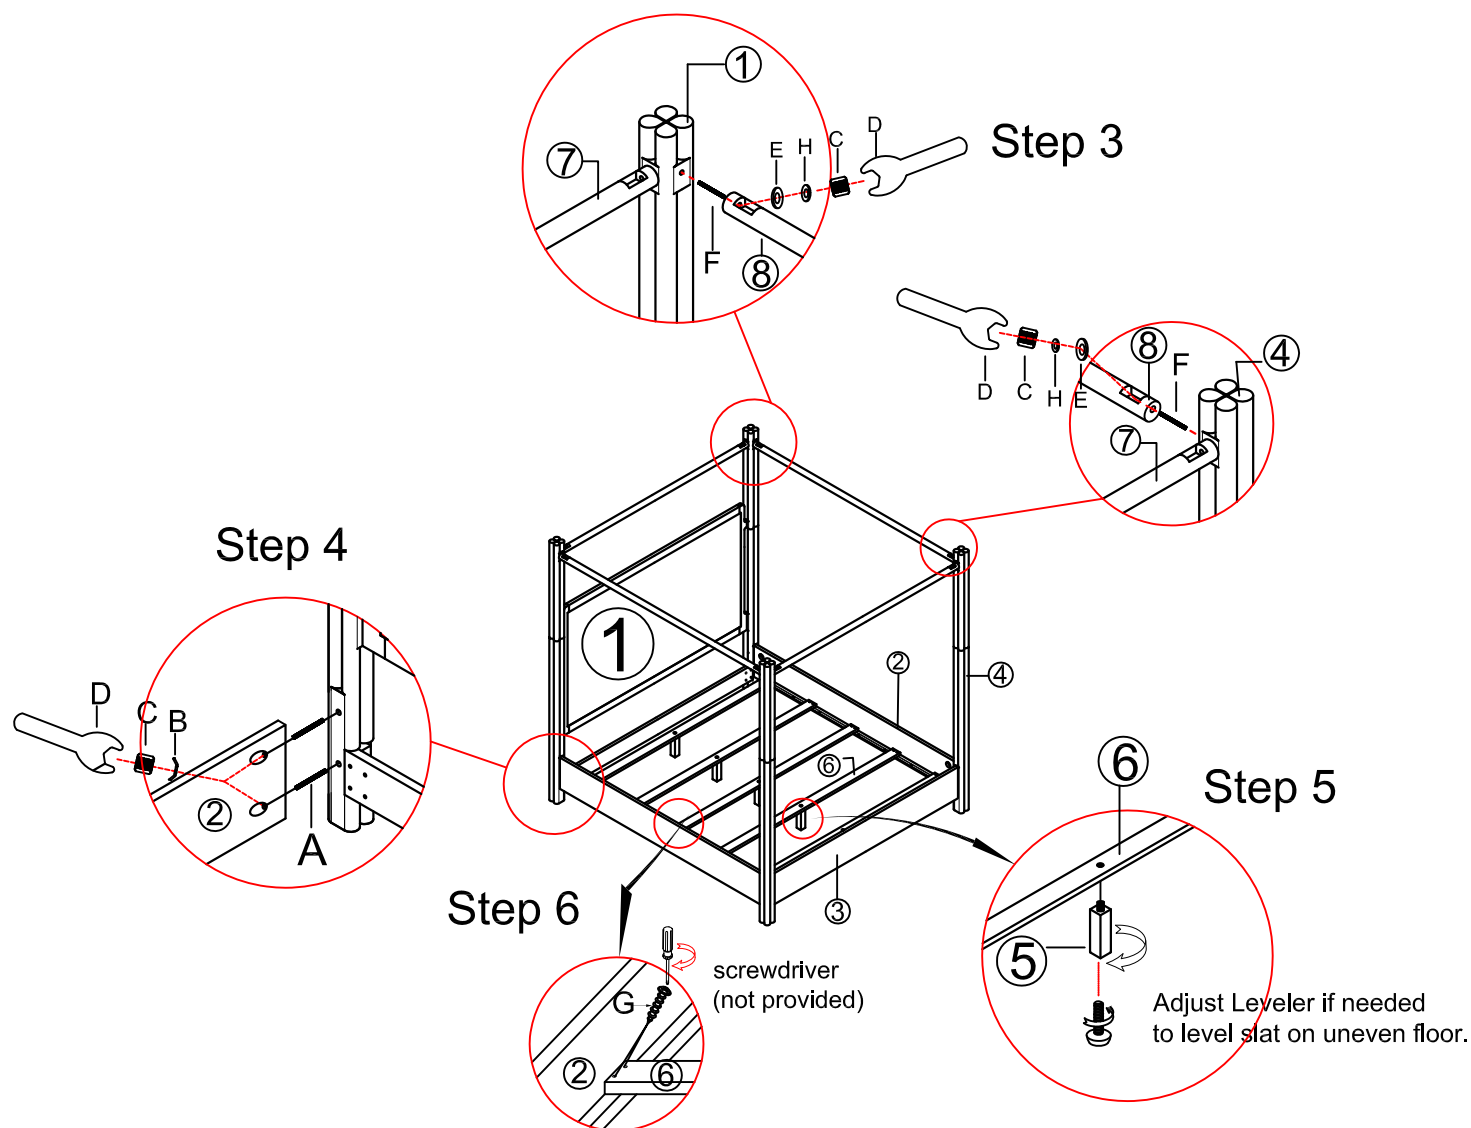

Step 3: Attach Long Canopy Rails (8) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .

Step 4: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .

Step 5: Attach Support Legs (5) to Slats (6).


Step 6: Attach Slats (6) to the Rails (2) and tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
6950-90463-80 6/0 Pole Rattan Rails and Canopy
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

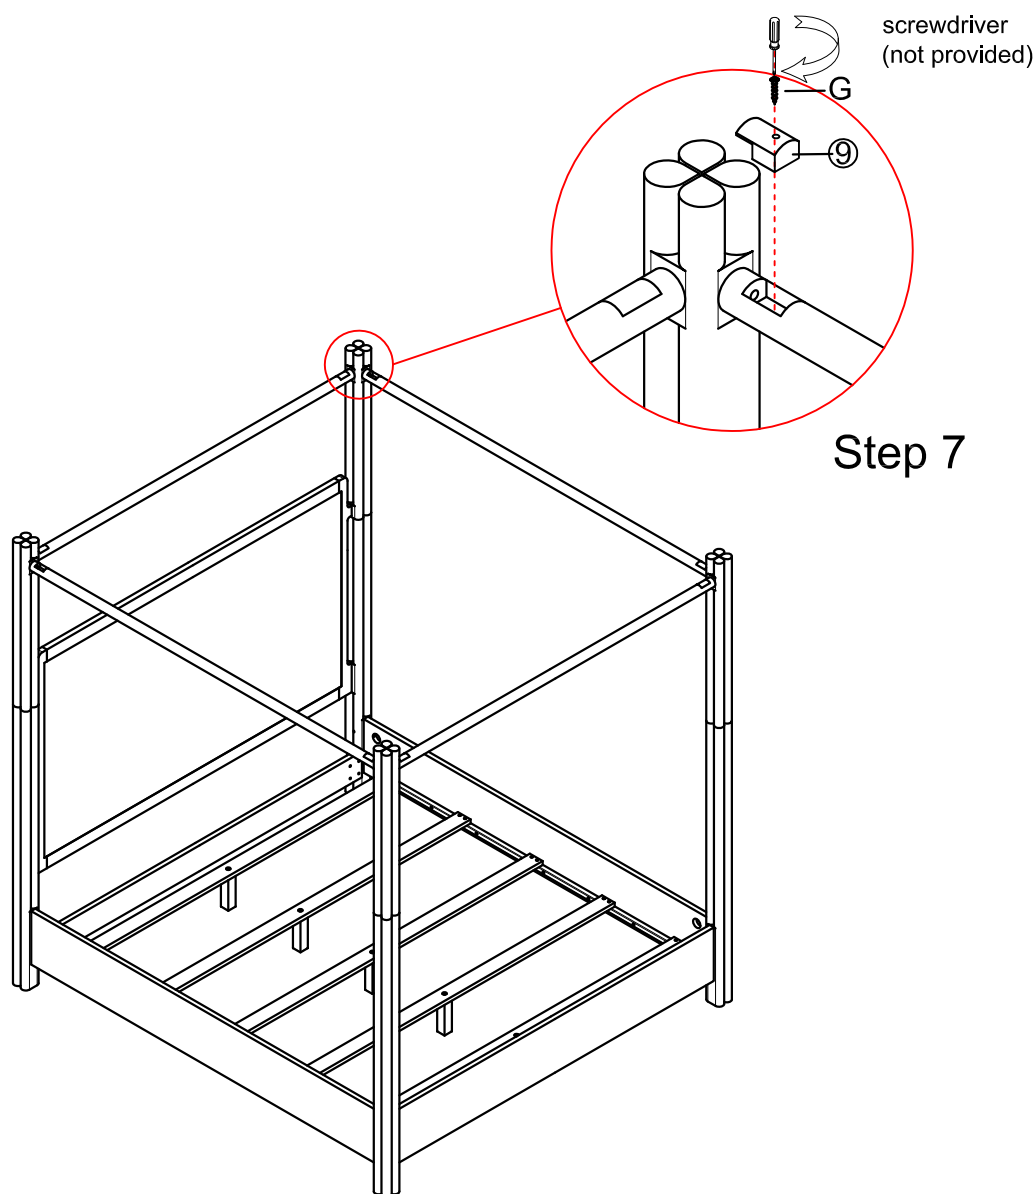

Step 6: Attach Wood Caps (9) to Canopy Rails (7&8) by using Screws (G), tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION


ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK OF RAILS				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	8 PCS
B		Curved Washer	Ø3/8"	8 PCS
C		Nut	Ø3/8"	16 PCS
D		Open Wrench	Ø3/8"	1 PC
E		Flat Washer	Ø3/8"	8 PCS
F		Threaded Rod	Ø3/8"*90mm	8 PCS
G		Screw	1 1/4"	8 PCS
H		Lock Washer	Ø3/8"	8 PCS

PART LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Headboard	1 PC
2		Rail	2 PCS
3		Footboard	1 PC
4		Footboard Post	2 PCS
5		Support Leg	5 PCS
6		Slat	5 PCS
7		Short Canopy Rail	2 PCS
8		Long Canopy Rail	2 PCS
9		Wood Cap	8 PCS


HARDWARE PACK OF FOOTBOARD				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	4 PCS
B		Curved Washer	Ø3/8"	4 PCS
C		Nut	Ø3/8"	4 PCS
D		Open Wrench	Ø3/8"	1 PC
G		Screw	1 1/4"	20 PCS

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
6950-90463-80 6/0 Pole Rattan Rails and Canopy
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

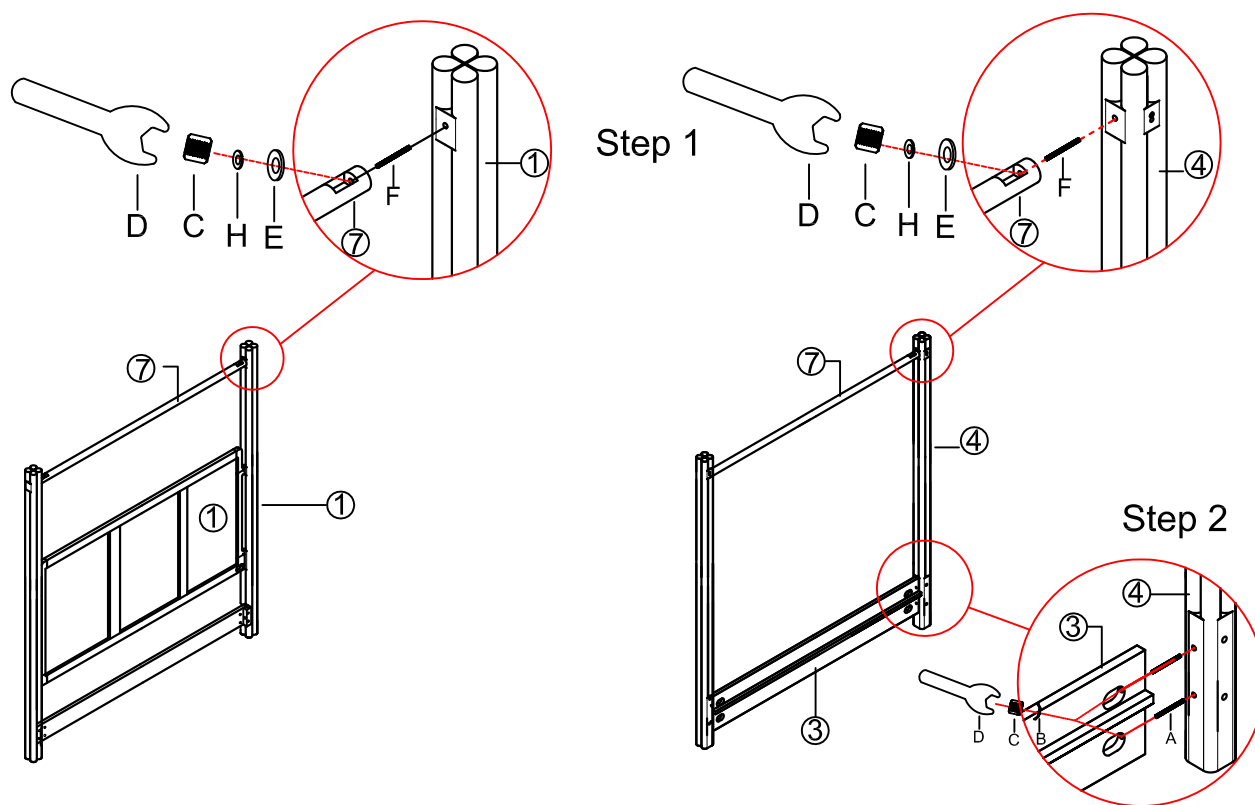

Step 1: Attach Short Canopy Rails (7) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .


Step 2: Attach Footboard (3) to Footboard Posts (4) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten all with Open Wrench (D).

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
 6950-90463-80 6/0 Pole Rattan Rails and Canopy
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

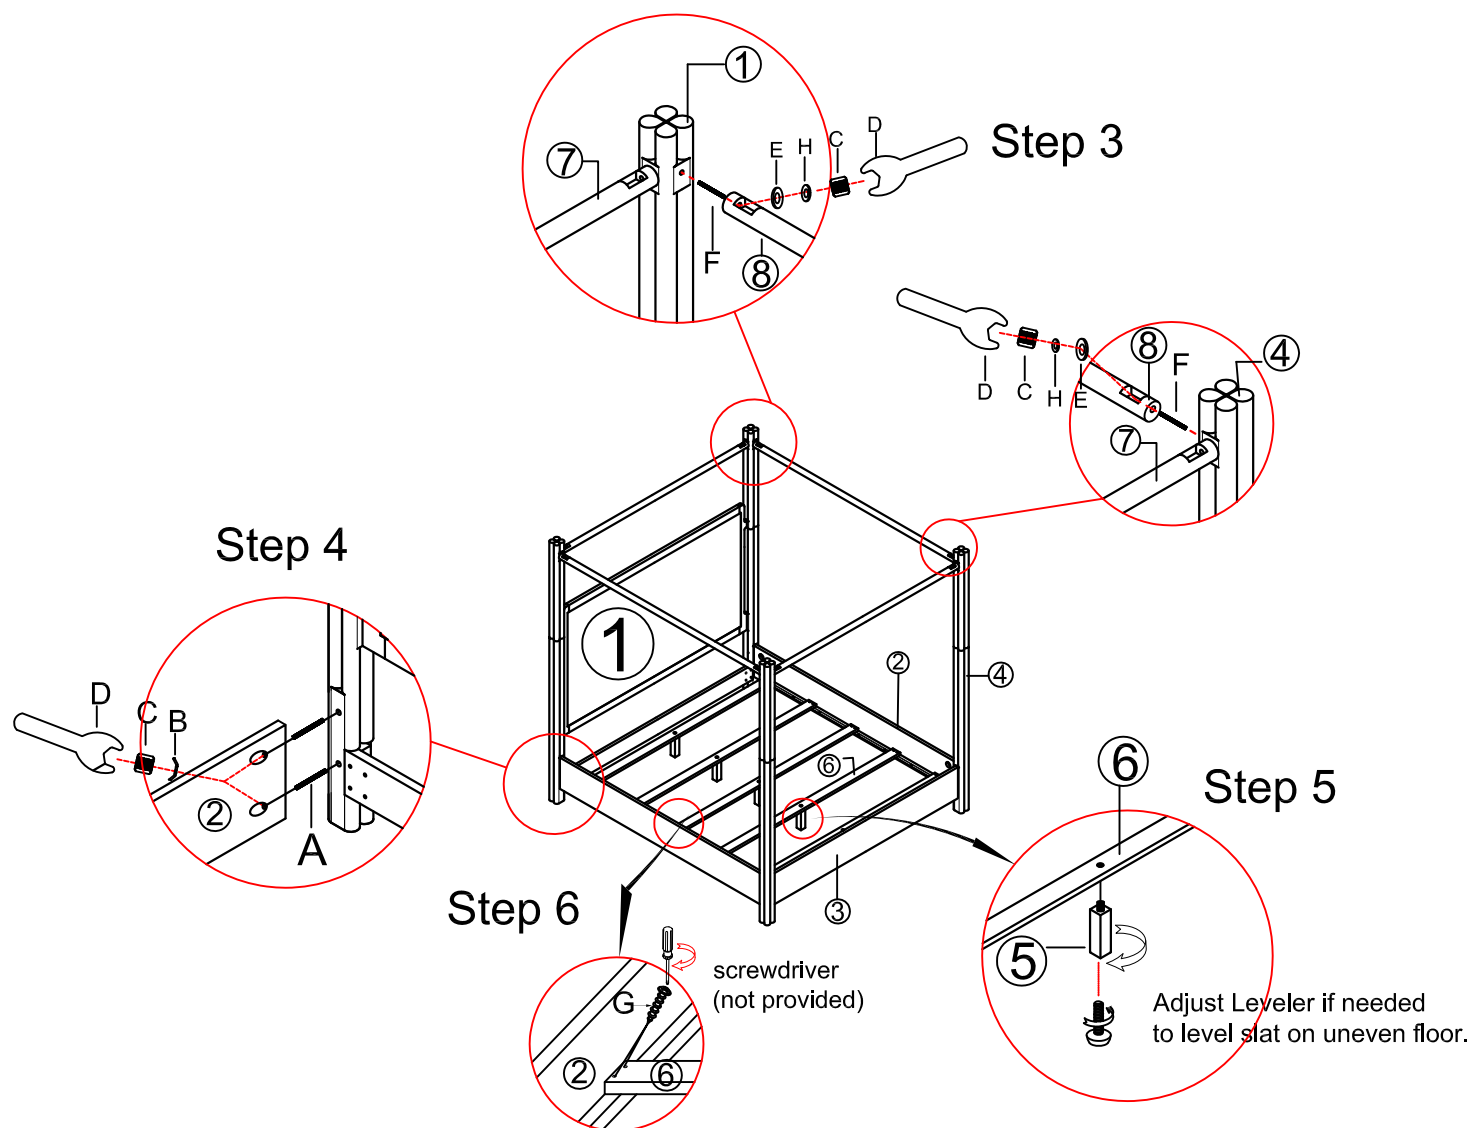

Step 3: Attach Long Canopy Rails (8) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .

Step 4: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .

Step 5: Attach Support Legs (5) to Slats (6).


Step 6: Attach Slats (6) to the Rails (2) and tighten them by using Phillips head screwdriver.

ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy
6950-90463-80 6/0 Pole Rattan Rails and Canopy
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

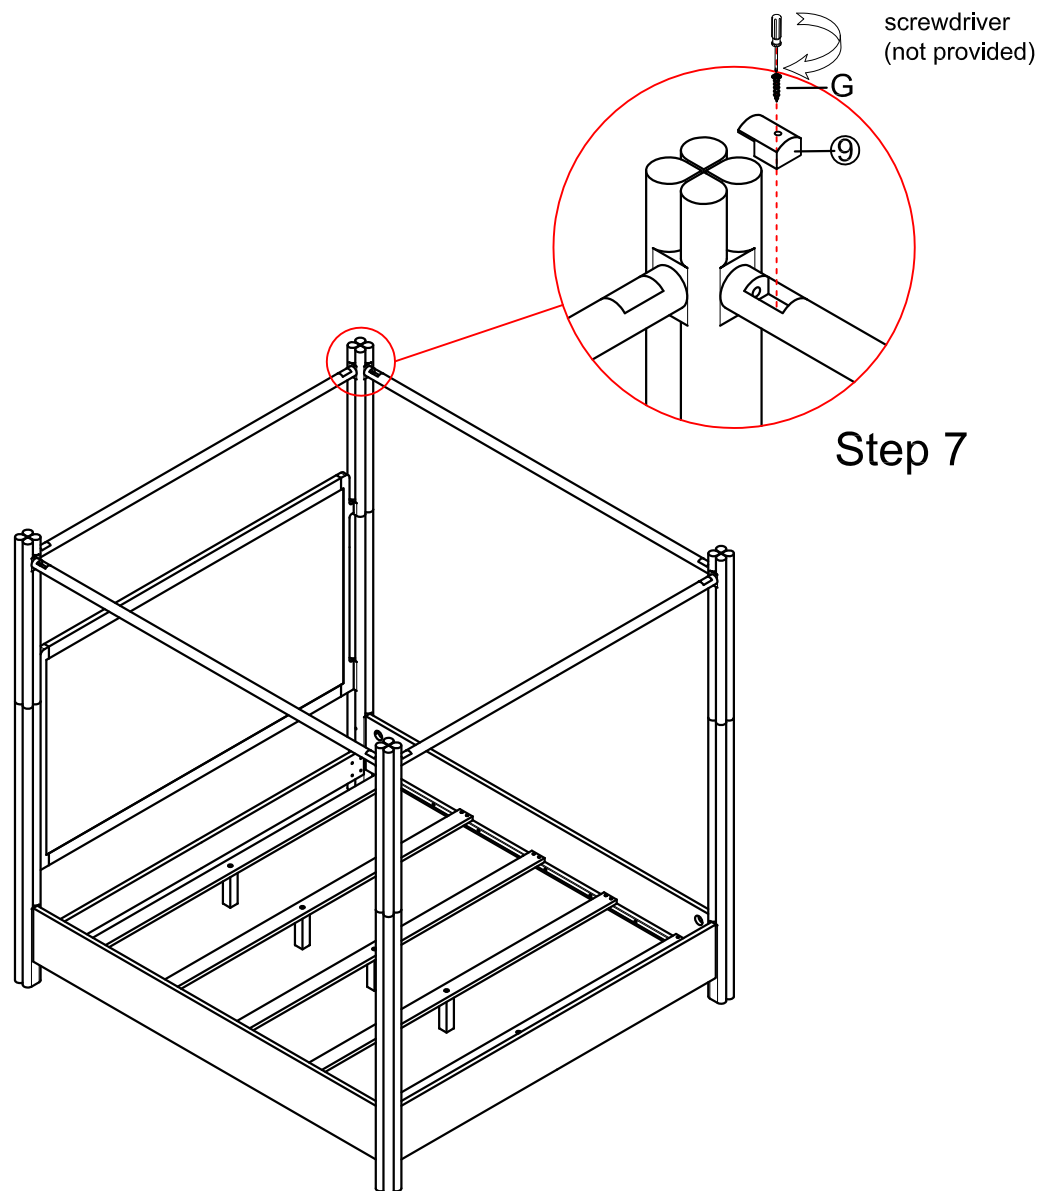

Step 6: Attach Wood Caps (9) to Canopy Rails (7&8) by using Screws (G), tighten them by using Phillips head screwdriver.