

ASSEMBLY INSTRUCTIONS

Item#: 5070-90008 MIRROR

Item#: 5070-90002 DRESSER

**** Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more persons.**

NO		Hardware List	Q'ty
C		Hook	2
D		Plastic Anchors	2
E		Mending Plate 1220mm	2
F		Screw 21mm	16



Diagram 1

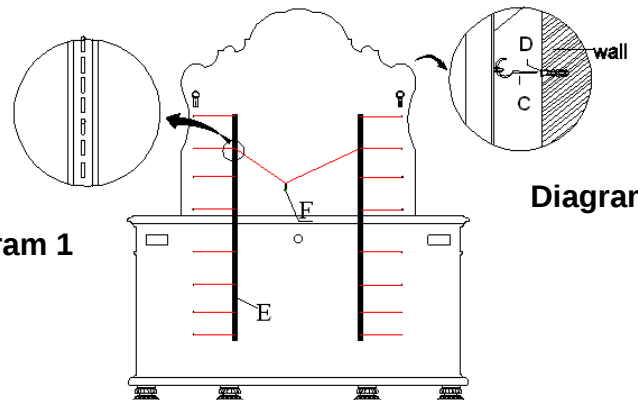


Diagram 2

Assembly Steps:

1. Place the mirror on top of the dresser. Be sure to position the mirror in the middle of the top. The back bottom edge of the mirror and the back edge of the top should be flushed.
2. Attach a mending plate (E) at back of mirror and back of dresser. Align holes on mending plate to the pre-drilled holes at the back of dresser and tighten 4pcs of screws (F) through the holes. Tighten another 4 screws at random location through mending plate to mirror frame with care. (See Diagram 1)
3. Repeat step 2 for another mending plate (E).

Note: The mirror can be hung to the wall alone by following steps below:

1. Drill two holes into the wall using 1/4" drill bit and insert the plastic anchors (D).
2. Screw hook (C) into plastic anchor (D). Check and make sure the plastic anchor (D) is securely held in the wall.
3. Set mirror in place and hang the metal rings attached at back of mirror on to the hook (C) (See diagram 2).

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTIONS

Item#: 5070-90008 MIRROR

Item#: 5070-90002 DRESSER

**** Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more persons.**

NO		Hardware List	Q'ty
C		Hook	2
D		Plastic Anchors	2
E		Mending Plate 1220mm	2
F		Screw 21mm	16



Diagram 1

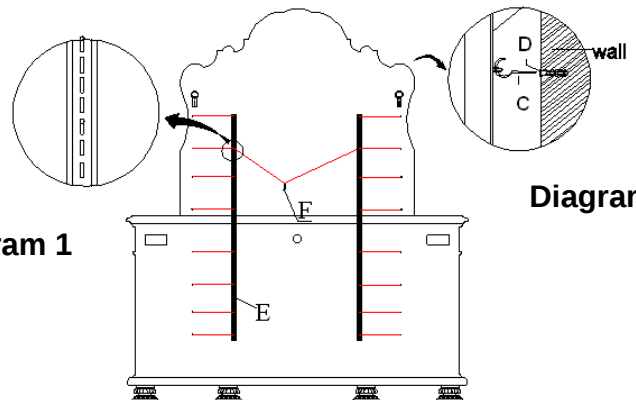


Diagram 2

Assembly Steps:

1. Place the mirror on top of the dresser. Be sure to position the mirror in the middle of the top. The back bottom edge of the mirror and the back edge of the top should be flushed.
2. Attach a mending plate (E) at back of mirror and back of dresser. Align holes on mending plate to the pre-drilled holes at the back of dresser and tighten 4pcs of screws (F) through the holes. Tighten another 4 screws at random location through mending plate to mirror frame with care. (See Diagram 1)
3. Repeat step 2 for another mending plate (E).

Note: The mirror can be hung to the wall alone by following steps below:

1. Drill two holes into the wall using 1/4" drill bit and insert the plastic anchors (D).
2. Screw hook (C) into plastic anchor (D). Check and make sure the plastic anchor (D) is securely held in the wall.
3. Set mirror in place and hang the metal rings attached at back of mirror on to the hook (C) (See diagram 2).

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION

ITEM: 5070-90010 Five Drawer Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

Hardware Pack

Part List


NO.	DRAWING	DESCRIPTION	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Anti - Tip Kit	1PC	1		Bun Foot	4PCS

Anti-tip kit is included for use. We recommend installing for safety reason.

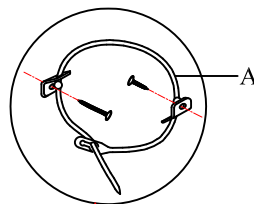


Tipping Restraint


Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

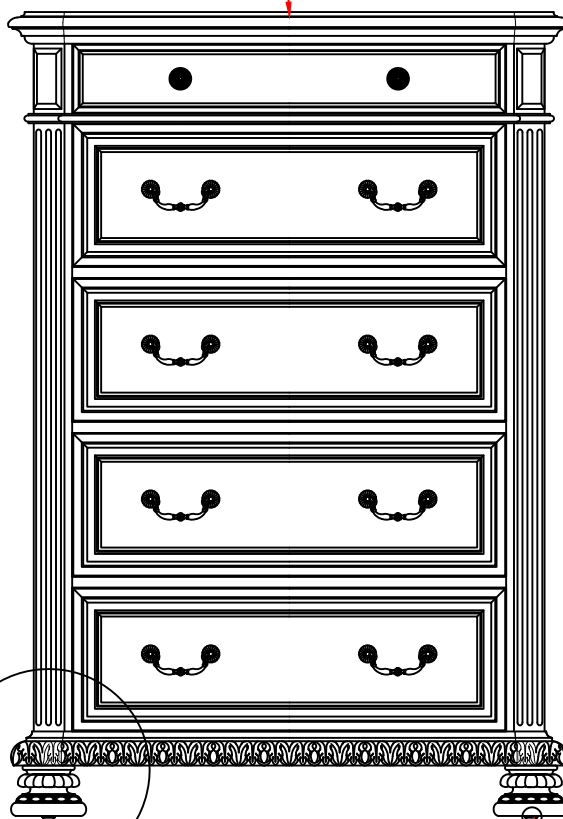

Step 1

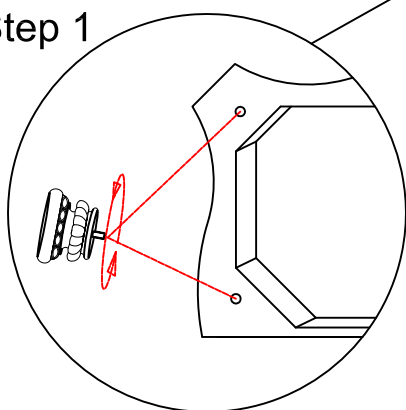


Step 2: Adjust Leveler if needed to level case on uneven floor.

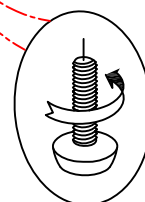

Bun Feet Assembly Instruction

*** Please make sure you have all parts prior to assembly.**

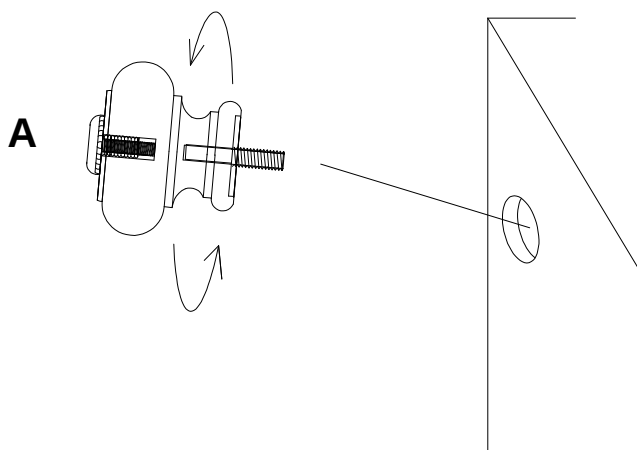


The Bun Feet (A) are packed in a individual box, and placed in case or bottom of case.

Install the bun feet with bolt in clockwise direction into the bottom of the case. (See diagram above)

Remove them by the reverse way.

If case in big size, it will have a center leg packed with bun feet together, the way for installing the center leg is same as above. Please see diagram below.

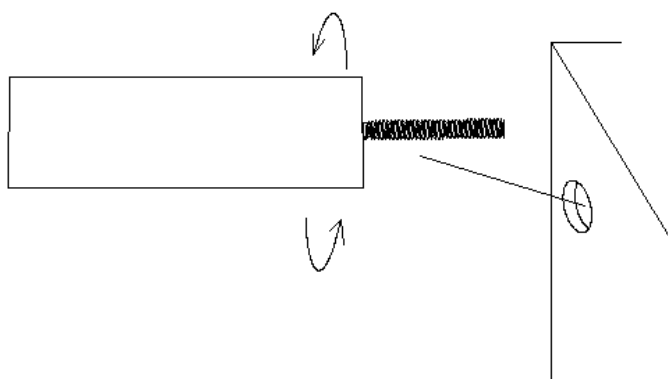

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.



Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


Hardware Pack

Part List

NO.	DRAWING	DESCRIPTION	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Anti - Tip Kit	1PC	1		Bun Foot	4PCS

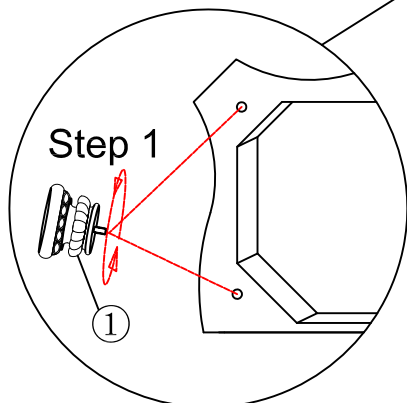
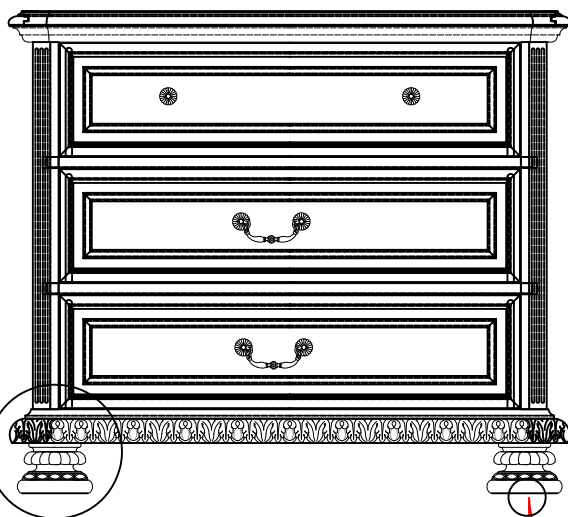


Tipping Restraint

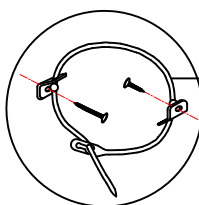

Anti-tip kit is included for use. We recommend installing for safety reason.

Step 2: Adjust Leveler if needed to level case on uneven floor.

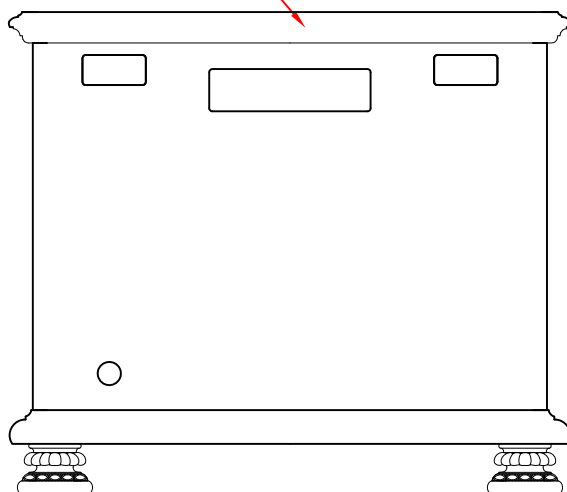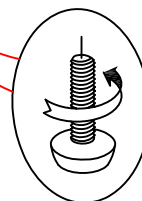

ASSEMBLY INSTRUCTION

ITEM# 5070-90267 6/6 PANEL HEADBOARD

5070-90268 6/6 Panel Footboard (C)

5070-90269 6/6 Panel Rails (C)

5070-90263 6/0 Panel Rails (C)

Caution: Please make sure you have all parts indicated below prior to assembly.

This unit is heavy and can best be assembled with the help of two or more persons.

NO.	HARDWARE LIST		Q'TY
E		NUT	8
F		SPANNER WRENCH	8
G		CURVED WASHER	8
H		FULL THREADED BOLT	8
K		SCREW	20
R		4MM ALLEN WRENCH	1
Q		1/4" * 35MM BOLT	10
V		1/4" LOCK WASHER	10
U		1/4" FLAT WASHER	10
M		5MM ALLEN WRENCH	1
N		5/16" * 40MM BOLT	9
O		5/16" LOCK WASHER	9
P		5/16" FLAT WASHER	9

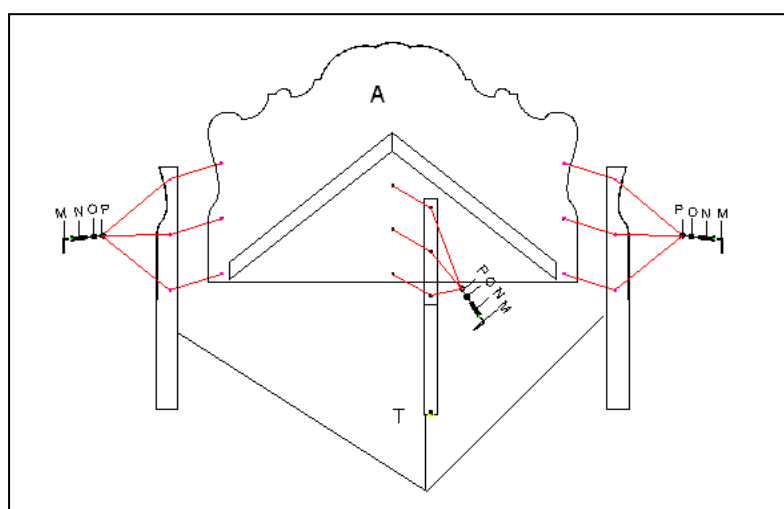
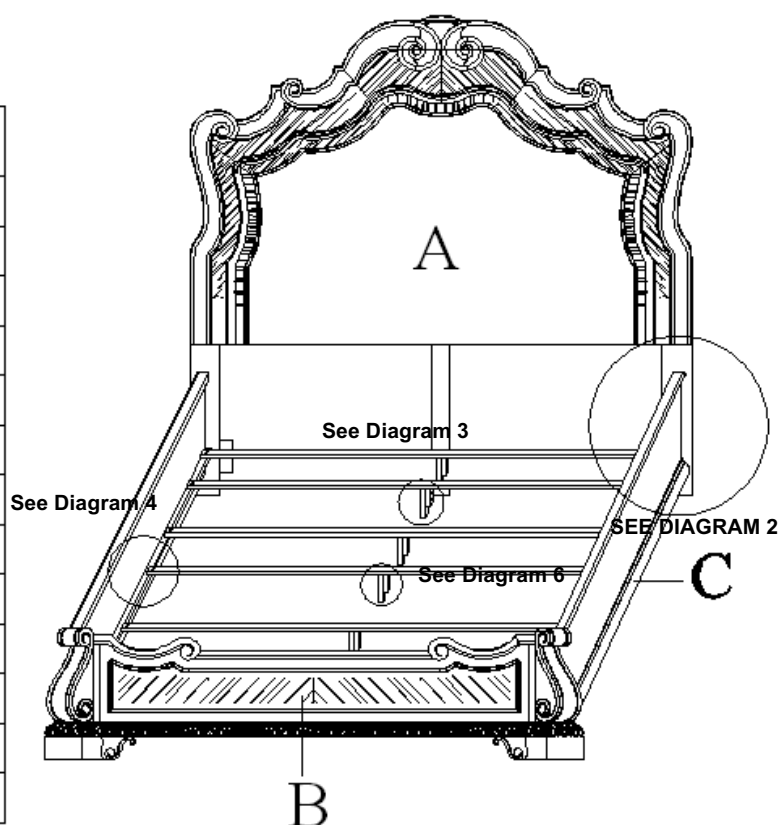


DIAGRAM 1

There are 2 hardware bags.

One is to assemble K/D posts to HB panel which is attached at the back of HB.

One is to assemble side rails to HB&FB which is in the box of side rails.

Please note.

Assembly steps:

1. Attach two side posts (T) to each side of the back of the headboard (A) using bolts (N), lock washers (O) and flat washers (P). Secure bolts (N) by allen wrench (M) as shown in diagram 1. Then attach the middle post (T) to the center of headboard (A) in the same way. (See Diagram 1)

2. Insert 2 bolts (H) into holes of each side post on Headboard (A) and on Footboard (B), attach the end of side rails (C) to bolts (H) on posts using 2 curved washers (G) and 2 nuts (E), tighten nuts (E) securely with the spanner wrench (F). (See diagram 2)

Note: Please make sure the end of side rail with a rail must be placed on top when assembling 6/0 panel rails.(see diagram 7)

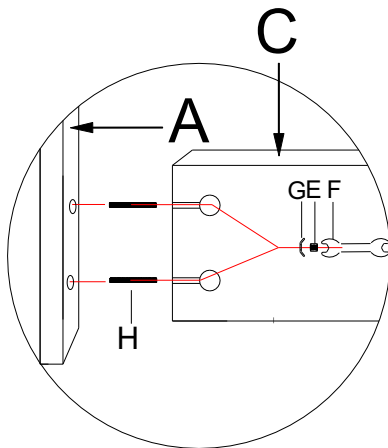


Diagram 2

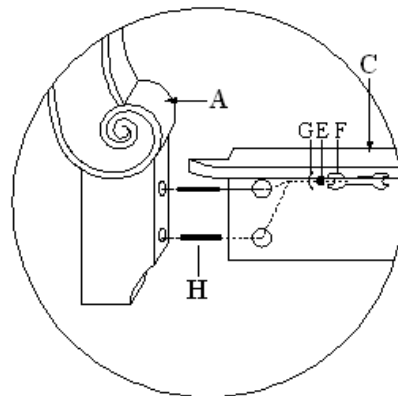


Diagram 7

3. Take out the center supports (L) from the rail box, attach center supports (L) to slats(D) using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using allen wrench (R). (See diagram 3)

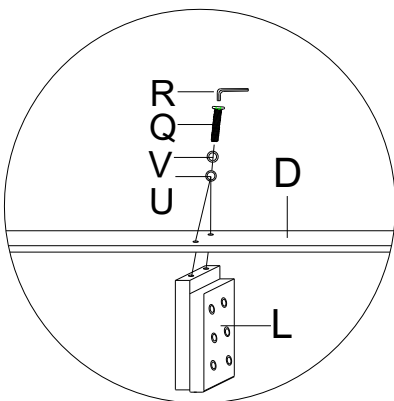


Diagram 3

4. Attach slats (D) to side rails (C), align pre-drilled holes on the slat to holes on the cleat of side rail (C), using screws (K) to tighten both. (See diagram 4)

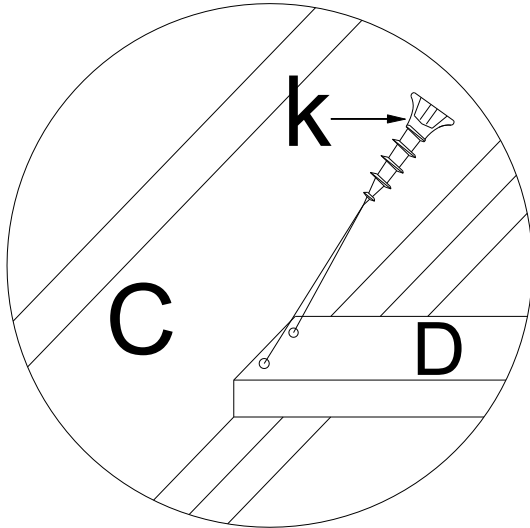


Diagram 4

Note: You can change the height of slat by adjusting the height of cleat on side rails as shown in diagram 5, remove bolt (I), lock washer (W) and flat washer (J) from the cleat by turning the bolt (I) with allen wrench (M) in anti-clockwise direction, adjust the cleat to a desired position, and then secure lock washer, flat washer, bolt in a clockwise direction by turning with allen wrench(M).

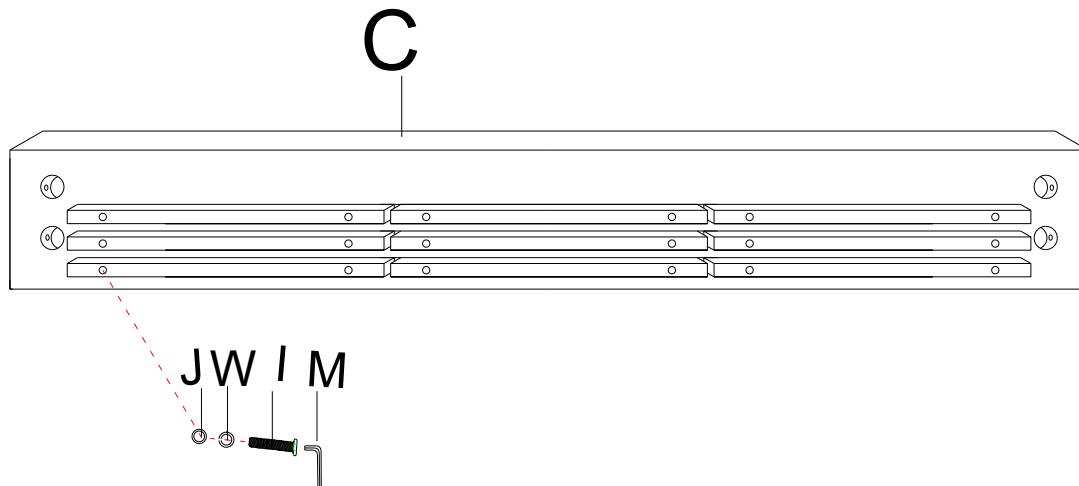


Diagram 5

You can adjust the height of center supports (L) as shown in Diagram 6 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).

2. Adjust the height of center supports, align the holes on 2pcs of woods and tighten them together with 2 bolts(Q), 2 lock washers (V) and 2 flat washers (U) by turning with allen wrench(R) in a clockwise direction.

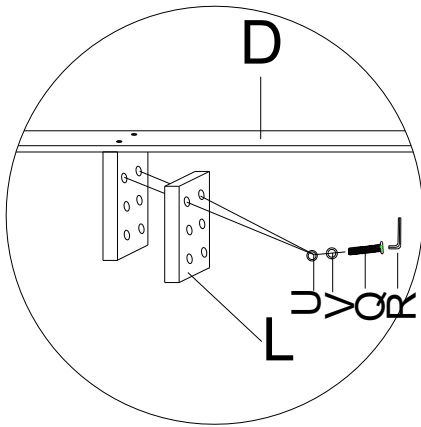


Diagram 6

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION

ITEM# 5070-90267 6/6 PANEL HEADBOARD

5070-90268 6/6 Panel Footboard (C)

5070-90269 6/6 Panel Rails (C)

5070-90263 6/0 Panel Rails (C)

Caution: Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more persons.

NO.	HARDWARE LIST		Q'TY
E		NUT	8
F		SPANNER WRENCH	8
G		CURVED WASHER	8
H		FULL THREADED BOLT	8
K		SCREW	20
R		4MM ALLEN WRENCH	1
Q		1/4" * 35MM BOLT	10
V		1/4" LOCK WASHER	10
U		1/4" FLAT WASHER	10
M		5MM ALLEN WRENCH	1
N		5/16" * 40MM BOLT	9
O		5/16" LOCK WASHER	9
P		5/16" FLAT WASHER	9

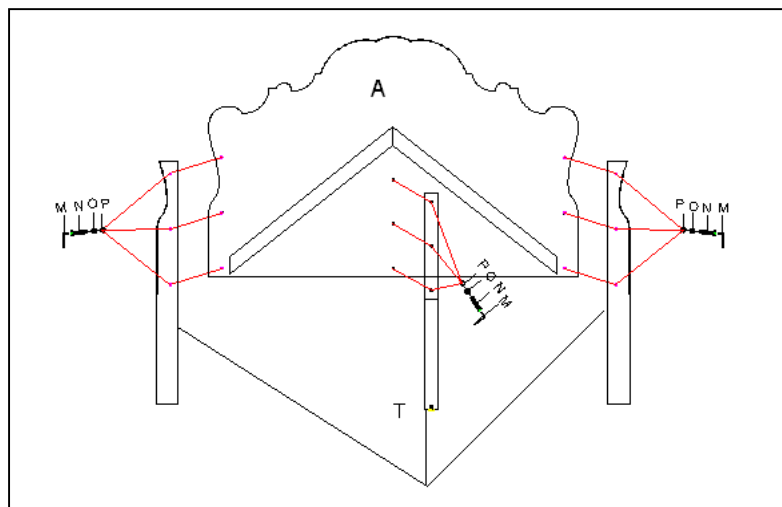
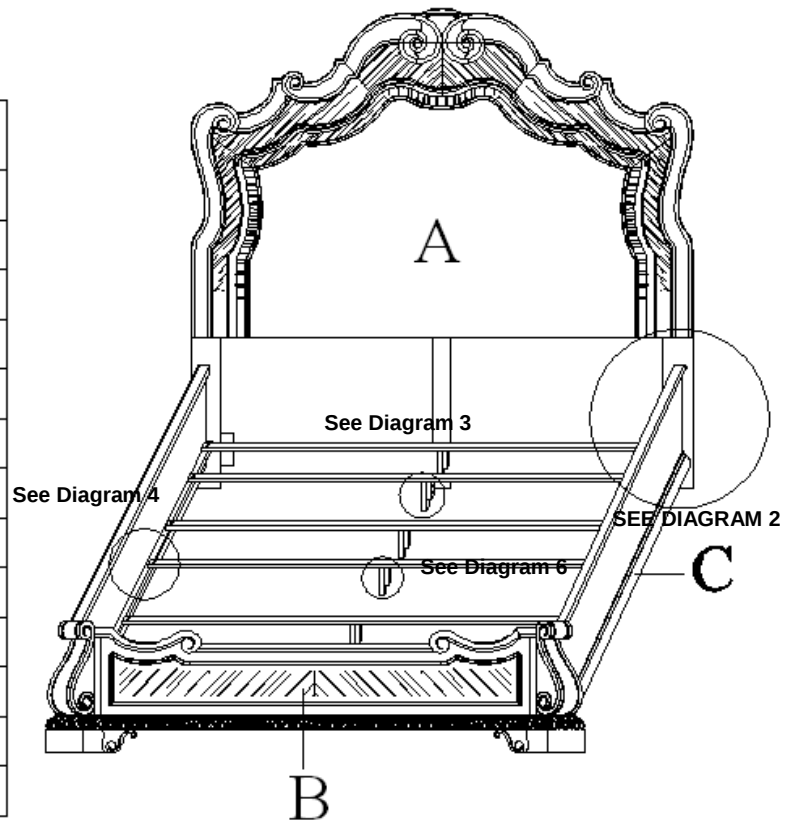


DIAGRAM 1

There are 2 hardware bags.

One is to assemble K/D posts to HB panel which is attached at the back of HB.

One is to assemble side rails to HB&FB which is in the box of side rails.

Please note.

Assembly steps:

1. Attach two side posts (T) to each side of the back of the headboard (A) using bolts (N), lock washers (O) and flat washers (P). Secure bolts (N) by allen wrench (M) as shown in diagram 1. Then attach the middle post (T) to the center of headboard (A) in the same way. (See Diagram 1)

2. Insert 2 bolts (H) into holes of each side post on Headboard (A) and on Footboard (B), attach the end of side rails (C) to bolts (H) on posts using 2 curved washers (G) and 2 nuts (E), tighten nuts (E) securely with the spanner wrench (F). (See diagram 2)

Note: Please make sure the end of side rail with a rail must be placed on top when assembling 6/0 panel rails.(see diagram 7)

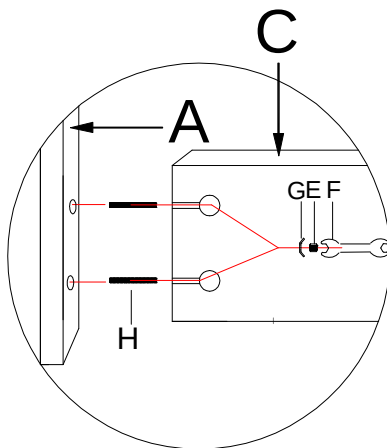


Diagram 2

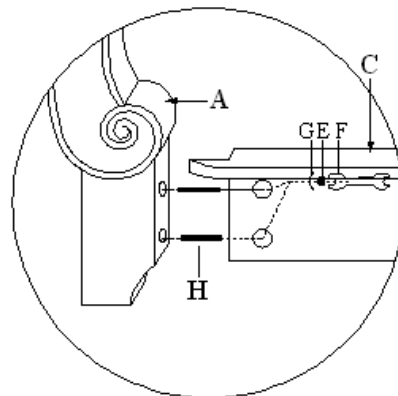


Diagram 7

3. Take out the center supports (L) from the rail box, attach center supports (L) to slats (D) using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using allen wrench (R). (See diagram 3)

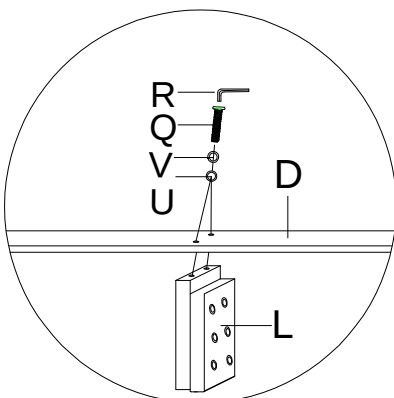


Diagram 3

4. Attach slats (D) to side rails (C), align pre-drilled holes on the slat to holes on the cleat of side rail (C), using screws (K) to tighten both. (See diagram 4)

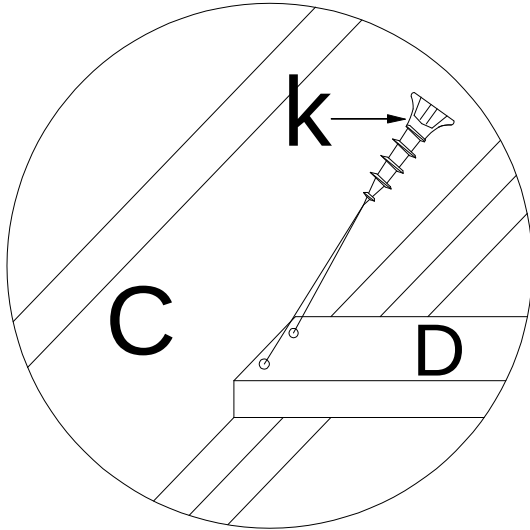


Diagram 4

Note: You can change the height of slat by adjusting the height of cleat on side rails as shown in diagram 5, remove bolt (I), lock washer (W) and flat washer (J) from the cleat by turning the bolt (I) with allen wrench (M) in anti-clockwise direction, adjust the cleat to a desired position, and then secure lock washer, flat washer, bolt in a clockwise direction by turning with allen wrench(M).

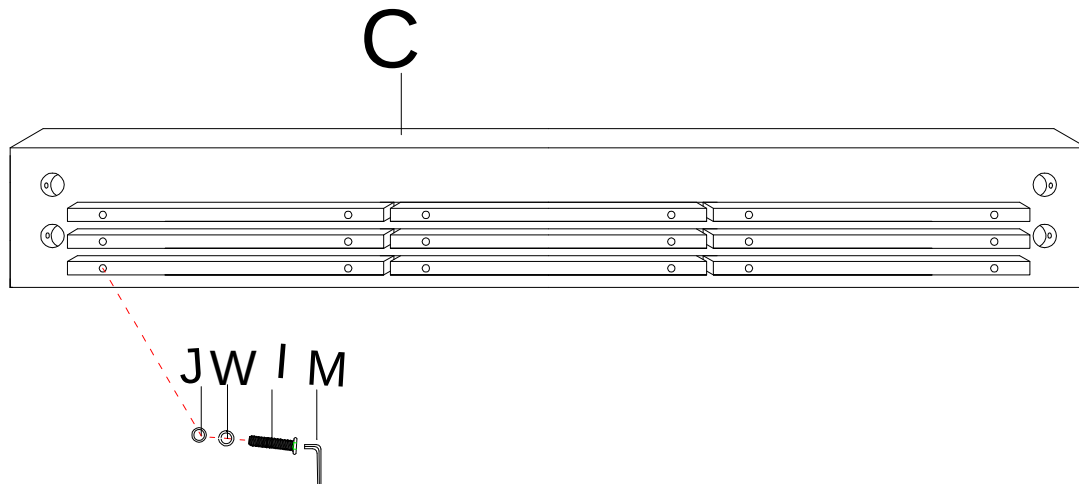


Diagram 5

You can adjust the height of center supports (L) as shown in Diagram 6 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).

2. Adjust the height of center supports, align the holes on 2pcs of woods and tighten them together with 2 bolts(Q), 2 lock washers (V) and 2 flat washers (U) by turning with allen wrench(R) in a clockwise direction.

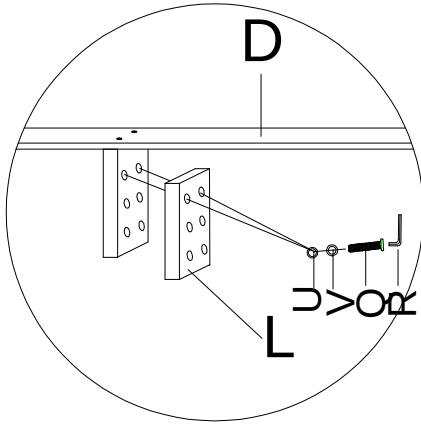


Diagram 6

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.

ASSEMBLY INSTRUCTION

ITEM# 5070-90567 6/6 Tufted Headboard (N)


5070-90568 6/6 Tufted Footboard (C)

5070-90569 6/6 Tufted Rails (C)

5070-90563 6/0 Tufted Rails (C)

Caution: Please make sure you have all parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more persons.

NO.	HARDWARE LIST		Q'TY
E		NUT	8
F		SPANNER WRENCH	1
G		CURVED WASHER	8
H		FULL THREADED BOLT	8
K		SCREW	20
R		4mm ALLEN WRENCH	1
Q		BOLT	10
V		LOCK WASHER	10
U		FLAT WASHER	10
M		5mm ALLEN WRENCH	1

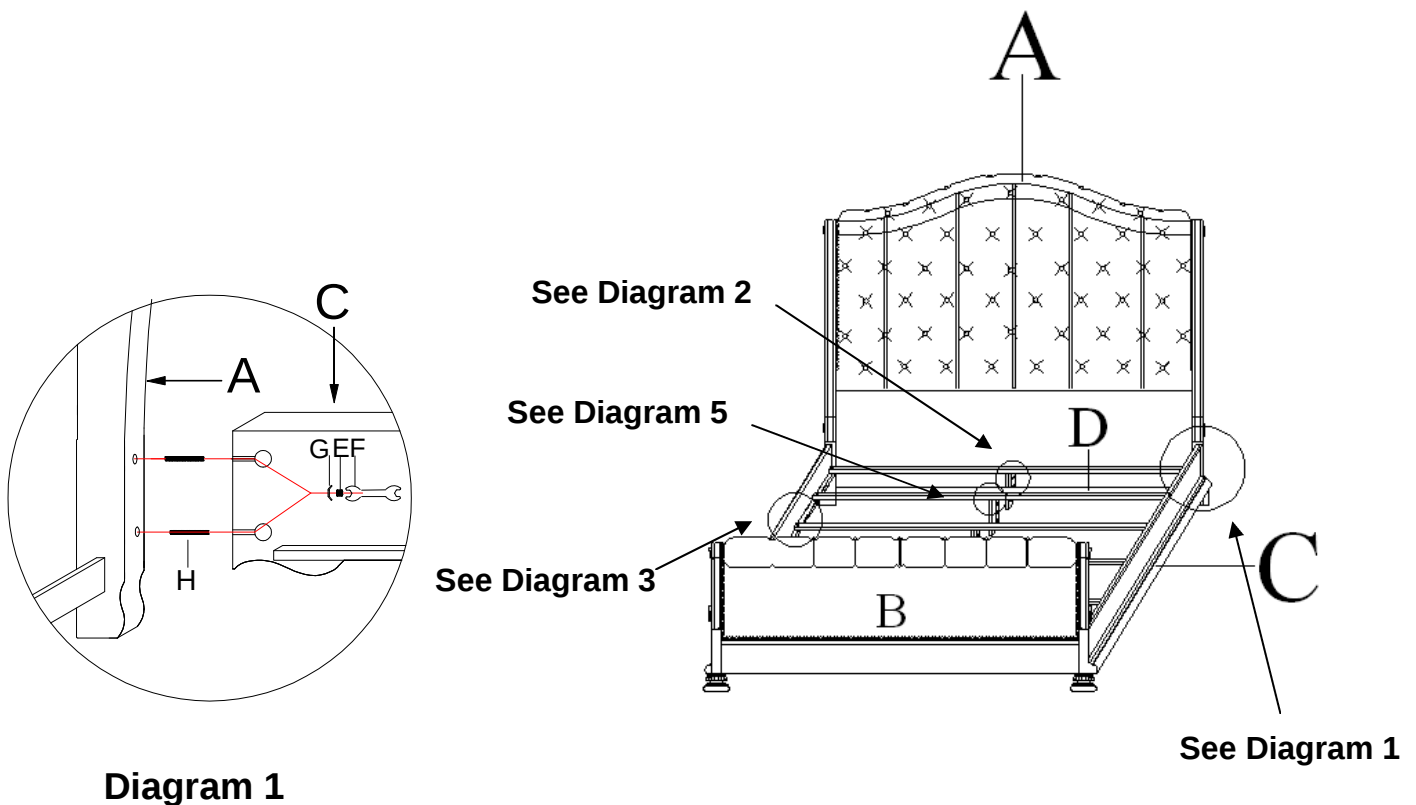

Assembly steps:

1. Insert 2 bolts (H) into holes of each post on Headboard (A) and Footboard (B). Attach the end of side rails (C) to bolts (H) on posts using 2 curved washers (G) and 2 nuts (E). Tighten nuts (E) securely with spanner wrench (F). (See diagram 1)

Note: Please make sure the end of side rail with rail must be placed on top when assembling 6/0 upholstered rails. (See diagram 7)

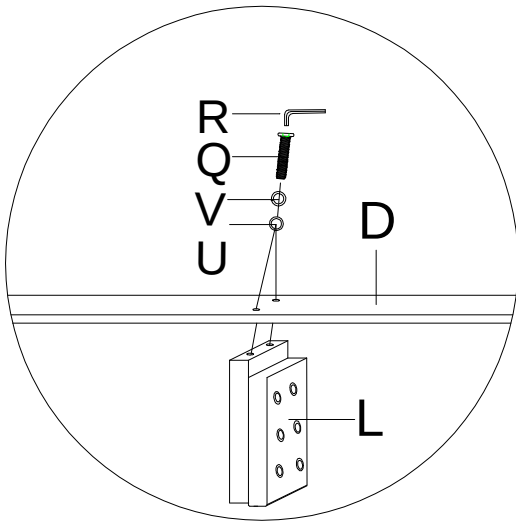


Diagram 2

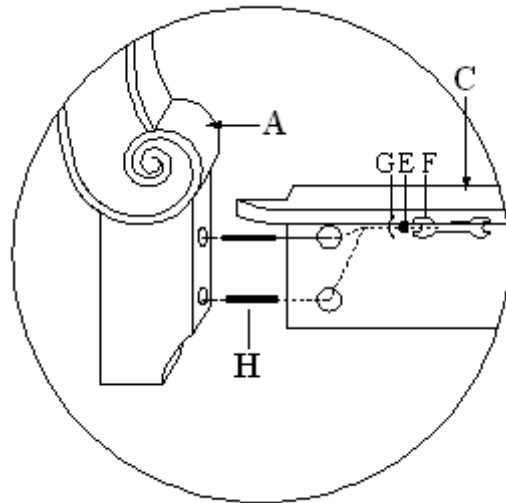


Diagram 7

2. Take out center supports (L) from the rail box. Attach center supports (L) to slats using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using allen wrench (R). (See diagram 2)

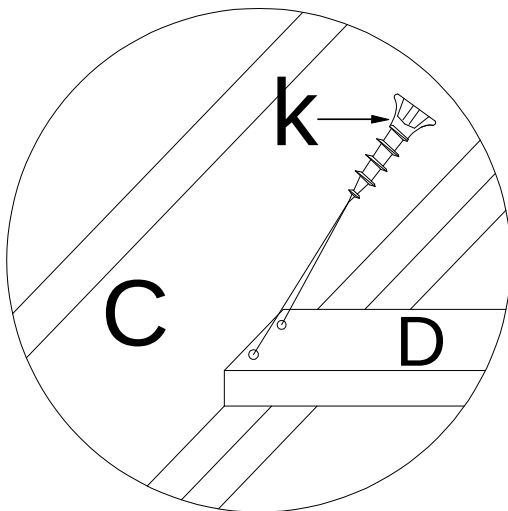


Diagram 3

3. Attach slats (D) to side rails (C), align pre-drilled holes on the slat to holes on the cleat of side rail (C), using screws (K) to tighten both. (See diagram 3)

Note: You can change the height of slat by adjusting the height of the cleat on side rails as shown in diagram 4. Remove bolt (N), lock washer (O) and flat washer (P) from cleat by turning the bolt (N) with allen wrench (M) in anti-clockwise direction, adjust the cleat to a desired position, and then secure lock washer, flat washer, bolt in a clockwise direction by turning with allen wrench.

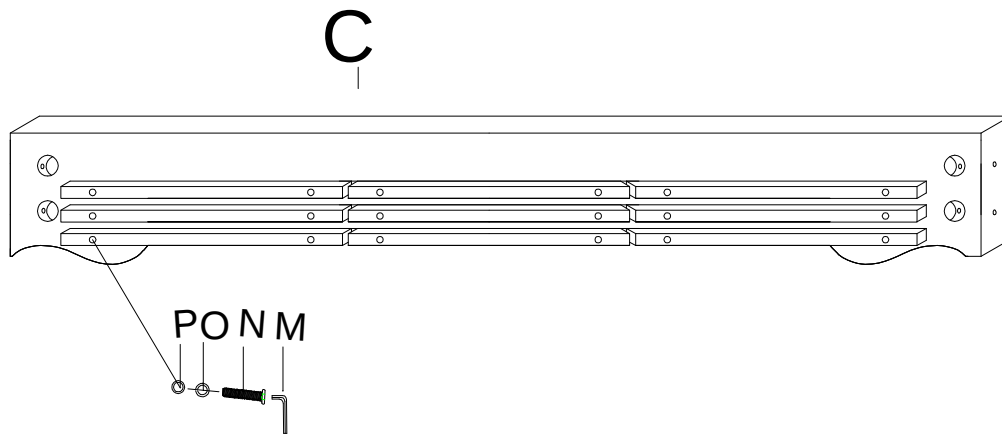


Diagram 4

You can adjust the height of center supports (L) as shown in Diagram 5 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).
2. Adjust the height of center supports, align the holes on 2pcs of woods and tighten them together with 2 bolts(Q), 2 lock washers (V) and 2 flat washers (U) by turning with allen wrench(R) in a clockwise direction.

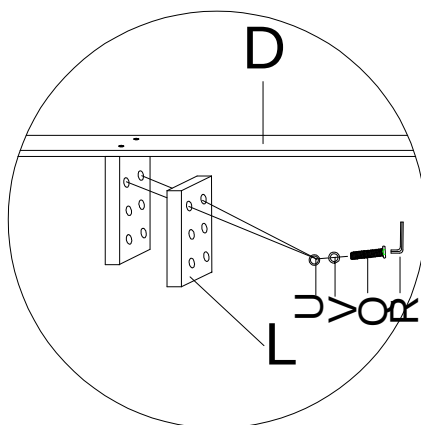


Diagram 5

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.