


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Hook	4*53mm	2 PCS
B		Plastic Anchor	∅ 9*30mm	2 PCS

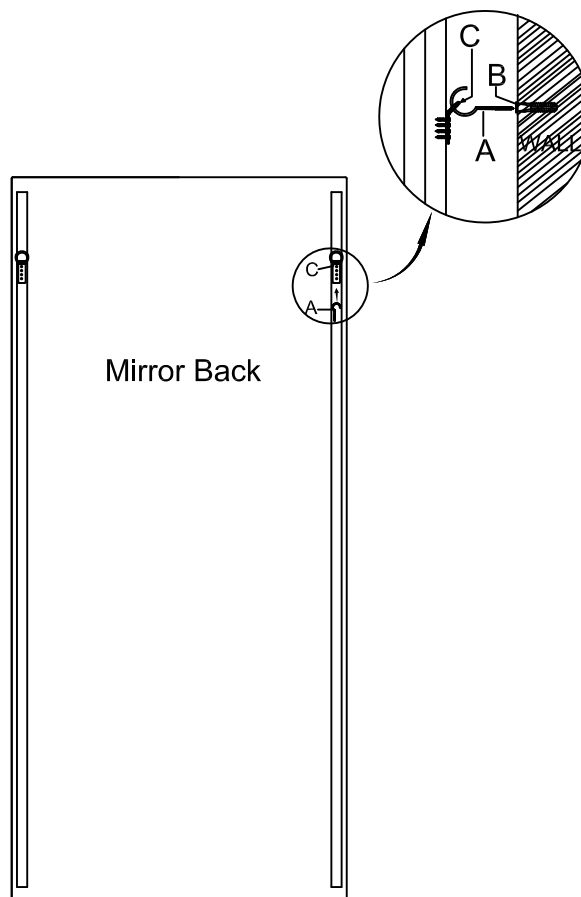

Assembly Steps:

1. Drill two holes into the wall using 1/4" drill bit (not provided) at the desired place you want to set the mirror and insert plastic anchors (B).
2. Screw hooks (A) into the plastic anchors (B). Check and make sure the plastic anchors (B) are securely held in the wall.
3. Hang the metal rings (C) onto the hooks (A) and set the mirror in the angle you want.

ASSEMBLY INSTRUCTION

ITEM: 6350-85001-03 Cruiser Accent Chest
6350-85001-45 Cruiser Accent Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.



Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

Anti-tip kit is included for use.
We recommend installing for
safety reason.

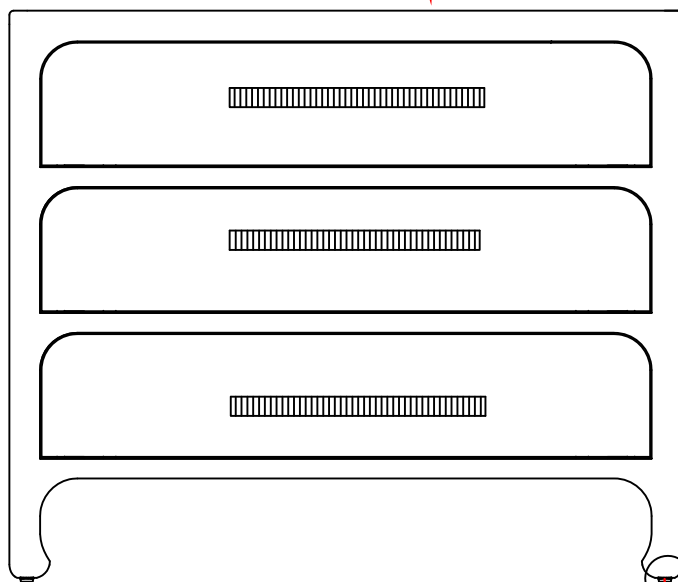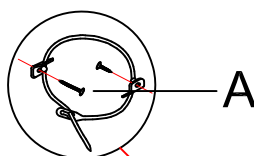

Adjust leveler if needed to level
the chest on uneven floor.

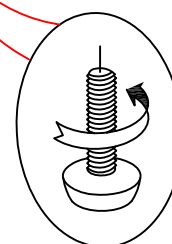

Note: Anti-tip kit restraint is provided.
Please follow the instructions enclosed with the pack.


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC


Tipping Restraint

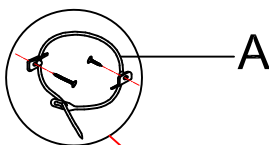

Anti-tip kit is included for use.
We recommend installing for
safety reason.

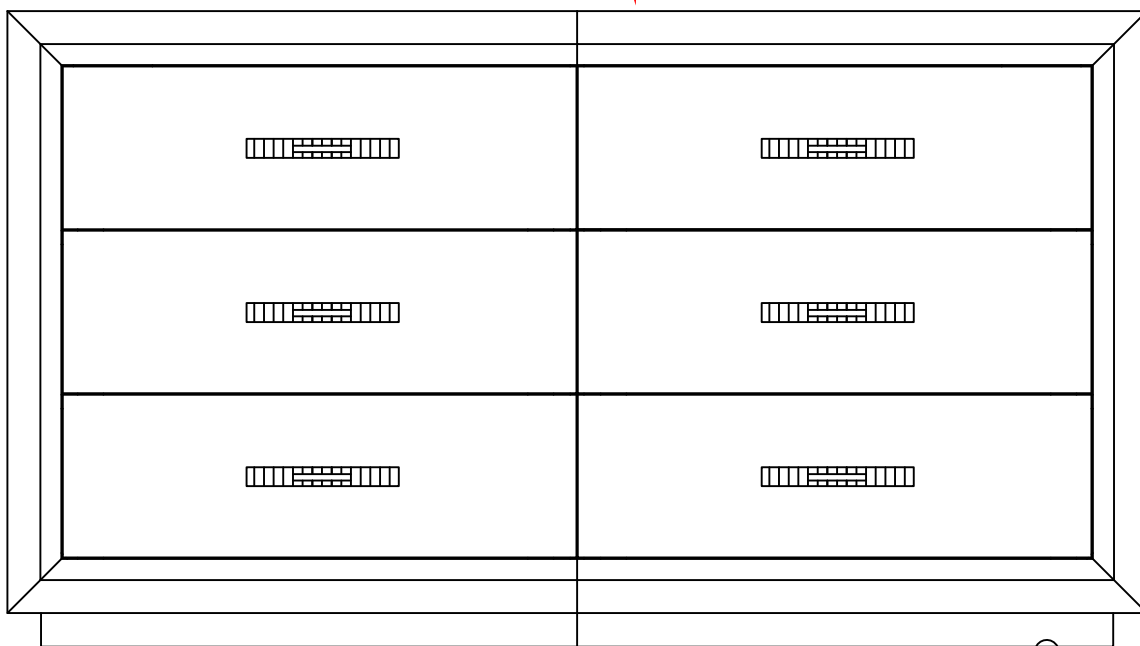

Adjust leveler if needed to level
dresser on uneven floor.

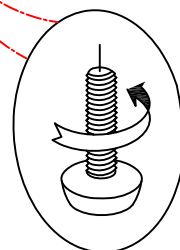


Note: Anti-tip kit restraint is provided.
Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6350-90007-04 Amelia Oval Mirror
 6350-90002-95 Mainstay Six Drawer Dresser
 6350-90203-03 Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.





Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Allen Wrench	69*27.2*4mm	1 PC	1		Mirror Support	1 PC
B		Bolt	1/4"	5 PCS				
C		Lock Washer	1/4"	5 PCS				
D		Flat Washer	1/4"	5 PCS				
E		Hook	4*53mm	4 PCS				
F		Plastic Anchor	∅ 9*30mm	4 PCS				

Note:

- 6350-90007-04 mirror can be mounted horizontally or vertically.
- 6350-90007-04 mirror can be assembled with 6350-90002-95 or 6350-90203-03 dresser.

When using mirror only, hang the metal ring (G) onto the hook (E).

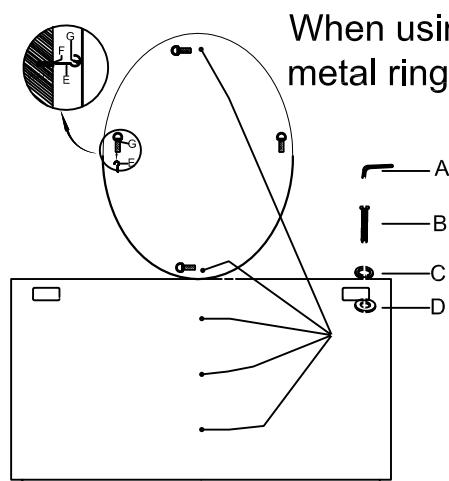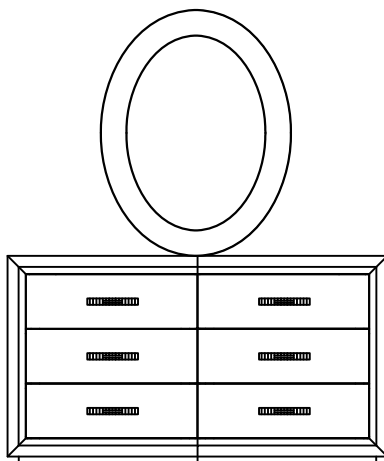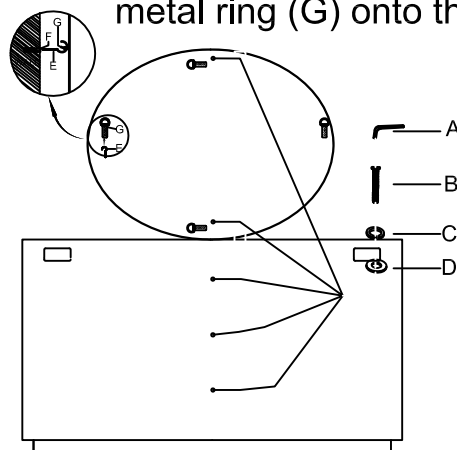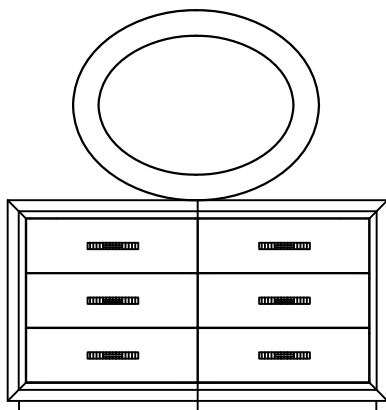

When using mirror only, hang the metal ring (G) onto the hook (E).

ASSEMBLY INSTRUCTION

ITEM: 6350-90008-80 Bora Landscape Mirror
6350-90202-80 Harbour Nine Drawer Dresser
6350-90203-03 Dresser

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.



Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Screw		18 PCS
B		Hook	4*53mm	2 PCS
C		Plastic Anchor	Ø 9*30mm	2 PCS

PARTS LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Mirror Support	2 PCS

Note:

- 6350-90008-80 mirror can be mounted horizontally or vertically.
- 6350-90008-80 mirror can be assembled with 6350-90202-80 or 6350-90203-03 dresser.

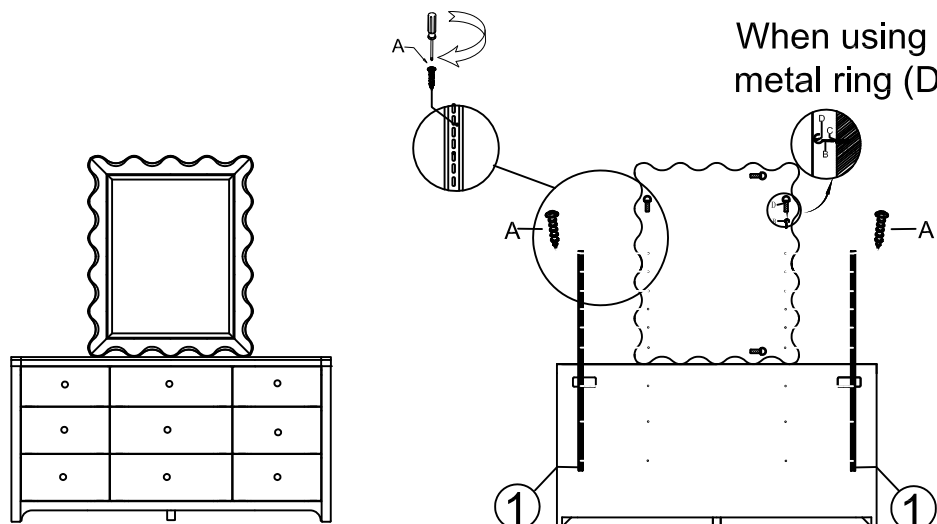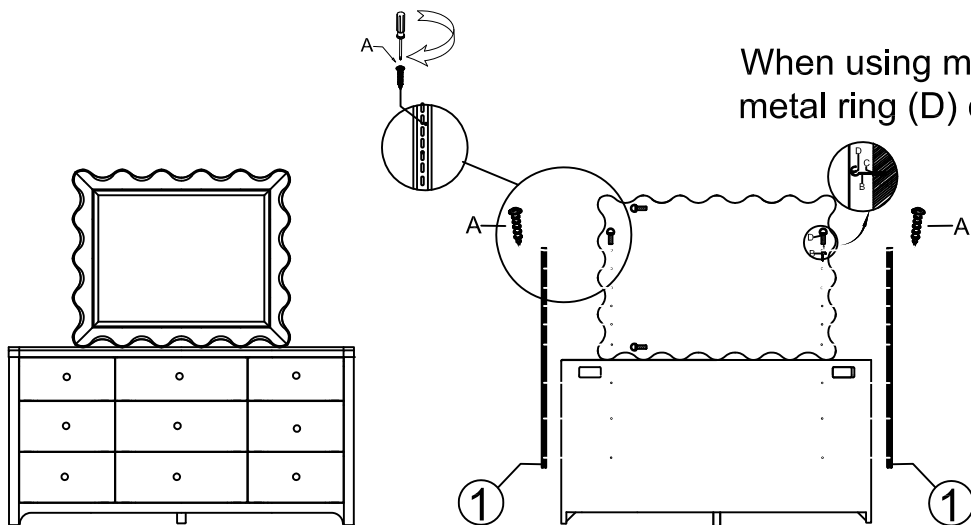


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.



HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint



Anti-tip kit is included for use.
We recommend installing for
safety reason.

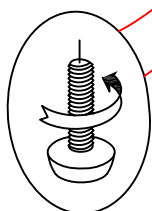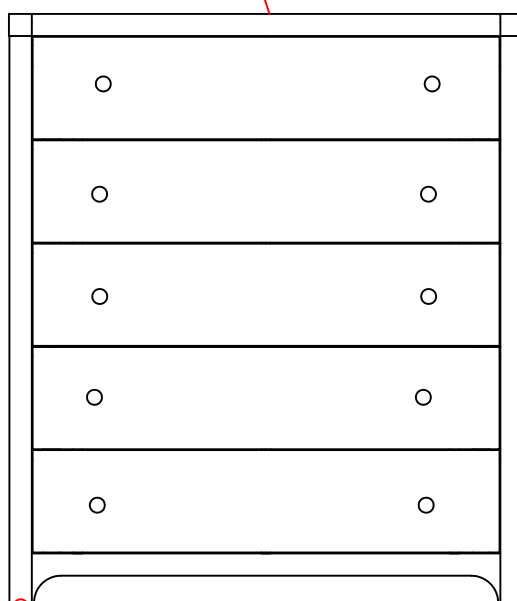

Adjust leveler if needed to level
drawer chest on uneven floor.


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC


Tipping Restraint

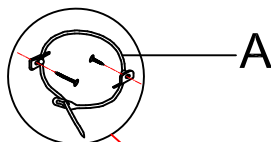

Anti-tip kit is included for use.
We recommend installing for
safety reason.

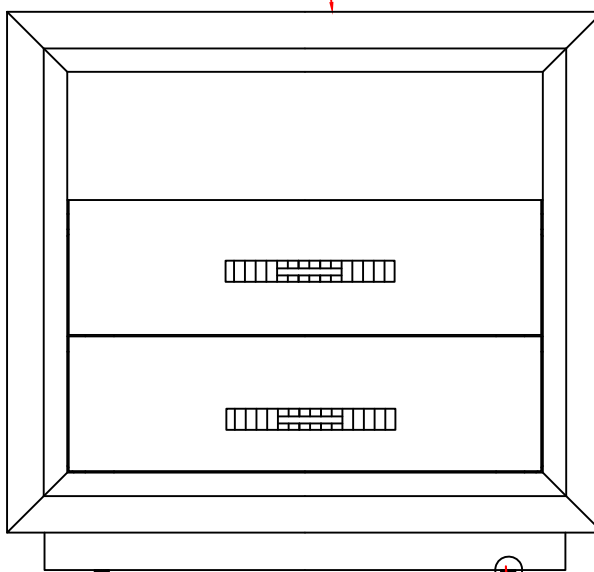

Adjust leveler if needed to level
nightstand on uneven floor.

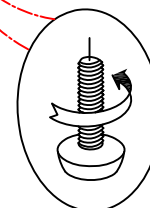


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC


Tipping Restraint

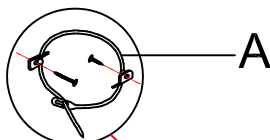

Anti-tip kit is included for use.
We recommend installing for
safety reason.

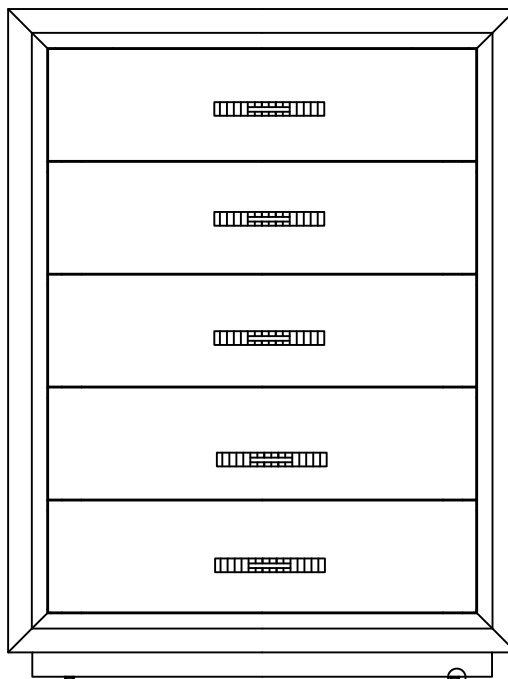

Adjust leveler if needed to level
drawer chest on uneven floor.

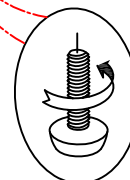

Note: Anti-tip kit restraint is provided.
Please follow the instructions enclosed with the pack.


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.



HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

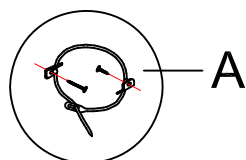

Anti-tip kit is included for use.
We recommend installing for
safety reason.

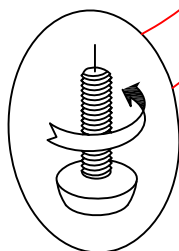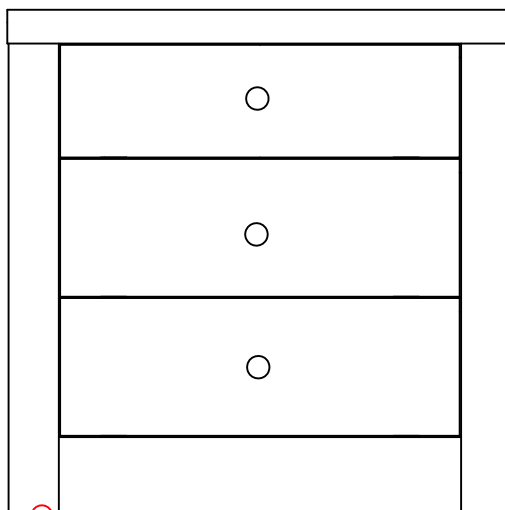

Adjust leveler if needed to level
nightstand on uneven floor.


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.



HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

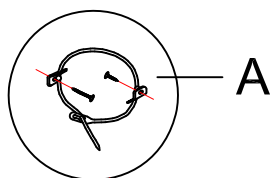

Anti-tip kit is included for use.
We recommend installing for
safety reason.

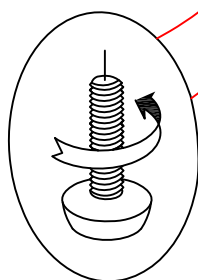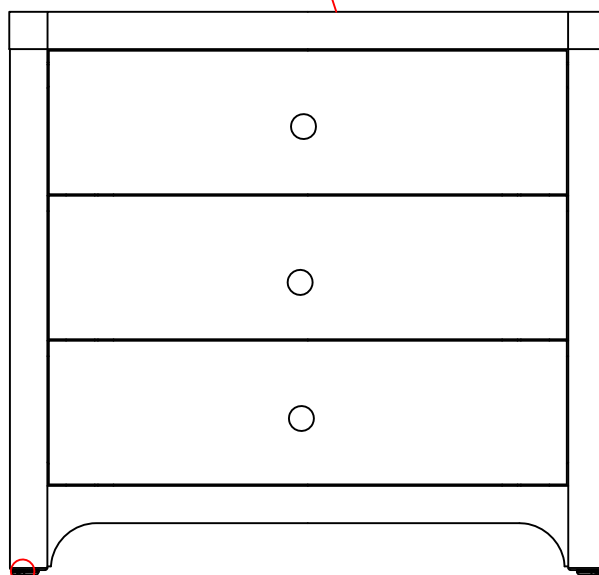

Adjust leveler if needed to level
nightstand on uneven floor.

Note: Anti-tip kit restraint is provided.
Please follow the instructions enclosed with the pack.


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.




HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

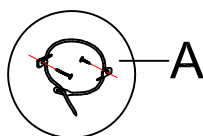

Anti-tip kit is included for use.
We recommend installing for
safety reason.

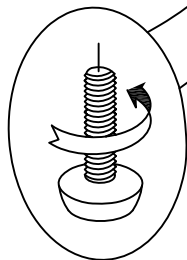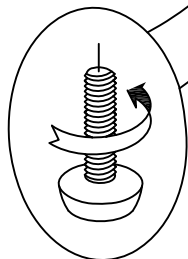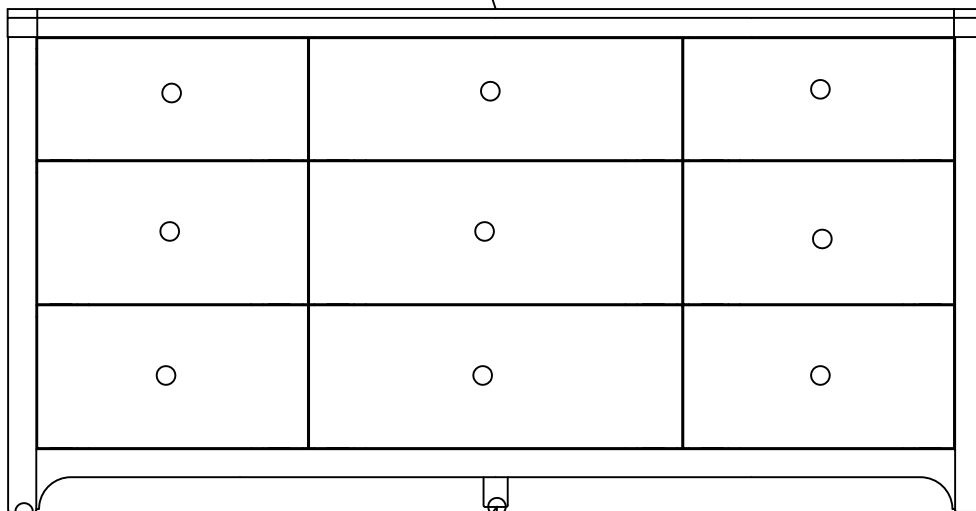

Adjust leveler if needed to level
dresser on uneven floor.

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.



Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK



NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC

Tipping Restraint

Anti-tip kit is included for use.
We recommend installing for
safety reason.

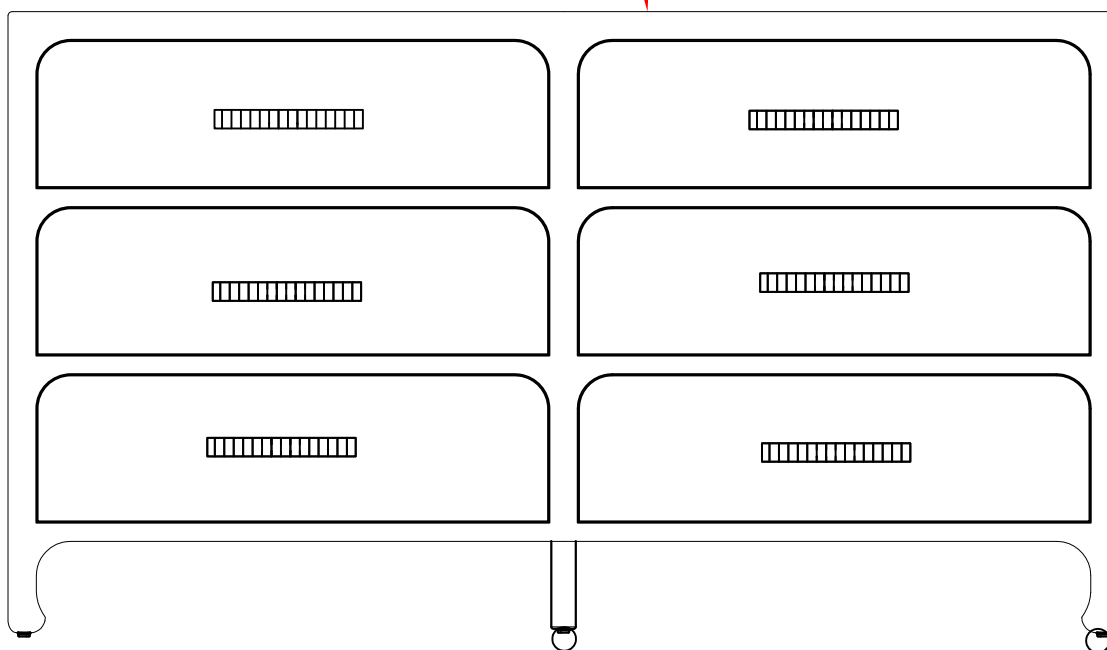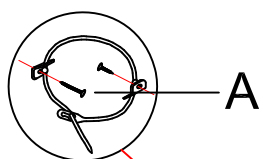

Adjust leveler if needed to level
dresser on uneven floor.

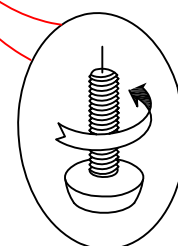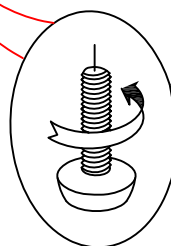

Note: Anti-tip kit restraint is provided.
Please follow the instructions enclosed with the pack.


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1 PC


Tipping Restraint

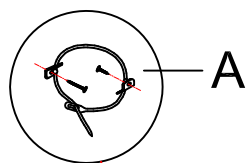

Anti-tip kit is included for use.
We recommend installing for
safety reason.

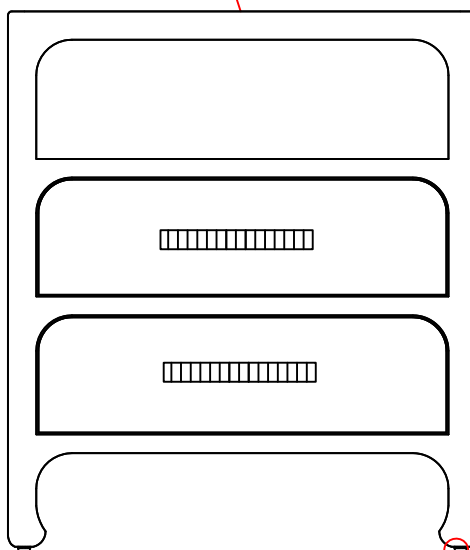

Adjust leveler if needed to level
nightstand on uneven floor.

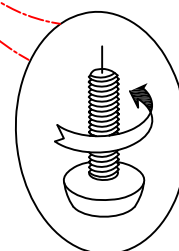

ASSEMBLY INSTRUCTION


ITEM: 6350-90267-95 Rookery 6/0-6/6 Upholstered Panel Headboard
 6350-90268-95 Rookery 6/0-6/6 Panel Footboard
 6350-90253-95 Rookery 6/6 Rails
 6350-90263-95 Rookery 6/0 Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Open Wrench	Ø5/16"	1 PC	1		Headboard	1 PC
B		Nut	Ø5/16"	8 PCS	2		Rail	2 PCS
C		Curved Washer	Ø5/16"	8 PCS	3		Footboard	1 PC
D		Threaded Rod	5/16*100mm	8 PCS	4		Slat	5 PCS
E		Screw	8*32mm	20 PCS	5		Support Leg	5 PCS

Please note the hardware bag to assemble side rails to HB&FB is in the box of side rails.

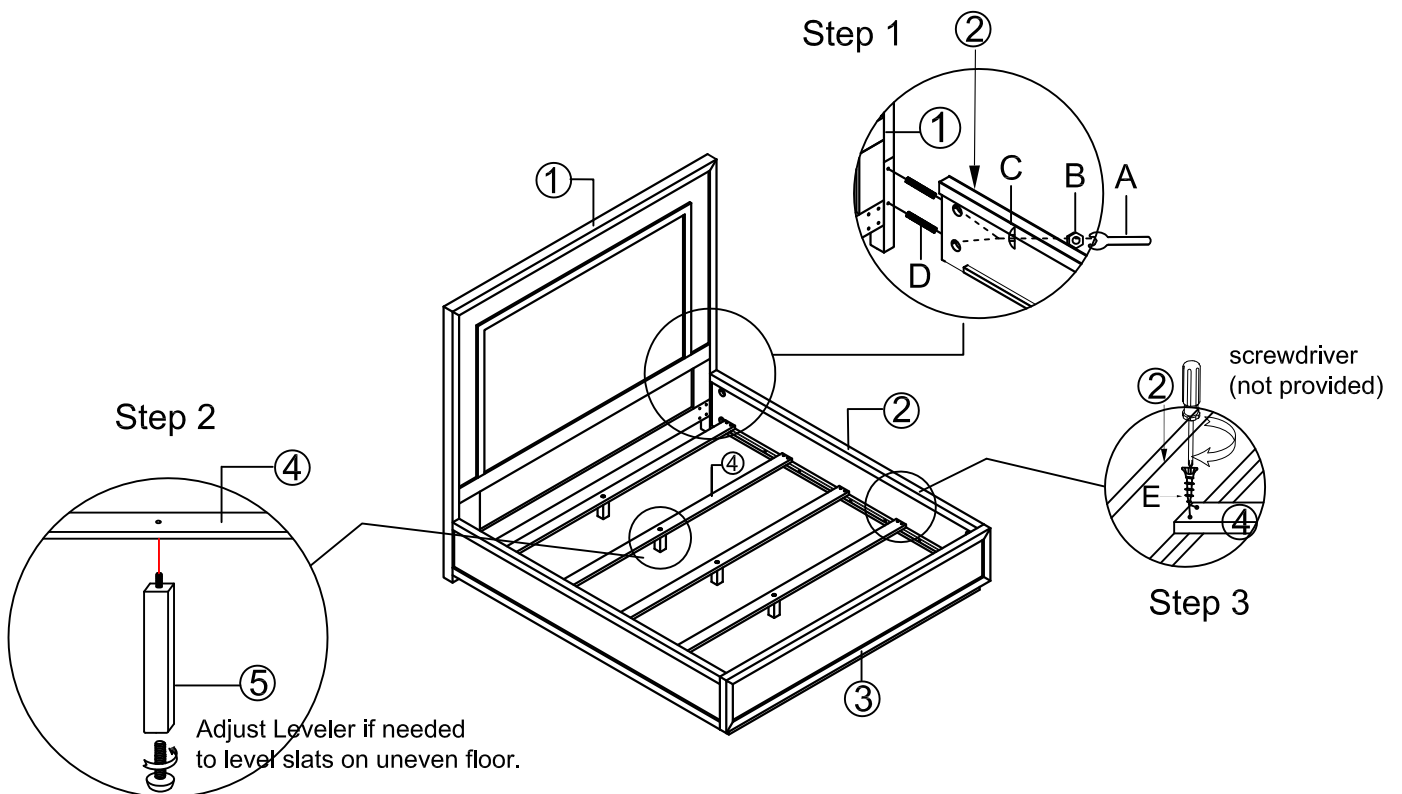

Step 1: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (D), Curved Washers (C) and Nuts (B), tighten them with Open Wrench (A) .

Step 2: Attach support legs (5) to slats (4).

Step 3: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.


ASSEMBLY INSTRUCTION

ITEM: 6350-90367-03 Ashore 6/0-6/6 Uph Panel Headboard
 6350-90368-03 Ashore 6/0-6/6 Panel Footboard
 6350-90351-03 Ashore 5/0 Uph Panel Headboard
 6350-90352-03 Ashore 5/0 Panel Footboard
 6350-90353-03 Ashore 6/6 Rails
 6350-90363-03 Ashore 6/0 Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Open Wrench	Ø5/16"	1 PC	1		Headboard	1 PC
B		Nut	Ø5/16"	8 PCS	2		Rail	2 PCS
C		Curved Washer	Ø5/16"	8 PCS	3		Footboard	1 PC
D		Threaded Rod	5/16*100mm	8 PCS	4		Slat	4 PCS (5/0) 5 PCS (6/0-6/6)
E		Screw	8*32mm	16 PCS (5/0) 20 PCS (6/0-6/6)	5		Support Leg	4 PCS (5/0) 5 PCS (6/0-6/6)

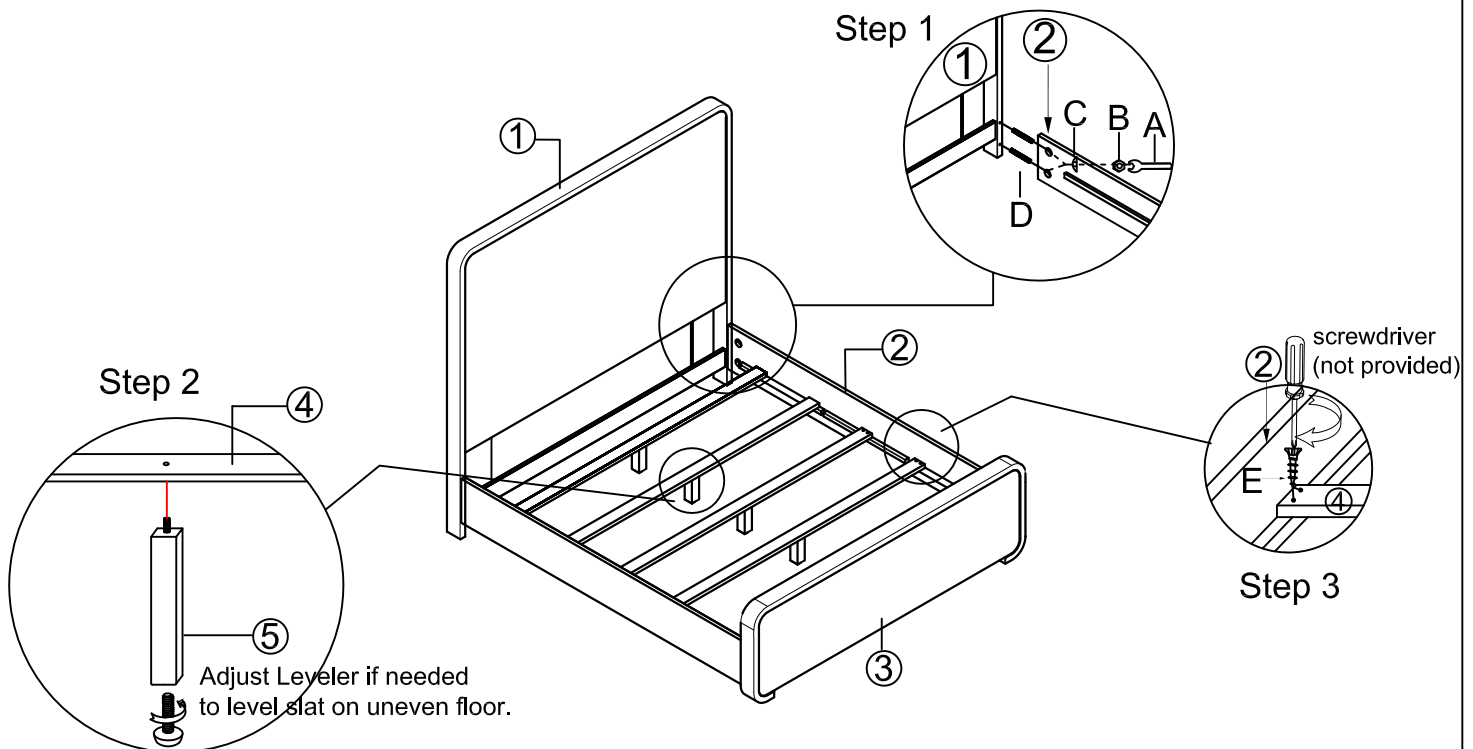

Step 1: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (D), Curved Washers (C) and Nuts (B), tighten them with Open Wrench (A) .

Step 2: Attach support legs (5) to slats (4).

Step 3: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.