

ASSEMBLY INSTRUCTION

ITEM: 6015-50006-80 Chairside Chest
6015-50006-89 Chairside Chest



Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

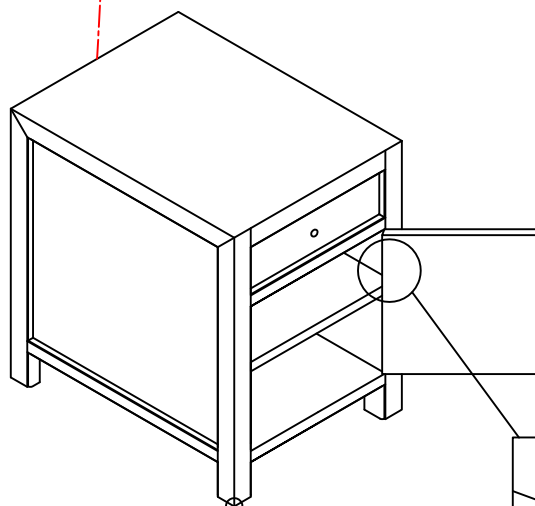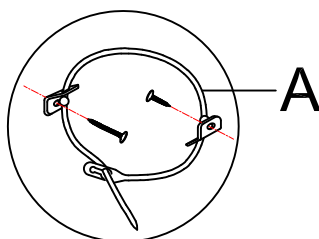


STEP 1



Adjust Leveler if needed to level case on uneven floor.

STEP 2

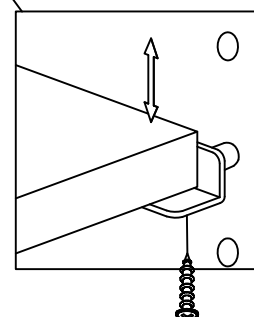

The adjustable shelf is screwed in place to avoid damage during transit. To adjust the shelf height, remove screws then place shelf pins in the desired level.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90202-02 Nine-Drawer Dresser
 6015-90202-80 Nine-Drawer Dresser
 6015-90202-89 Nine-Drawer Dresser
 6015-90004-85 Portrait Mirror
 6015-90004-89 Portrait Mirror


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC
B		Screw	8*7/8"	18PCS

PART LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Mending Plate	1220*25*14mm	2PCS

Note: The mirror can be attached with two different ways.

STEP 1

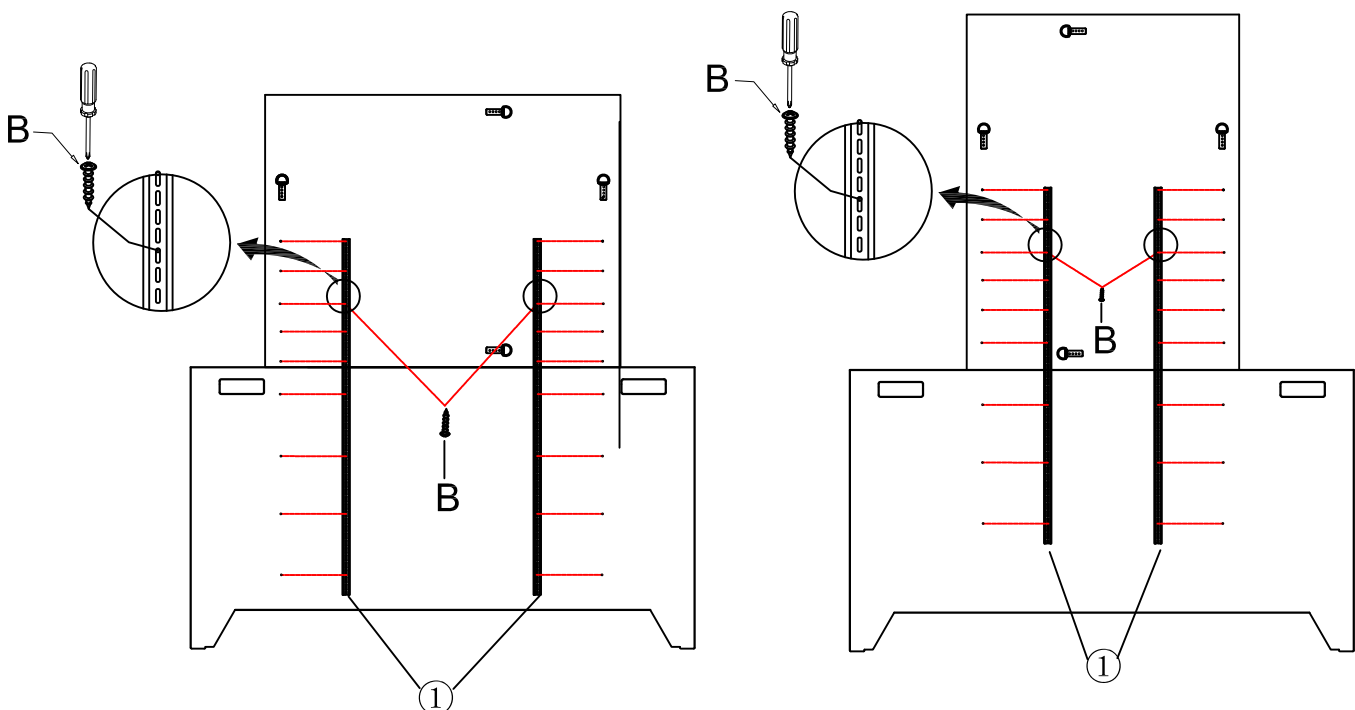


Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90202-02 Nine-Drawer Dresser
6015-90202-80 Nine-Drawer Dresser
6015-90202-89 Nine-Drawer Dresser
6015-90004-85 Portrait Mirror
6015-90004-89 Portrait Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

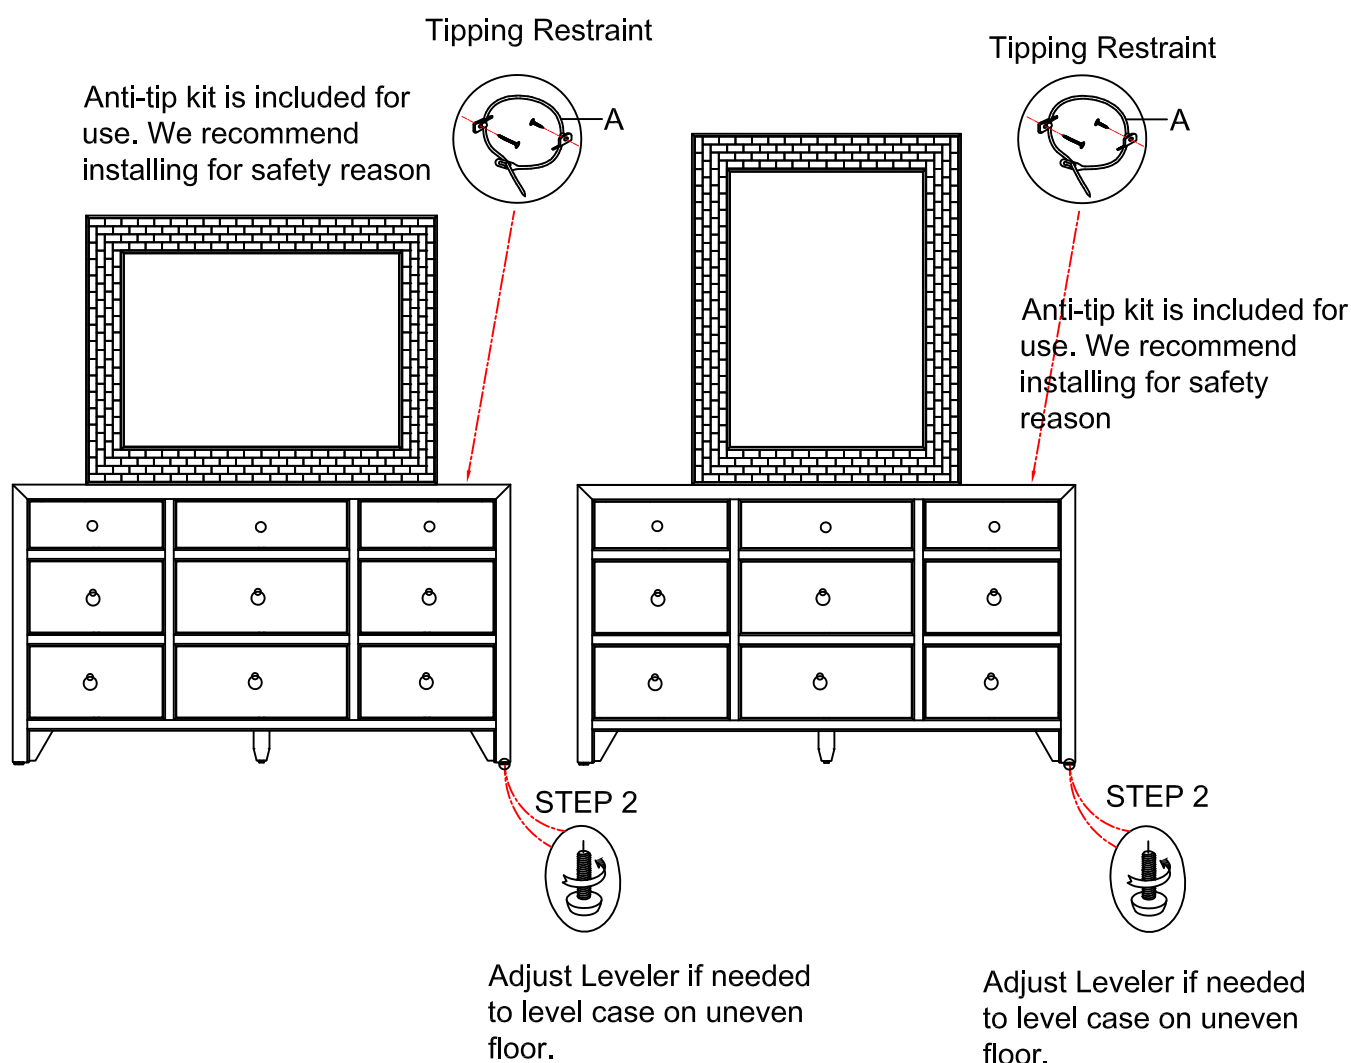

ASSEMBLY INSTRUCTION


ITEM: 6015-90010-02 Six-Drawer Chest
 6015-90010-80 Six-Drawer Chest
 6015-90010-89 Six-Drawer Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.



HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC


Tipping Restraint

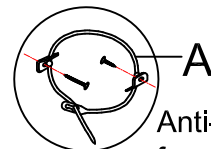

Anti-tip kit is included for use. We recommend installing for safety reason.

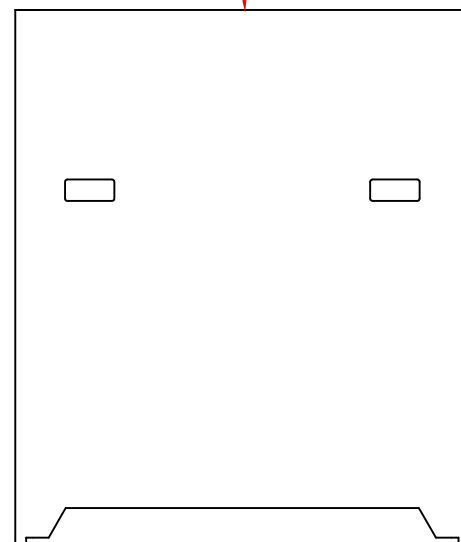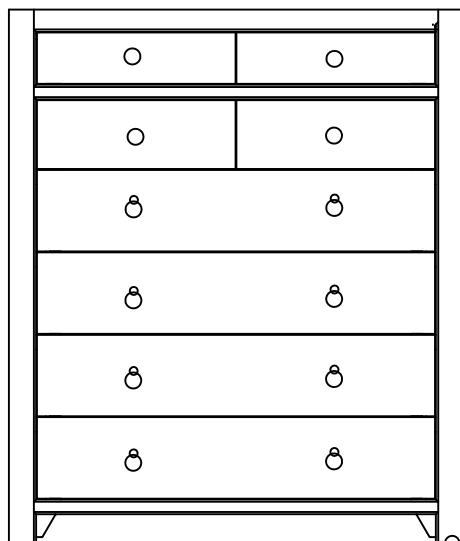

STEP 1



Adjust Leveler if needed to level case on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90015--02 One-Drawer Nightstand
6015-90015--80 One-Drawer Nightstand
6015-90015--89 One-Drawer Nightstand


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.



HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC


Tipping Restraint

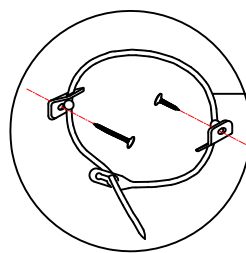

Anti-tip kit is included for use. We recommend installing for safety reason

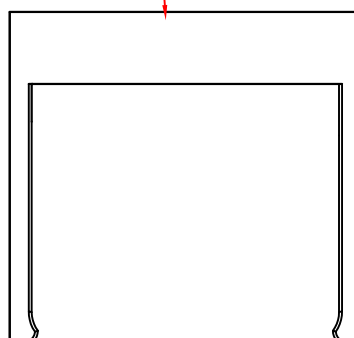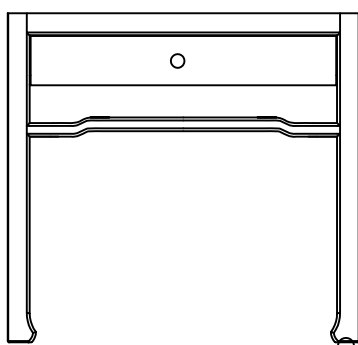

STEP 1



Adjust Leveler if needed to level case on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90016-02 Three-Drawer Nightstand
6015-90016-80 Three-Drawer Nightstand
6015-90016-89 Three-Drawer Nightstand

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.




Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

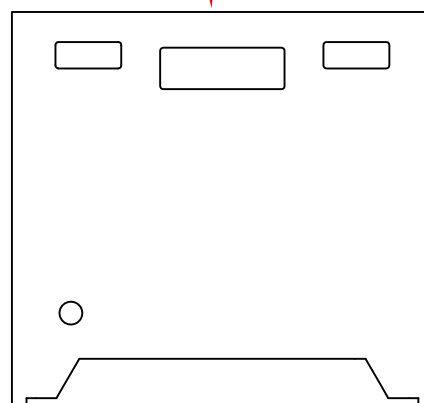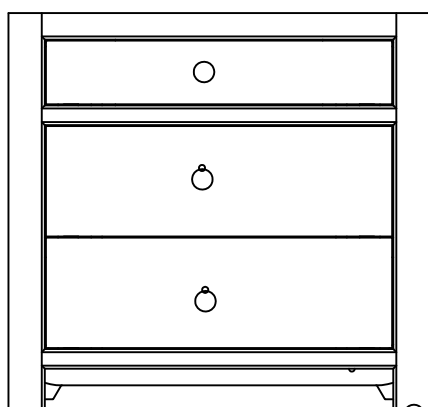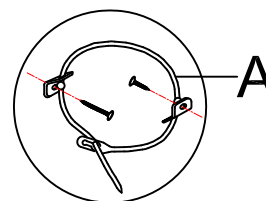

STEP 1

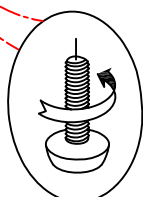

Adjust Leveler if needed to level case on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90017-02 Bachelors Chest
6015-90017-80 Bachelors Chest
6015-90017-89 Bachelors Chest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.




Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK


NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC

Tipping Restraint

Anti-tip kit is included for use. We recommend installing for safety reason

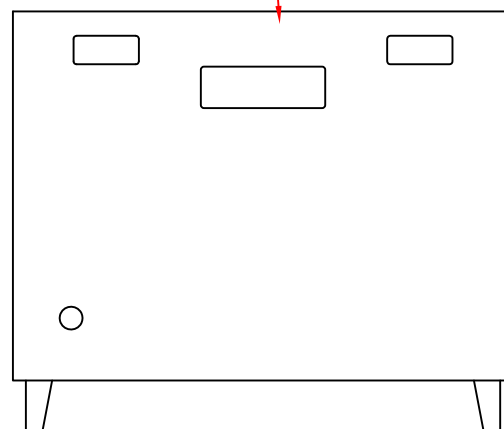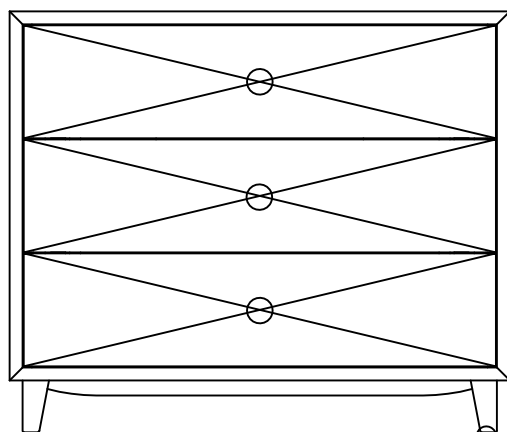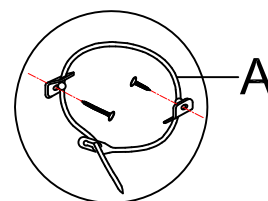

STEP 1

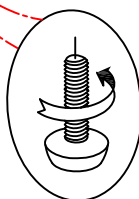

Adjust Leveler if needed to level case on uneven floor.

Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90202-02 Nine-Drawer Dresser
 6015-90202-80 Nine-Drawer Dresser
 6015-90202-89 Nine-Drawer Dresser
 6015-90004-85 Portrait Mirror
 6015-90004-89 Portrait Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Anti - Tip Kit		1PC
B		Screw	8*7/8"	18PCS

PART LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
1		Mending Plate	1220*25*14mm	2PCS

Note: The mirror can be attached with two different ways.

STEP 1

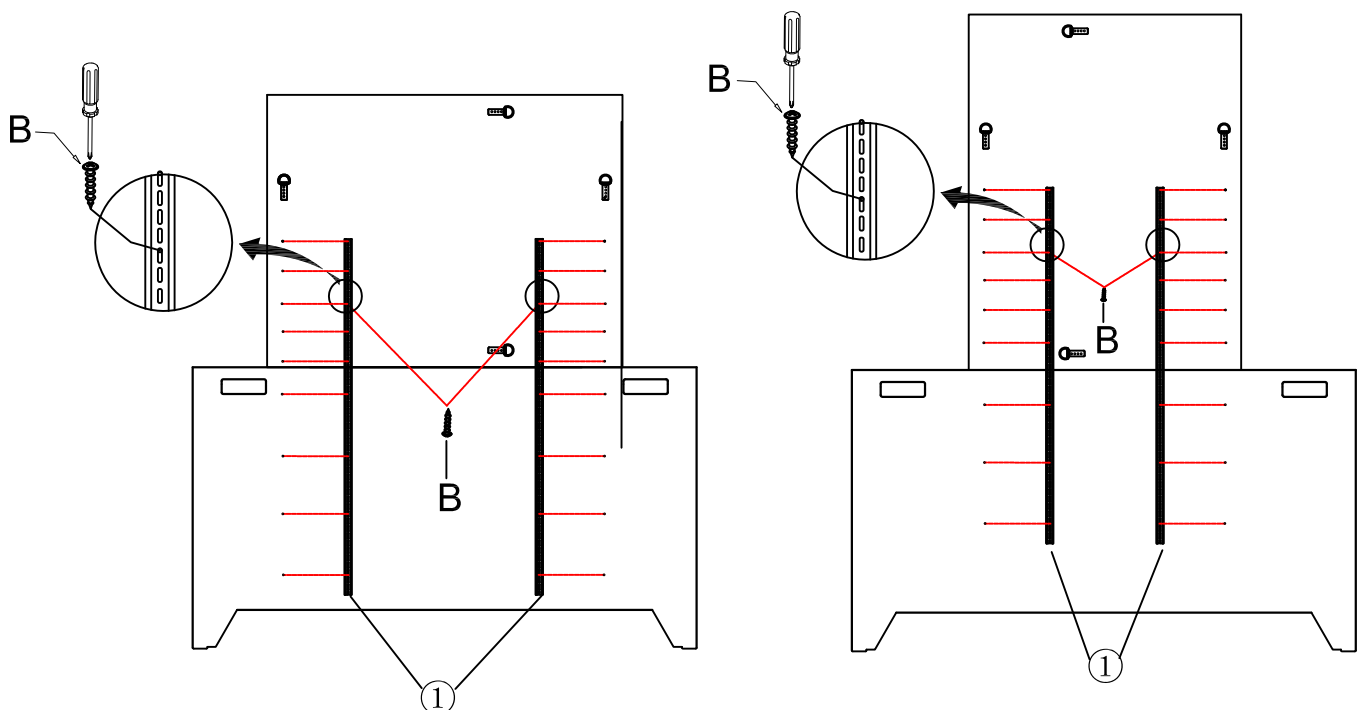


Note: Anti-tip kit restraint is provided. Please follow the instructions enclosed with the pack.

ASSEMBLY INSTRUCTION

ITEM: 6015-90202-02 Nine-Drawer Dresser
6015-90202-80 Nine-Drawer Dresser
6015-90202-89 Nine-Drawer Dresser
6015-90004-85 Portrait Mirror
6015-90004-89 Portrait Mirror

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

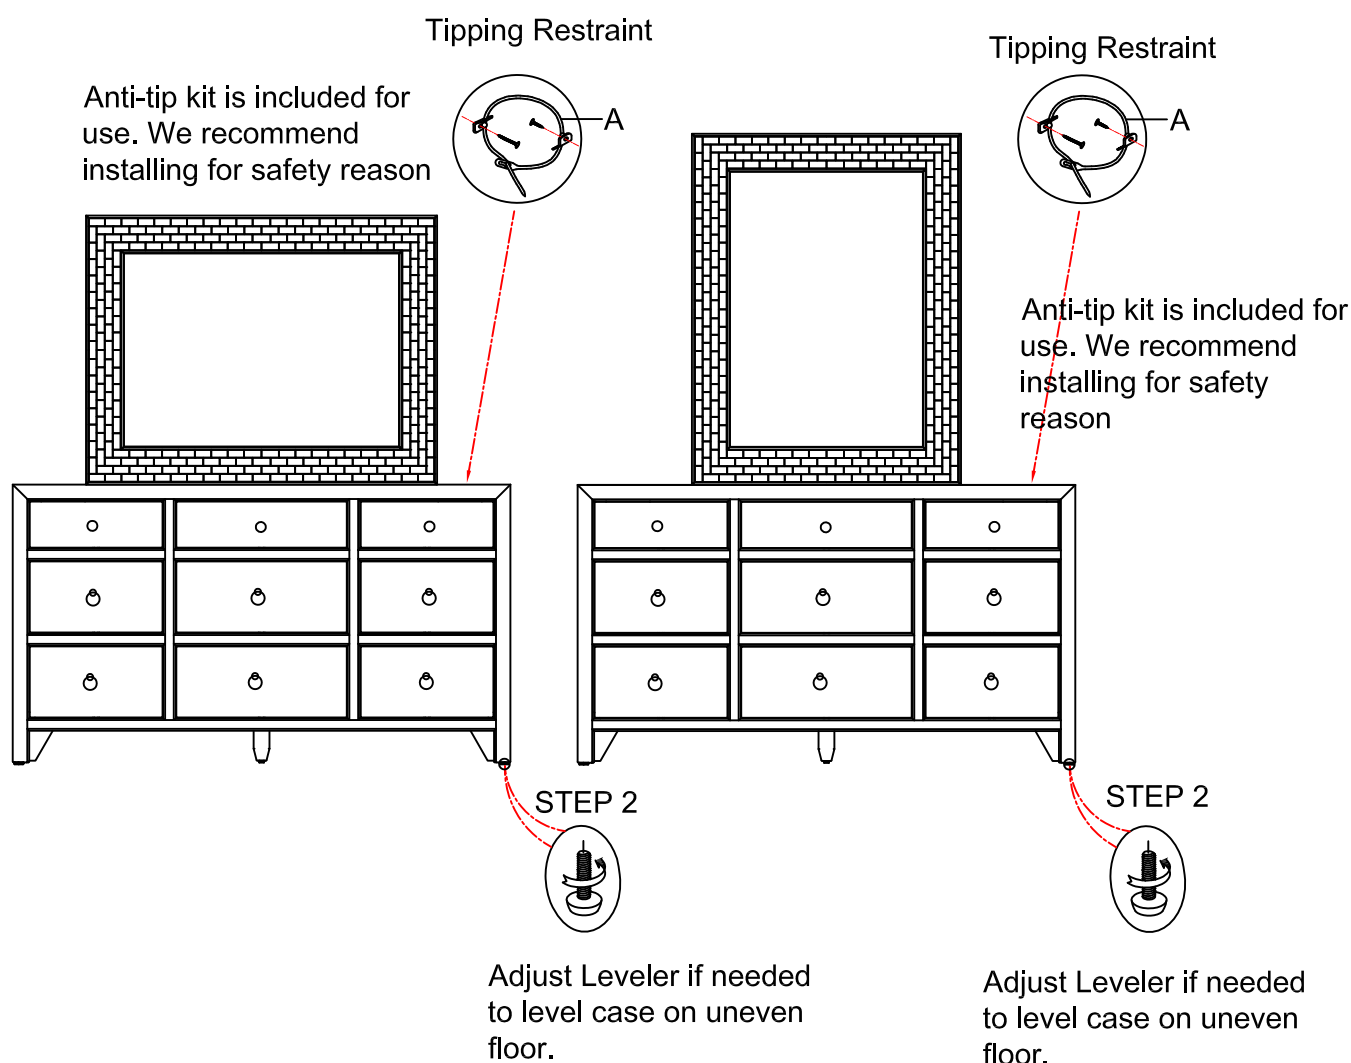


ASSEMBLY INSTRUCTION


ITEM: 6015-90251-80 5/0 Rattan Headboard
 6015-90251-89 5/0 Rattan Headboard
 6015-90252-80 5/0 Rattan Footboard
 6015-90252-89 5/0 Rattan Footboard
 6015-90267-80 6/0-6/6 Rattan Headboard
 6015-90267-89 6/0-6/6 Rattan Headboard
 6015-90268-80 6/0-6/6 Rattan Footboard
 6015-90268-89 6/0-6/6 Rattan Footboard
 6015-90253-80 5/0-6/6 Rail
 6015-90253-89 5/0-6/6 Rail
 6015-90263-80 6/0 Rail
 6015-90263-89 6/0 Rail

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Threaded rod	Ø3/8"*4"	8PCS	1		Headboard	1PC
B		Curved Washer	Ø3/8"	8PCS	2		Rail	2PCS
C		Nut	Ø3/8"	8PCS	3		Footboard	1PC
D		Open Wrench	Ø3/8"	1PC	4		Slat	5 (FOR 6/6 & 6/0 BED) 4 (FOR 5/0 BED)
E		Screw	8*32mm	20 (FOR 6/6 & 6/0 BED) 16 (FOR 5/0 BED)	5		Support leg	5 (FOR 6/6 & 6/0 BED) 4 (FOR 5/0 BED)
F		Allen Wrench	4mm	1PC	6		Leg	4PCS
G		Bolt	1/4"*35mm	16 (FOR 6/6 & 6/0 BED) 8 (FOR 5/0 BED)				
H		Lock Washer	Ø1/4"	16 (FOR 6/6 & 6/0 BED) 8 (FOR 5/0 BED)				
I		Flat Washer	Ø1/4"	16 (FOR 6/6 & 6/0 BED) 8 (FOR 5/0 BED)				
J		Allen Wrench	5mm	1PC				
K		Bolt	5/16"*40mm	4PCS				
L		Lock Washer	Ø5/16"	4PCS				
M		Flat Washer	Ø5/16"	4PCS				

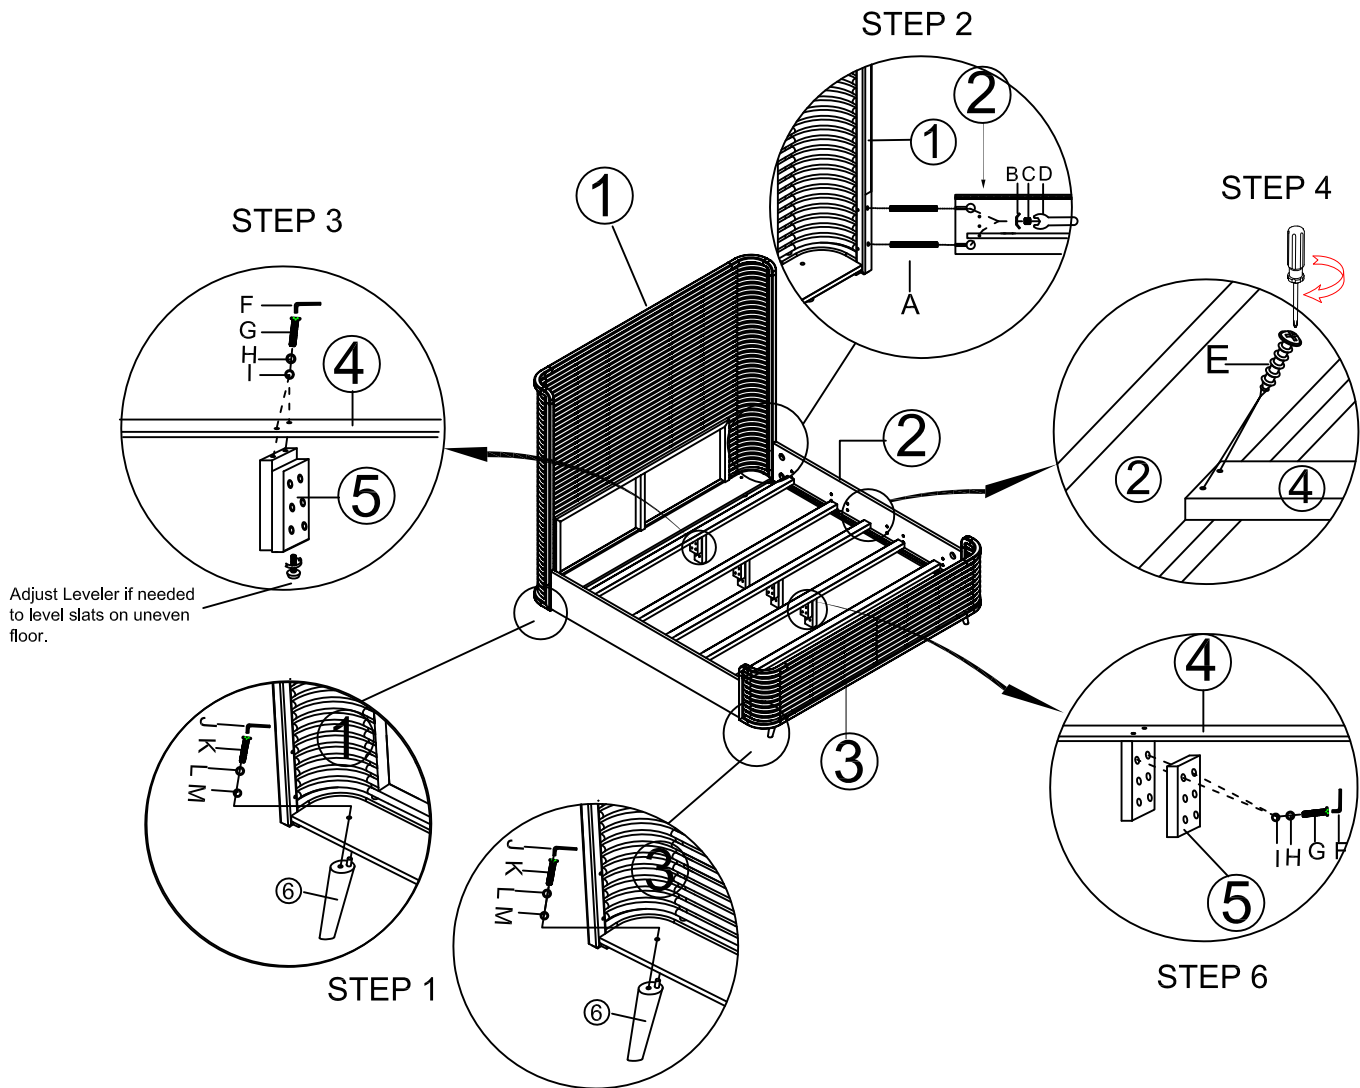

2

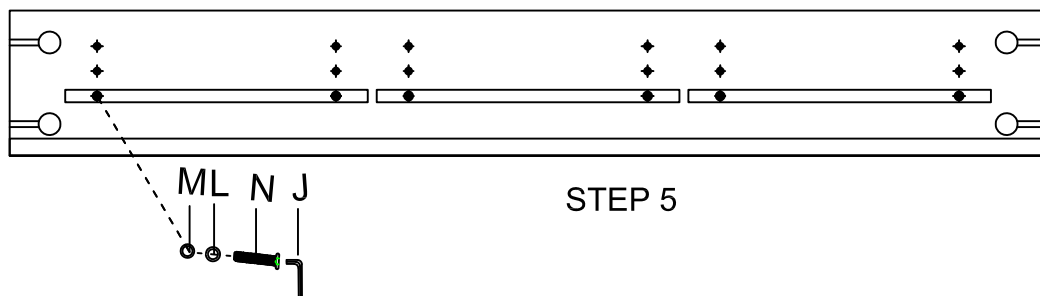

Step 1: Follow numbers on legs (6) and bottom panels of headboard (1) and footboard (3), well attach legs (6) to headboard (1) and footboard (3).

Step 2: Attach rails (2) to headboard (1) and footboard (3) by using threaded rods (A), curved washers (B), and nuts (C), tighten them with open wrench (D) .

Step 3: Attach support legs (5) to slats (4).

Step 4: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.

Note 1: You can change the height of slats (4) by adjusting the height of cleats on side rail (2) as shown in Step 5.

Remove bolts (N), lock washers (L) and flat washers (M) from the cleats by using allen wrench (J). Adjust the cleats to a desired position, then secure flat washers (M), lock washers (L) and bolts (N) by using allen wrench (J).


Note 2: You can adjust the height of support legs (5) as shown in Step 6.

Unscrew bolts (G), lock washers (H) and flat washers (I) on support legs (5) with allen wrench (F). Adjust the height of support legs (5), align holes on 2pcs of woods and tighten them together with 2 bolts (G), 2 lock washers (H) and 2 flat washers (I) by using allen wrench (F).

ASSEMBLY INSTRUCTION

ITEM: 6015-90351-80 5/0 Panel Headboard
6015-90351-89 5/0 Panel Headboard
6015-90352-80 5/0 Panel Footboard
6015-90352-89 5/0 Panel Footboard
6015-90367-80 6/0-6/6 Panel Headboard
6015-90367-89 6/0-6/6 Panel Headboard
6015-90368-80 6

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process .

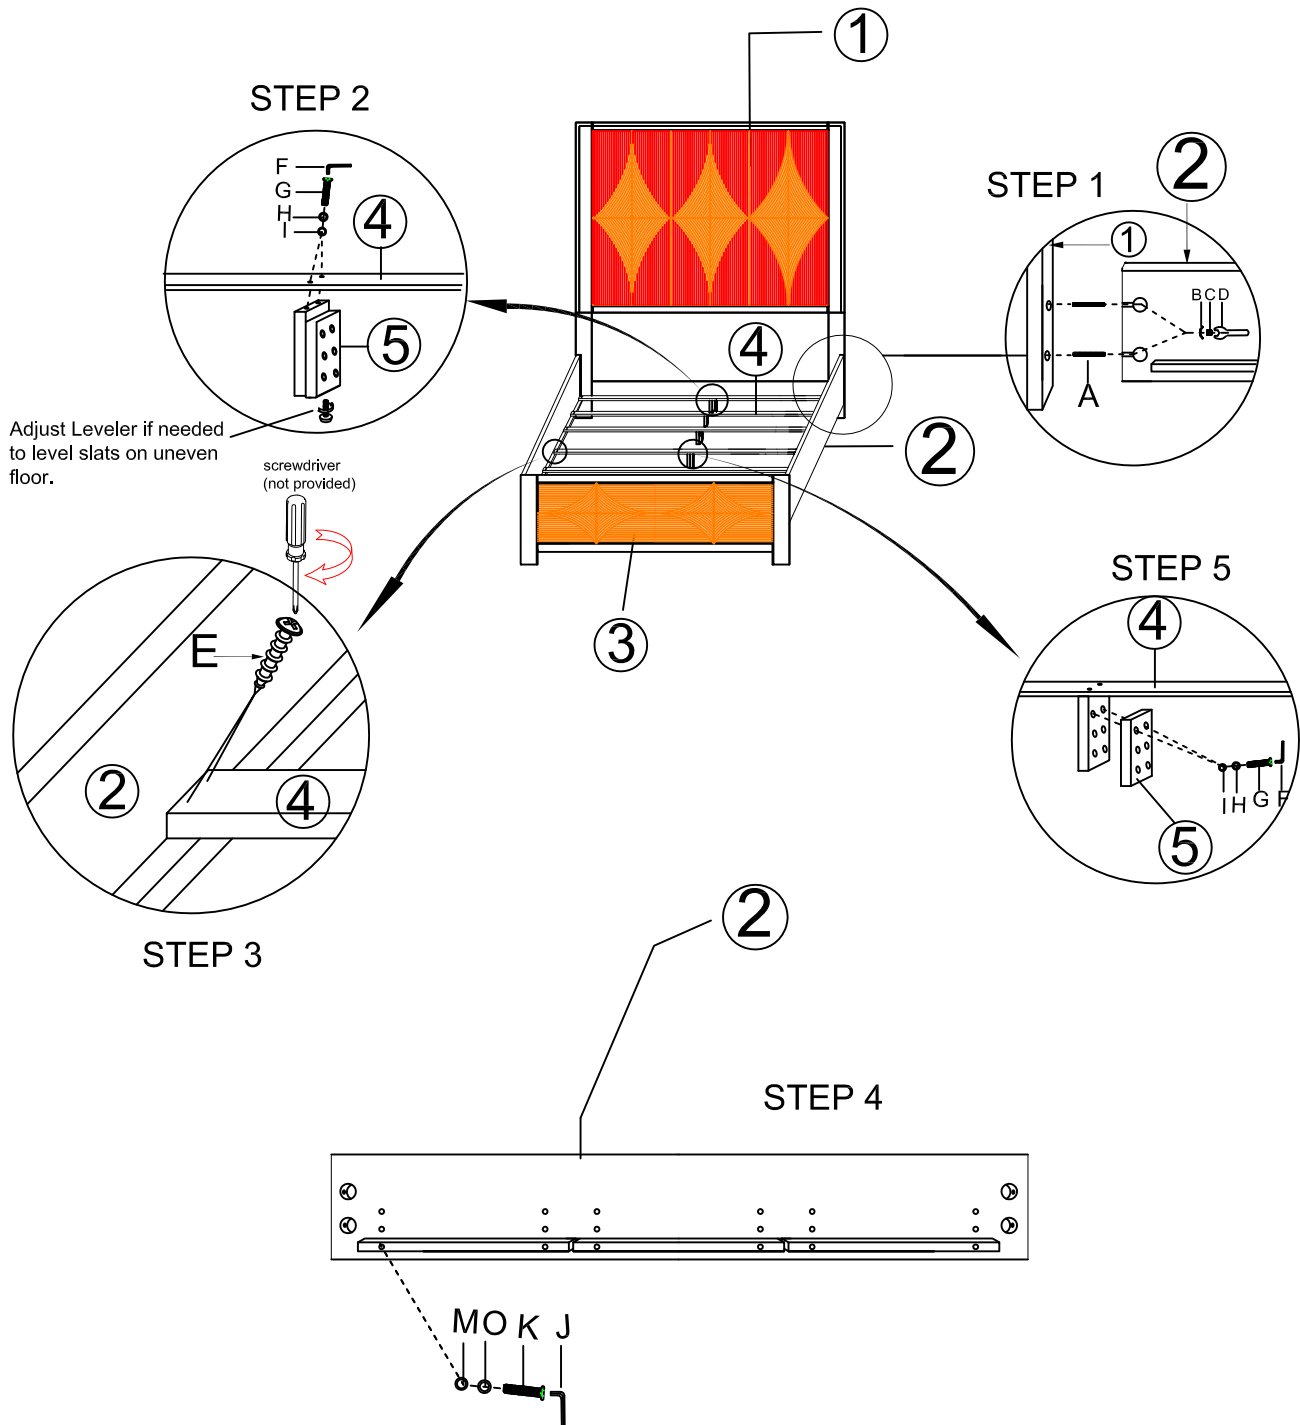

Note 1: You can change the height of slats (4) by adjusting the height of cleats on side rail (2) as shown in Step 4.

Remove bolts (K), lock washers (O) and flat washers (M) from the cleats by using allen wrench (J). Adjust the cleats to a desired position, then secure flat washers (M), lock washers (O) and bolts (K) by using allen wrench (J).

Note 2: You can adjust the height of support legs (5) as shown in Step 5.

Unscrew bolts (G), lock washers (H) and flat washers (I) on support legs (5) with allen wrench (F). Adjust the height of support legs (5), align holes on 2pcs of woods and tighten them together with 2 bolts (G), 2 lock washers (H) and 2 flat washers (I) by using allen wrench (F).

ASSEMBLY INSTRUCTION

ITEM: 6015-90351-80 5/0 Panel Headboard
 6015-90351-89 5/0 Panel Headboard
 6015-90352-80 5/0 Panel Footboard
 6015-90352-89 5/0 Panel Footboard
 6015-90367-80 6/0-6/6 Panel Headboard
 6015-90367-89 6/0-6/6 Panel Headboard
 6015-90368-80 6/0-6/6 Panel Footboard
 6015-90368-89 6/0-6/6 Panel Footboard
 6015-90353-80 5/0-6/6 Rail
 6015-90353-89 5/0-6/6 Rail
 6015-90363-80 6/0 Rail
 6015-90363-89 6/0 Rail


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
 Read all instruction and study the drawing carefully before starting the assembly process .

HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Threaded rod	Ø3/8"*4"	8PCS	1		Headboard	1PC
B		Curved Washer	Ø3/8"	8PCS	2		Rail	2PCS
C		Nut	Ø3/8"	8PCS	3		Footboard	1PC
D		Open Wrench	Ø3/8"	1PC	4		Slat	5 (FOR 6/6 & 6/0 BED) 4 (FOR 5/0 BED)
E		Screw	8*32mm	20 (FOR 6/6 & 6/0 BED) 16 (FOR 5/0 BED)	5		Support Leg	5 (FOR 6/6 & 6/0 BED) 4 (FOR 5/0 BED)
F		Allen Wrench	4mm	1PC				
G		Bolt	1/4"*35mm	10 (FOR 6/6 & 6/0 BED) 8 (FOR 5/0 BED)				
H		Lock Washer	Ø1/4"	10 (FOR 6/6 & 6/0 BED) 8 (FOR 5/0 BED)				
I		Flat Washer	Ø1/4"	10 (FOR 6/6 & 6/0 BED) 8 (FOR 5/0 BED)				
J		Allen Wrench	5mm	1PC				

Step 1: Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B), and Nuts (C), tighten them with Open Wrench (D) .

Step 2: Attach support legs (5) to slats (4).

Step 3: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.

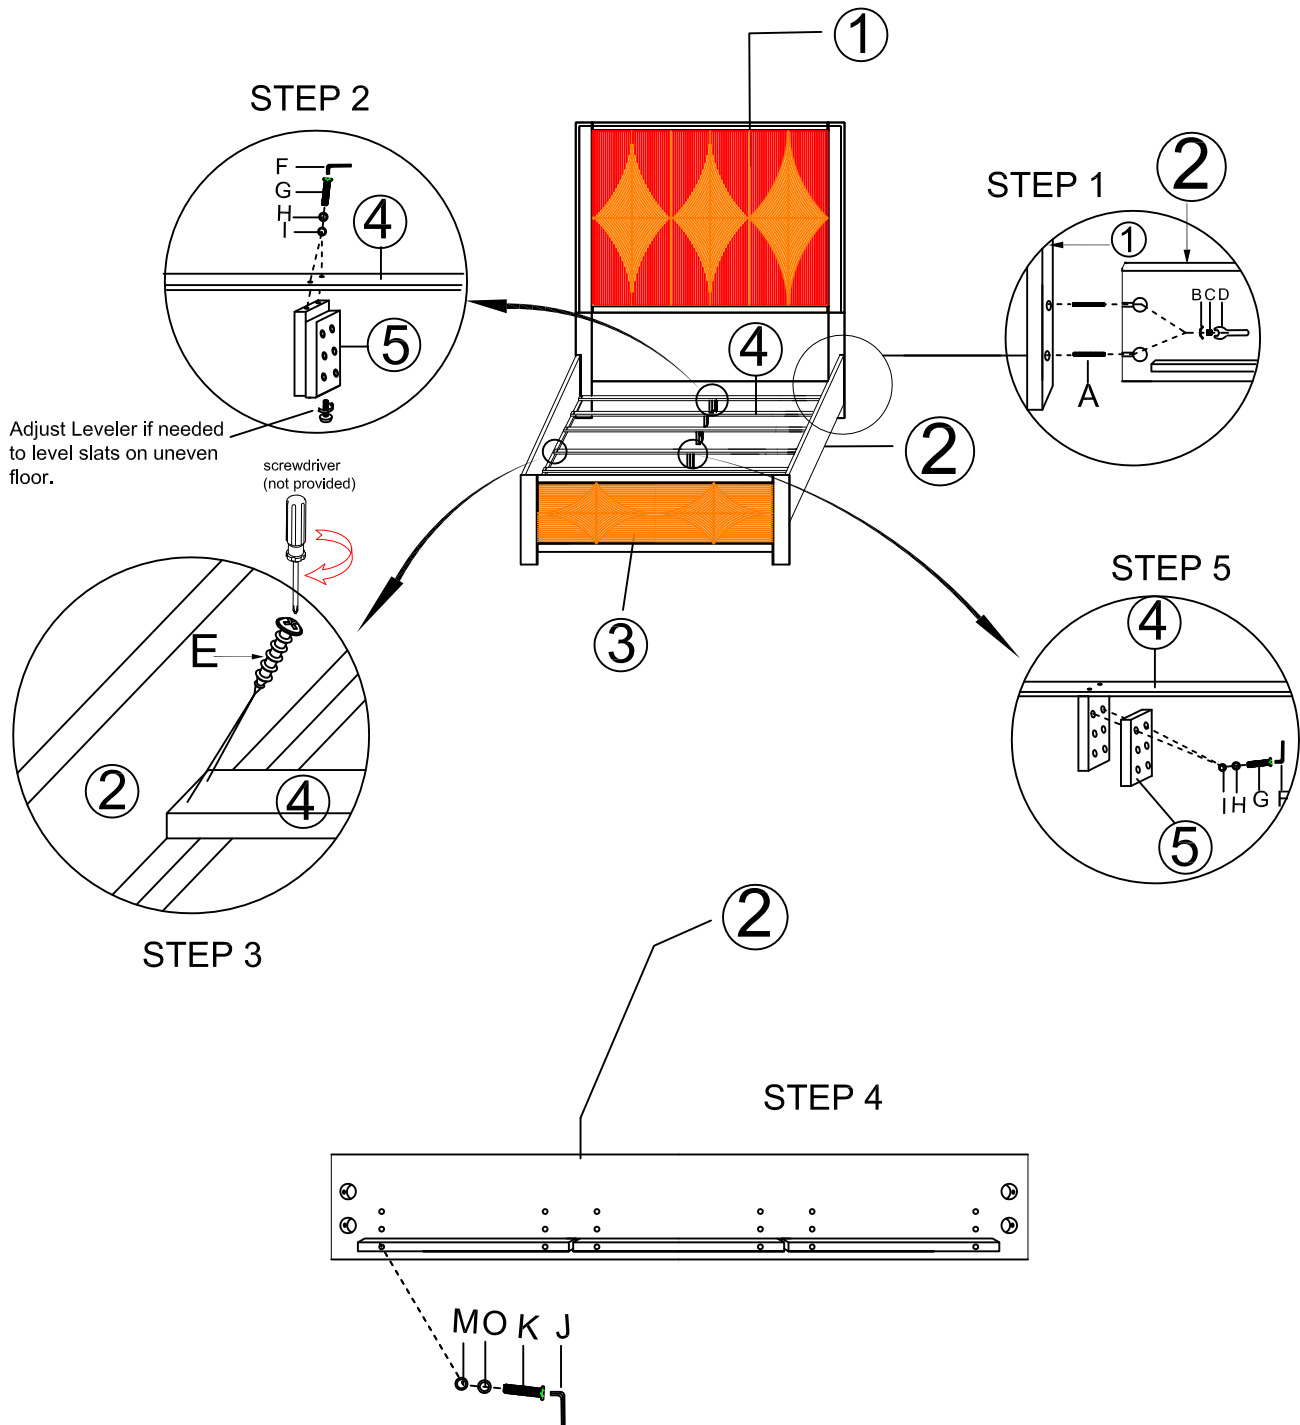

Note 1: You can change the height of slats (4) by adjusting the height of cleats on side rail (2) as shown in Step 4.

Remove bolts (K), lock washers (O) and flat washers (M) from the cleats by using allen wrench (J). Adjust the cleats to a desired position, then secure flat washers (M), lock washers (O) and bolts (K) by using allen wrench (J).

Note 2: You can adjust the height of support legs (5) as shown in Step 5.


Unscrew bolts (G), lock washers (H) and flat washers (I) on support legs (5) with allen wrench (F). Adjust the height of support legs (5), align holes on 2pcs of woods and tighten them together with 2 bolts (G), 2 lock washers (H) and 2 flat washers (I) by using allen wrench (F).

ASSEMBLY INSTRUCTION

ITEM: 6015-90351-80 5/0 Panel Headboard
6015-90351-89 5/0 Panel Headboard
6015-90352-80 5/0 Panel Footboard
6015-90352-89 5/0 Panel Footboard
6015-90367-80 6/0-6/6 Panel Headboard
6015-90367-89 6/0-6/6 Panel Headboard
6015-90368-80 6/0-6/6 Panel Footboard
6015-90368-89 6/0-6/6 Panel Foo

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process .

ASSEMBLY INSTRUCTION

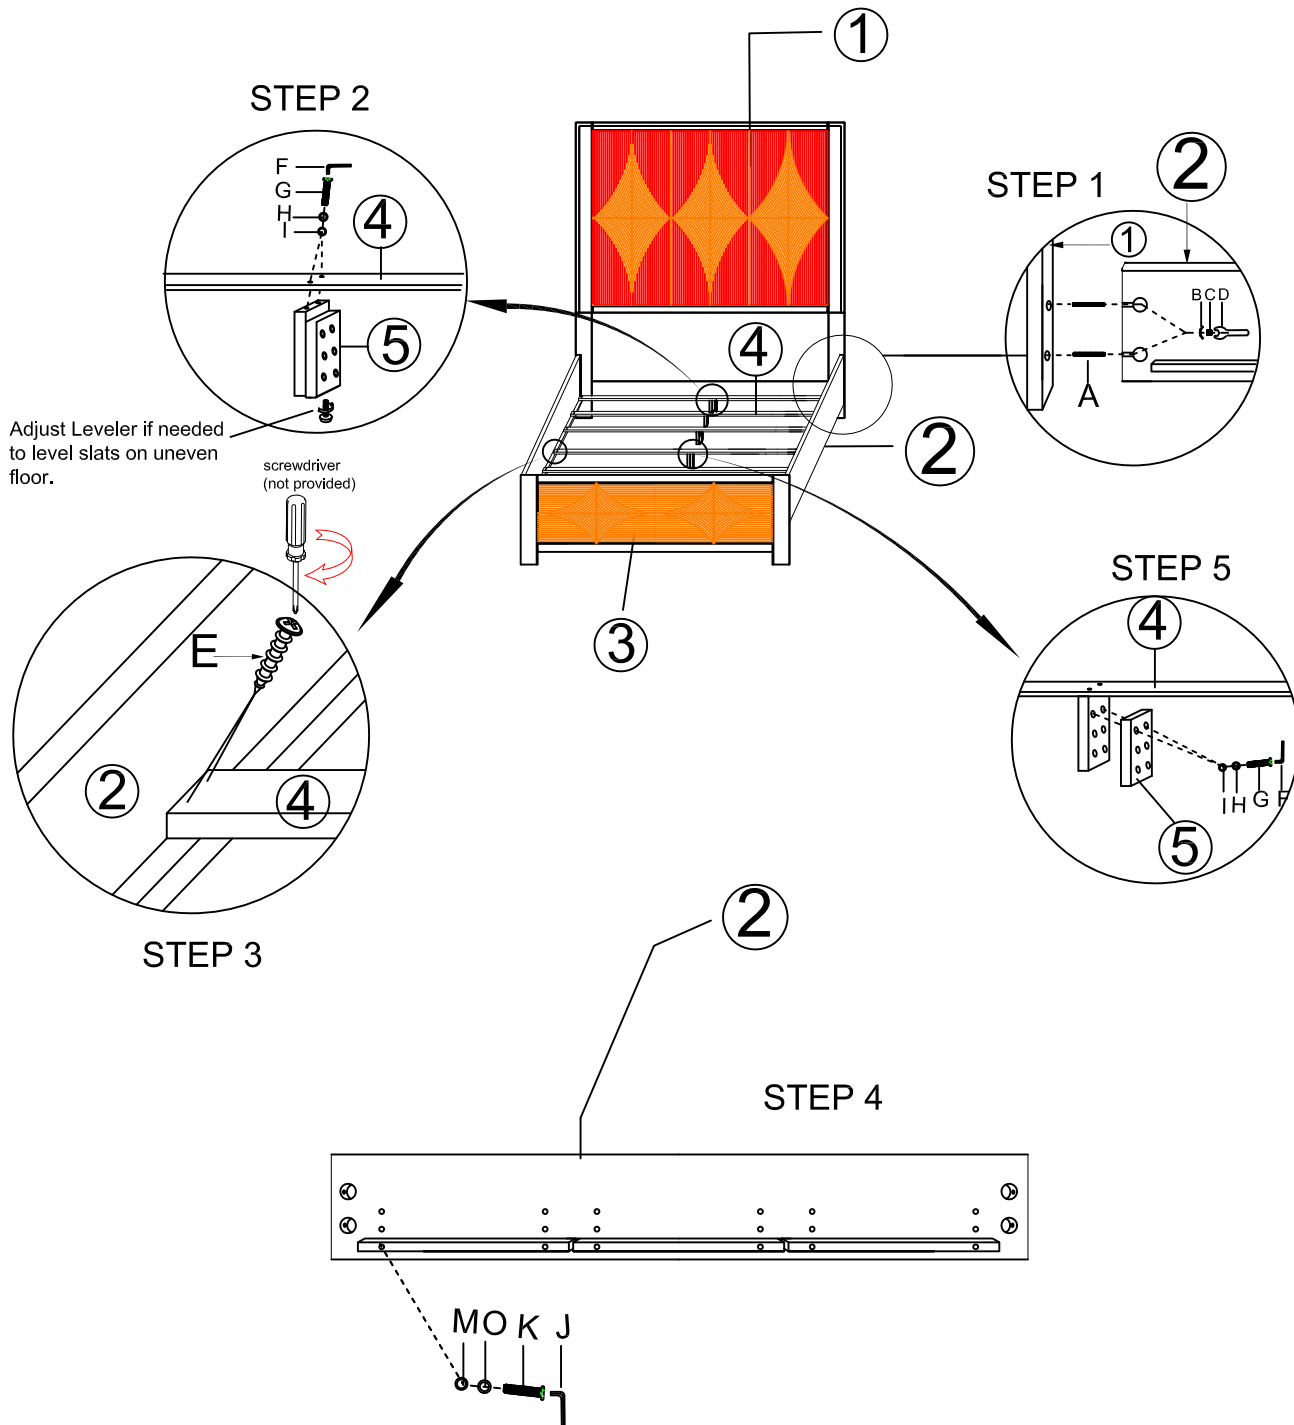

Note 1: You can change the height of slats (4) by adjusting the height of cleats on side rail (2) as shown in Step 4.

Remove bolts (K), lock washers (O) and flat washers (M) from the cleats by using allen wrench (J). Adjust the cleats to a desired position, then secure flat washers (M), lock washers (O) and bolts (K) by using allen wrench (J).

Note 2: You can adjust the height of support legs (5) as shown in Step 5.

Unscrew bolts (G), lock washers (H) and flat washers (I) on support legs (5) with allen wrench (F). Adjust the height of support legs (5), align holes on 2pcs of woods and tighten them together with 2 bolts (G), 2 lock washers (H) and 2 flat washers (I) by using allen wrench (F).