

M60EN101

1/1


Surinkimo schema
Схема сборки
Assembling scheme

Reikalingi įrankiai:




Инструменты для сборки:

Requiring tools:



x2

x3



x8

x12





L 1200 mm


L 1400 / 1600 / 1800 mm

I

Neužveržti iki galo
Не затянуть до конца
Don't tighten to end

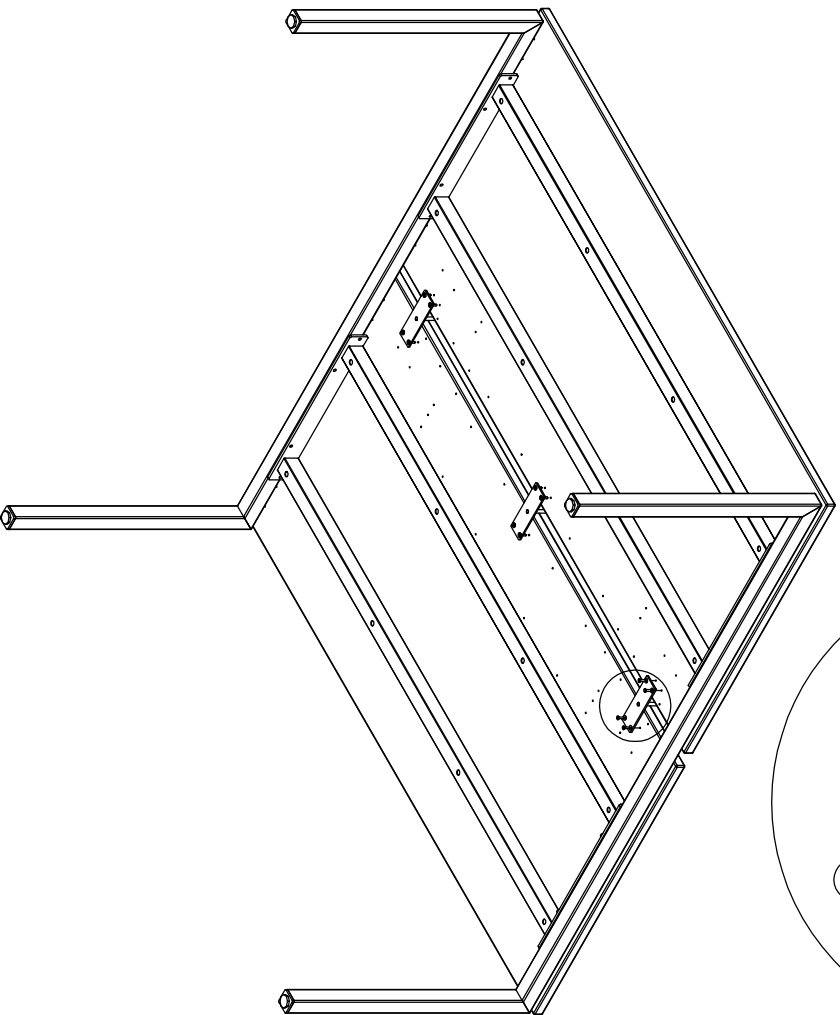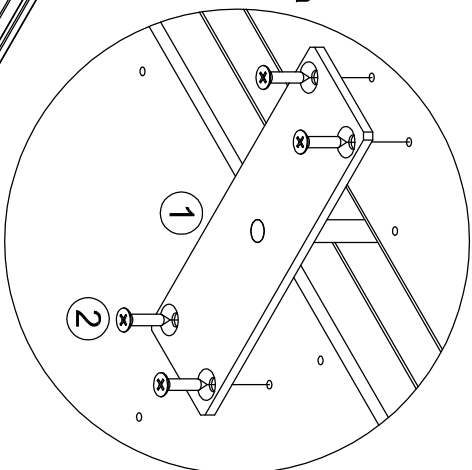

II

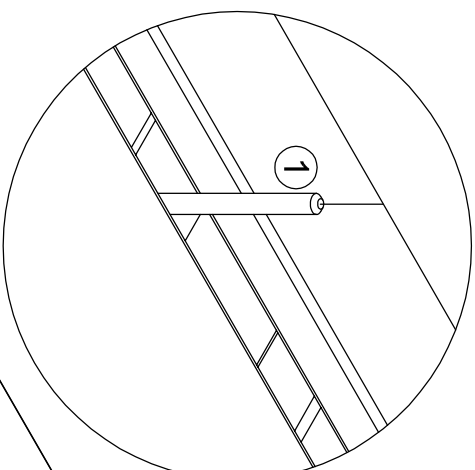

Užveržti visus medstraigčius
Затянуть все шурупы
Tighten up all screws

Išvedžioti elektros laidus
Провести электро кабели
Wire up

