


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

COMPONENT LIST

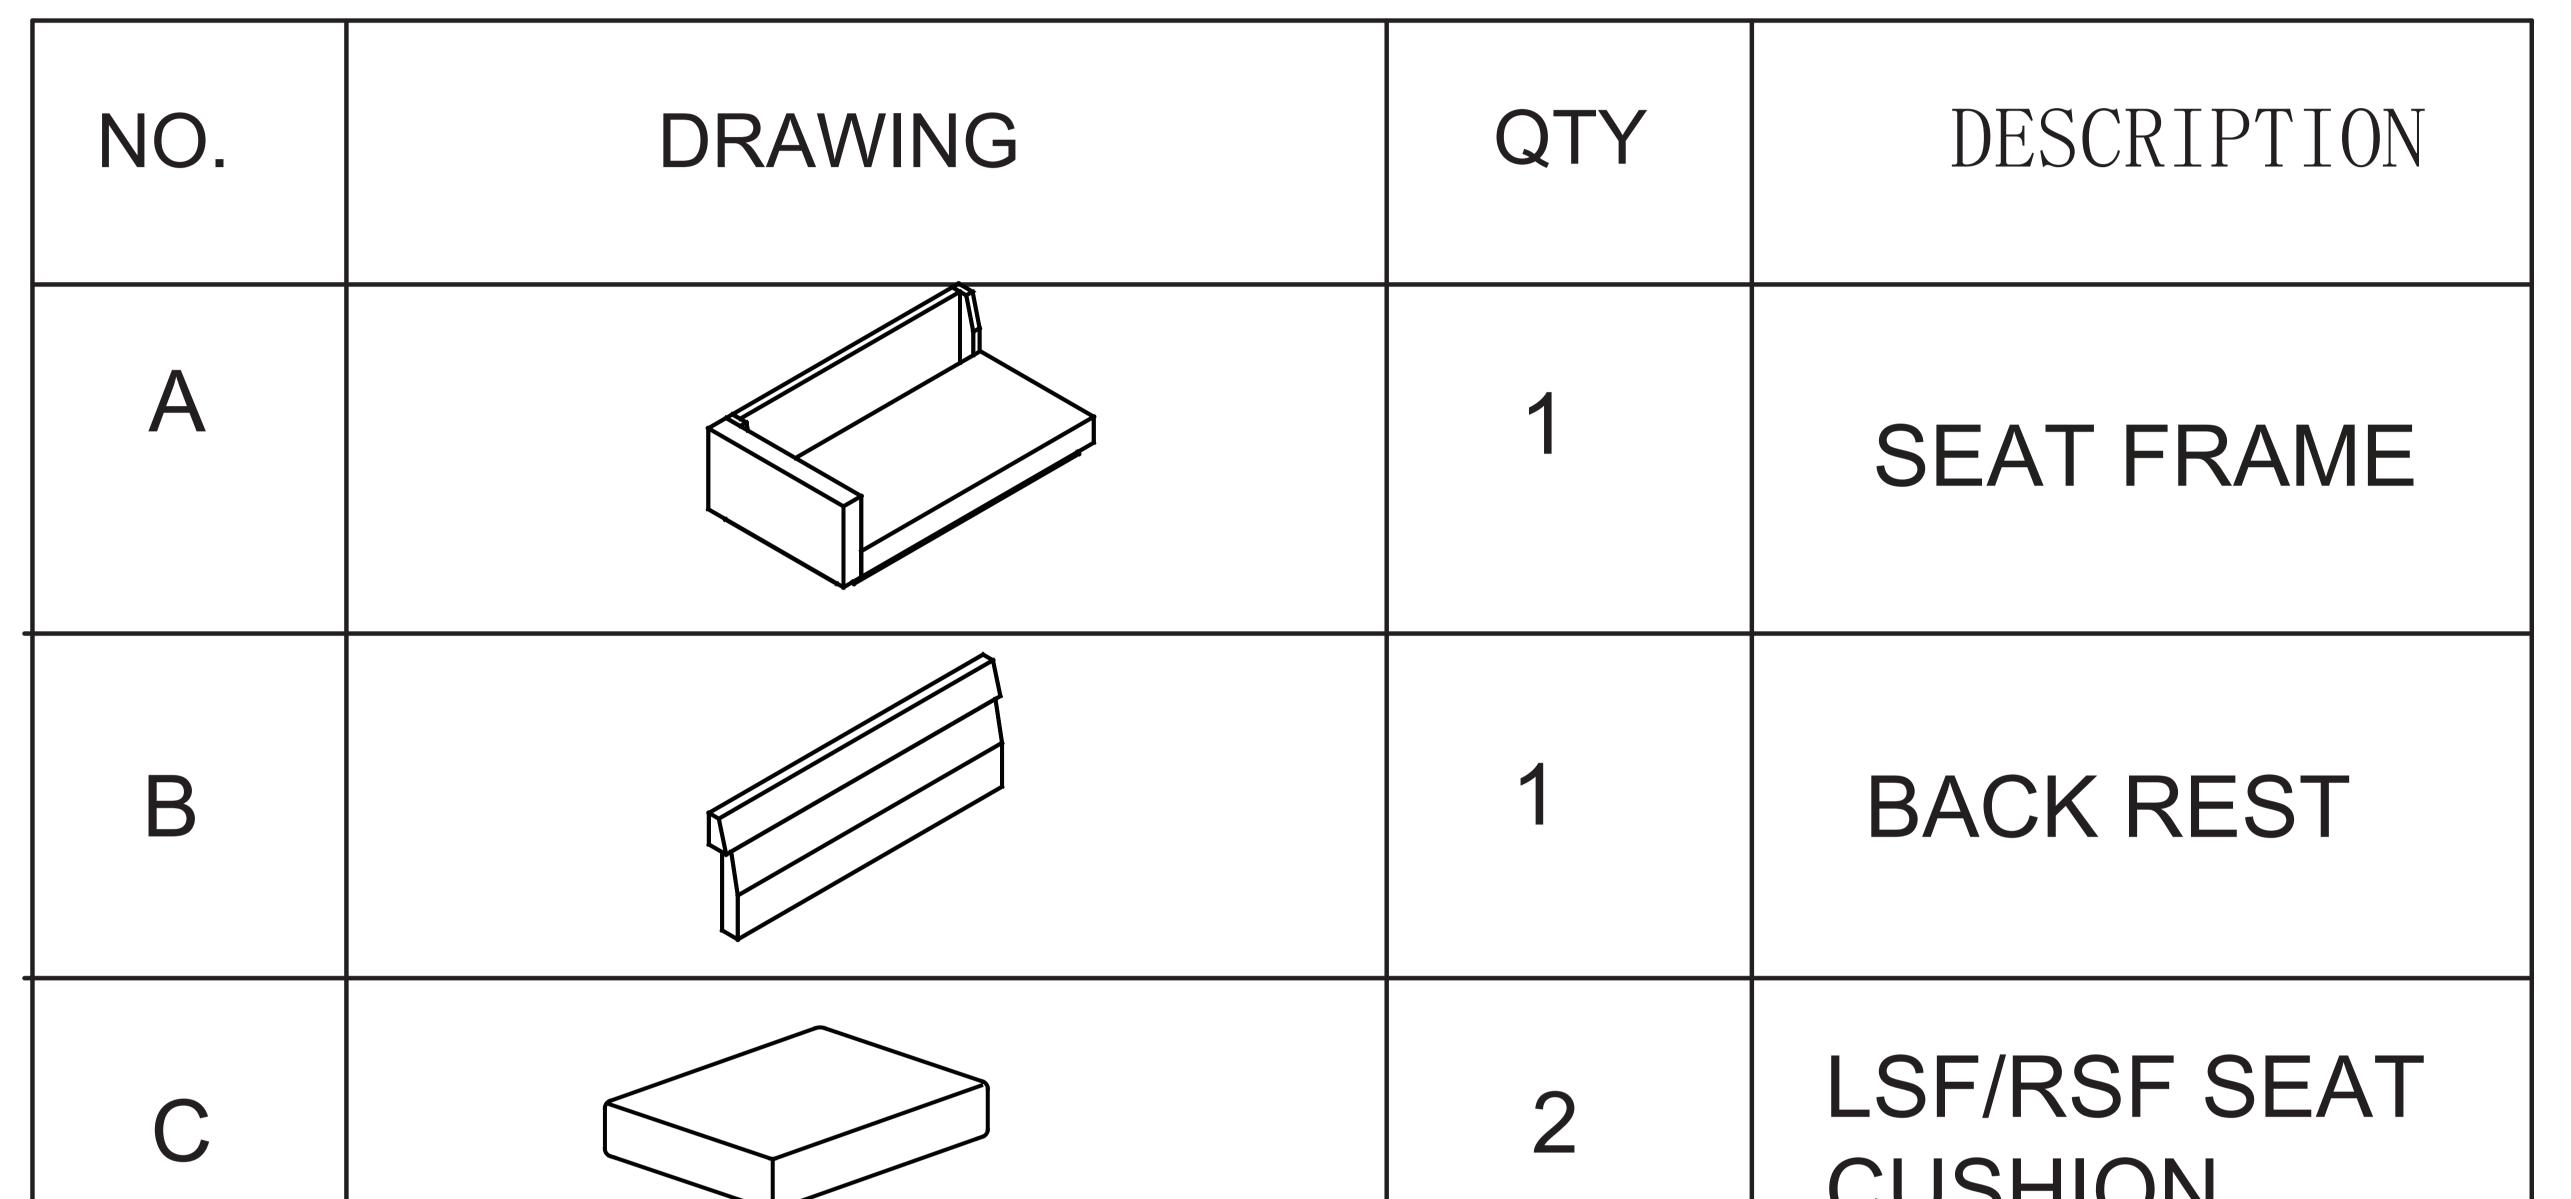


		CUSHION
D	2	LSF/RSF BACK CUSHION
Ε	1	SQUARE PILLOW
F	2	KIDNEY PILLOW
G	4	WOODEN LEG
ŀ	8	BOLT(⁵ / ₁₆ "*40MM)
	8	FLAT WASHER (8*19MM)
J	8	LOCK WASHER
K	1	ALLEN KEY($\frac{5}{16}$ ")

1 OF 4


STEP1:

Attach leg to the bottom seat frame, insert bolt and washer then tighten with Allen key.

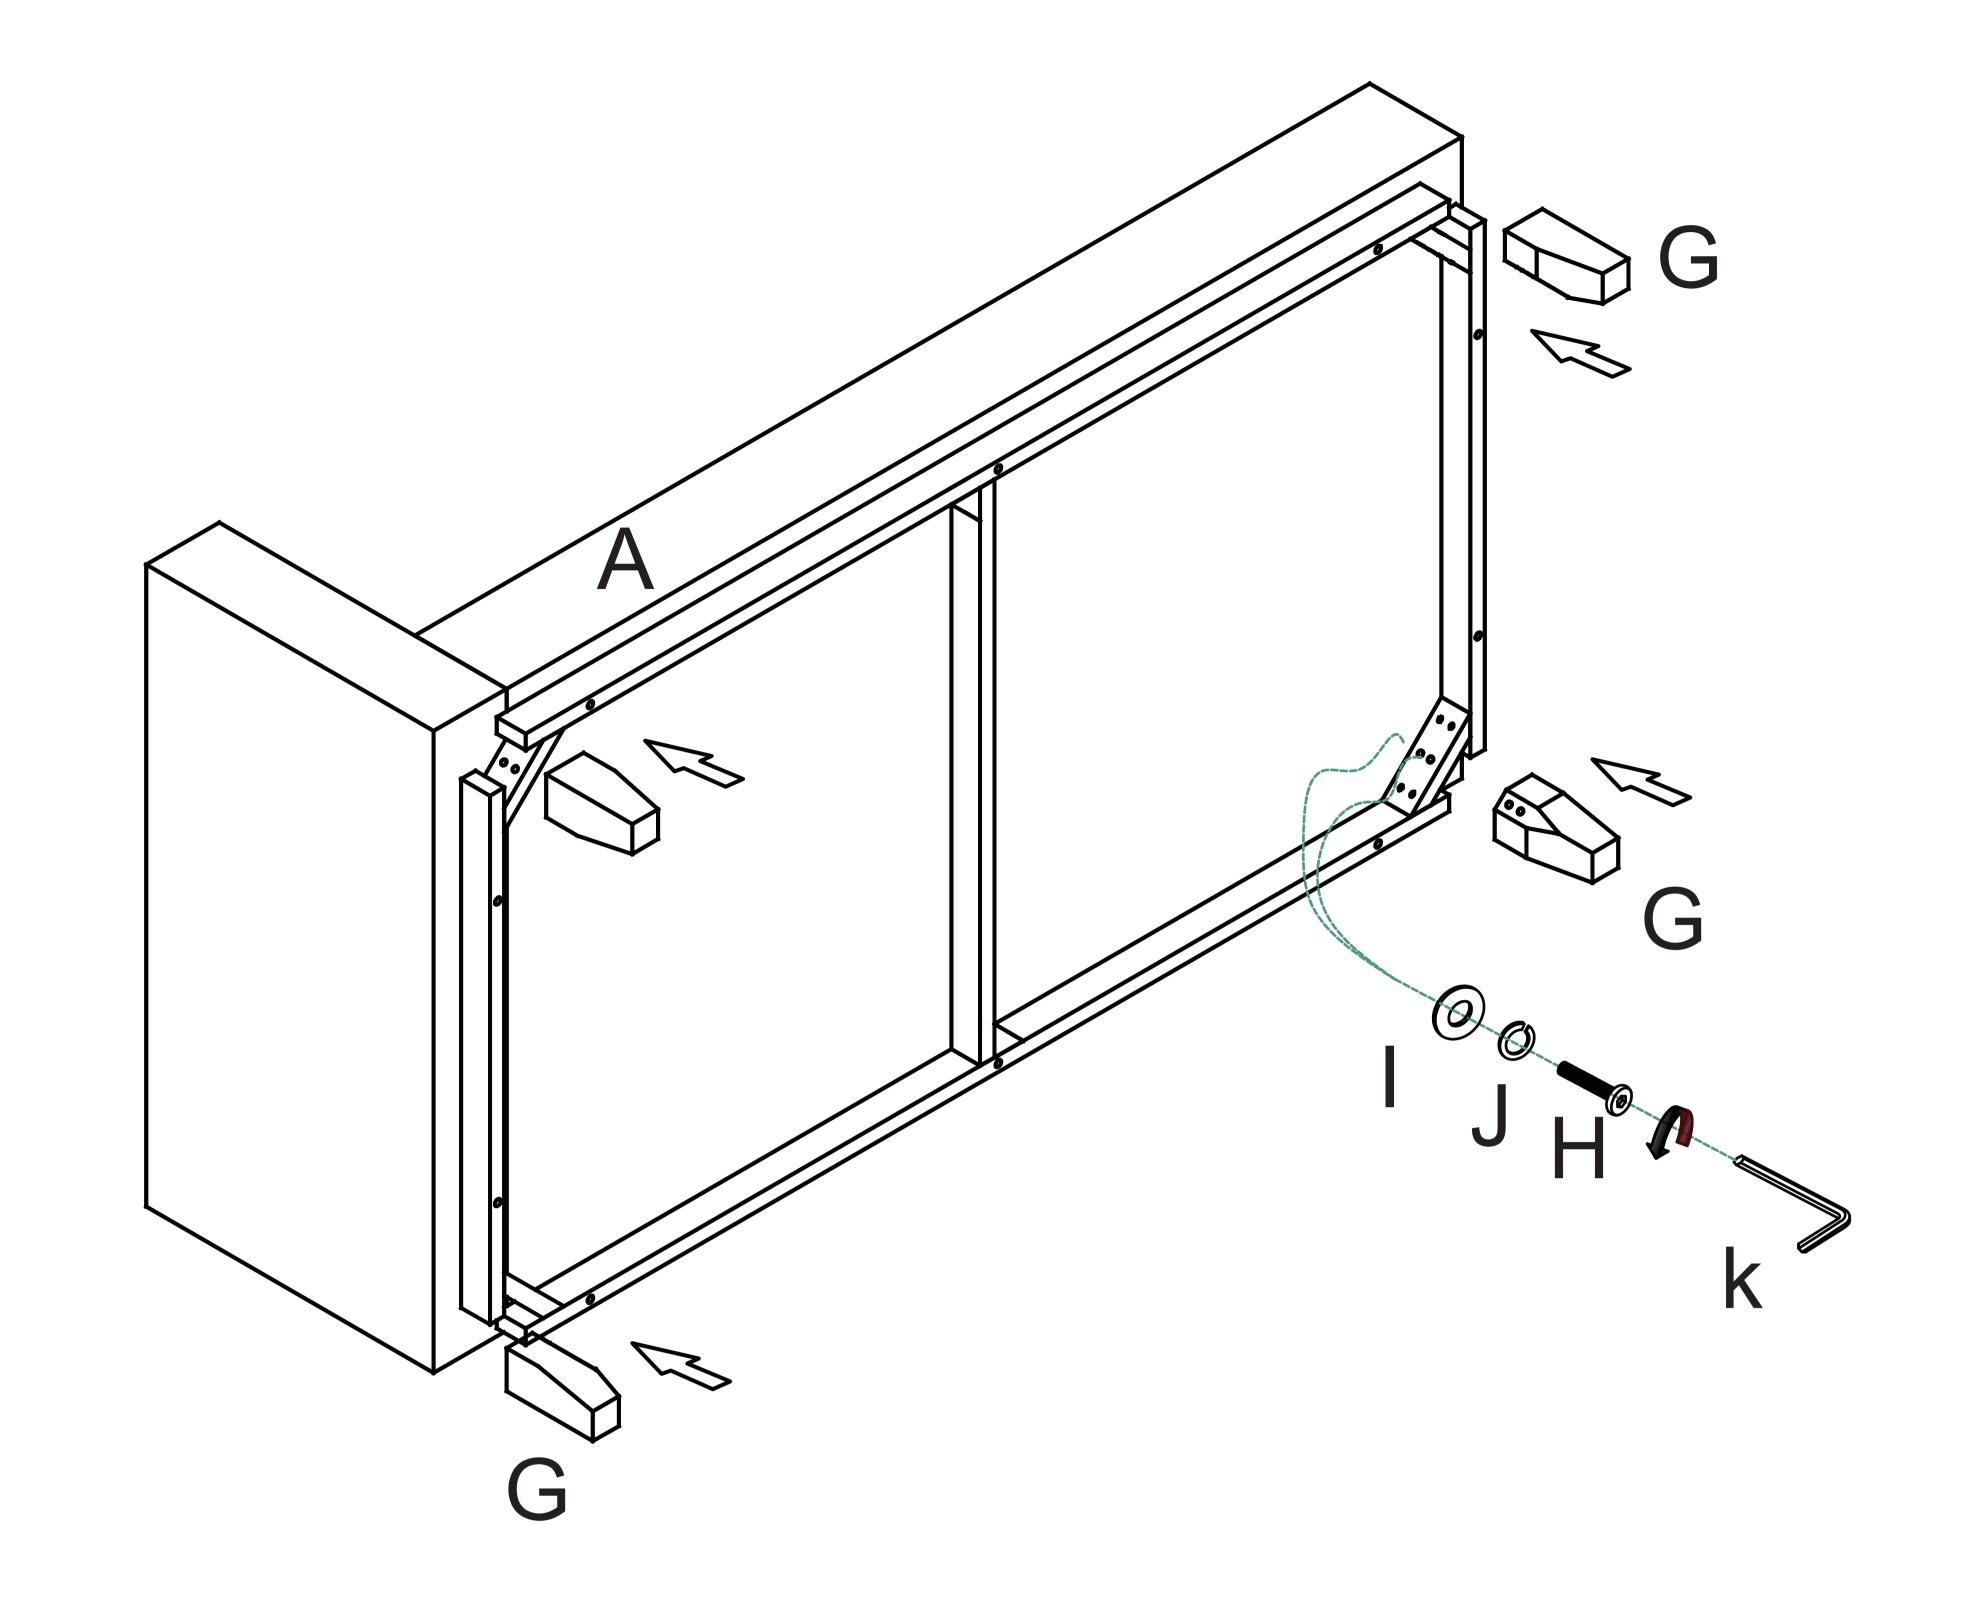

STEP2 :


Align back rest onto chase back frame, attach Velcro to fix it properly and securely in position.

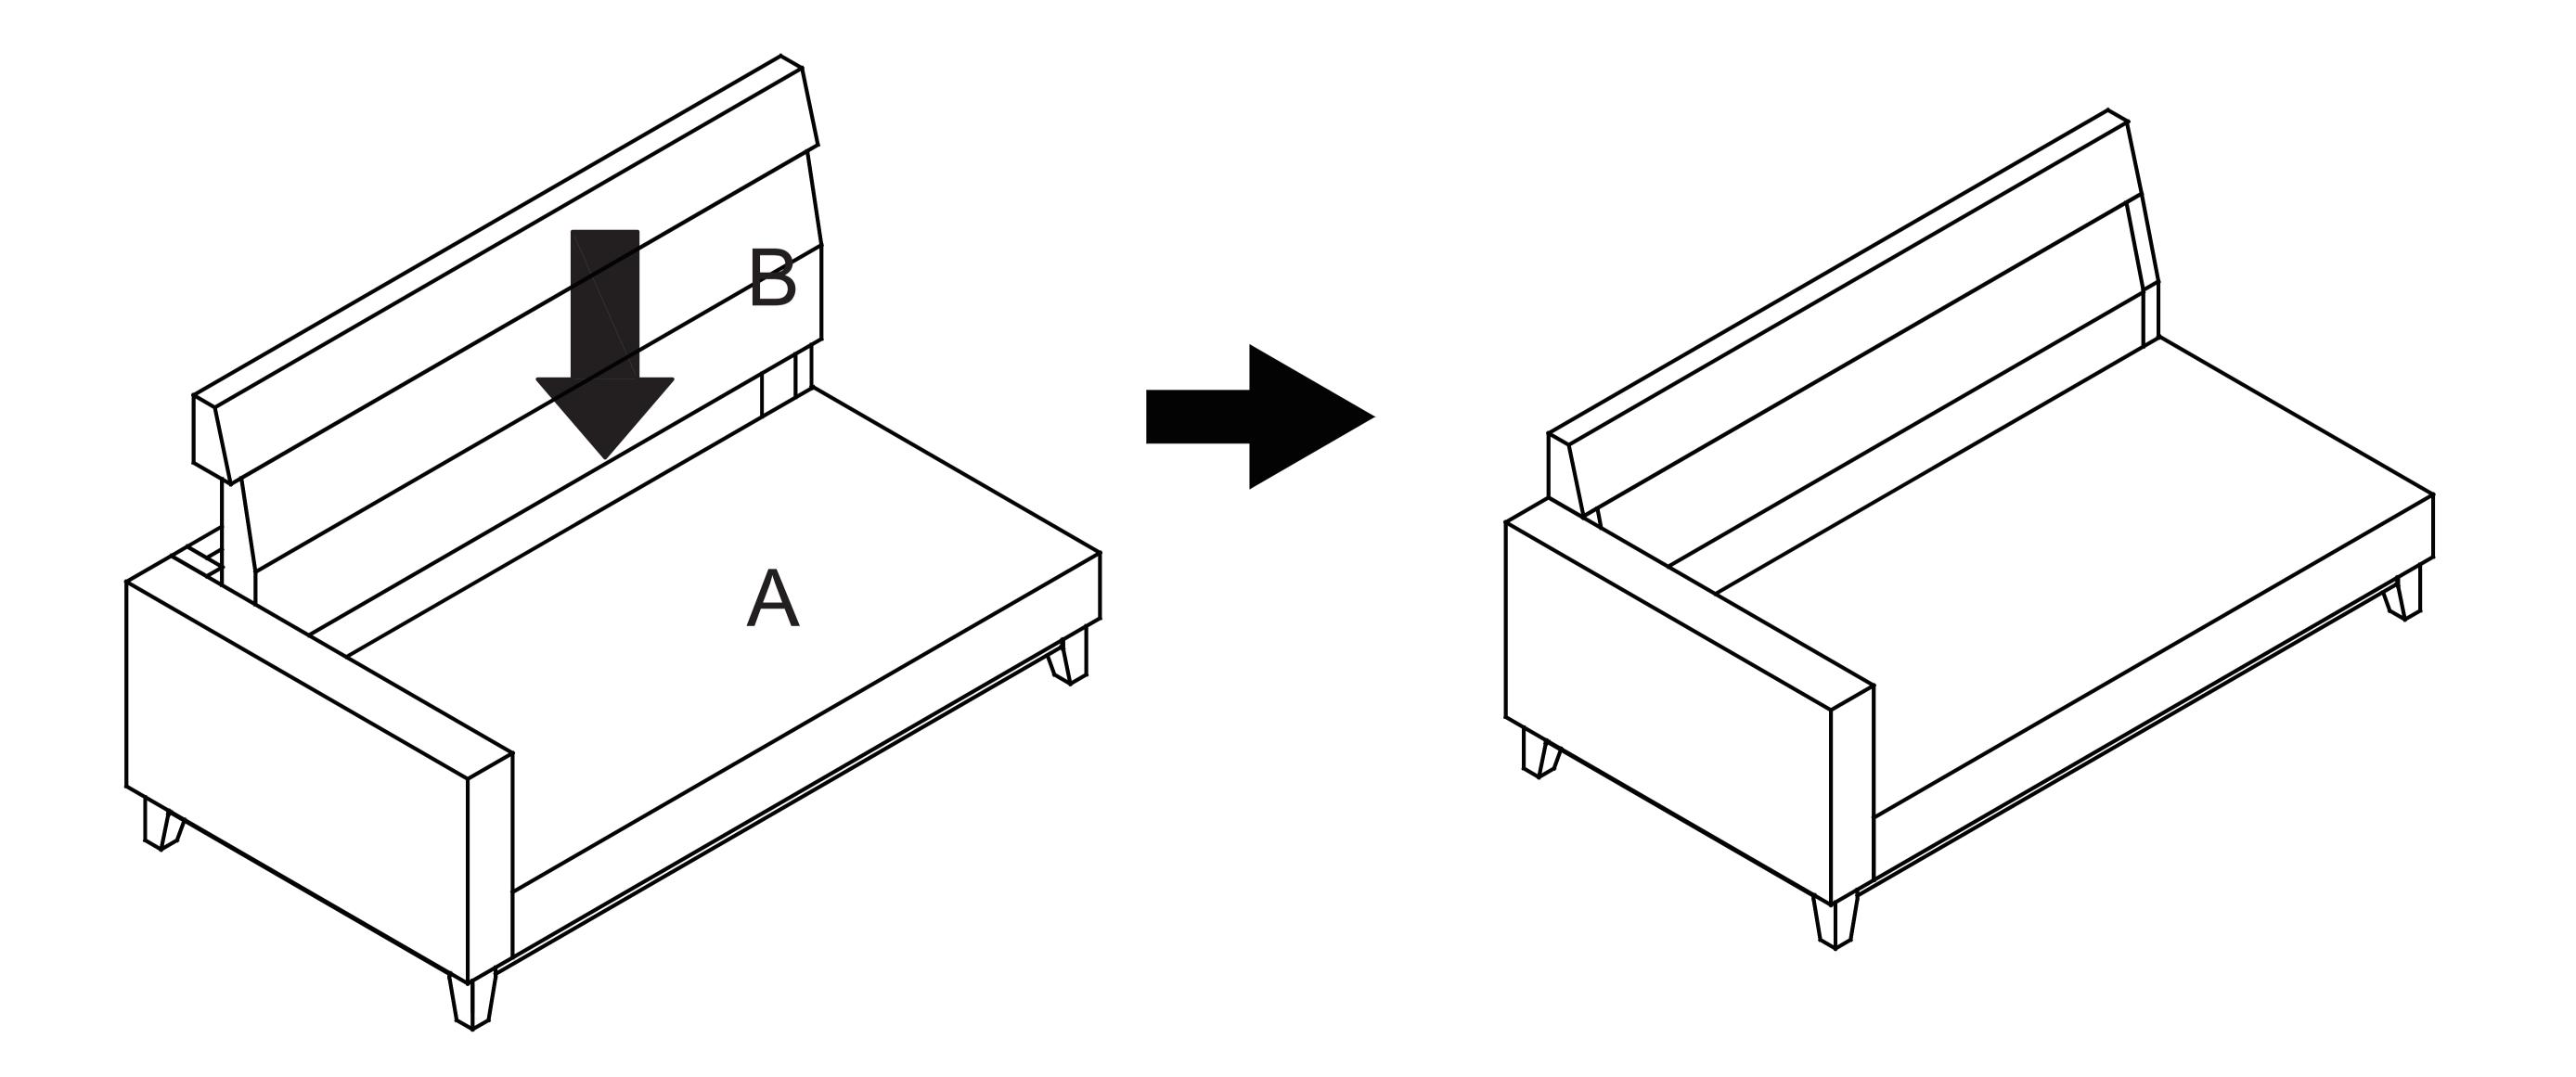




STEP3 :


Place seat cushion onto the seat.

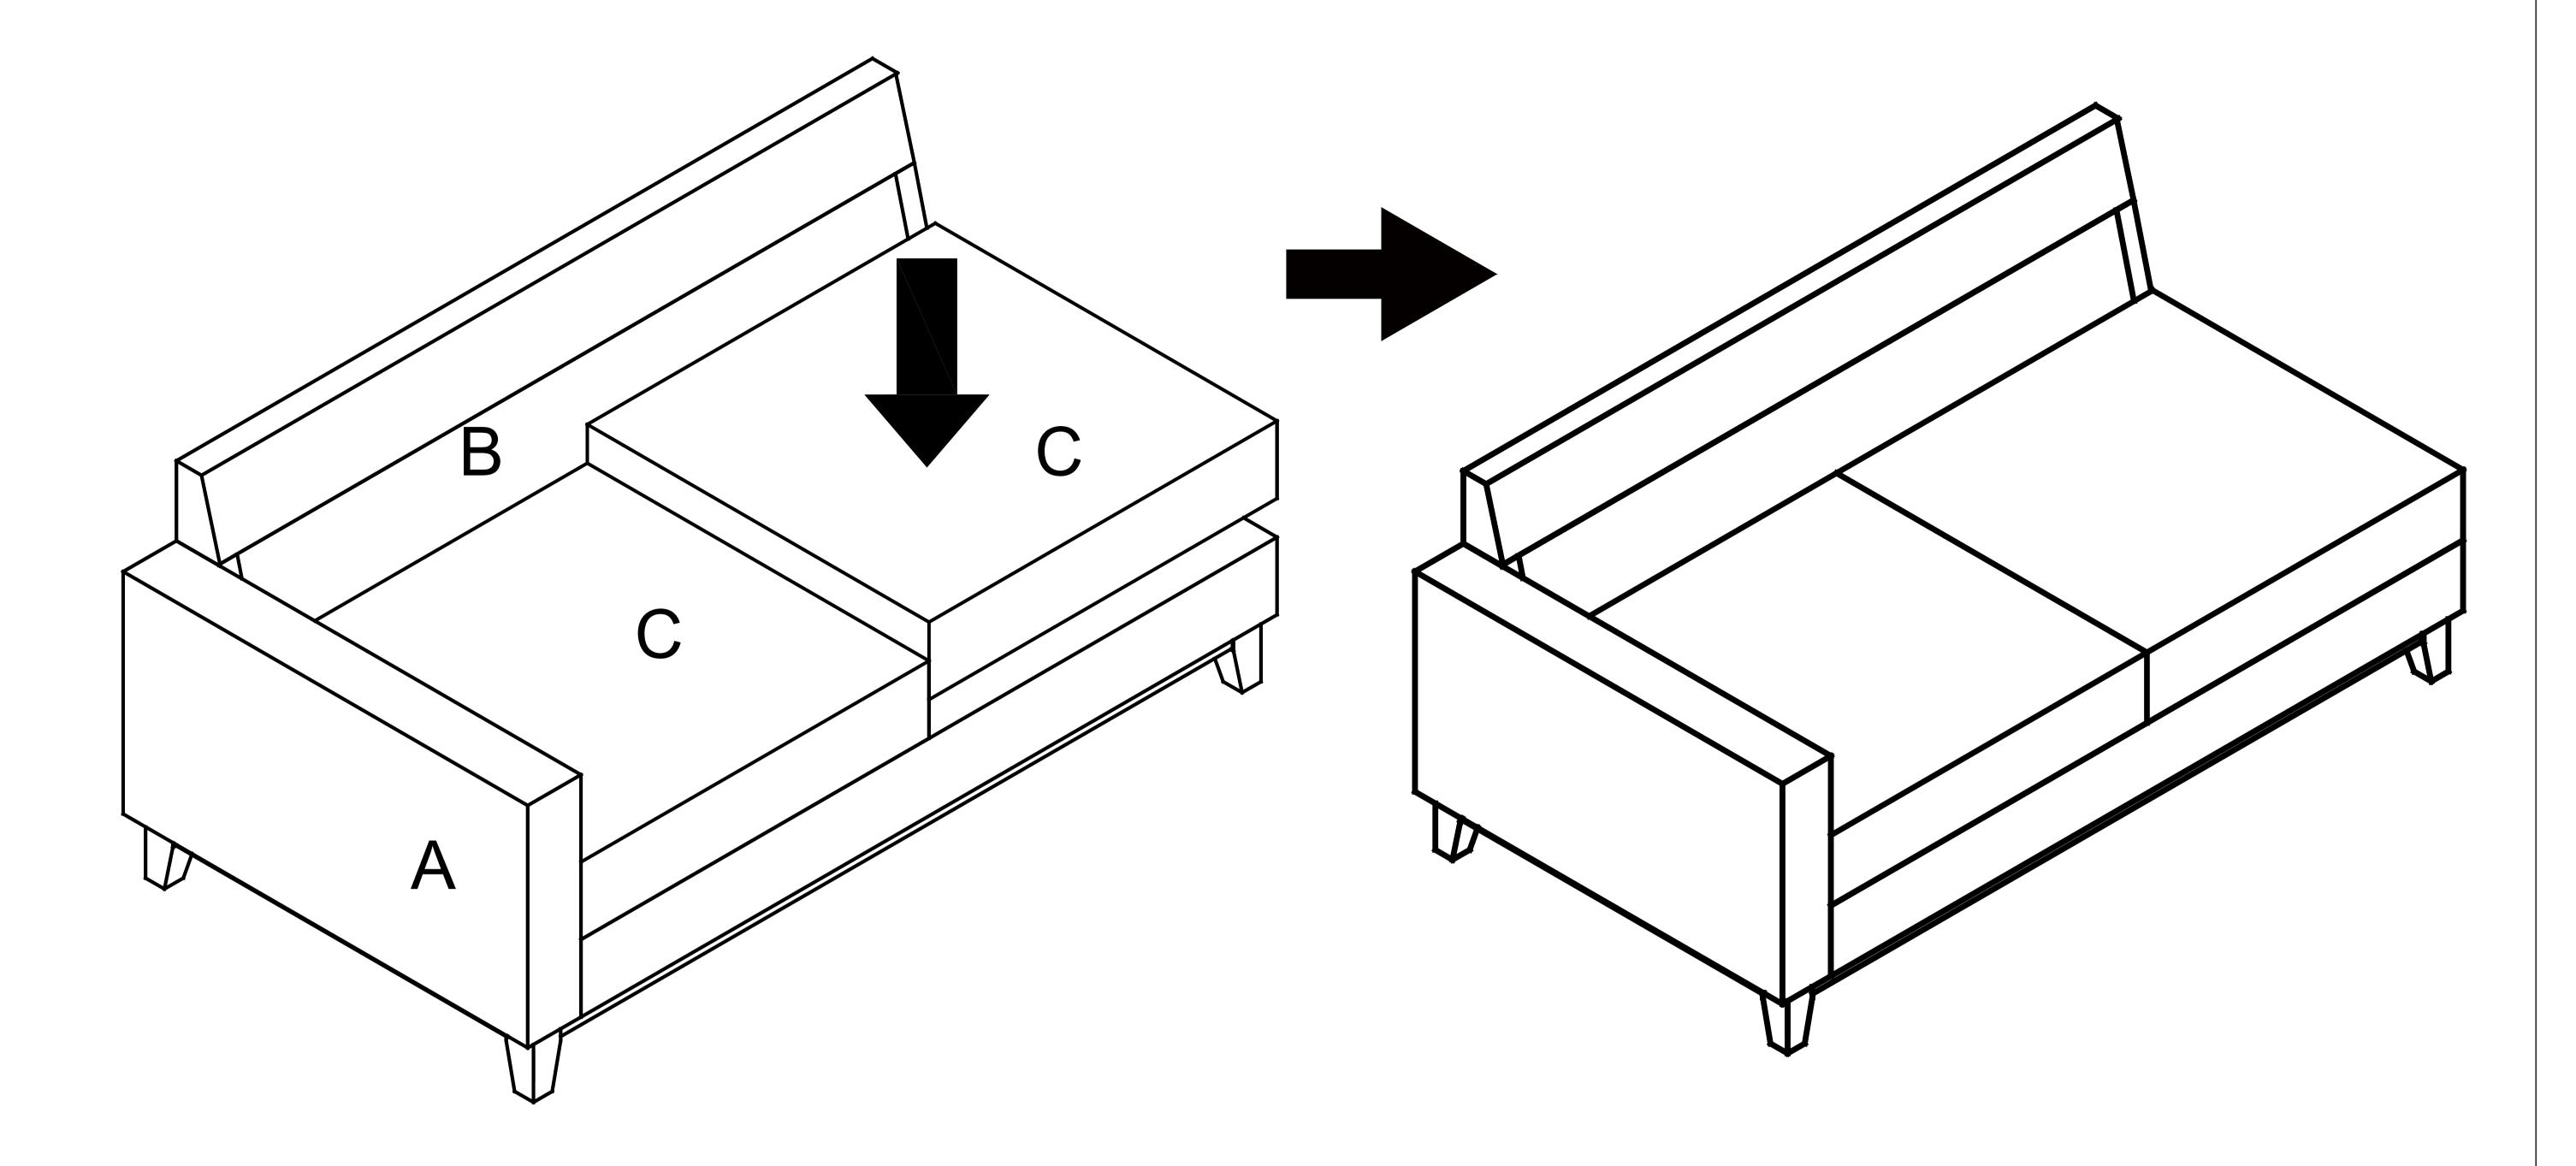

STEP4 :


Place back cushion and pillow onto the seat.

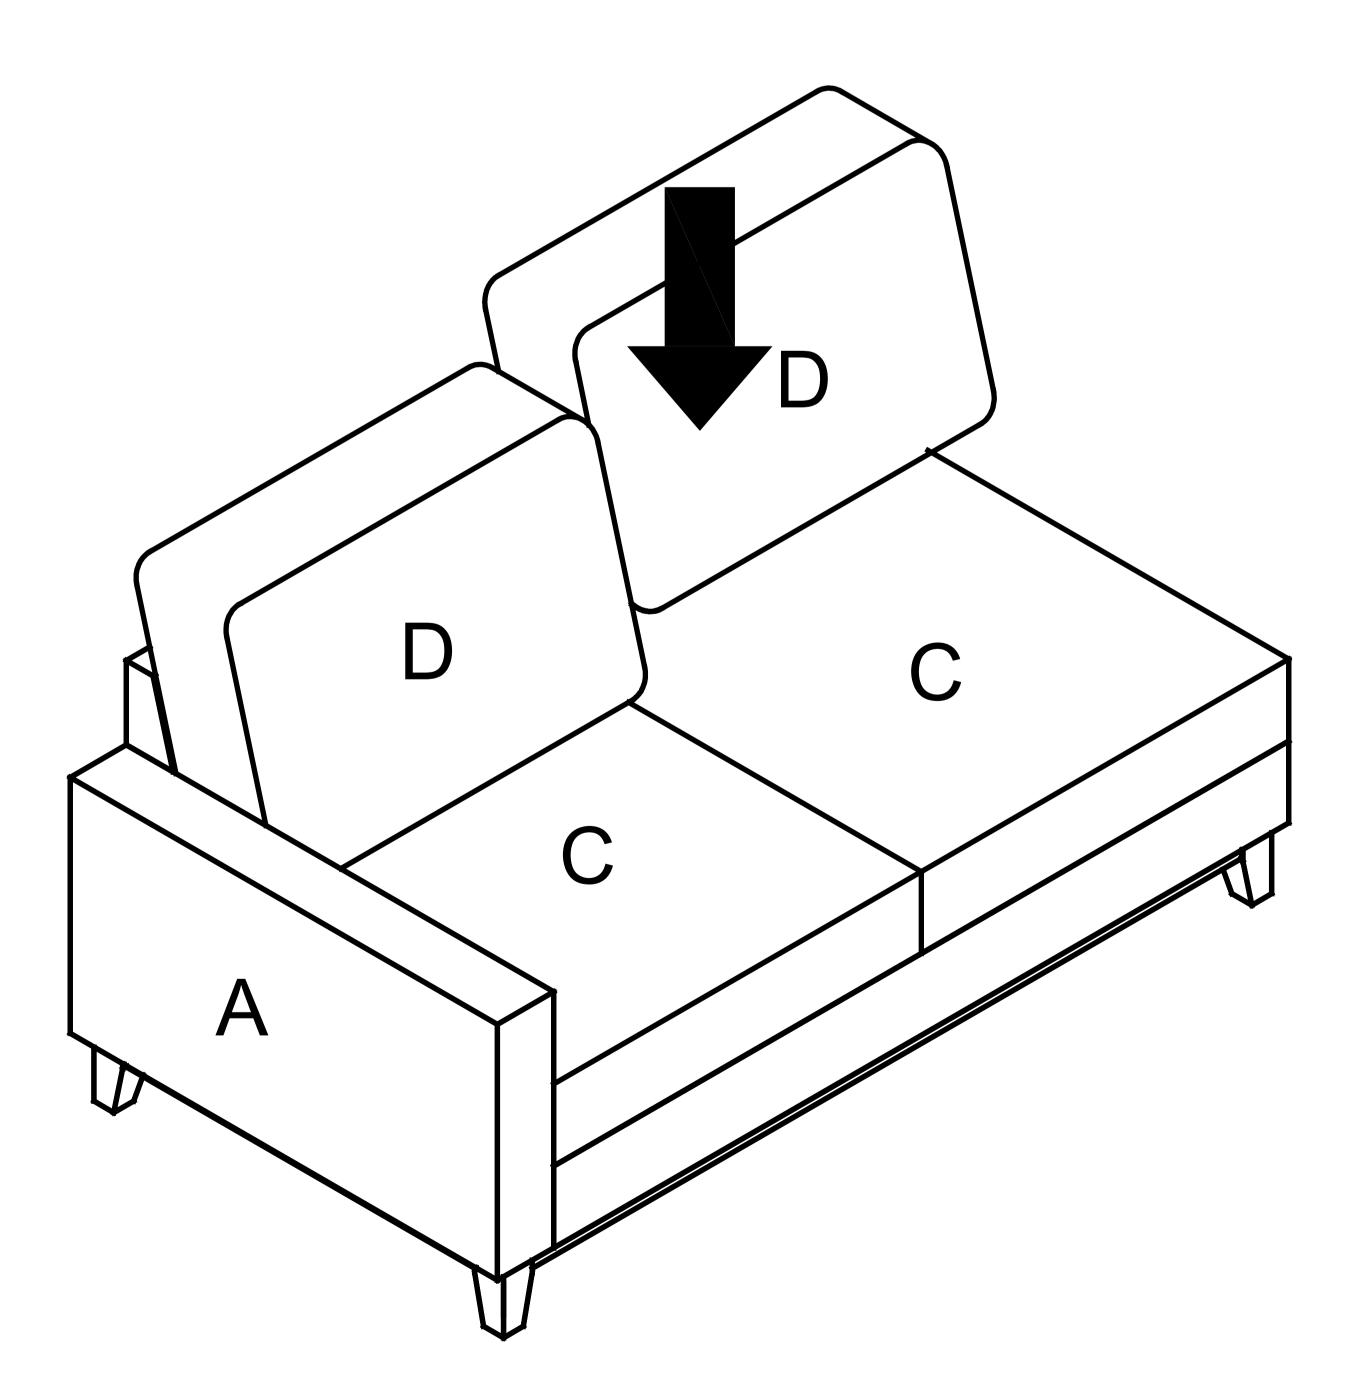

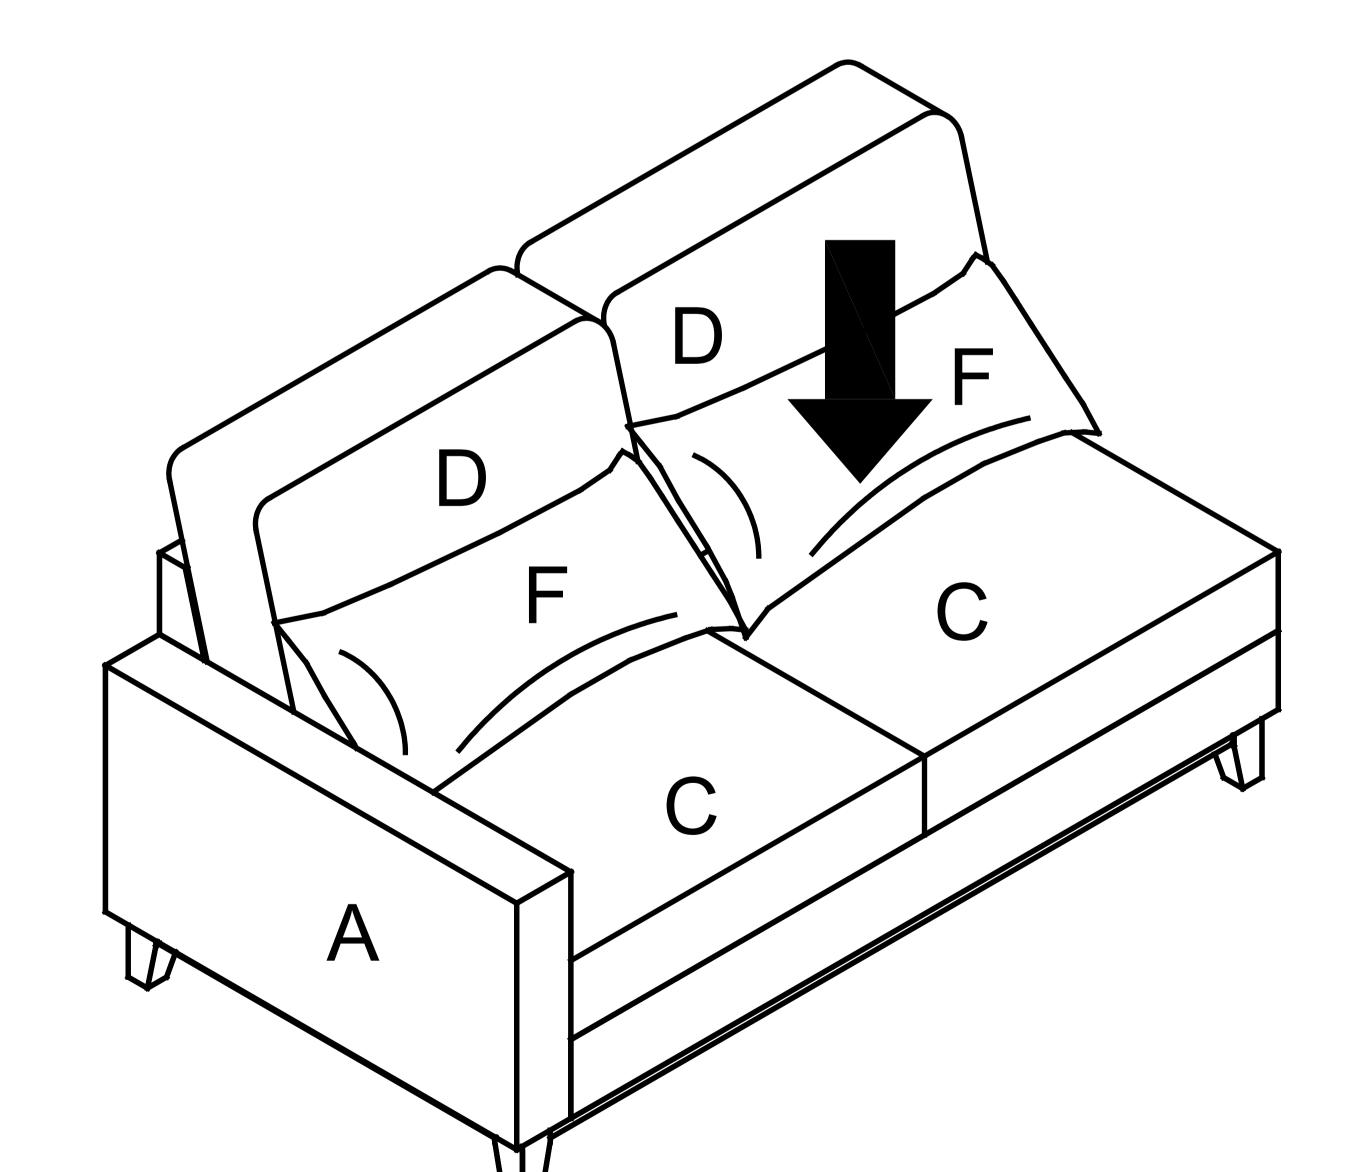



STEP5 : Assembly is completed.

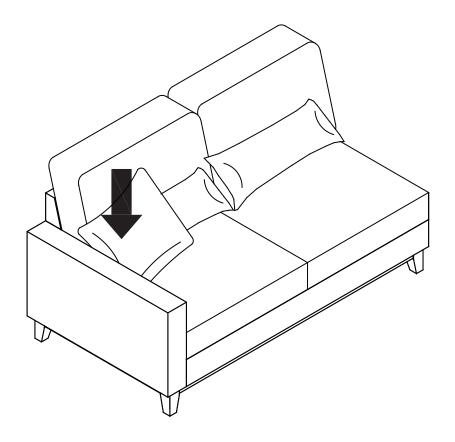

Care instruction for 100% polyester.

In order to maintain the original appearance of your furniture, please follow below simple care procedures:

Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabric Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.

Vacuum or wipe with a cloth regularly to remove dust.



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.