

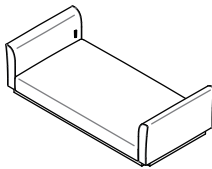
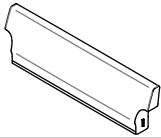
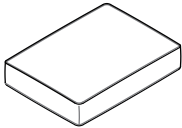







Assembly Instruction

SOFA, 2 PILLOWS

ITEM NO. :9806GRY-3


NOTE:Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

COMPONENT LIST

| NO. | DRAWING | QTY | DESCRIPTION |
|-----|---|-----|---|
| A |  | 1 | SEAT FRAME |
| B |  | 1 | BACK REST |
| C |  | 3 | SEAT CUSHION |
| D |  | 3 | BACK CUSHION D1-LSF,D2-MIDDLE, D3-RSF |
| E |  | 4 | LEG |
| F |  | 8 | BOLT |
| G |  | 8 | FLAT WASHER |
| H |  | 8 | LOCK WASHER |
| I |  | 1 | ALLEN KEY |
| J |  | 2 | MIDDLE SUPPORT LEG |


STEP1

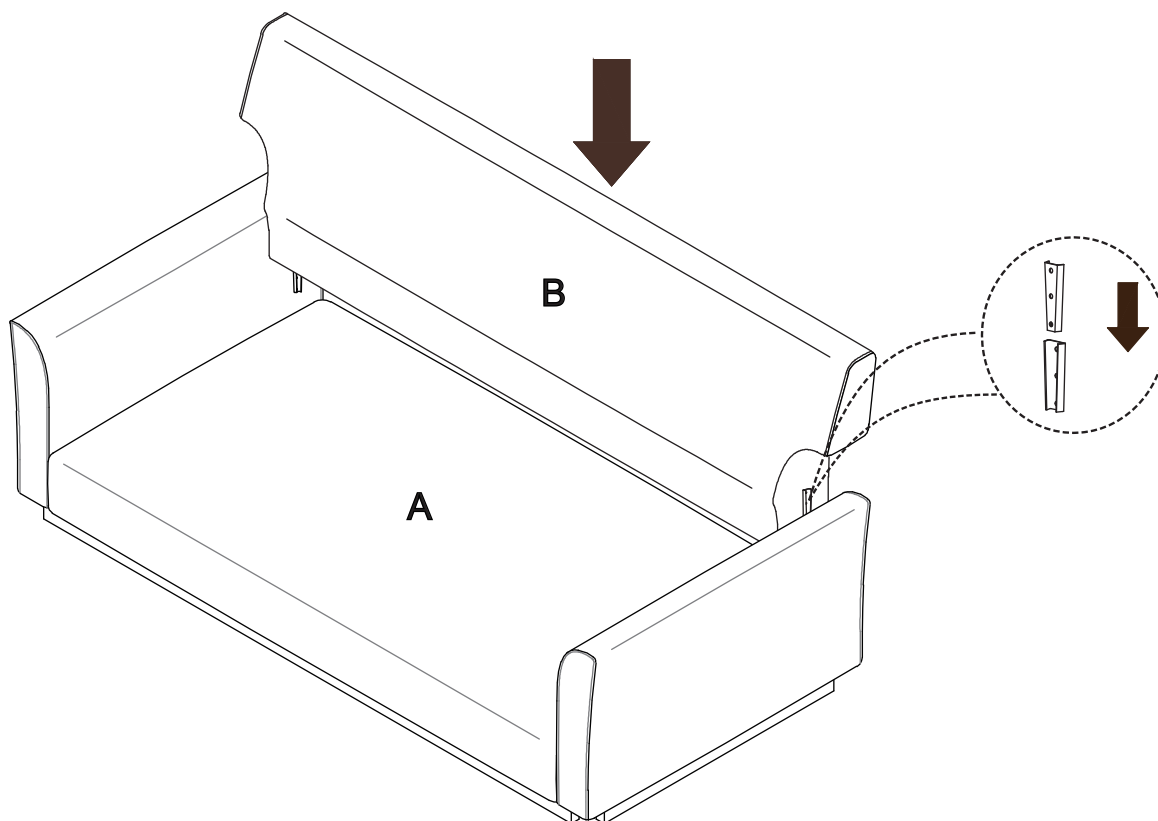Attach the Backrest(B) to the Seat Frame(A).




STEP2

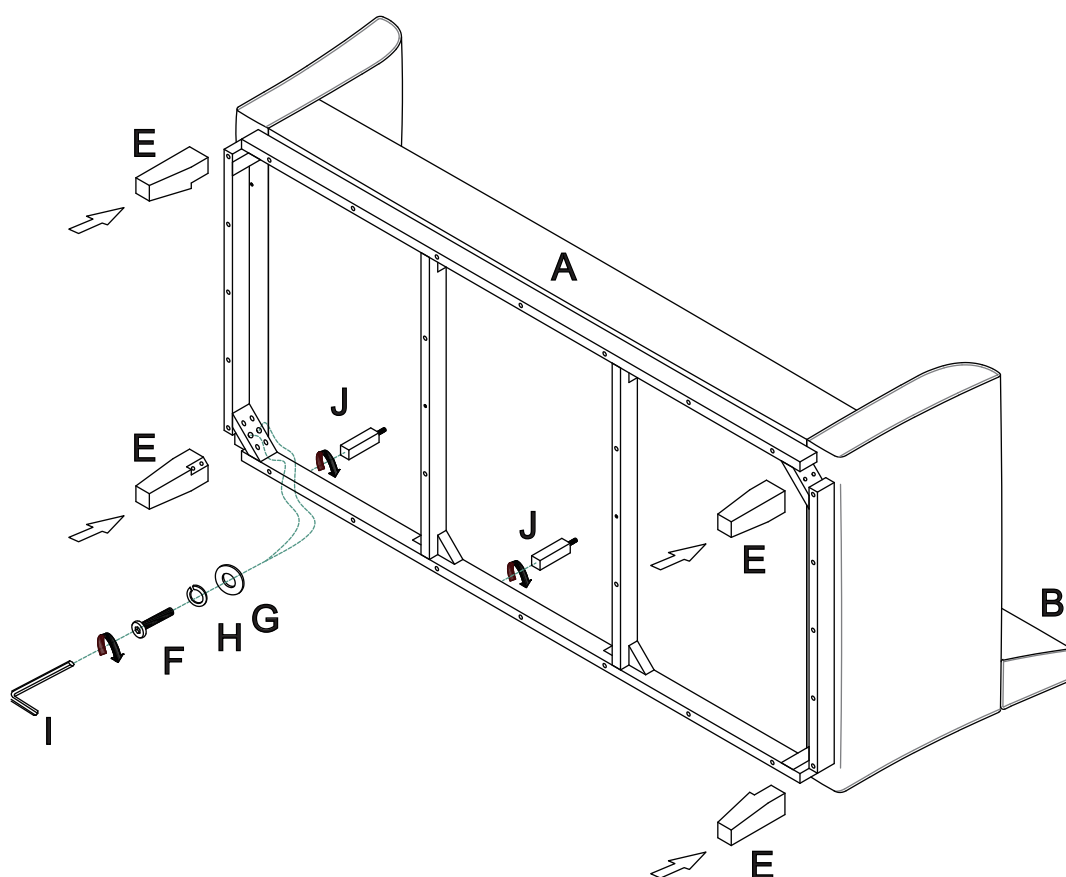Attach the Leg(E) and the Middle Support Leg(J) to the Seat Frame(A).




STEP3

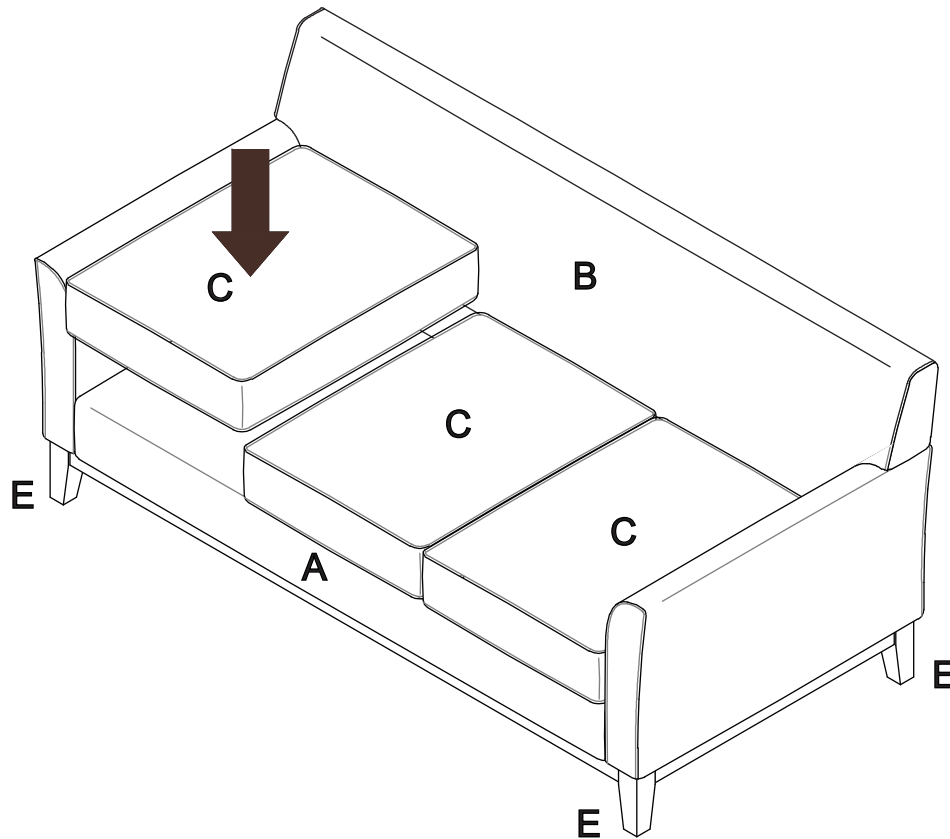
Put the Seat Cushion(C) to the Seat Frame(A).



STEP4

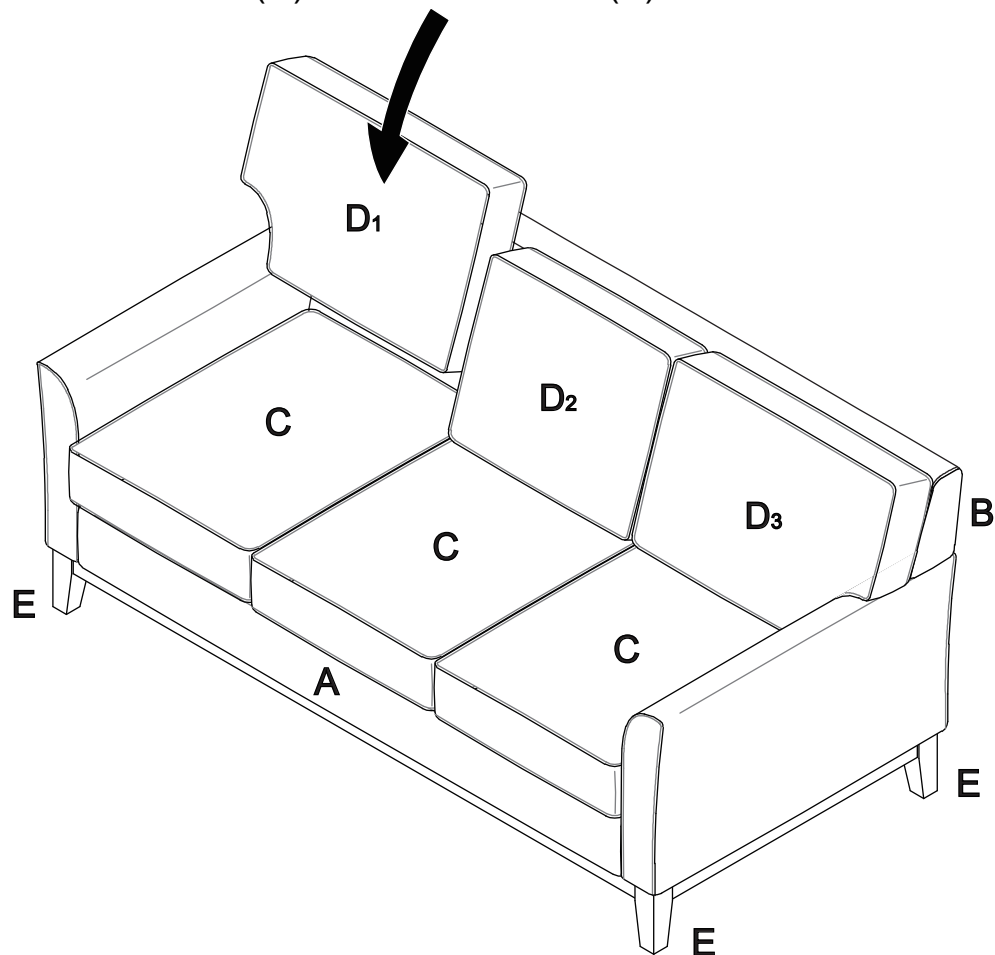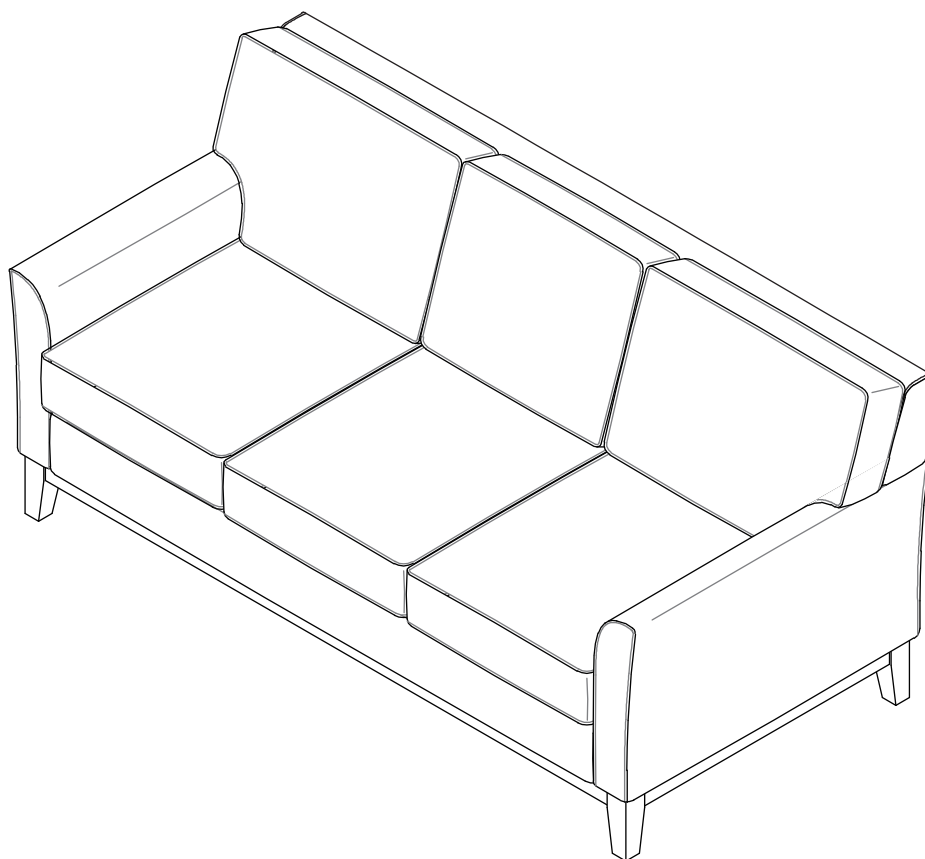Put the Back Cushion(D) to the Seat Frame(A).





Care instruction for Polyester furniture.

In order to maintain the original appearance of your Polyester furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabrics. Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a cloth regularly to remove dust.



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.