



ASSEMBLY INSTRUCTION

1638F-1 FULL BED


PART LIST:

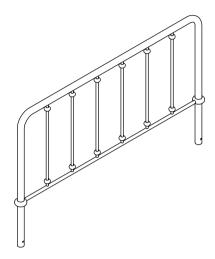


A: Headboard x 1pc




B: Headboard support legs x 2pcs

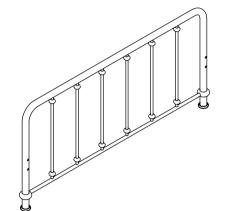

C: Footboard x 1pc

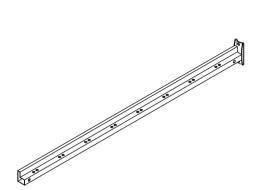


D: Rail Section (1) x 2pcs

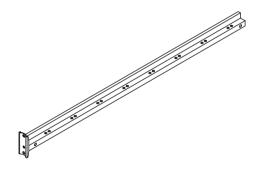


E: Rail Section (2) x 2pcs




F: Front/Rear Support Bar x 2pcs

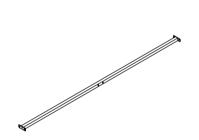

G: Center Support Bar x 1pc

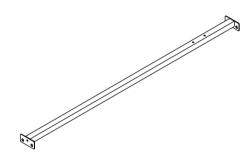

H: Front Center Rail x 1pc

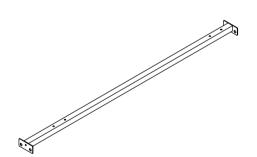

I: Rear Center Rail x 1pc



J: Rail Support Legs x 2pcs



L: Center support Legs x 3pcs



M: Slat with Connectors x 16pcs

HARDWARE LIST:



1: Bolt 1/4*46mm x 8pcs



2: Bolt 1/4*36mm x 2pcs




3: Bolt 1/4*16mm x 24pcs



4: Nut x 6pcs




5: Allen Key x 1pc



6: Wrench x 1pc


Note: Please do not tighten all bolts until the bed is assembled completely.

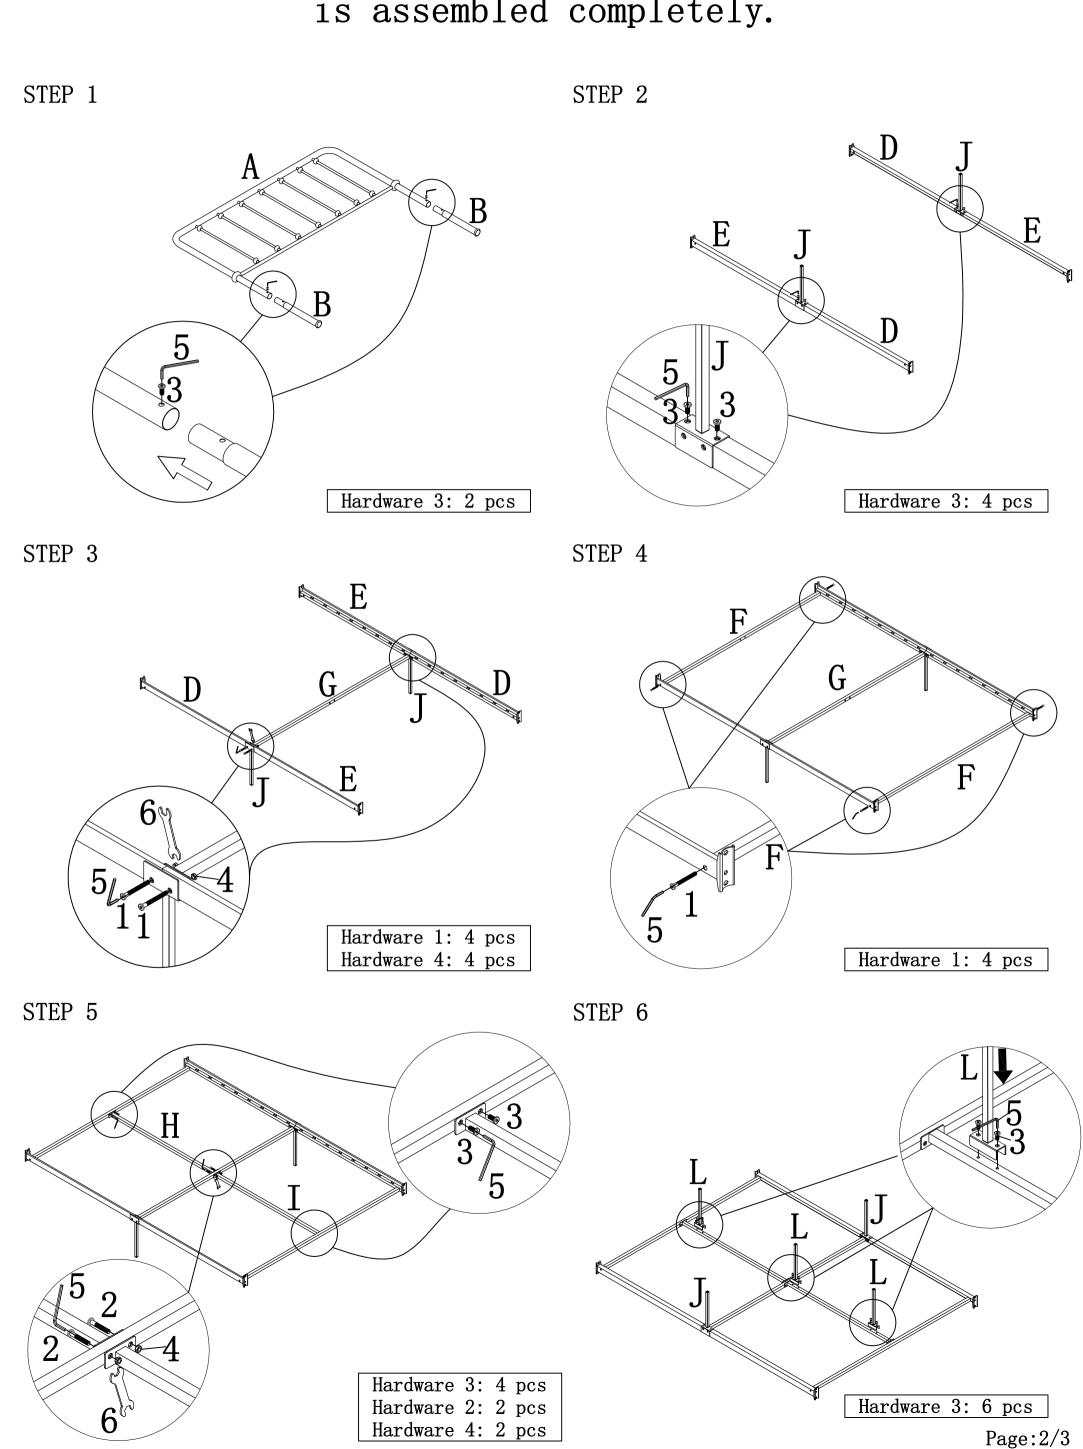


Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 7

STEP 8

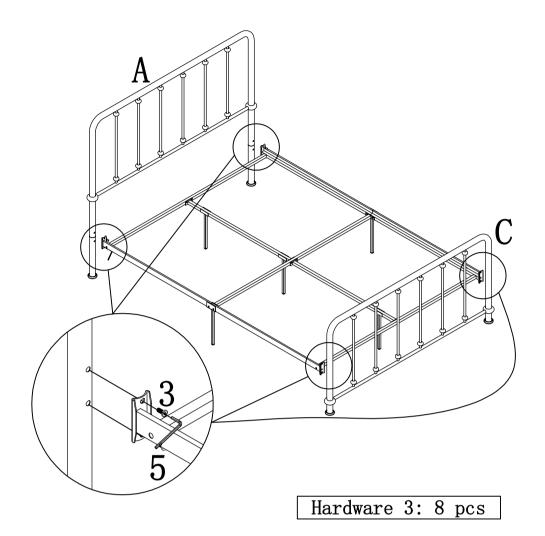

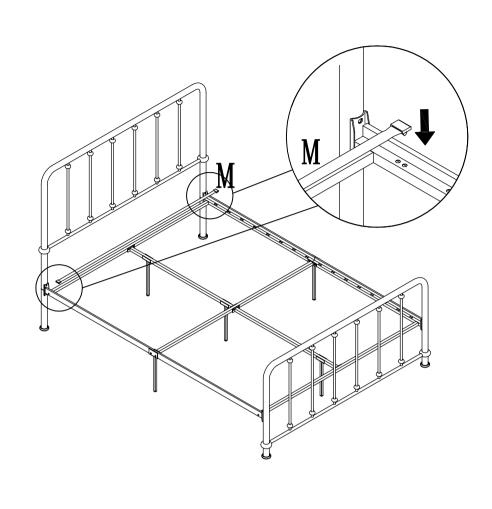

COMPLETED



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

Page: 3/3