





ASSEMBLY INSTRUCTION

HOMLEGANCE 1761T-1 TWIN SIZE CANOPY BED


PART LIST:

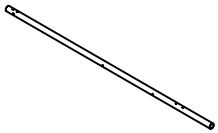


A: LSF Headboard Post
x 1pc

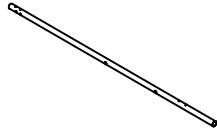

B: RSF Headboard Post
x 1pc

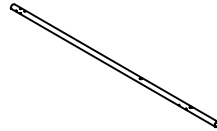


C: LSF Footboard Post
x 1pc

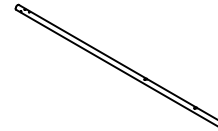


D: RSF Footboard Post
x 1pc



E: Short Upper Support Bar
x 2pcs

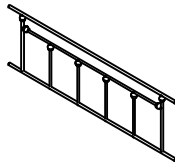


F: Headboard & Footboard Frame
x 2pcs

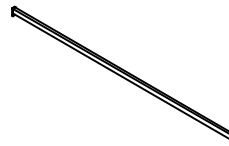

G: Long Upper Support Bar
x 2pcs



H: Rail
x 2pcs



I: Finial
x 4pcs



J: Slat with Connectors
x 16pcs

HARDWARE LIST:



1: Bolt 1/4*16mm
x24pcs




2: Bolt 5/16*55mm
x8pcs




3: Allen Key 4MM
x1pc

Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 1

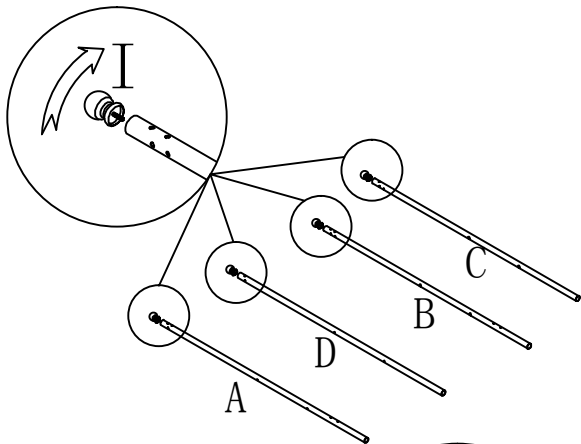


STEP 2

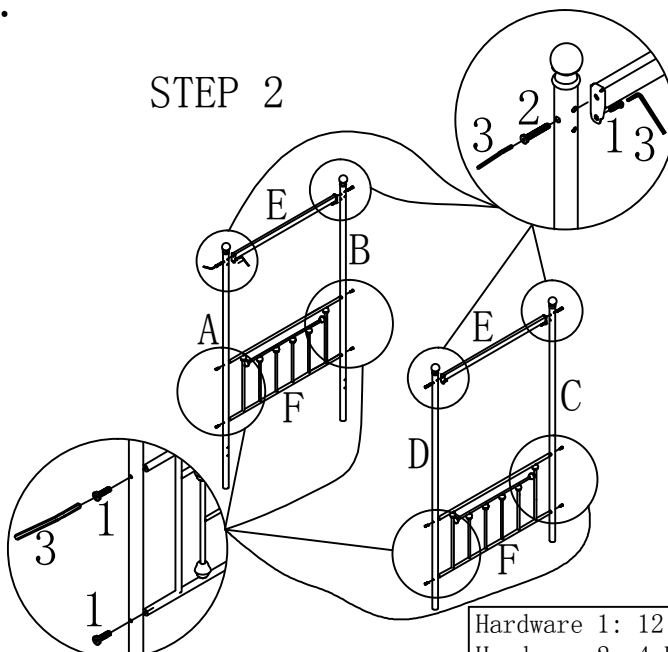


Hardware 1: 12 PCS
Hardware 2: 4 PCS

STEP 3

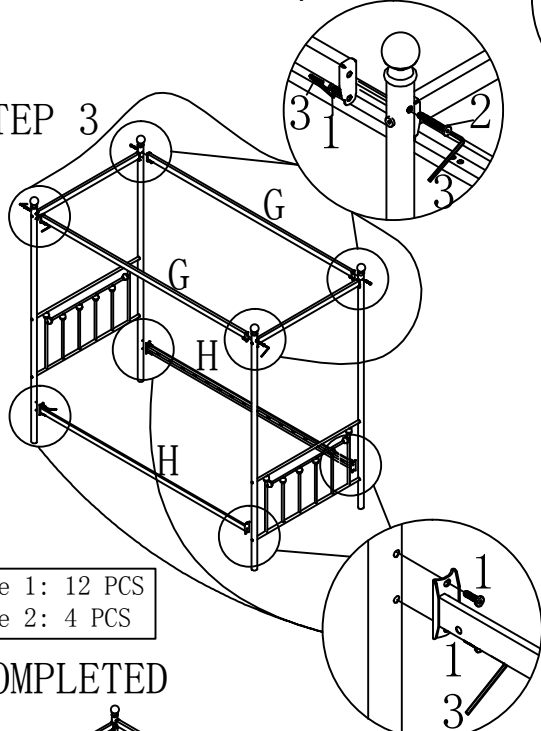


Hardware 1: 12 PCS
Hardware 2: 4 PCS

STEP 4

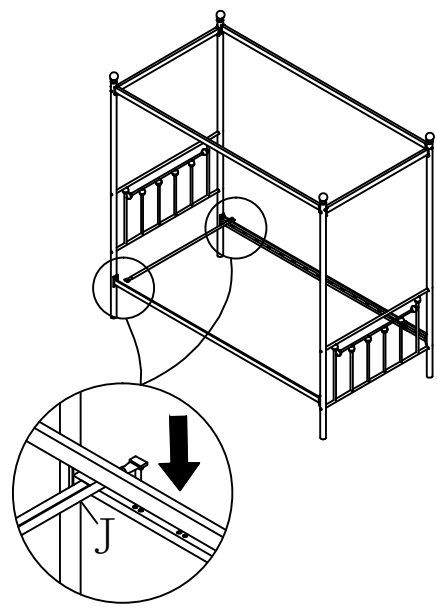

COMPLETED

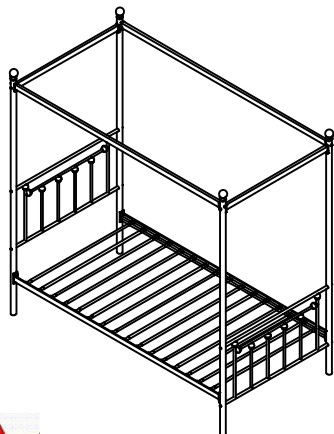

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.